SLV-SE350/SE500/SE600/SE650/SE700/SE800/ SX600/SX700/SX800

RMT-V259/V259A/V259K/V259L/V288/V288A

SERVICE MANUAL

East European Model
SLV-SE500R/SE700R

French Model
SLV-SE600B/SE700B/SE800B/SX700B

German Model
SLV-SE650D/SE700D1/SE800D1/
SX700D/SX800D

Italian Model
SLV-SE600A/SE700D2/SE800D2

Middle East Model
SLV-SE350K/SE500K/SE600N/SE700K/
SE700N/SE800K/SE800N

North European Model
SLV-SE600E/SE700E2/SE800E/
SX600E/SX700E

Spanish Model
SLV-SE700E1

UK Model
SLV-SE700G/SE700I/SE800G

SONY
smart engine

Photo: SLV-SE800

SR MECHANISM

Hi-Fi

- **Refer to the SERVICE MANUAL of VHS MECHANICAL ADJUSTMENTS VI for MECHANICAL ADJUSTMENTS. (9-921-647-11)**

* The abbreviations of SE350, SE500, SE600, SE650, SE700, SE800, SX600, SX700 and SX800 contained in this service manual are indicated when these models are common to all their corresponding models as given below.

Abbreviated model name	**SE350**	**SE500**	**SE600**	**SE650**	**SE700**	**SE800**	**SX600**	**SX700**	**SX800**
All model names **SLV-**	**SE350K**	**SE500K** **SE500R**	**SE600A** **SE600B** **SE600E** **SE600N**	**SE650D**	**SE700B, SE700D1** **SE700D2, SE700E1** **SE700E2, SE700G** **SE700I, SE700K** **SE700N.SE700R**	**SE800B, SE800D1** **SE800D2, SE800E** **SE800G, SE800K** **SE800N**	**SX600E**	**SX700B** **SX700D** **SX700E**	**SX800D**

VHS VIDEO CASSETTE RECORDER

SONY®

SPECIFICATIONS

System

Channel coverage
SLV-SE350K, SE500K/R, SE600N,
SE700N/K/R, SE800N/K:
PAL (B/G, D/K)
VHF E2 to E12, R1 to R12
UHF E21 to E69, R21 to R69
CATV S1 to S41, S01 to S05
SLV-SE600A/E, SX600E, SE650D,
SE700D1/D2/E1/E2, SX700D/E,
SE800D1/D2/E, SX800D:
PAL (B/G)
VHF E2 to E12
VHF Italian channel A to H
UHF E21 to E69
CATV S01 to S05, S1 to S20
HYPER S21 to S41
SLV-SE600B, SE700B, SX700B, SE800B:
SECAM (L)
VHF F2 to F12
UHF F21 to F69
CATV B to Q
HYPER S21 to S41
PAL (B/G)
VHF E2 to E12
VHF Italian channel A to H
UHF E21 to E69
CATV S01 to S05, S1 to S20
HYPER S21 to S41
SLV-SE700G/I, SE800G:
PAL (I)
VHF IA to IJ, SA10 to SA13 (SLV-SE700I)
UHF B21 to B69
CATV S01 to S05, S1 to S20 (SLV-SE700I)
HYPER S21 to S41 (SLV-SE700I)

RF output signal
UHF channels 21 to 69
Aerial out
75-ohm asymmetrical aerial socket
Tape speed
SLV-SE350K, SE500K/R, SE600N,
SE700N/K/R, SE800N/K:
SP: PAL/MESECAM
23.39 mm/s (recording/playback)
NTSC 33.35 mm/s (playback only)
LP: PAL/MESECAM
11.70 mm/s (recording/playback)
NTSC 16.67 mm/s (playback only)
EP: NTSC 11.12 mm/s (playback only)
SLV-SE600A/E, SX600E, SE650D,
SE700D1/D2/E1/E2/G/I, SX700D/E,
SE800D1/D2/E/G, SX800D:
SP: PAL 23.39 mm/s (recording/playback)
NTSC 33.35 mm/s (playback only)
LP: PAL 11.70 mm/s (recording/playback)
NTSC 16.67 mm/s (playback only)
EP: NTSC 11.12 mm/s (playback only)
SLV-SE600B, SE700B, SX700B, SE800B:
SP: PAL 23.39 mm/s (recording/playback)
NTSC 33.35 mm/s (playback only)
SECAM 23.39 mm/s (recording/playback)
MESECAM 23.39 mm/s (playback only)
LP: PAL 11.70 mm/s (recording/playback)
NTSC 16.67 mm/s (playback only)
SECAM 11.70 mm/s (recording/playback)
MESECAM 11.70 mm/s (playback only)
EP: NTSC 11.12 mm/s (playback only)

SAFETY CHECK-OUT

After correcting the original service problem, perform the following safety checks before releasing the set to the customer:

1. Check the area of your repair for unsoldered or poorly-soldered connections. Check the entire board surface for solder splashes and bridges.
2. Check the interboard wiring to ensure that no wires are “pinched” or contact high-wattage resistors.
3. Look for unauthorized replacement parts, particularly transistors, that were installed during a previous repair. Point them out to the customer and recommend their replacement.
4. Look for parts which, though functioning, show obvious signs of deterioration. Point them out to the customer and recommend their replacement.
5. Check the B+ voltage to see it is at the values specified.

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY MARK ⚠ OR DOTTED LINE WITH MARK ⚠ ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

Maximum recording/playback time
10 hrs. in LP mode (with E300 tape)
Fast-forward and rewind time
Approx. 1 min (with E180 tape)

Inputs and outputs

⇄ LINE-1 (TV)
21-pin
Video input: pin 20
Audio input: pins 2 and 6
Video output: pin 19
Audio output: pins 1 and 3

DECODER/⇥ LINE-2 IN (SLV-SE600B/E, SX600E, SE650D, SE700B/D1/D2/E1/E2/N/K, SX700B/D/E)
⇥ LINE-2 IN (SLV-SE700G, SE700I)
21-pin
Video input: pin 20
Audio input: pins 2 and 6
DECODER/⇥ LINE-3 IN (SLV-SE500K, SE800B/D1/D2/E/N/K, SX800D)
⇥ LINE-3 IN (SLV-SE800G)
21-pin
Video input: pin 20
Audio input: pins 2 and 6
LINE-2-IN (SLV-SE500, SE800, SX800)
VIDEO IN, phono jack (1)
Input signal: 1 Vp-p, 75 ohms, unbalanced, sync negative
AUDIO IN, phono jack (1) (SLV-SE500K/R, SE800N/K)
AUDIO IN, phono jack (2)
(EXCEPT SLV-SE500K/R, SE800N/K)
Input level: 327 mVrms
Input impedance: more than 47 kilohms
AUDIO OUT (SLV-SE650, SE700, SX700, SE800, SX800)
Phono jack (2)
Rated output level: 327mVrms
Load impedance: 47 kilohms
Output inpedance: less than10 kilohms
AUDIO OUT (SLV-SE500R)
Phono jack (1)
Rated output level: 327 mVrms
Load impedance: 47 kilohms
Output impedance: less than 10 kilohms

General

Power requirements
220 - 240 V AC, 50 Hz
Power consumption
21 W
Operating temperature
5ºC to 40ºC
Storage temperature
–20ºC to 60ºC
Dimensions including projecting parts and controls
Approx. 430 × 100 × 283 mm (w/h/d)
(EXCEPT SLV-SE800, SX800)
Approx. 430 × 100 × 290 mm (w/h/d)
(SLV-SE800, SX800)
Mass
Approx. 4.3 kg (EXCEPT SLV-SE800, SX800)
Approx. 4.4 kg (SLV-SE800, SX800)

Supplied accessories

Remote commander (1)
R6 (size AA) batteries (2)
Aerial cable (1)

Design and specifications are subject to change without notice.

- **Feature Difference**

SLV- FEATURE	SE350K	SE500K	SE500R	SE600A	SE600B	SE600E	SE600N	SE650D	SE700B	SE700D1
HEAD/CH	2/2	4/4	4/4	4/6	4/6	4/6	4/6	4/6	4/6	4/6
SECAM(REC/PB)	×/×	×/×	×/×	×/×	○/○	×/×	×/×	×/×	○/○	×/×
ME-SECAM(REC/PB)	○/○	○/○	○/○	×/×	×/○	×/×	○/○	×/×	×/○	×/×
EURO INPUT	21pin	21pin × 2	21pin	21pin	21pin × 2	21pin × 2	21pin	21pin × 2	21pin × 2	21pin × 2
RCA FRONT LINE INPUT	×	2pin (B.Y)	2pin (B.Y)	×	×	×	×	×	×	×
ADDITIONAL REAR OUTPUT (AUDIO OUT)	×	×	1pin (B)	×	×	×	×	2pin (R.W)	2pin (R.W)	2pin (R.W)
MODULATOR SYSTEM	G/K	G/K	G/K	G	L/G	G	G/K	G	L/G	G
REMOTE COMMANDER RMT-	V288	V259	V259	V288	V288A	V288	V288	V288	V259A	V259

SLV- FEATURE	SE700D2	SE700E1	SE700E2	SE700G	SE700I	SE700K	SE700N	SE700R	SE800B	SE800D1
HEAD/CH	4/6	4/6	4/6	4/6	4/6	4/6	4/6	4/6	4/6	4/6
SECAM(REC/PB)	×/×	×/×	×/×	×/×	×/×	×/×	×/×	×/×	○/○	×/×
ME-SECAM(REC/PB)	×/×	×/×	×/×	×/×	×/×	○/○	○/○	○/○	×/○	×/×
EURO INPUT	21pin × 2	21pin × 2	21pin × 2	21pin × 2	21pin × 2	21pin × 2	21pin × 2	21pin	21pin × 2	21pin × 2
RCA FRONT LINE INPUT	×	×	×	×	×	×	×	×	3pin (R.W.Y)	3pin (R.W.Y)
ADDITIONAL REAR OUTPUT (AUDIO OUT)	2pin (R.W)	2pin (R.W)	2pin (R.W)	2pin (R.W)	2pin (R.W)	2pin (R.W)	2pin (R.W)	2pin (R.W)	2pin (R.W)	2pin (R.W)
MODULATOR SYSTEM	G	G	G	I	I	G/K	G/K	G/K	L/G	G
REMOTE COMMANDER RMT-	V259	V259	V259	V259K	V259I	V259	V259	V259	V259L	V259K

SLV- FEATURE	SE800D2	SE800E	SE800G	SE800K	SE800N	SX600E	SX700B	SX700D	SX700E	SX800D
HEAD/CH	4/6	4/6	4/6	4/6	4/6	4/6	4/6	4/6	4/6	4/6
SECAM(REC/PB)	×/×	×/×	×/×	×/×	×/×	×/×	○/○	×/×	×/×	×/×
ME-SECAM(REC/PB)	×/×	×/×	×/×	○/○	○/○	×/×	×/○	×/×	×/×	×/×
EURO INPUT	21pin × 2	21pin × 2	21pin × 2	21pin × 2	21pin × 2	21pin × 2	21pin × 2	21pin × 2	21pin × 2	21pin × 2
RCA FRONT LINE INPUT	3pin (R.W.Y)	3pin (R.W.Y)	3pin (R.W.Y)	3pin (R.W.Y)	3pin (R.W.Y)	×	×	×	×	3pin (R.W.Y)
ADDITIONAL REAR OUTPUT (AUDIO OUT)	2pin (R.W)	2pin (R.W)	2pin (R.W)	2pin (R.W)	2pin (R.W)	×	2pin (R.W)	2pin (R.W)	2pin (R.W)	2pin (R.W)
MODULATOR SYSTEM	G	G	I	G/K	G/K	G	L/G	G	G	G
REMOTE COMMANDER RMT-	V259K	V259K	V259L	V259	V259	V288	V259L	V259K	V259K	V259

TABLE OF CONTENTS

Section *Title* *Page*

Feature Difference 4
SERVICE NOTE 6

1. GENERAL

Getting Started 1-1
Basic Operations 1-10
Additional Operations 1-15
Editing 1-20
Additional Information 1-21

2. DISASSEMBLY

2-1. Upper Case Removal 2-1
2-2. Rear Panel Removal 2-1
2-3. Power Block (SRV938EK) Removal 2-1
2-4. Front Panel Section Removal 2-1
2-5. Mechanism Deck Removal 2-2
2-6. MA-373 Board Removal 2-2
2-7. Internal Views 2-3
2-8. Circuit Boards Location 2-4

3. BLOCK DIAGRAMS

3-1. Overall Block Diagram 3-1
3-2. Video Block Diagram 3-3
3-3. Servo/System Control Block Diagram 3-5
3-4. Audio Block Diagram 3-7
3-5. Tuner Block Diagram 3-9
3-6. Mode Control Block Diagram 3-11
3-7. Power Block Diagram 3-13

4. PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS

4-1. Frame Schematic Diagram 4-3
4-2. Printed Wiring Boards and Schematic Diagrams 4-5
MA-373 Printed Wiring Board 4-5
MA-373 (Head Amp) Schematic Diagram 4-9
MA-373 (Video, Audio) Schematic Diagram 4-11
MA-373 (SECAM) Schematic Diagram 4-15
MA-373 (Servo/System Control) Schematic Diagram 4-17
MA-373 (Hi-Fi Audio) Schematic Diagram 4-21
MA-373 (Tuner) Schematic Diagram 4-23
MA-373 (I/O) Schematic Diagram 4-25
MA-373 (Mode Control) Schematic Diagram 4-27
MA-373 (Power Supply) Schematic Diagram 4-29
JK-180, KK-23 Schematic Diagrams 4-31
JK-180, KK-23 Printed Wiring Boards 4-33
DS-91 Printed Wiring Board 4-34
DS-91 Schematic Diagram 4-35
SRV938EK Printed Wiring Board 4-37
SRV938EK Schematic Diagram 4-39

Section *Title* *Page*

5. INTERFACE, IC PIN FUNCTION DESCRIPTION

5-1. System Control-Video Block Interface (MA-373 BOARD IC162) 5-1
5-2. System Control-Servo Peripheral Circuit Interface (MA-373 BOARD IC162) 5-1
5-3. System Control-Mechanism Block Interface (MA-373 BOARD IC162) 5-2
5-4. System Control-System Control Peripheral Circuit Interface (MA-373 BOARD IC162) 5-3
5-5. System Control-Audio Block Interface (MA-373 BOARD IC162) 5-3
5-6. Servo/System Control Microprocessor Pin Function (MA-373 BOARD IC162) 5-4

6. ERROR CODES 6-1

7. ADJUSTMENTS

7-1. Mechanical Adjustments 7-1
7-2. Electrical Adjustments 7-1
2-1. Pre-Adjustment Preparations 7-1
  2-1-1. Instruments to be Used 7-1
  2-1-2. Connection 7-1
  2-1-3. Set-up of Adjustment 7-1
  2-1-4. Alignment Tapes 7-1
  2-1-5. Specified I/O Level and Impedance 7-1
  2-1-6. Adjusting Sequence 7-2
2-2. Power Supply Adjustments 7-2
  2-2-1. Power Supply Check 7-2
  2-2-2. +6 V Adjustment 7-2
2-3. Servo System Adjustment 7-2
  2-3-1. RF Switching Position Adjustment 7-2
2-4. Audio System Adjustments 7-3
  2-4-1. Hi-Fi Audio System Adjustment 7-3
  1. AF Switching Position Adjustment 7-3
  2. Frequency Response Check 7-3
  3. Overall Level Characteristic and Distortion Factor Check 7-4
  4. Overall S/N Check 7-4
  2-4-2. Normal Audio System Adjustment 7-4
  1. ACE Head Adjustment 7-4
  2. E-E Output Level Check 7-4
  3. Frequency Response Check 7-4
  4. Overall Level Characteristic and Distortion Factor Check 7-5
  5. Overall S/N Check 7-5
2-5. Parts Arrangement Diagram for Adjustments 7-6

8. REPAIR PARTS LIST

8-1. Exploded Views 8-1
  8-1-1. Front Panel and Cabinet Assemblies 8-1
  8-1-2. Chassis Assembly 8-3
  8-1-3. Mechanism Chassis Assembly (1) 8-4
  8-1-4. Mechanism Chassis Assembly (2) 8-5
  8-1-5. Mechanism Chassis Assembly (3) 8-6
8-2. Electrical Parts List 8-7

SERVICE NOTE

1. DISASSEMBLY

- This set can be disassembled in the order shown below.

Note: Pages in ☐ indicated pages in the SERVICE MANUAL.
Pages in ▨ indicated pages in the VHS MECHANICAL ADJUSTMENT MANUAL VI.

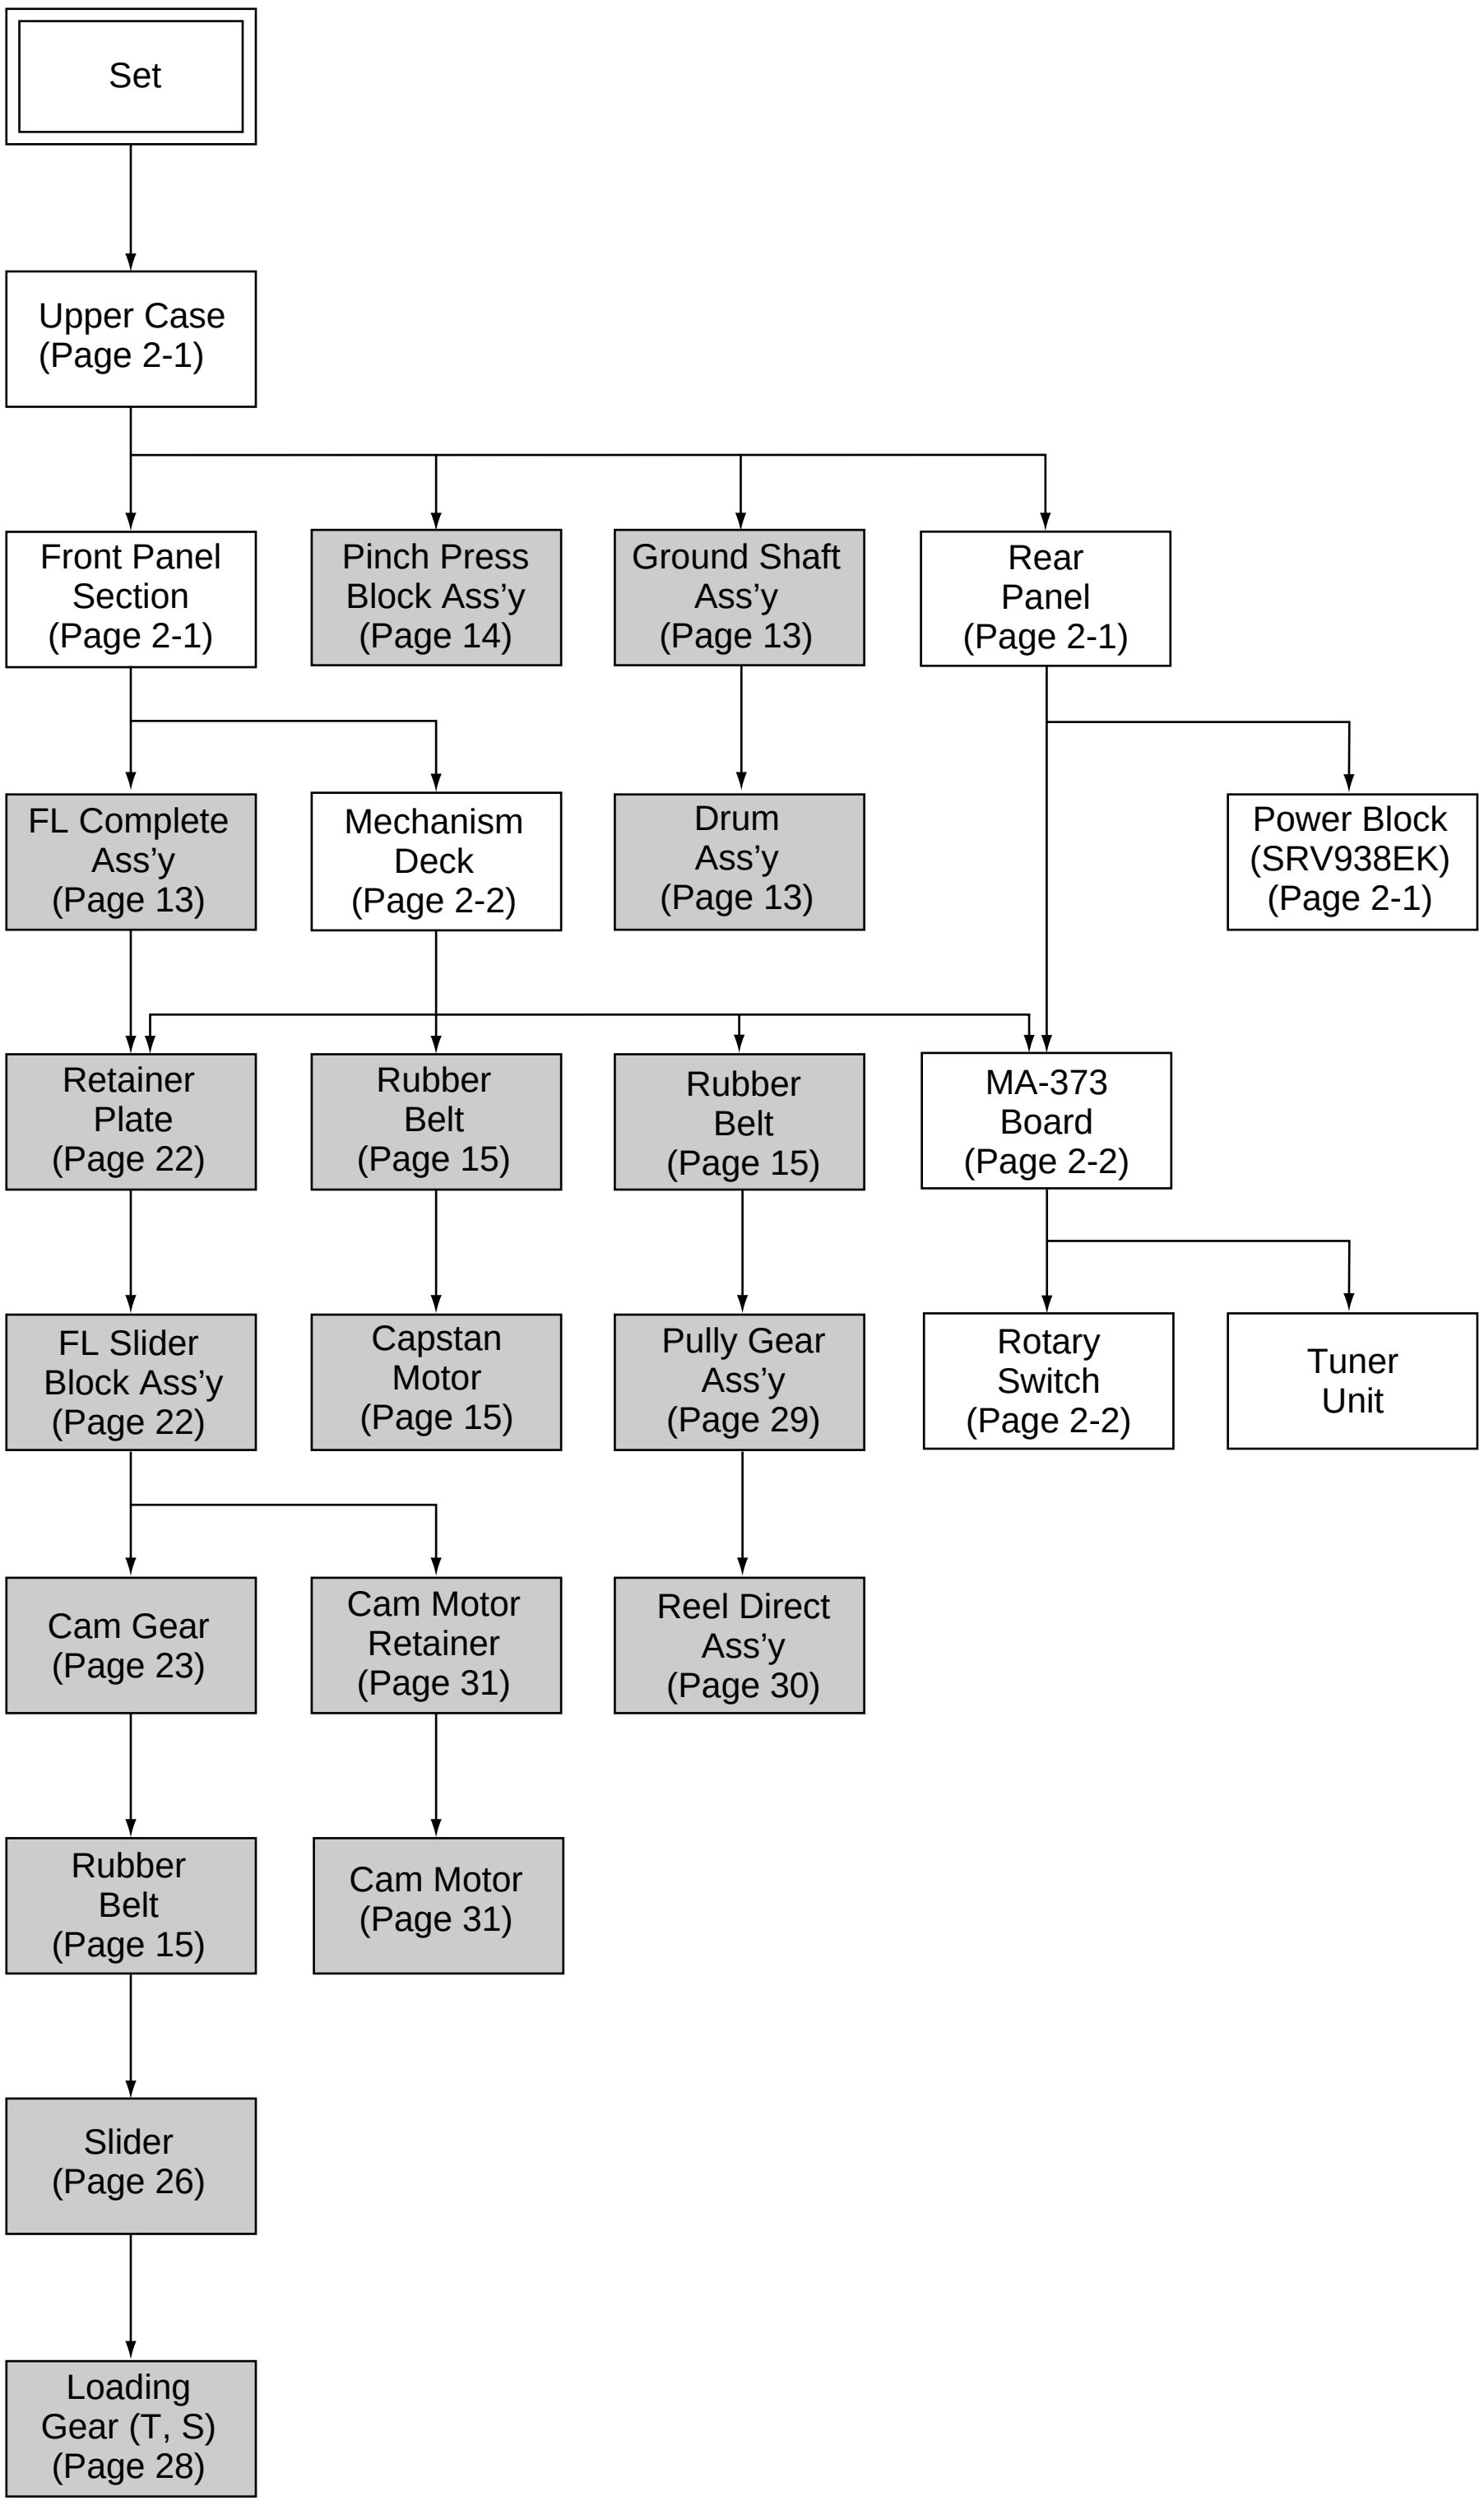
Set
Upper Case (Page 2-1)
Front Panel Section (Page 2-1)
Pinch Press Block Ass'y (Page 14)
Ground Shaft Ass'y (Page 13)
Rear Panel (Page 2-1)
FL Complete Ass'y (Page 13)
Mechanism Deck (Page 2-2)
Drum Ass'y (Page 13)
Power Block (SRV938EK) (Page 2-1)
Retainer Plate (Page 22)
Rubber Belt (Page 15)
Rubber Belt (Page 15)
MA-373 Board (Page 2-2)
FL Slider Block Ass'y (Page 22)
Capstan Motor (Page 15)
Pully Gear Ass'y (Page 29)
Rotary Switch (Page 2-2)
Tuner Unit
Cam Gear (Page 23)
Cam Motor Retainer (Page 31)
Reel Direct Ass'y (Page 30)
Rubber Belt (Page 15)
Cam Motor (Page 31)
Slider (Page 26)
Loading Gear (T, S) (Page 28)

SECTION 1
GENERAL

This section is extracted from SLV-SE800N/K instruction manual. (3-868-277-11)

Step 1 : Unpacking

Check that you have received the following items with the VCR:

- Remote commander

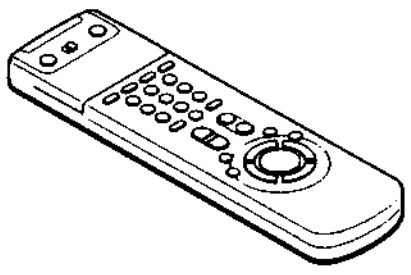

- Aerial cable



- R6 (size AA) batteries



Check your model name

The instructions in this manual are for the 9 models: SLV-SE350K, SE500K, SE500R, SE600N, SE700N, SE700K, SE700R, SE800N, and SE800K. Check your model number by looking at the rear panel of your VCR.
SLV-SE800N is the model used for illustration purposes. Any difference in operation is clearly indicated in the text, for example, "SLV-SE500K only."

Step 2 : Setting up the remote commander

Inserting the batteries

Insert two R6 (size AA) batteries by matching the + and – on the batteries to the diagram inside the battery compartment.

Insert the negative (–) end first, then push in and down until the positive (+) end clicks into position.

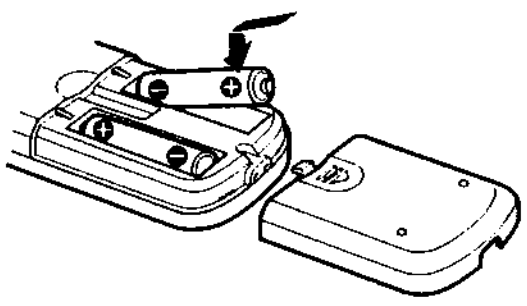

Using the remote commander

You can use this remote commander to operate this VCR and a Sony TV. Buttons on the remote commander marked with a dot (•) can be used to operate your Sony TV. If the TV does not have the ■ symbol near the remote sensor, this remote commander will not operate the TV.

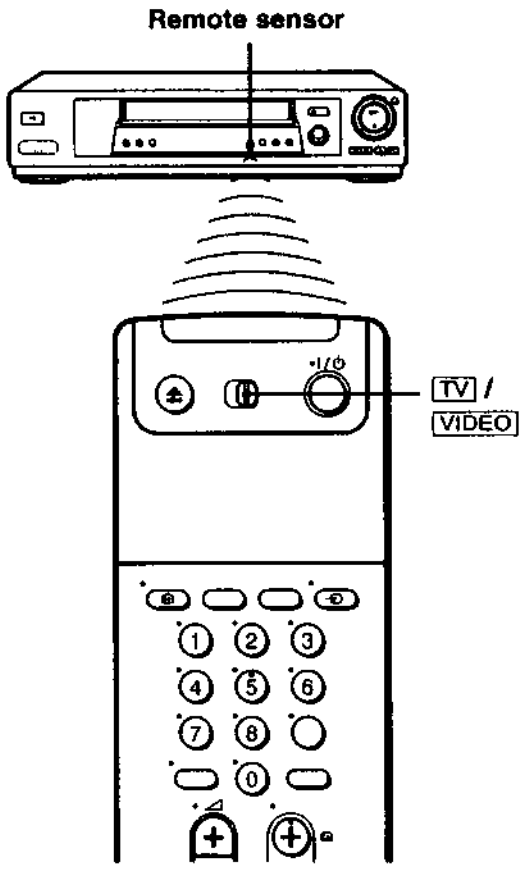

To operate	Set TV / VIDEO to
the VCR	VIDEO and point at the remote sensor at the VCR
a Sony TV	TV and point at the remote sensor at the TV

continued

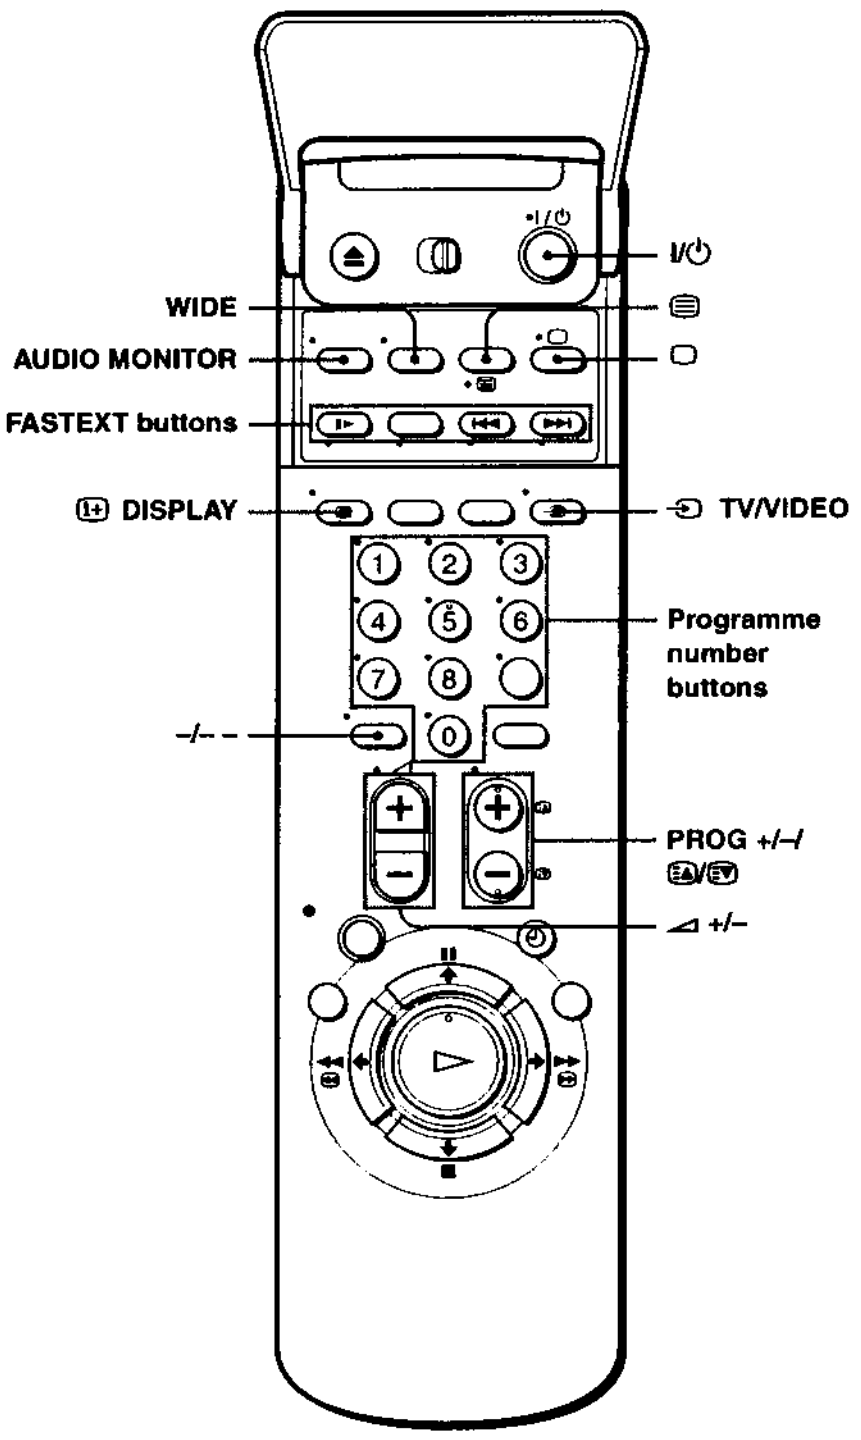

TV control buttons

To	Press
Set the TV to standby mode	I/⏻
Select an input source: aerial in or line in	TV/VIDEO
Select the TV's programme position	Programme number buttons, -/--, PROG +/–

To	Press
Adjust the volume of the TV	⊿ +/–
Switch to TV (Teletext off)*	☐ (TV)
Switch to Teletext*	⊜ (Teletext)
Select the sound	AUDIO MONITOR
Use FASTEXT*	FASTEXT buttons
Call up the on-screen display	DISPLAY
Change the Teletext page*	▲/▼
Switch to/from wide mode of a Sony wide TV (For other manufactures' wide TVs, see "Controlling other TVs with the remote commander (not available on SLV-SE350K and SE600N)" below.)	WIDE

Notes

- With normal use, the batteries should last about three to six months.
- If you do not use the remote commander for an extended period of time, remove the batteries to avoid possible damage from battery leakage.
- Do not use a new battery together with an old one.
- Do not use different types of batteries together.
- Some buttons may not work with certain Sony TVs.

* not available on SLV-SE350K and SE600N

Controlling other TVs with the remote commander (not available on SLV-SE350K and SE600N)

The remote commander is preprogrammed to control non-Sony TVs. If your TV is listed in the following table, set the appropriate manufacturer's code number.

1 Set TV / VIDEO at the top of the remote commander to TV.

2 Hold down I/⏻, and enter your TV's code number using the programme number buttons. Then release I/⏻.

Now you can use the following TV control buttons to control your TV:

I/⏻, TV/VIDEO, programme number buttons, -/-- (ten's digit), PROG +/–, ⊿ +/–, ☐ (TV), ⊜ (Teletext), FASTEXT buttons, WIDE*, MENU*, ↑/↓/←/→*, and OK*.

* These buttons may not work with all TVs.

continued

Code numbers of controllable TVs

If more than one code number is listed, try entering them one at a time until you find the one that works with your TV.

To switch to wide mode, see the footnotes below this table for the applicable code numbers.

Manufacturer	Code number
Sony	01*1, 02
Akai	68
Ferguson	52
Grundig	10*1, 11*1
Hitachi	24
JVC	33
Loewe	45
Mivar	09, 70
NEC	66
Nokia	15, 16, 69*3

Manufacturer	Code number
Panasonic	17*1, 49
Philips	06*1, 07*1, 08*1
Saba	12, 13
Samsung	22, 23
Sanyo	25
Sharp	29
Telefunken	36
Thomson	43*2
Toshiba	38

*1 Press WIDE to switch the wide picture mode on or off.

*2 Press WIDE, then press ⊿ +/– to select the wide picture mode you want.

*3 Press WIDE. The menu appears on the TV screen. Then, press ↑/↓/←/→ to select the wide picture you want and press OK.

Tip

- To see if you set your TV's code number correctly, try turning your TV on and off with the I/⏻ button.

Notes

- If you enter a new code number, the code number previously entered will be erased.
- If the TV uses a different remote control system from the one programmed to work with the VCR, you cannot control your TV with the remote commander.
- When you replace the batteries of the remote commander, the code number may change. Set the appropriate code number every time you replace the batteries.

Step 3 : Connecting the VCR

If your TV has a Scart (EURO-AV) connector, see page 10.

If your TV does not have a Scart (EURO-AV) connector

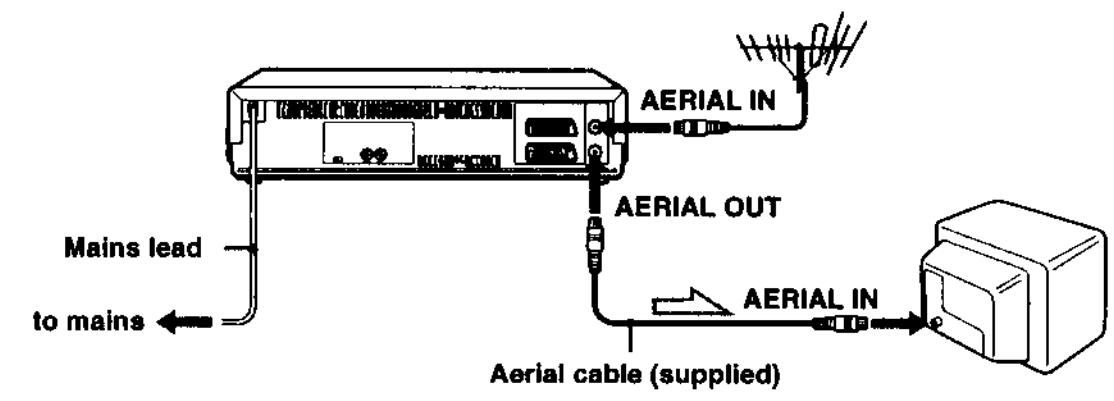

⇨ : Signal flow

1 Disconnect the aerial cable from your TV and connect it to AERIAL IN on the rear panel of the VCR.



2 Connect AERIAL OUT of the VCR and the aerial input of your TV using the supplied aerial cable.



3 Connect the mains lead to the mains.

Note

- When you connect the VCR and your TV only with an aerial cable, you have to tune your TV to the VCR (see page 14).

continued

If your TV has a Scart (EURO-AV) connector

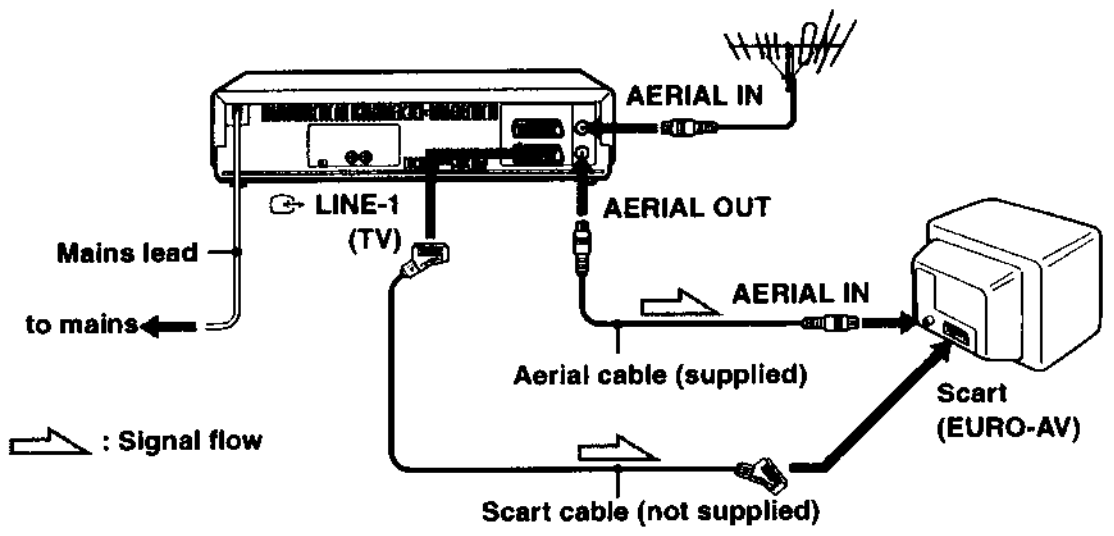

⇨ : Signal flow

1 Disconnect the aerial cable from your TV and connect it to AERIAL IN on the rear panel of the VCR.



2 Connect AERIAL OUT of the VCR and the aerial input of your TV using the supplied aerial cable.



3 Connect LINE-1 (TV) on the VCR and the Scart (EURO-AV) connector on the TV with the optional Scart cable.

This connection improves picture and sound quality. Whenever you want to watch the VCR picture, press ⊕ TV/VIDEO to display the VIDEO indicator in the display window.



4 Connect the mains lead to the mains.

Note

- If the TV is connected to the LINE-1 (TV) connector, setting the RF channel to OFF is recommended. In the OFF position, only the signal from the aerial is output through the AERIAL OUT connector (see page 16).

About the SMARTLINK features (not available on SLV-SE600N and SE700R)



If the connected TV complies with SMARTLINK, MEGALOGIC*1, EASYLINK*2, Q-Link*3, EURO VIEW LINK*4, or T-V LINK*5, this VCR automatically runs the SMARTLINK function after you complete the steps on the previous page (the SMARTLINK indicator appears in the VCR's display window when you turn on the TV). You can enjoy the following SMARTLINK features.

- Preset Download
  You can download your TV tuner preset data to this VCR and tune the VCR according to that data in Auto Set Up. This greatly simplifies the Auto Set Up procedure. Be careful not to disconnect the cables or exit the Auto Set Up function during the procedure.
  See "Setting up the VCR with the Auto Set Up function" on page 17.
- TV Direct Rec
  You can easily record what you are watching on the TV. For details, see "Recording what you are watching on the TV (TV Direct Rec) (not available on SLV-SE600N and SE700R)" on page 47.
- One Touch Play
  With One Touch Play, you can start playback automatically without turning on the TV. For details, see "Starting playback automatically with one button (One Touch Play) (not available on SLV-SE600N and SE700R)" on page 43.
- One Touch Menu
  You can turn on the VCR and TV, set the TV to the video channel, and display the VCR's on-screen display automatically by pressing MENU on the remote commander.
- One Touch Timer
  You can turn on the VCR and TV, set the TV to the video channel, and display the timer recording menu (the TIMER METHOD menu, the TIMER menu, or the SHOWVIEW menu) automatically by pressing ⏲ TIMER on the remote commander.
  You can set which timer recording menu is displayed using TIMER OPTIONS in the OPTIONS-2 menu (see page 79).
- Automatic Power Off
  You can have the VCR turn off automatically, if the VCR is not used after you turn off the TV.

*1 "MEGALOGIC" is a registered trademark of Grundig Corporation.

*2 "EASYLINK" is a trademark of Philips Corporation.

*3 "Q-Link" is a trademark of Panasonic Corporation.

*4 "EURO VIEW LINK" is a trademark of Toshiba Corporation.

*5 "T-V LINK" is a trademark of JVC Corporation.

Note

- Not all TVs respond to the functions above.

continued

Additional connections

To a stereo system (SLV-SE700N/K and SE800N only)

You can improve sound quality by connecting a stereo system to the AUDIO OUT R/L jacks as shown on the right.

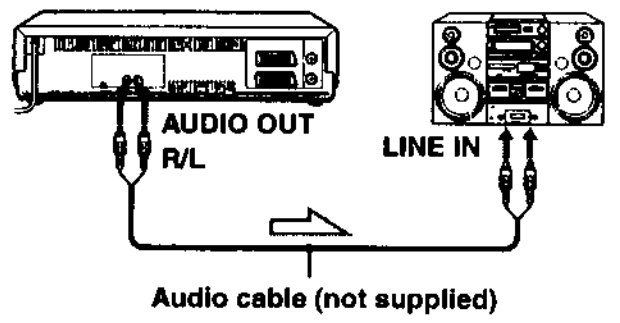

Audio cable (not supplied)

⇨ **: Signal flow**

To a TV with audio and video jacks (SLV-SE500R, SE700R and SE800K only)

If your TV does not have a Scart (EURO-AV) connector, you can improve sound and picture quality by connecting your TV to the LINE-2 OUT jacks as shown on the right.

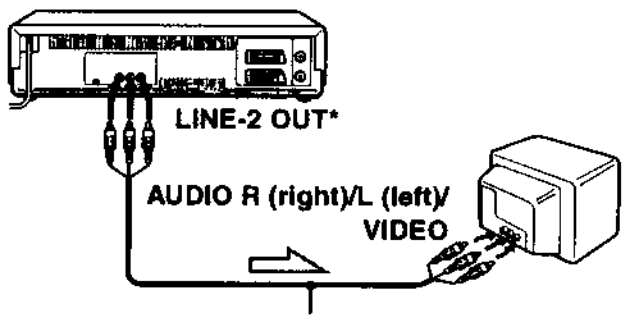

⇨ **: Signal flow** **Audio/video cable (not supplied)**

* SLV-SE500R has only AUDIO L (left) and VIDEO jacks.

To a satellite or digital tuner with Line Through (not available on SLV-SE350K, SE500R, SE600N and SE700R)

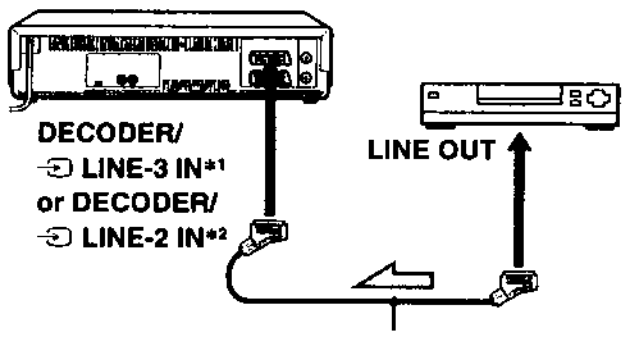

Scart cable (not supplied)

⇨ **: Signal flow**

Using the Line Through function, you can watch programmes from a satellite or digital tuner connected to this VCR on the TV even when the VCR is turned off. When you turn on the satellite or digital tuner, this VCR automatically sends the signal from the satellite or digital tuner to the TV without turning itself on.

1 Connect the satellite or digital tuner to the DECODER/LINE-3 IN*1 (or DECODER/LINE-2 IN*2) connector as shown above.

2 Set DECODER/LINE3*1 (or DECODER/LINE2*2) to LINE3*1 (or LINE2*2) in the OPTIONS-2 menu.

3 Set POWER SAVE to OFF in the OPTIONS-2 menu.

4 Turn off the VCR.

To watch a programme, turn on the satellite or digital tuner and the TV.

Note

- You cannot watch programmes on the TV while recording unless you are recording a satellite or digital programme.

*1 SLV-SE500K and SE800N/K only
*2 SLV-SE700N/K only

Step 4 : Tuning your TV to the VCR

If your TV has a Scart (EURO-AV) connector, see page 16.

If your TV does not have a Scart (EURO-AV) connector

Follow the steps below so that your TV will properly receive the video signals from your VCR.

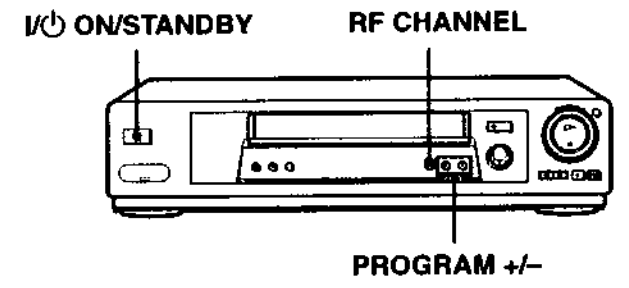

---

1 ONSTAN I/⏻

Press I/⏻ ON/STANDBY to turn on the VCR.

2 AUTO ST UP ○ R CANNL

Press RF CHANNEL on the VCR lightly.

The factory-preset RF channel appears in the display window.

The VCR signal is output through this channel to the TV.



3 Turn on your TV and select a programme position for the VCR picture.

This programme position will now be referred to as the video channel.

4 AUTO ST UP ○ R CANNL

Press RF CHANNEL.

The TV system appears in the display window.



5 PROGRA – + TRACING

Press PROGRAM +/– (repeatedly) to select the appropriate TV system for your area.

Select "G" for the B/G TV system, or "K" for the D/K TV system.

6 Tune the TV to the same channel shown in the VCR display window so that the picture on the right appears clearly on the TV screen.

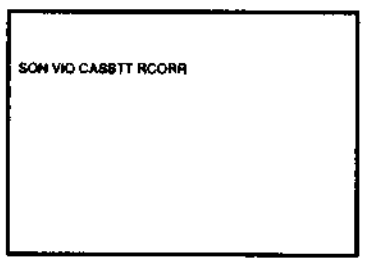

Refer to your TV manual for TV tuning instructions.

If you select the wrong TV system in step 5, the picture on the right may not appear. Select the appropriate TV system and tune the TV again.

If the picture does not appear clearly, see "To obtain a clear picture from the VCR" below.

7 AUTO ST UP ○ R CANNL

Press RF CHANNEL.

You have now tuned your TV to the VCR. Whenever you want to play a tape, set the TV to the video channel.

To check to see if the TV tuning is correct

Set the TV to the video channel and press PROGRAM +/– on the VCR. If the TV screen changes to a different programme each time you press PROGRAM +/–, the TV tuning is correct.

To obtain a clear picture from the VCR

If the screen does not appear clearly in step 6 above, go to step 7 to finish this procedure once. Then start again from step 2. After pressing RF CHANNEL in step 2, press PROGRAM +/– while the RF channel is displayed, so that another RF channel appears. Then tune the TV to the new RF channel so that a clear picture appears.

Note

- If you set the wrong TV system, you may have no sound or sound may be distorted.

continued

If your TV has a Scart (EURO-AV) connector

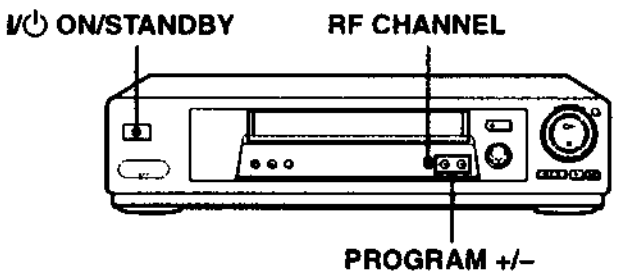

1

Press I/⏻ ON/STANDBY to turn on the VCR.

2

AUTO
ST UP
R CANNL

Press RF CHANNEL on the VCR lightly.

The factory-preset RF channel appears in the display window.

The VCR signal is output through this channel to the TV.



3



Press PROGRAM +/– to set the RF channel to OFF, and press RF CHANNEL again.



AUTO
ST UP
R CANNL

RF channel set up is complete.

Step 5 : Setting up the VCR with the Auto Set Up function

Before using the VCR for the first time, set up the VCR using the Auto Set Up function. With this function, you can set the language for the on-screen display, TV channels, guide channels for the ShowView system*, and VCR clock* automatically.

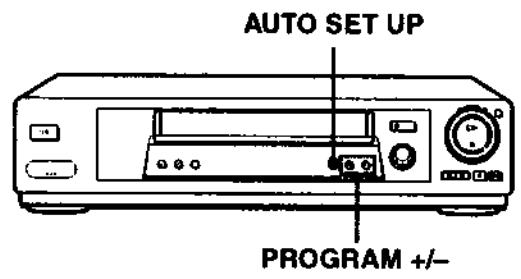

1

AUTO
ST UP
R CANNL

Hold down AUTO SET UP on the VCR for more than three seconds.

The VCR automatically turns on, and the country abbreviation appears in the display window.



2



Press PROGRAM +/– to select the abbreviation of your country from the table on page 18.

For some countries, there is a selection of languages to choose from.

If your country does not appear, select ELSE.

continued

3

AUTO
ST UP
R CANNL

Press AUTO SET UP lightly.

The VCR starts searching for all of the receivable channels and presets them according to the TV system you selected in "Tuning your TV to the VCR" on page 14.

If you want to change the order of the channels or disable unwanted programme positions, see "Changing/disabling programme positions" on page 30.



If you use the SMARTLINK connection (not available on SLV-SE600N and SE700R), the Preset Download function starts and the SMARTLINK indicator flashes in the display window during download.

After the search or download is complete, the current time appears in the display window for any stations that transmit a time signal (not available on SLV-SE500R, SE600N and SE700R).

The abbreviations of the countries and languages are as follows:

Abbreviation	Country	Language
CZ	Checho	Czech
HUN	Hungary	Hungarian
PL	Poland	Polish
SK	Slovakia	Slovak
TR	Turkey	Turkish
RUS	Russia	Russian
ELSE	Other countries	English

To cancel the Auto Set Up function

Press AUTO SET UP.

Tip

- If you want to change the language for the on-screen display from the one preset in the Auto Set Up function, see page 24.

Notes

- If you stop the Auto Set Up function during step 3, you must repeat set up from step 1.
- Whenever you operate the Auto Set Up function, some of the settings (ShowView*, timer, etc.) will be reset. If this happens, you have to set them again.

* not available on SLV-SE500R, SE600N and SE700R

Step 6 : Setting the clock

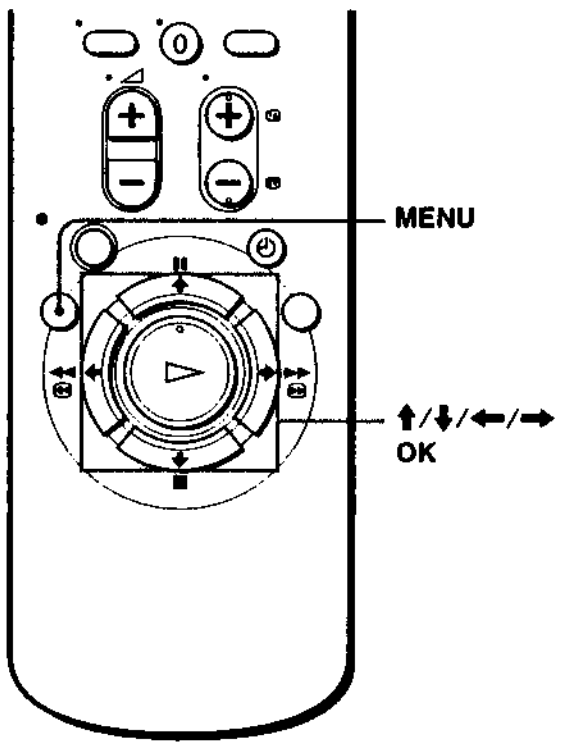

You must set the time and date on the VCR to use the timer features properly.

The Auto Clock Set function (not available on SLV-SE500R, SE600N and SE700R) works only if a station in your area is broadcasting a time signal. If the Auto Set Up function did not set the clock correctly for your local area, try another station for the Auto Clock Set function (see page 22).

Setting the clock manually

Before you start...

- Turn on the VCR and the TV.
- Set the TV to the video channel.

1



Press MENU, then press ↑/↓ to highlight SETTINGS and press OK.

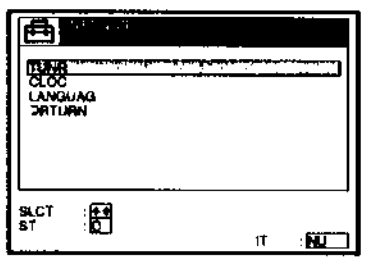

2

Press ↑/↓ to highlight CLOCK, then press OK.

For SLV-SE500R, SE600N and SE700R, only the clock setting menu appears. Skip the next step and go to step 4.

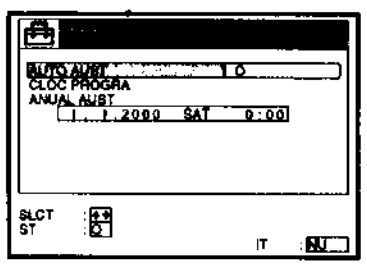

continued

3

Press ↑/↓ to highlight MANUAL ADJUST, then press OK.

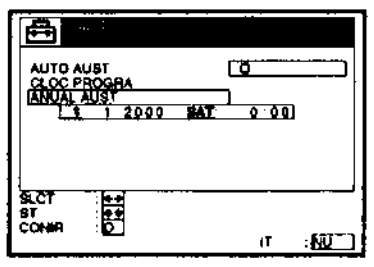
AUTO AUST
O
CLOC PROGRA
ANUAL AUST
1 1 2000 SAT 0:00
SLCT
ST
CONIR
IT
NU

4

Press ↑/↓ to set the day.

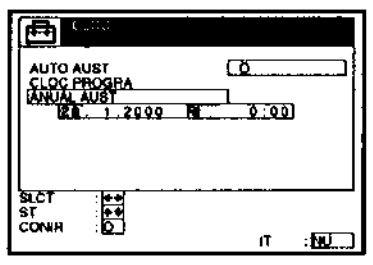
AUTO AUST
O
CLOC PROGRA
ANUAL AUST
28. 1.2000 0:00
SLCT
ST
CONIR
IT
NU

5

Press → to highlight the month and set the month pressing ↑/↓.

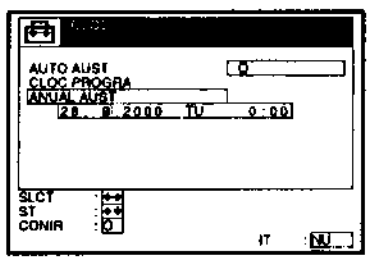
AUTO AUST
O
CLOC PROGRA
ANUAL AUST
28 9 2000 TU 0:00
SLCT
ST
CONIR
IT
NU

6

Set the year, hour, and minutes in sequence, pressing → to highlight the item to be set, and press ↑/↓ to select the digits.

The day of the week is set automatically.

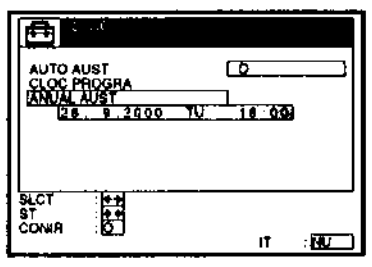
AUTO AUST
O
CLOC PROGRA
ANUAL AUST
28 9 2000 TU 18:00
SLCT
ST
CONIR
IT
NU

7



Press OK to start the clock.

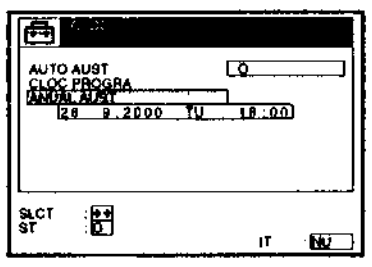
AUTO AUST
O
CLOC PROGRA
ANUAL AUST
28 9 2000 TU 18:00
SLCT
ST
IT
NU

8

Press MENU to exit the menu.

Tips

- To change the digits while setting, press ← to return to the item to be changed, and select the digits by pressing ↑/↓.
- If you want to return to the previous menu, highlight RETURN and press OK.

Note

- The menu disappears automatically if you don't proceed for more than a few minutes.

continued

Changing the station for the Auto Clock Set function (not available on SLV-SE500R, SE600N and SE700R)

Before you start…

- Turn on the VCR and the TV.
- Set the TV to the video channel.

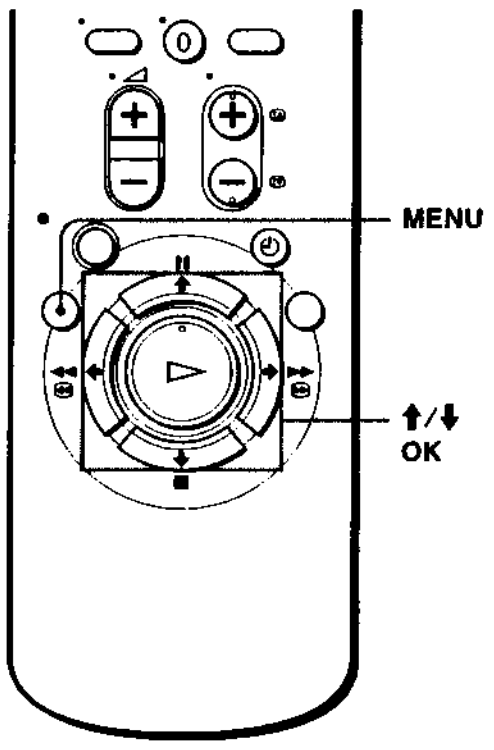

1



Press MENU, then press ↑/↓ to highlight SETTINGS and press OK.

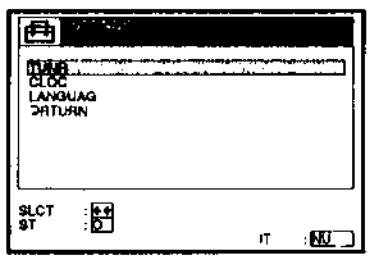
TUNR
CLOC
LANGUAG
RTURN
SLCT
ST
IT
NU

2

Press ↑/↓ to highlight CLOCK, then press OK.

AUTO ADJUST is highlighted.

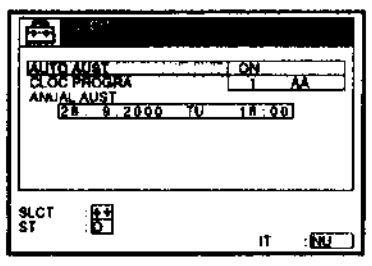
AUTO AUST
ON
CLOC PROGRA
1 AA
ANUAL AUST
28 9 2000 TU 18:00
SLCT
ST
IT
NU

3

Press OK.

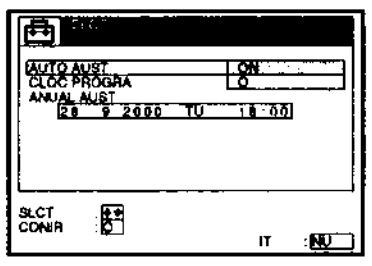
AUTO AUST
ON
CLOC PROGRA
O
ANUAL AUST
28 9 2000 TU 18:00
SLCT
CONIR
IT
NU

4

Press ↑/↓ to highlight ON, then press OK.

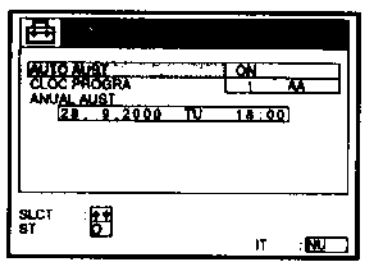
AUTO AUST
ON
CLOC PROGRA
1 AA
ANUAL AUST
28. 9.2000 TU 18:00
SLCT
ST
IT
NU

5

Press ↓ to highlight CLOCK PROGRAM, then press OK.

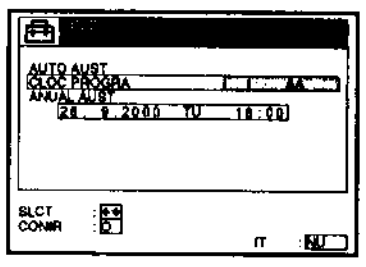
AUTO AUST
CLOC PROGRA
AA
ANUAL AUST
28. 9.2000 TU 18:00
SLCT
CONIR
IT
NU

6

Press ↑/↓ repeatedly until the programme position of the station that carries a time signal appears.

If the VCR does not receive a time signal from any station, AUTO ADJUST returns to OFF automatically.

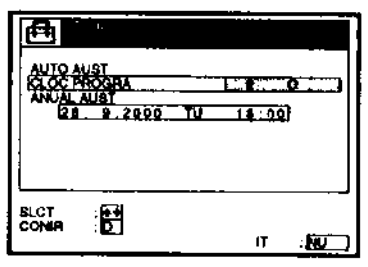
AUTO AUST
CLOC PROGRA
ANUAL AUST
28 9.2000 TU 18:00
SLCT
CONIR
IT
NU

7

Press MENU to exit the menu.

Tips

- If you set AUTO ADJUST to ON, the Auto Clock Set function is activated whenever the VCR is turned off. The time is adjusted automatically by making reference to the time signal from the station whose programme position is displayed in the "CLOCK PROGRAM" row. If you do not need the Auto Clock Set, select OFF.
- If you want to return to the previous menu, highlight RETURN and press OK.

Note

- The menu disappears automatically if you don't proceed for more than a few minutes.

Selecting a language

You can change the on-screen display language from the one you selected with the Auto Set Up function.

Before you start...

- Turn on the VCR and the TV.
- Set the TV to the video channel.

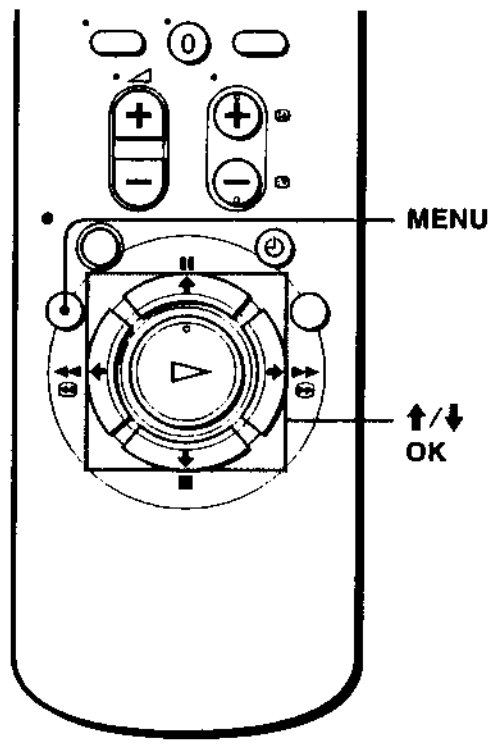

1



Press MENU, then press ↑/↓ to highlight SETTINGS and press OK.

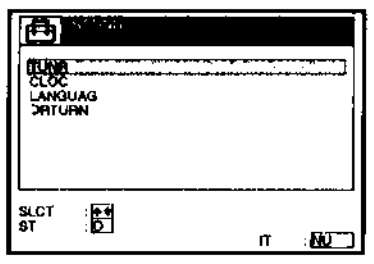
CLOC
LANGUAG
RTURN
SLCT
ST
IT
NU

2

Press ↑/↓ to highlight LANGUAGE, then press OK.

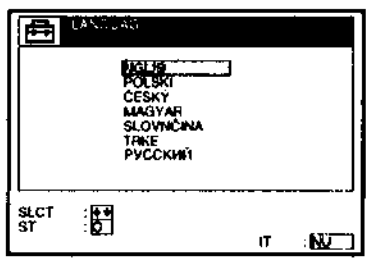
POLSKI
CESKY
MAGYAR
SLOVNČINA
TRKE
PYCCKИЙ
SLCT
ST
IT
NU

3

Press ↑/↓ to highlight the desired language, then press OK.

4

Press MENU to exit the menu.

Tip

- If you want to return to the previous menu, highlight RETURN and press OK.

Note

- The menu disappears automatically if you don't proceed for more than a few minutes.

Presetting channels

If some channels could not be preset using the Auto Set Up function, you can preset them manually.

Before you start...

- Turn on the VCR and the TV.
- Set the TV to the video channel.

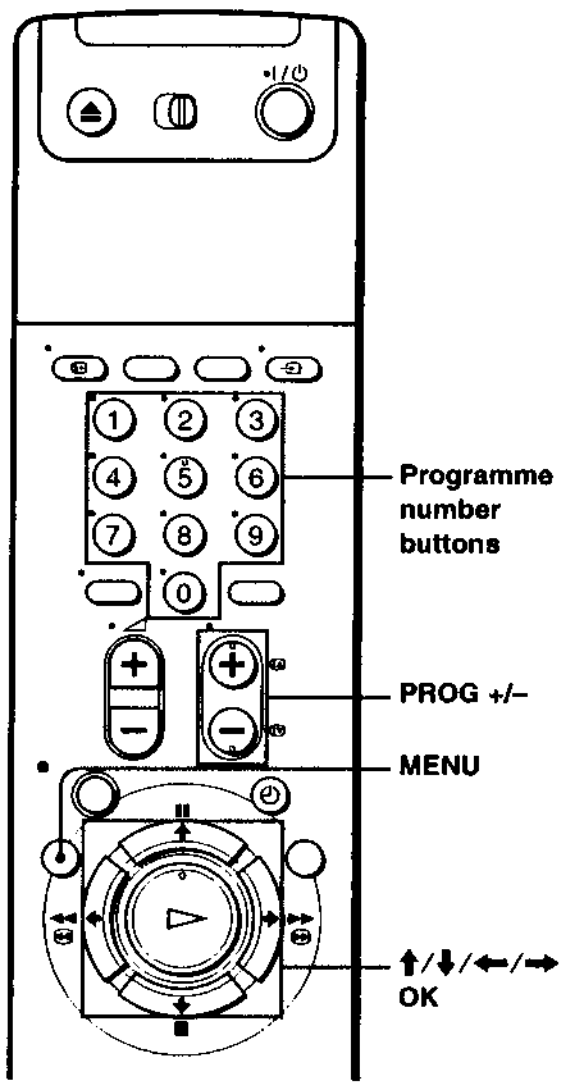
Programme number buttons
PROG +/–
MENU
↑/↓/←/→
OK

1



Press MENU, then press ↑/↓ to highlight SETTINGS and press OK.

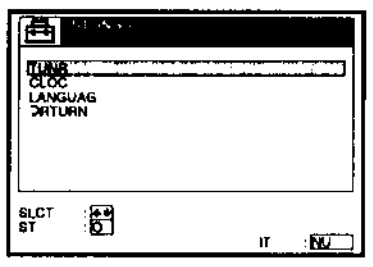
CLOC
LANGUAG
RTURN
SLCT
ST
IT
NU

2

Press ↑/↓ to highlight TUNER, then press OK.

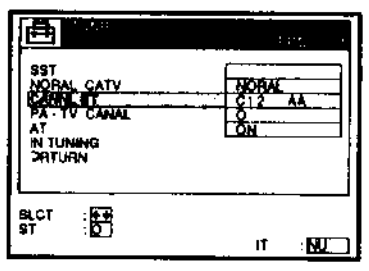
NORAL CATV
PA - TV CANAL
AT
IN TUNING
RTURN
C12 AA
ON
SLCT
ST

3

Press ↑/↓ to highlight NORMAL/CATV, then press OK.

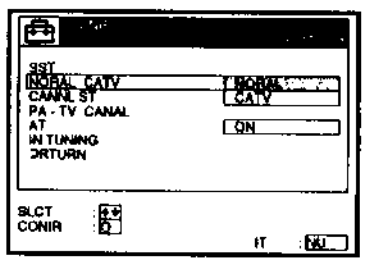
NORAL CATV
CANNL ST
PA - TV CANAL
AT
IN TUNING
RTURN
CATV
ON
SLCT
CONIR

4

Press ↑/↓ to highlight NORMAL, then press OK.

To preset CATV (Cable Television) channels, select CATV.

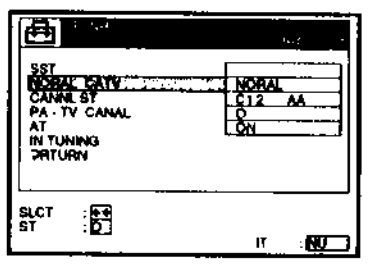
NORAL CATV
CANNL ST
PA - TV CANAL
AT
IN TUNING
RTURN
NORAL
C12 AA
ON
SLCT
ST

5

Press PROG +/– to select the programme position.

Selected programme position

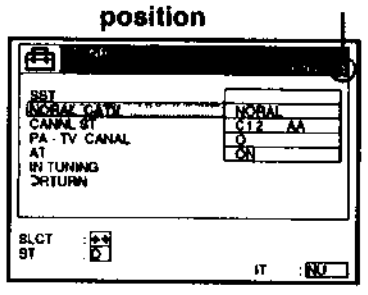
NORAL CATV
CANNL ST
PA - TV CANAL
AT
IN TUNING
RTURN
NORAL
C12 AA
ON
SLCT
ST

6

Press ↑/↓ to highlight CHANNEL SET, then press OK.

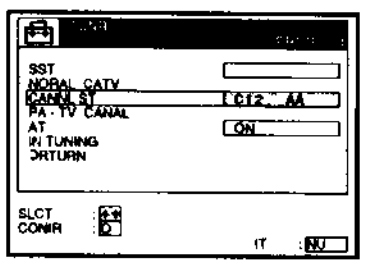
NORAL CATV
CANNL ST
PA - TV CANAL
AT
IN TUNING
RTURN
C12 AA
ON
SLCT
CONIR

continued

7





Press ↑/↓ repeatedly until the channel you want is displayed.

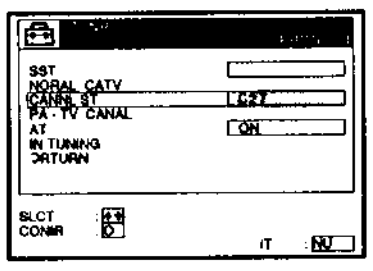
SST
NORAL CATV
CANNL ST
PA · TV CANAL
AT
IN TUNING
RTURN
C27
ON
SLCT
CONIR
IT
NU

The channels appear in the following order:

B/G TV system		D/K TV system	
Channel number in the CHANNEL SET field	**Receivable Channel**	**Channel number in the CHANNEL SET field**	**Receivable Channel**
C02	E2	C02	R1
C03	E3	C05	R6
C04	E4	C06	R7
C05	E5	C12	R12
C06	E6	C13	R2
C07	E7	C14	R3
C08	E8	C15	R4
C09	E9	C16	R5
C10	E10	C17	R8
C11	E11	C18	R9
C12	E12	C19	R10
C21–C69	E21–E69	C20	R11
S01–S41	S1–S41	C21–C69	R21–R69
S42–S46	S01–S05		

If you know the number of the channel you want, press the programme number buttons. For example, for channel 5, first press "0" and then press "5."

8



If the TV sound is distorted or noisy, press ↑/↓ to highlight SYSTEM and press OK. Then press ↑/↓ to select B/G or D/K so that you get better sound.

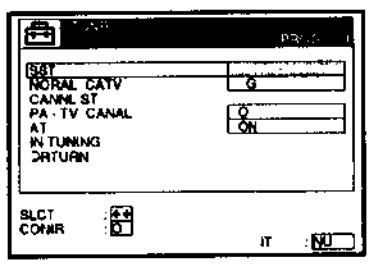
SST
NORAL CATV
CANNL ST
PA · TV CANAL
AT
IN TUNING
RTURN
G
ON
SLCT
CONIR
IT
NU

9

To preset another programme position, repeat steps 5 through 7.

10

Press MENU to exit the menu.

If the picture is not clear

Normally, the Auto Fine Tuning (AFT) function automatically tunes in channels clearly. However, if the picture is not clear, you may also use the manual tuning function.

1 Press PROG +/– or the programme number buttons to select the programme position for which you cannot obtain a clear picture.

2 Press MENU, then select SETTINGS and press OK.

3 Select TUNER, then press OK.

4 Select FINE TUNING, then press OK.
The fine tuning meter appears.

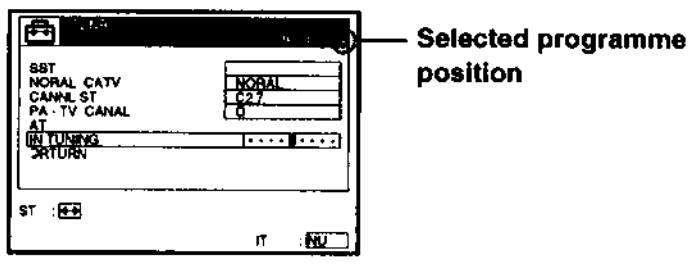
SST
NORAL CATV
CANNL ST
PA · TV CANAL
AT
IN TUNING
RTURN
NORAL
C27
G
ST
IT
NU
Selected programme position

5 Press ←/→ to get a clearer picture, then press MENU to exit the menu.
Note that the AFT (Auto Fine Tuning) setting switches to OFF.

Tip

- If you want to return to the previous menu, highlight RETURN and press OK.

Notes

- The menu disappears automatically if you don't proceed for more than a few minutes.
- When adjusting FINE TUNING, the menu may become difficult to read due to interference from the picture being received.

Changing/disabling programme positions

After setting the channels, you can change the programme positions as you like. If any programme positions are unused or contain unwanted channels, you can disable them.

You can also change the station names (not available on SLV-SE500R, SE600N and SE700R). If the station names are not displayed, you can enter them manually.

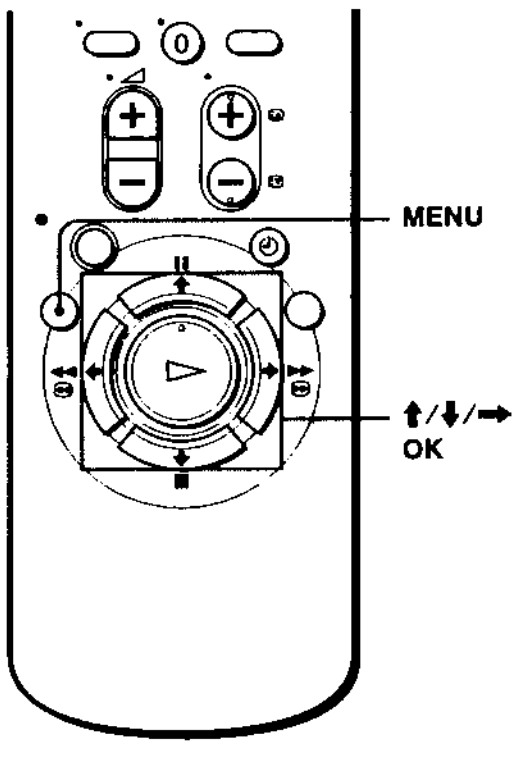

Changing programme positions

Before you start…

- Turn on the VCR and the TV.
- Set the TV to the video channel.

1

Press MENU, then press ↑/↓ to highlight LISTS and press OK.

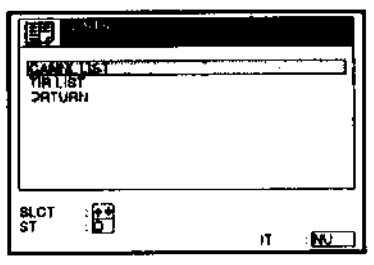
CANNL LIST
TIR LIST
RTURN
SLCT
ST
IT
NU

2

Press ↑/↓ to highlight CHANNEL LIST, then press OK.

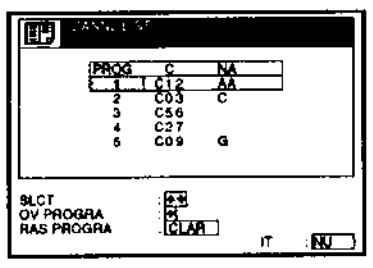
PROG C NA
1 C12 AA
2 C03 C
3 C56
4 C27
5 C09 G
SLCT
OV PROGRA
RAS PROGRA
CLAR
IT
NU

3



Press ↑/↓ to highlight the row which you want to change the programme position, then press →.

To display other pages for programme positions 6 to 60, press ↑/↓ repeatedly.

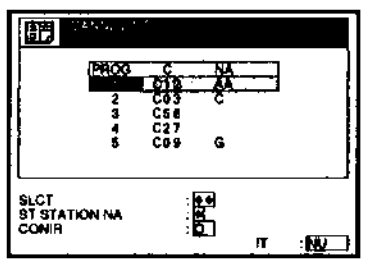
PROG C NA
2 C03 C
3 C56
4 C27
5 C09 G
SLCT
ST STATION NA
CONIR
IT
NU

4



Press ↑/↓ until the selected channel row moves to the desired programme position.

The selected channel is inserted at the new programme position and the intermediate channels are displaced to fill the gap.

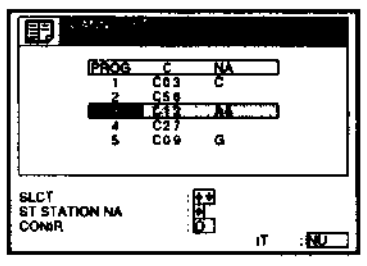
PROG C NA
1 C03 C
2 C56
4 C27
5 C09 G
SLCT
ST STATION NA
CONIR
IT
NU

5



Press OK to confirm the setting.

6

To change the programme position of another station, repeat steps 3 through 5.

7

Press MENU to exit the menu.

Tip

- If you want to return to the previous menu, highlight RETURN and press OK.

Note

- The menu disappears automatically if you don't proceed for more than a few minutes.

continued

Disabling unwanted programme positions

After presetting channels, you can disable unused programme positions. The disabled positions will be skipped later when you press the PROG +/– buttons.

Before you start...

- Turn on the VCR and the TV.
- Set the TV to the video channel.

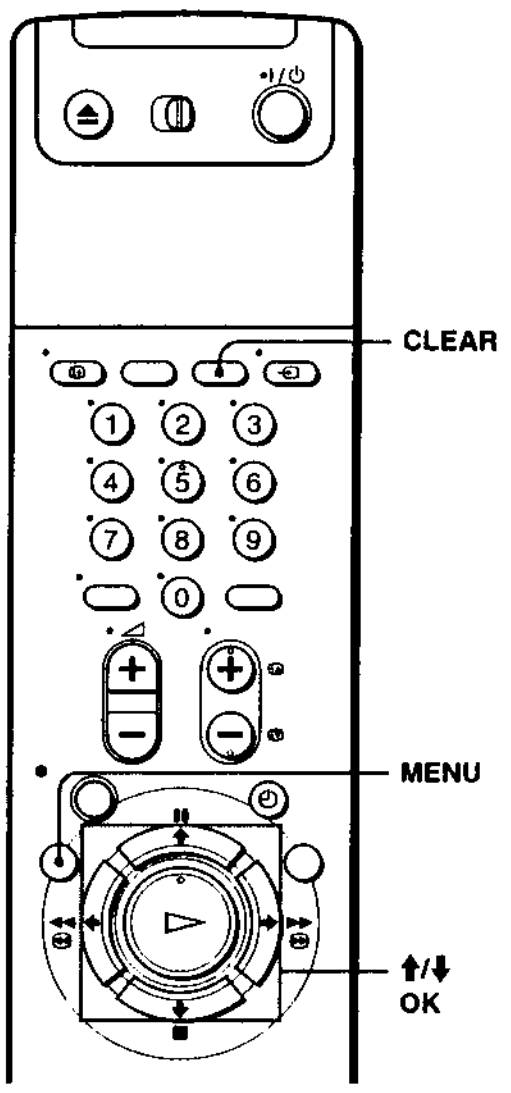
CLEAR
MENU
↑/↓
OK

1 Press MENU, then press ↑/↓ to highlight LISTS, and press OK.



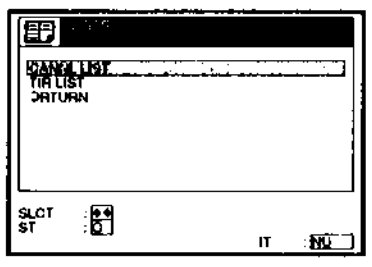
TIR LIST
RTURN
SLCT
ST
IT

2 Press ↑/↓ to highlight CHANNEL LIST, then press OK.



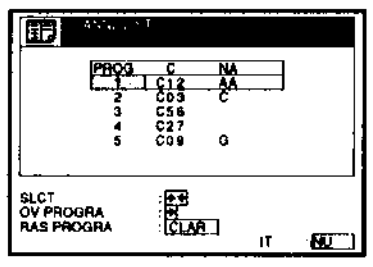
PROG C NA
1 C12 AA
2 C03 C
3 C56
4 C27
5 C09 G
SLCT
OV PROGRA
RAS PROGRA
CLAR
IT

3 Press ↑/↓ to highlight the row which you want to disable.

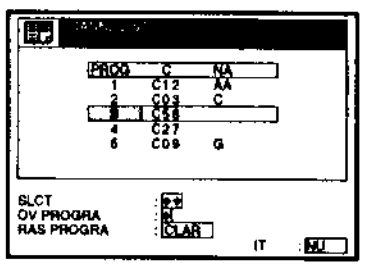
PROG C NA
1 C12 AA
2 C03 C
3 C56
4 C27
5 C09 G
SLCT
OV PROGRA
RAS PROGRA
CLAR
IT

4 Press CLEAR.

The selected row will be cleared as shown on the right.

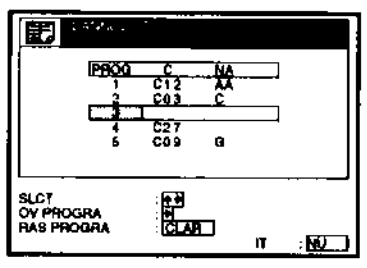
PROG C NA
1 C12 AA
2 C03 C
4 C27
5 C09 G
SLCT
OV PROGRA
RAS PROGRA
CLAR
IT

5 Repeat steps 3 and 4 for any other programme positions you want to disable.

6 Press MENU to exit the menu.

Tip

- If you want to return to the previous menu, highlight RETURN and press OK.

Notes

- The menu disappears automatically if you don't proceed for more than a few minutes.
- Be sure to select the programme position you want to disable correctly. If you disable a programme position by mistake, you need to reset that channel manually.

continued

Changing the station names (not available on SLV-SE500R, SE600N and SE700R)

You can change or enter the station names (up to 5 characters). The VCR must receive channel information (for instance, SMARTLINK information) for station names to appear automatically.

Before you start...

- Turn on the VCR and the TV.
- Set the TV to the video channel.

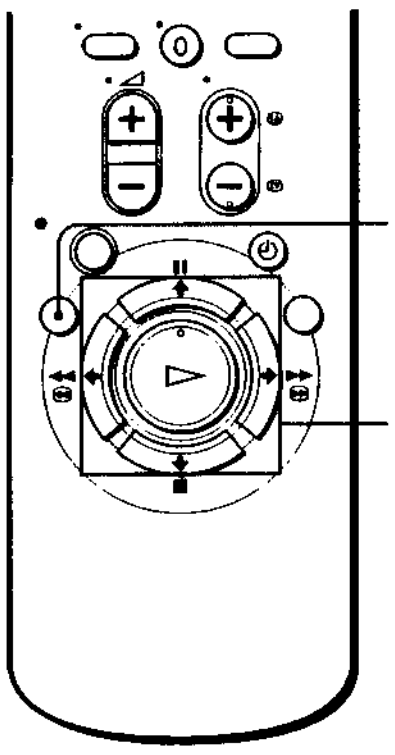

1 Press MENU, then press ↑/↓ to highlight LISTS and press OK.



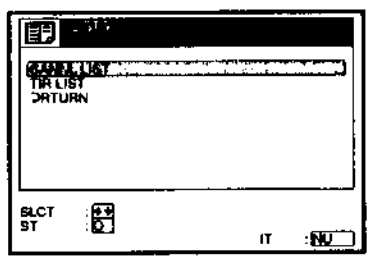
TIR LIST
RTURN
SLCT
ST
IT

2 Press ↑/↓ to highlight CHANNEL LIST, then press OK.

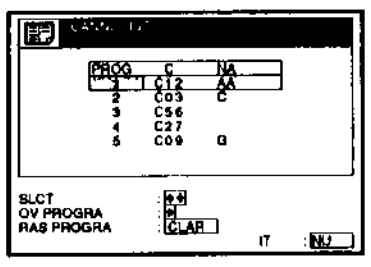
PROG C NA
1 C12 AA
2 C03 C
3 C56
4 C27
5 C09 G
SLCT
OV PROGRA
RAS PROGRA
CLAR
IT

3 Press ↑/↓ to highlight the row which you want to change or enter the station name, then press →.

To display other pages for programme positions 6 to 60, press ↑/↓ repeatedly.

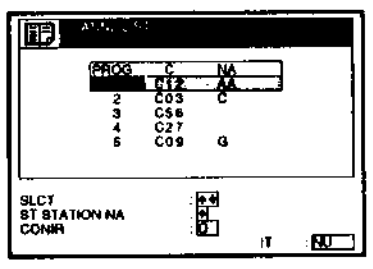
PROG C NA
1 C12 AA
2 C03 C
3 C56
4 C27
5 C09 G
SLCT
ST STATION NA
CONIR
IT

4 Press →.

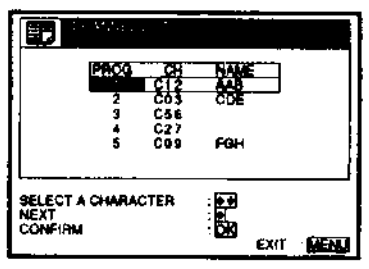
PROG CH NAME
1 C12 AAA
2 C03 CDE
3 C56
4 C27
5 C09 FGH
SELECT A CHARACTER
NEXT
CONFIRM
EXIT MENU

5 Enter the station name.

1. Press ↑/↓ to select a character.
   Each time you press ↑, the character changes as shown below.
   A → B → ... → Z → a → b → ... → z → 0 → 1 → ... → 9 → (symbols) → (blank space) → A
2. Press → to set the next character.
   The next space is highlighted.
   To correct a character, press ←/→ until the character you want to correct is highlighted, then reset it.

You can set up to 5 characters for the station name.

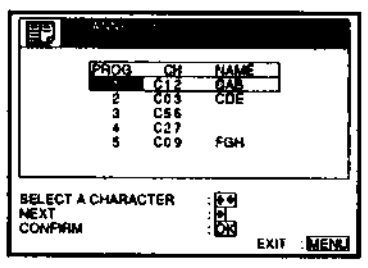
PROG CH NAME
1 C12 AAB
2 C03 CDE
3 C56
4 C27
5 C09 FGH
SELECT A CHARACTER
NEXT
CONFIRM
EXIT MENU

6 Press OK to confirm the new name.

7 Press MENU to exit the menu.

Tip

- If you want to return to the previous menu, highlight RETURN and press OK.

Notes

- The menu disappears automatically if you don't proceed for more than a few minutes.
- If you enter a symbol in step 5, it will appear as a blank space in the display window.

Setting the Canal Plus decoder (not available on SLV-SE350K, SE500R, SE600N and SE700R)

You can watch or record Canal Plus programmes if you connect a decoder (not supplied) to the VCR.

Connecting a decoder

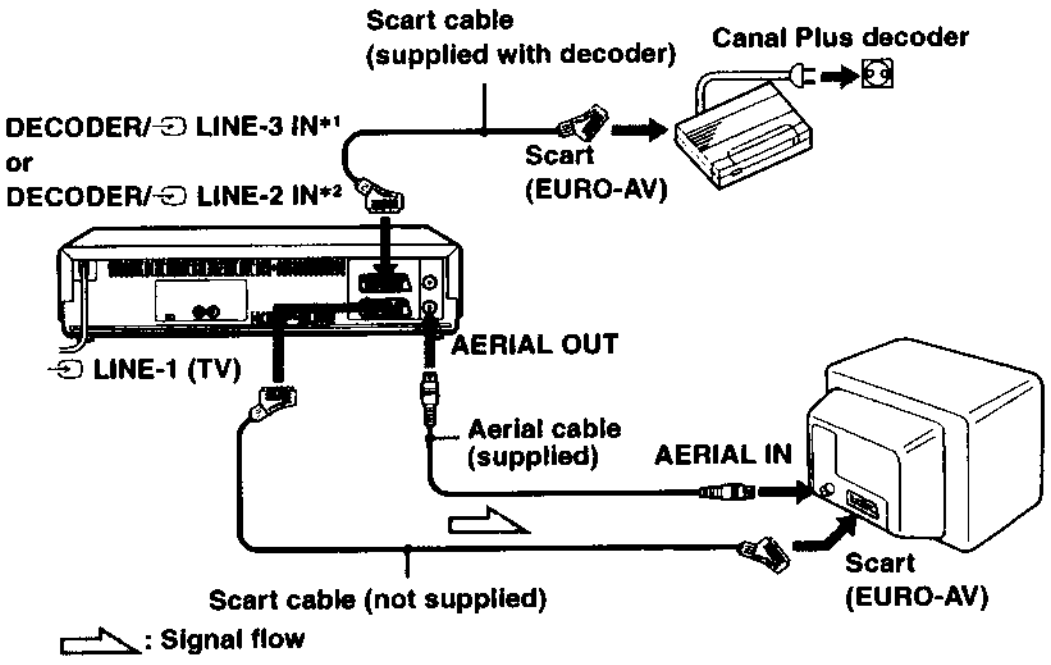
Scart cable
(supplied with decoder)
Canal Plus decoder
DECODER/⇥ LINE-3 IN*1
or
DECODER/⇥ LINE-2 IN*2
Scart
(EURO-AV)
AERIAL OUT
⇥ LINE-1 (TV)
Aerial cable
(supplied)
AERIAL IN
Scart cable (not supplied)
Scart
(EURO-AV)
: Signal flow

Setting Canal Plus channels

To watch or record Canal Plus programmes, set your VCR to receive the channels using the on-screen display.

In order to set the channels correctly, be sure to follow all of the steps below.

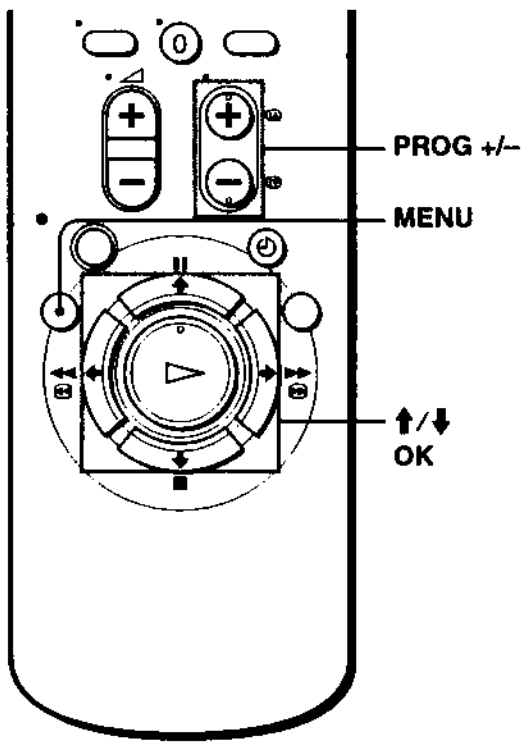
PROG +/–
MENU
↑/↓
OK

Before you start…

- Turn on the VCR, the TV, and the decoder.
- Set the TV to the video channel.

1 Press MENU, then press ↑/↓ to highlight OPTIONS and press OK.


MENU
PLAY
OK

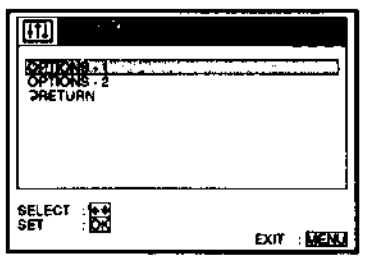
OPTIONS - 1
OPTIONS - 2
RETURN
SELECT : ↑↓
SET : OK
EXIT : MENU

2 Press ↑/↓ to highlight OPTIONS-2, then press OK.

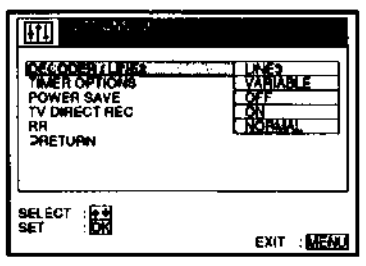
DECODER / LINE3
TIMER OPTIONS
POWER SAVE
TV DIRECT REC
RR
RETURN
LINE3
VARIABLE
OFF
ON
NORMAL
SELECT : ↑↓
SET : OK
EXIT : MENU

3 Press ↑/↓ to highlight DECODER/LINE3*1 (or DECODER/LINE2*2), then press OK.

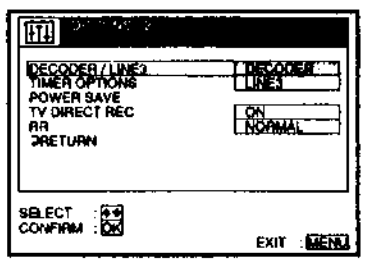
DECODER / LINE3
TIMER OPTIONS
POWER SAVE
TV DIRECT REC
RR
RETURN
DECODER
LINE3
ON
NORMAL
SELECT : ↑↓
CONFIRM : OK
EXIT : MENU

continued

4 Press ↑/↓ to highlight DECODER, then press OK.

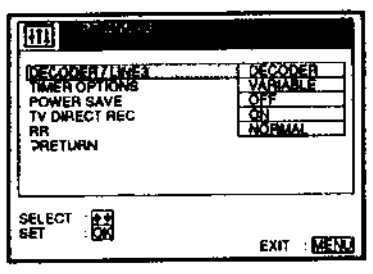
DECODER / LINE3
TIMER OPTIONS
POWER SAVE
TV DIRECT REC
RR
RETURN
DECODER
VARIABLE
OFF
ON
NORMAL
SELECT : ↑↓
SET : OK
EXIT : MENU

5 Press MENU to exit the menu.

The menu disappears from the TV screen.

6 Press MENU again. Then press ↑/↓ to highlight SETTINGS and press OK.


MENU
PLAY
OK

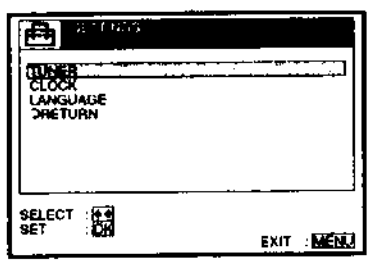
TUNER
CLOCK
LANGUAGE
RETURN
SELECT : ↑↓
SET : OK
EXIT : MENU

7 Press ↑/↓ to highlight TUNER, then press OK.

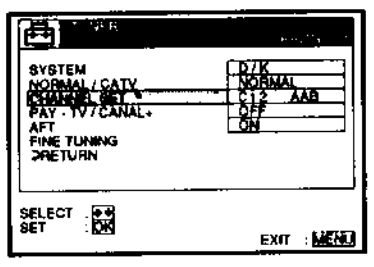
SYSTEM
NORMAL / CATV
CHANNEL SET
PAY - TV / CANAL+
AFT
FINE TUNING
RETURN
D/K
NORMAL
C12 AAB
OFF
ON
SELECT : ↑↓
SET : OK
EXIT : MENU

8 Press ↑/↓ to highlight NORMAL/CATV, then press OK.

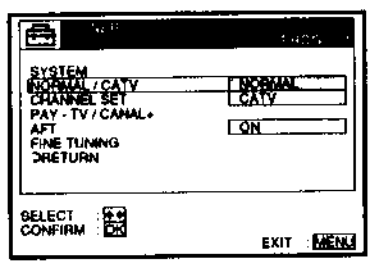
SYSTEM
NORMAL / CATV
CHANNEL SET
PAY - TV / CANAL+
AFT
FINE TUNING
RETURN
NORMAL
CATV
ON
SELECT : ↑↓
CONFIRM : OK
EXIT : MENU

9 Press ↑/↓ to highlight NORMAL, then press OK.

To preset CATV (Cable Television) channels, select CATV.

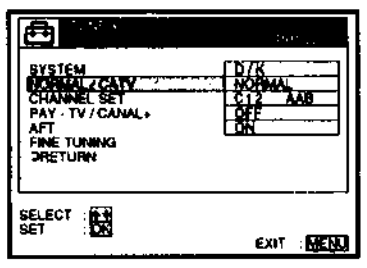
SYSTEM
NORMAL / CATV
CHANNEL SET
PAY - TV / CANAL+
AFT
FINE TUNING
RETURN
D/K
NORMAL
C12 AAB
OFF
ON
SELECT : ↑↓
SET : OK
EXIT : MENU

10 Press PROG +/– to select the desired programme position.



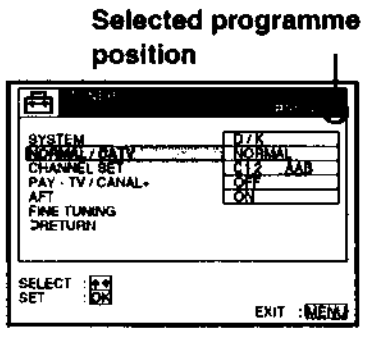
Selected programme position
SYSTEM
NORMAL / CATV
CHANNEL SET
PAY - TV / CANAL+
AFT
FINE TUNING
RETURN
D/K
NORMAL
C12 AAB
OFF
ON
SELECT : ↑↓
SET : OK
EXIT : MENU

11 Press ↑/↓ to highlight CHANNEL SET, then press OK.

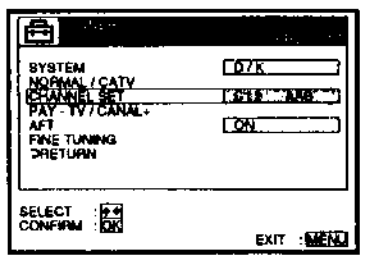
SYSTEM
NORMAL / CATV
CHANNEL SET
PAY - TV / CANAL+
AFT
FINE TUNING
RETURN
D/K
ON
SELECT : ↑↓
CONFIRM : OK
EXIT : MENU

12 Press ↑/↓ to select the Canal Plus channels, then press OK.

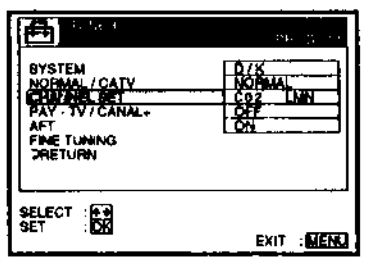
SYSTEM
NORMAL / CATV
CHANNEL SET
PAY - TV / CANAL+
AFT
FINE TUNING
RETURN
D/K
NORMAL
C02 LMN
OFF
ON
SELECT : ↑↓
SET : OK
EXIT : MENU

13 Press ↑/↓ to highlight PAY-TV/CANAL+, then press OK.

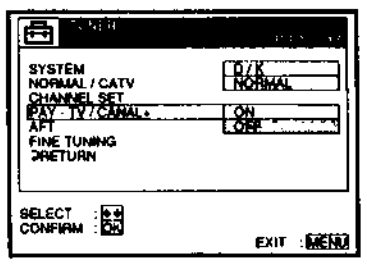
SYSTEM
NORMAL / CATV
CHANNEL SET
PAY - TV / CANAL+
AFT
FINE TUNING
RETURN
D/K
NORMAL
ON
OFF
SELECT : ↑↓
CONFIRM : OK
EXIT : MENU

continued

14

Press ⬆/⬇ to highlight ON, then press OK.

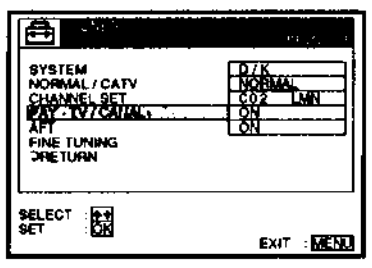

15

If the TV sound is distorted or noisy, press ⬆/⬇ to highlight SYSTEM and press OK. Then press ⬆/⬇ to select B/G or D/K so that you get better sound.

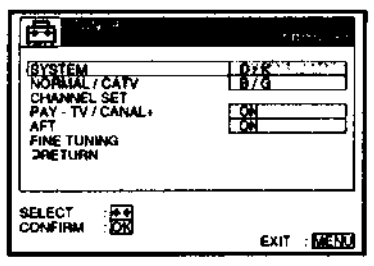

16

Press MENU to exit the menu.

Tip

- If you want to return to the previous menu, highlight RETURN and press OK.

Notes

- The menu disappears automatically if you don't proceed for more than a few minutes.
- To superimpose subtitles while watching Canal Plus programmes, make both decoder-VCR and VCR-TV connections using 21-pin Scart cables that are compatible with the RGB signals. You cannot record subtitles on the VCR.
- When you watch Canal Plus programmes through the RFU input of the TV, press ⊕ TV/VIDEO so that the VIDEO indicator appears in the display window.

[1] SLV-SE500K and SE800N/K only

[2] SLV-SE700N/K only

Playing a tape

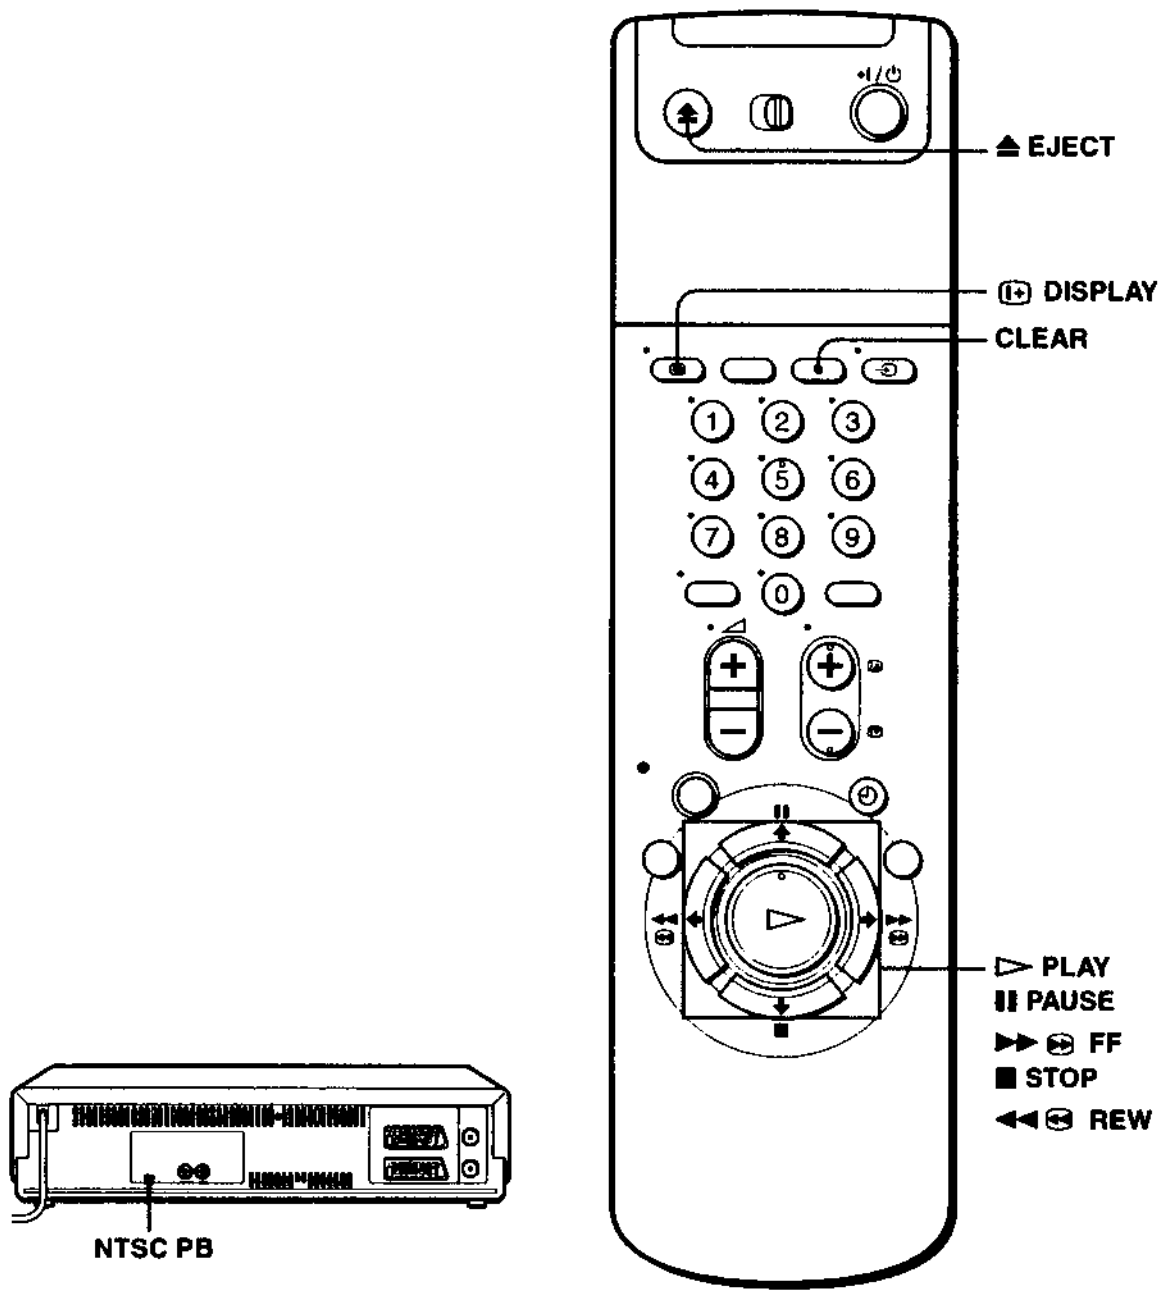

1 Turn on your TV and set it to the video channel.

2 Insert a tape.

The VCR turns on and starts playing automatically if you insert a tape with its safety tab removed.



continued

3

Press ▷ PLAY.

When the tape reaches the end, it will rewind automatically.

Additional tasks

To	Press
Stop play	■ STOP
Pause play	❚❚ PAUSE
Resume play after pause	❚❚ PAUSE or ▷ PLAY
Fast-forward the tape	▶▶ FF during stop
Rewind the tape	◀◀ REW during stop
Eject the tape	≜ EJECT

To set the colour system

If the playback picture has no colour, or streaks appear during playback, set COLOUR SYSTEM in the OPTIONS-1 menu to conform to the system that the tape was recorded in (see page 79). (Normally set the option to AUTO.)

To play an NTSC-recorded tape

Set NTSC PB at the rear of the VCR according to the colour system of your TV.

When your TV is	Set NTSC PB to
PAL only	ON PAL TV
PAL and NTSC	NTSC 4.43

To use the time counter

Press CLEAR at the point on the tape that you want to find later. The counter in the display window resets to "0:00:00." Search for the point afterwards by referring to the counter.



To display the counter on the TV screen, press ⊕ DISPLAY.

Notes

- The counter resets to "0:00:00" whenever a tape is reinserted.
- The counter stops counting when it comes to a portion with no recording.
- The time counter does not appear on the TV screen when using an NTSC-recorded tape.
- Depending on your TV, the following may occur while playing an NTSC-recorded tape:
  - The picture becomes black and white.
  - The picture shakes.
  - No picture appears on the TV screen.
  - Black streaks appear horizontally on the TV screen.
  - The colour density increases or decreases.
- If you play back a tape in the LP or EP mode with the NTSC system, the sound becomes monaural.
- While setting the menu on the TV screen, buttons for playback on the remote commander do not function.
- The picture's colour may be affected when playing a MESECAM-recorded tape in the LP mode.*

* SLV-SE350K only

Starting playback automatically with one button (One Touch Play)
(not available on SLV-SE600N and SE700R)

If you use the SMARTLINK connection, you can turn on the VCR and the TV, set the TV to the video channel, and start playback automatically with one button.

1 Insert a tape.

The VCR automatically turns on.

If you insert a tape with its safety tab removed, the TV turns on and switches to the video channel. Playback starts automatically.

2 Press ▷ PLAY.

The TV turns on and switches to the video channel automatically. Playback starts.

Tip

- When there already is a tape in the VCR, the VCR and the TV turn on, the TV is set to the video channel, and playback starts automatically in one sequence when you press ▷ PLAY.

Note

- When you use the One Touch Play function, leave the TV on or in the standby mode.

Recording TV programmes

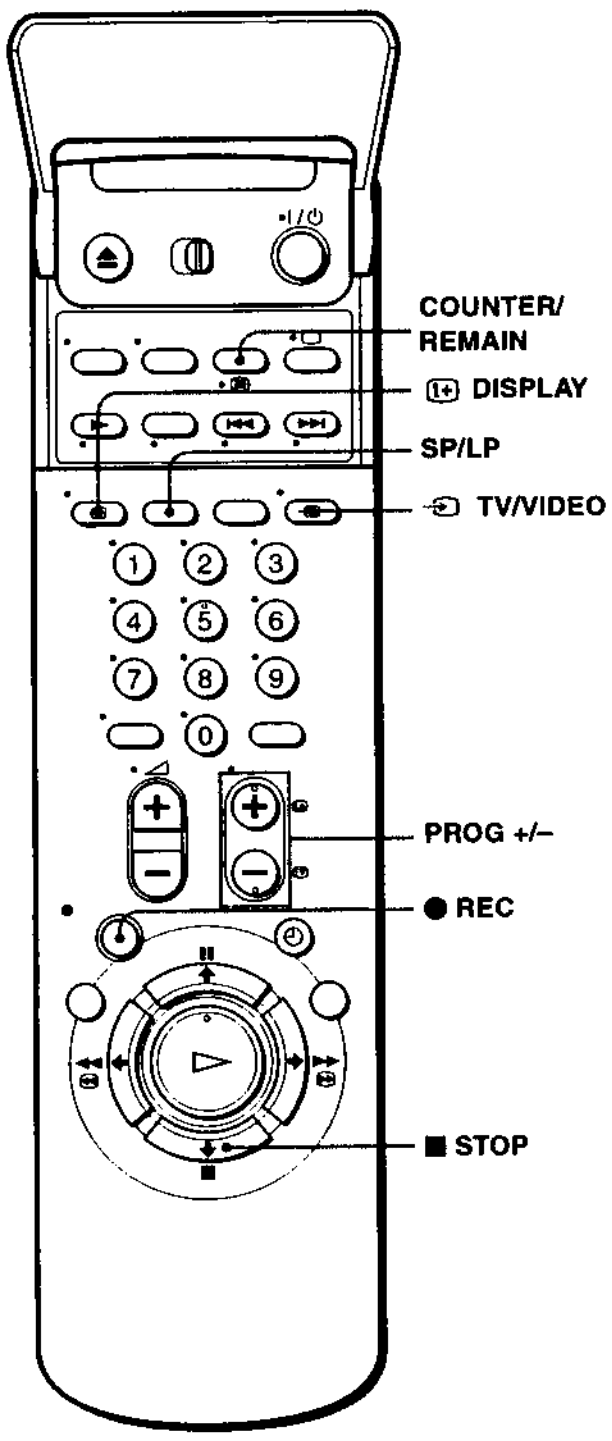

1 Turn on your TV and set it to the video channel.

To record from a decoder, turn it on.

2 Insert a tape with its safety tab in place.

3 • PROG

Press PROG +/– to select the programme position or station name*¹ you want to record.



4 SP / LP

Press SP/LP to select the tape speed, SP or LP.

LP (Long Play) provides recording time twice as long as SP. However, SP (Standard Play) produces better picture and audio quality.



5 ● REC

Press ● REC to start recording.

The recording indicator lights up red in the display window.



To stop recording

Press ■ STOP.

To check the remaining time

Press DISPLAY. With the display on, press COUNTER/REMAIN to check the remaining time. Each time you press COUNTER/REMAIN, the time counter and the remaining time appear alternately. The indicator indicates the remaining time.

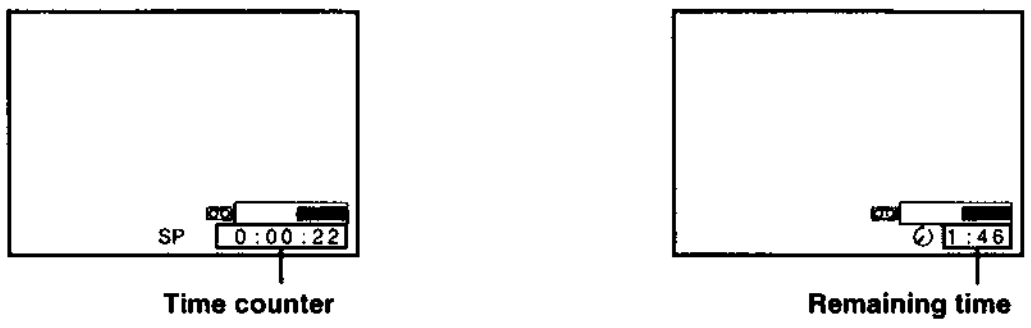

In order to get an accurate remaining time indication, be sure TAPE LENGTH in the OPTIONS-1 menu is set according to the tape type you use (see page 79).

To watch another TV programme while recording

1 Press TV/VIDEO to turn off the VIDEO indicator in the display window.

2 Select another programme position on the TV.

continued

To save a recording

To prevent accidental erasure, break off the safety tab as illustrated. To record on the same tape again, cover the tab hole with adhesive tape.



Safety tab

Tips

- To select a programme position, you can use the programme number buttons on the remote commander. For two-digit numbers, press the -/-- (ten's digit) button followed by the programme number buttons.
- If you connect additional equipment to a LINE connector or jack, you can select the input signal using the INPUT SELECT or PROG +/– buttons.
- The DISPLAY information appears on the TV screen indicating information about the tape, but the information won't be recorded on the tape.
- If you don't want to watch TV while recording, you can turn off the TV. When using a decoder, make sure to leave it on.

Notes

- The DISPLAY information does not appear during still (pause) mode or slow-motion playback.
- The DISPLAY information will not appear while playing an NTSC-recorded tape.
- If a tape has portions recorded in both PAL (MESECAM) and NTSC systems, the time counter reading will not be correct. This discrepancy is due to the difference between the counting cycles of the two video systems.
- You cannot watch a Canal Plus programme while recording another Canal Plus programme.*²
- When you insert a non-standard commercially available tape, the remaining time may not be correct.
- The remaining time is intended for rough measurement only.
- About 30 seconds after the tape begins playback, the tape remaining time will be displayed.
- The station name*¹ may not appear if the VCR does not receive station name information signals.

*¹ not available on SLV-SE500R, SE600N and SE700R

*² not available on SLV-SE350K, SE500R, SE600N and SE700R

Recording what you are watching on the TV (TV Direct Rec) (not available on SLV-SE600N and SE700R)

If you use the SMARTLINK connection, you can easily record what you are watching on the TV (other than tapes being played on the VCR).

1 Insert a tape with its safety tab in place.

2 Press ● REC while you are watching a TV programme or external source.

The VCR automatically turns on, then the TV indicator lights up and the VCR starts recording what you are watching on the TV.

Tips

- The TV indicator appears in the display window after you press ● REC in some situations such as:
  - when you are watching a source connected to the TV's line input, or
  - when the TV tuner preset data for the programme position is different from the data in the VCR tuner preset.
- If there is a tape with its safety tab in place in the VCR, the VCR automatically turns on and starts recording what you are watching on the TV when you press ● REC.
- You can turn the TV Direct Rec function ON and OFF in the OPTIONS-2 menu (see page 79).

Notes

- You cannot record what you are watching using this method when the VCR is in the following modes; pause, timer standby, tuner preset, Auto Set Up, and recording.
- When the TV indicator is lit in the display window, do not turn off the TV nor change the TV programme position. When the TV indicator is not lit, the VCR continues recording the programme even if you change the TV programme position on the TV.

Recording TV programmes using the Dial Timer

(SLV-SE800N/K only)

The Dial Timer function allows you to make timer recordings of programmes without turning on your TV. Set the recording timer to record up to eight programmes, including settings made with other timer methods, that will be broadcast within the next month. The recording start time and recording stop time can be set at one minute intervals.

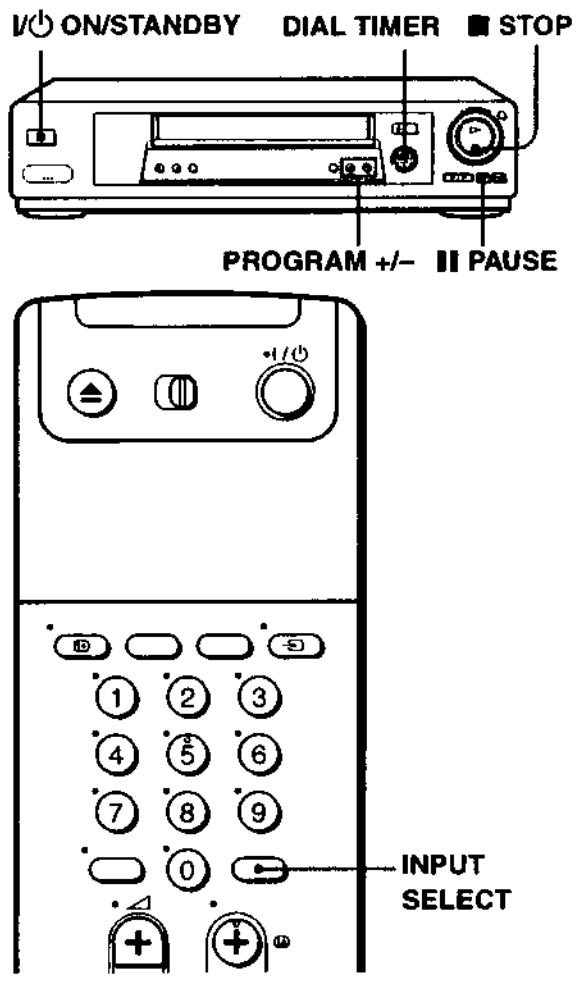

Before you start...

- Insert a tape with its safety tab in place. Make sure the tape is longer than the total recording time.
- To record from a decoder, turn it on.

1

Press DIAL TIMER.

"DATE" and "TODAY" appear alternately in the display window.

If the date and time are not set, "DAY" will appear. See step 2 in the following section, "To set the clock" to set the date and time.

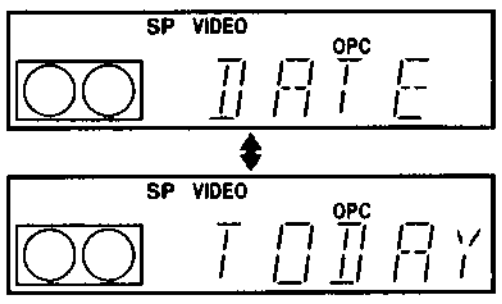

2



Turn DIAL TIMER to set the recording date.



3

Press DIAL TIMER.

"START" and the current time appear alternately in the display window.

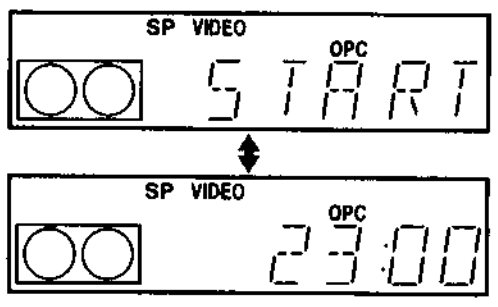

4



Turn DIAL TIMER to set the recording start time.

You can set the recording start time in 15 minute intervals or adjust the time in one minute intervals by pressing the PROGRAM +/– buttons.



5

Press DIAL TIMER.

"STOP" and the recording stop time appear alternately in the display window.

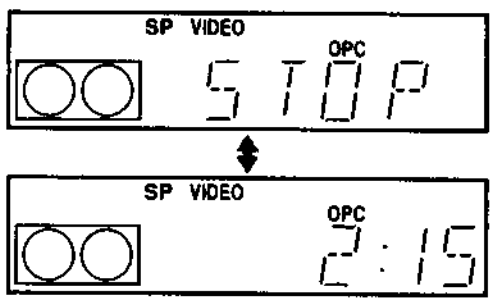

continued

6



Turn DIAL TIMER to set the recording stop time.

You can set the recording stop time in 15 minute intervals or adjust the time in one minute intervals by pressing the PROGRAM +/– buttons.



7

Press DIAL TIMER.

The programme position or station name appears in the display window.



8



Turn DIAL TIMER to set the programme position.

To record from a decoder or other source connected to one or more of the LINE inputs, turn DIAL TIMER or press INPUT SELECT to display the connected line in the display window.



9

Press DIAL TIMER to complete the setting.

"OK" appears in the display window for about five seconds.

The ⊕ indicator appears in the display window and the VCR stands by for recording.

To record from a decoder or other source, leave the connected equipment turned on.

To return to the previous step

To return to the previous step, press the PROGRAM + and – buttons on the VCR at the same time during any of the dial timer settings.

To stop recording

To stop the VCR while recording, press ■ STOP.

To use the VCR after setting the timer

To use the VCR before a recording begins, just press I/⏻. The ⊕ indicator turns off and the VCR turns on. Remember to press I/⏻ to reset the VCR to recording standby after using the VCR.

You can also do the following tasks while the VCR is recording:

- Reset the counter (page 42).
- Display tape information on the TV screen (page 45).
- Check the timer settings (page 68).
- Watch another TV programme (page 45).

To set the clock

1. Turn DIAL TIMER so that "CLOCK" appears in the display window.
2. Press DIAL TIMER.
   "DAY" appears in the display window.
3. Turn DIAL TIMER to set the day.
4. Press DIAL TIMER.
   "MONTH" appears in the display window.
5. Turn and press DIAL TIMER to set the month, and then the year. After you set the year, "CLOCK" appears in the display window again.
6. Turn and press DIAL TIMER to set the hour and minute.
7. When you have finished setting the time, press DIAL TIMER to start the clock.

Tips

- To cancel a Dial Timer setting, press ■ STOP on the VCR while you are making the setting.
- The programme is recorded in the current tape speed mode. To change the tape speed, press SP/LP before you complete the setting in step 9.
- When you are recording a programme in the SP mode and the remaining tape becomes shorter than the recording time, the tape speed is automatically changed to the LP mode. Note that some interference will appear on the picture at the point the tape speed is changed. If you want to keep the tape speed, set AUTO LONG PLAY to OFF in the OPTIONS-1 menu (page 79).
- To check, change, or cancel the programme setting, see "Checking/changing/cancelling timer settings" (page 68).

Notes

- If eight programmes have already been set using the ShowView system or the TIMER menu, "FULL" appears in the display window for about five seconds.
- The ⊕ indicator flashes in the display window when you complete the setting in step 9 with no tape inserted.
- If you set the clock using the Auto Clock Set function and AUTO ADJUST is set to ON, the clock will adjust itself to the incoming time signal regardless of adjustments made with the Dial Timer. Be sure you have set ACS correctly.
- The station name may not appear if the VCR does not receive station name information signals.

continued

About the Demonstration Mode

The DIAL TIMER function has a Demonstration Mode that allows the user, such as a salesperson, to enter more than eight examples of timer settings when demonstrating the use of the DIAL TIMER. It cancels the "FULL" notice which appears if eight programmes have already been set. Do not use the Demonstration Mode for making timer recordings. Doing so may cause the settings to be inaccurate.

To activate the Demonstration Mode

Press ❚❚ (pause) on the VCR while turning the DIAL TIMER. "DEMO" appears in the display window for a few seconds.

To cancel the Demonstration Mode

Turn the power off and unplug the mains lead. Although the Demonstration Mode is cancelled, the timer settings entered while using the Demonstration Mode will remain. Be sure to manually cancel the timer settings before you use the Dial Timer or any other timer method after reconnecting the mains lead (see page 68).

Recording TV programmes using the ShowView system

(not available on SLV-SE500R, SE600N and SE700R)

The ShowView system is the feature that simplifies programming the VCR to make timer recordings. Just enter the ShowView number listed in the TV programme guide. The date, times, and programme position of that programme are set automatically. You can preset a total of eight programmes, including settings made with other timer methods.

Before you start...

- Check that the VCR clock is set to the correct time and date.
- Insert a tape with its safety tab in place. Make sure the tape is longer than the total recording time.
- To record from a decoder, turn it on.
- Turn on your TV and set it to the video channel.
- Set TIMER OPTIONS to SHOWVIEW or VARIABLE in the OPTIONS-2 menu (see page 79).

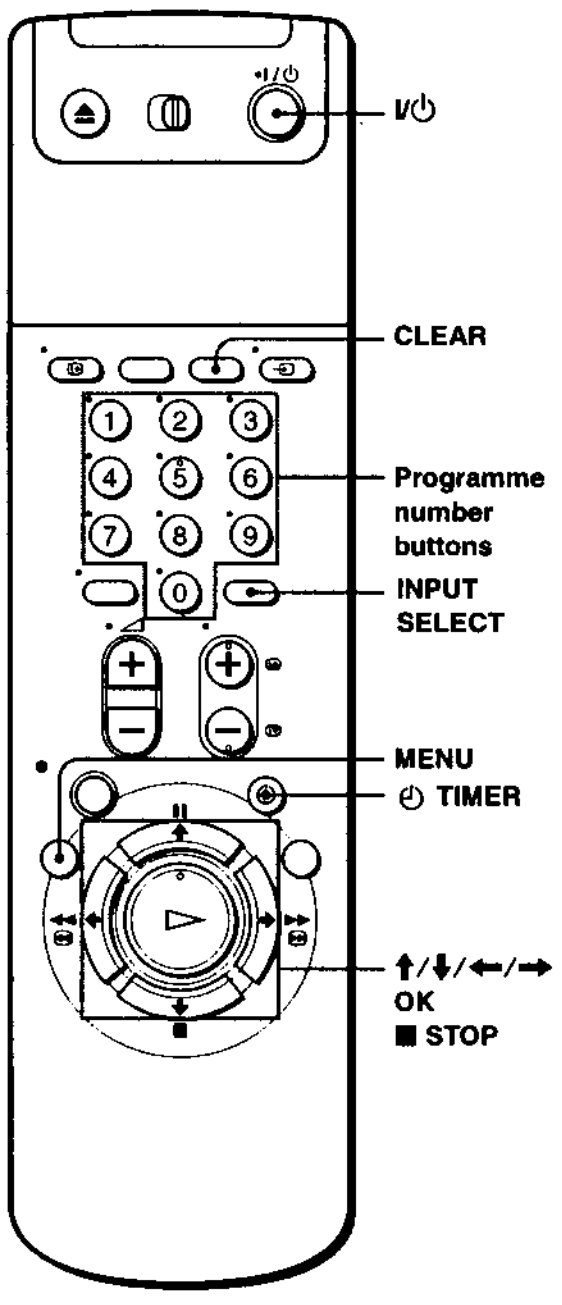

continued

1



Press ⏲ TIMER.

- When you set TIMER OPTIONS to VARIABLE:
  The TIMER METHOD menu appears on the TV screen. Press ↑/↓ to select SHOWVIEW, then press OK.

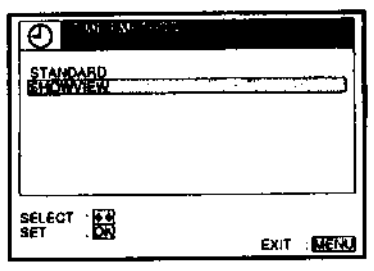

STANDARD
SHOWVIEW

SELECT : ↑↓
SET : OK
EXIT : MENU

- When you set TIMER OPTIONS to SHOWVIEW:
  The SHOWVIEW menu appears on the TV screen.

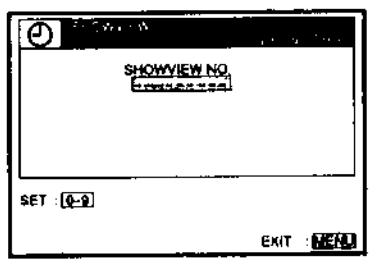

SHOWVIEW NO.

SET : 0-9
EXIT : MENU

2



Press the programme number buttons to enter the ShowView number.

If you make a mistake, press CLEAR and re-enter the correct number.

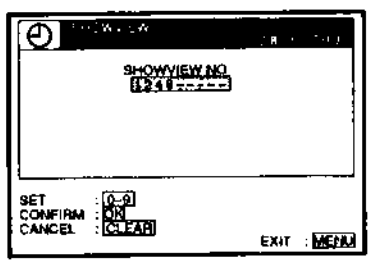

SHOWVIEW NO.
1241-----

SET : 0-9
CONFIRM : OK
CANCEL : CLEAR
EXIT : MENU

3



Press OK.

The date, start and stop times, programme position or station name, tape speed, and VPS/PDC setting appear on the TV screen.

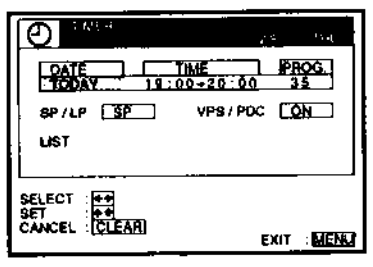

DATE	TIME	PROG.
TODAY	19:00→20:00	35

SP / LP SP   VPS / PDC ON
LIST

SELECT : ←→
SET : ↑↓
CANCEL : CLEAR
EXIT : MENU

- If "- -" appears in the "PROG." (programme) column (this may happen for local broadcasts), you have to set the appropriate programme position manually.
  Press ↑/↓ to select the desired programme position.
  To record from a decoder or other source connected to one or more of the LINE inputs, press INPUT SELECT to display the connected line in the "PROG." position.
  You will only have to do this operation once for the referred channel. The VCR will then store your setting.

If the information is incorrect, press CLEAR to cancel the setting.

4

If you want to change the date, tape speed, and the VPS/PDC setting:

1 Press ←/→ to highlight the item you want to change.

2 Press ↑/↓ to reset it.

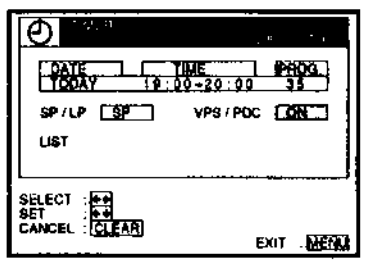

DATE	TIME	PROG.
TODAY	19:00→20:00	35

SP / LP SP   VPS / PDC ON
LIST

SELECT : ←→
SET : ↑↓
CANCEL : CLEAR
EXIT : MENU

- To record the same programme every day or the same day every week, see "Daily/weekly recording" below.
- To use the VPS/PDC function, set VPS/PDC to ON.
  For details of the VPS/PDC function, see "Timer recording with VPS/PDC signals" below.

5

Press MENU to exit the menu.

6

Press I/⏻ to turn off the VCR.

The ⏲ indicator appears in the display window and the VCR stands by for recording.

To record from a decoder or other source, leave the connected equipment turned on.

To stop recording

To stop the VCR while recording, press ■ STOP.

Daily/weekly recording

In step 4 above, press ↓ to select the recording pattern. Each time you press ↓, the indication changes as shown below. Press ↑ to change the indication in reverse order.
TODAY → SUN-SAT (Sunday to Saturday) → MON-SAT (Monday to Saturday) → MON-FRI (Monday to Friday) → SAT (every Saturday) ..... → MON (every Monday) → SUN (every Sunday) → 1 month later → (dates count down) → TOMORROW → TODAY

Timer recording with VPS/PDC signals

Some broadcast systems transmit VPS (Video Programme System) or PDC (Programme Delivery Control) signals with their TV programmes. These signals ensure that your timer recordings are made regardless of broadcast delays, early starts, or broadcast interruptions (when the VPS or PDC indicator in the display window is lit).

To use the VPS/PDC function, set VPS/PDC to ON in step 4 above. You can also use the VPS/PDC function for a source connected to one or more of the LINE inputs.

continued

To record satellite broadcasts

If you connect a satellite tuner and the VCR, you can record satellite programmes.

1 Turn on the satellite tuner.

2 On the satellite tuner, select the satellite programme for which you want to make a timer setting.

3 Follow steps 1 through 6 above.

4 Keep the satellite tuner turned on until the VCR finishes recording the satellite programme for which you have made a timer setting.

To use the VCR after setting the timer

To use the VCR before a recording begins, just press I/⏻. The ⏲ indicator turns off and the VCR switches on. Remember to press I/⏻ to reset the VCR to recording standby after using the VCR.

You can also do the following tasks while the VCR is recording:

- Reset the counter (page 42).
- Display tape information on the TV screen (page 45).
- Check the timer settings (page 68).
- Watch another TV programme (page 45).

Tips

- To set the programme position, you can also use the PROG +/– or programme number buttons.
- To set the programme position with a two digit number, press -/-- (ten's digit) button followed by the programme number buttons.
- To set the line input video source, you can also use the PROG +/– buttons.
- To set the tape speed, you can also use the SP/LP button.
- When you are recording a programme in the SP mode and the remaining tape becomes shorter than the recording time, the tape speed is automatically changed to the LP mode. Note that some interference will appear on the picture at the point the tape speed is changed. If you want to keep the same tape speed, set AUTO LONG PLAY to OFF in the OPTIONS-1 menu (page 79).
- To check, change, or cancel the programme setting, press ←/→ to choose LIST, then press OK in step 4. For details, see step 3 in "Checking/changing/cancelling timer settings" (page 68).

Notes

- If the VPS/PDC signal is too weak or the broadcasting station failed to transmit VPS/PDC signals, the VCR will start recording at the set time without using the VPS/PDC function.
- The ⏲ indicator flashes in the display window when you press I/⏻ with no tape inserted.
- When you set TIMER OPTIONS to STANDARD in the OPTIONS-2 menu, the SHOWVIEW menu does not appear on the TV screen. Select SHOWVIEW or VARIABLE.
- The VPS/PDC function is automatically set to OFF for the timer recording of a satellite programme.
- The station name may not appear if the VCR does not receive station name information signals.

Recording TV programmes using the timer

You can preset a total of eight programmes, including settings made with other timer methods.

Before you start...

- Check that the VCR clock is set to the correct time and date.
- Insert a tape with its safety tab in place. Make sure the tape is longer than the total recording time.
- To record from a decoder, turn it on.
- Turn on your TV and set it to the video channel.
- Set TIMER OPTIONS* to STANDARD or VARIABLE in the OPTIONS-2 menu (see page 79).

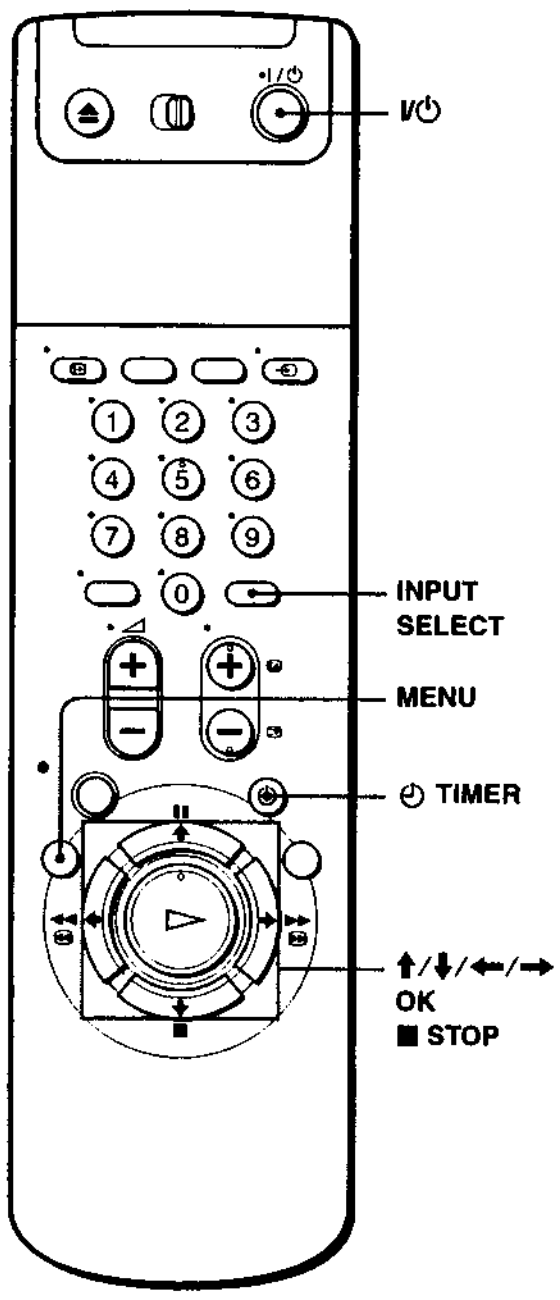

continued

1



Press ⏲ TIMER.

For SLV-SE500R, SE600N and SE700R:
The TIMER menu appears on the TV screen.

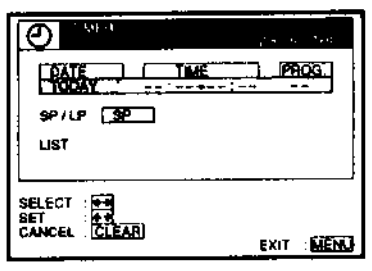

For SLV-SE350K, SE500K, SE700N/K and SE800N/K:

- When you set TIMER OPTIONS to VARIABLE:
  The TIMER METHOD menu appears on the TV screen. Press ↑/↓ to select STANDARD, then press OK.

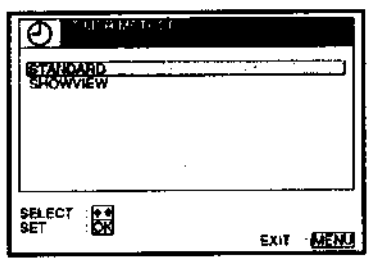

- When you set TIMER OPTIONS to STANDARD:
  The TIMER menu appears on the TV screen.

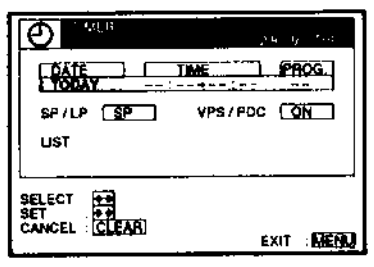

2



Set the date, start and stop times, programme position or station name*, tape speed, and VPS/PDC function*:

1 Press → to highlight each item in turn.

2 Press ↑/↓ to set each item.

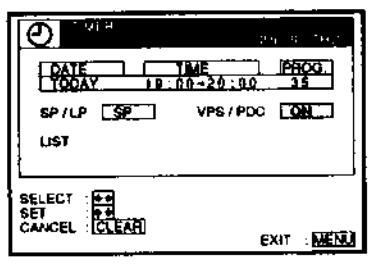

To correct a setting, press ← to return to that setting and reset.

- To record the same programme every day or the same day every week, see "Daily/weekly recording" on page 59.
- To use the VPS/PDC function*, set VPS/PDC to ON. For details about the VPS/PDC function, see "Timer recording with VPS/PDC signals" on page 55.
- To record from a decoder or other source connected to one or more of the LINE inputs, press INPUT SELECT to display the connected line in the "PROG." position.

3

Press MENU to exit the menu.

4

Press I/⏻ to turn off the VCR.

The ⏲ indicator appears in the display window and the VCR stands by for recording.

To record from a decoder or other source, leave the connected equipment turned on.

To stop recording

To stop the VCR while recording, press ■ STOP.

Daily/weekly recording

In step 2 above, press ↓ to select the recording pattern. Each time you press ↓, the indication changes as shown below. Press ↑ to change the indication in reverse order.
TODAY → SUN-SAT (Sunday to Saturday) → MON-SAT (Monday to Saturday) → MON-FRI (Monday to Friday) → SAT (every Saturday) ..... → MON (every Monday) → SUN (every Sunday) → 1 month later → (dates count down) → TOMORROW → TODAY

To record satellite broadcasts

If you connect a satellite tuner and the VCR, you can record satellite programmes.

1 Turn on the satellite tuner.

2 On the satellite tuner, select the satellite programme for which you want to make a timer setting.

3 Follow steps 1 through 4 above.

4 Keep the satellite tuner turned on until the VCR finishes recording the satellite programme for which you have made a timer setting.

To use the VCR after setting the timer

To use the VCR before a recording begins, just press I/⏻. The ⏲ indicator turns off and the VCR switches on. Remember to press I/⏻ to reset the VCR to recording standby after using the VCR.

You can also do the following tasks while the VCR is recording:

- Reset the counter (page 42).
- Display tape information on the TV screen (page 45).
- Check the timer settings (page 68).
- Watch another TV programme (page 45).

continued

Tips

- To set the programme position, you can also use the PROG +/– or programme number buttons.
- To set the programme position with a two digit number, press -/-- (ten's digit) button followed by the programme number buttons.
- To set the line input video source, you can also use the PROG +/– buttons.
- To set the tape speed, you can also use the SP/LP button.
- When you are recording a programme in the SP mode and the remaining tape becomes shorter than the recording time, the tape speed is automatically changed to the LP mode. Note that some interference will appear on the picture at the point the tape speed is changed. If you want to keep the same tape speed, set AUTO LONG PLAY to OFF in the OPTIONS-1 menu (page 79).
- Even if you set TIMER OPTIONS to SHOWVIEW* in the OPTIONS-2 menu, you can set the timer manually. Press MENU to select TIMER, then go to step 2.
- To check, change, or cancel the programme setting, press ←/→ to choose LIST, then press OK in step 2. For details, see step 3 in "Checking/changing/cancelling timer settings" (page 68).

Notes

- When setting the timer with VPS/PDC signals, enter the start and stop times exactly as indicated in the TV programme guide. Otherwise, the VPS/PDC function* won't work.
- If the VPS/PDC signal is too weak or the broadcasting station failed to transmit VPS/PDC signals, the VCR will start recording at the set time without using the VPS/PDC function*.
- The ⊕ indicator flashes in the display window when you press I/⏻ with no tape inserted.
- The VPS/PDC function* is automatically set to OFF for the timer recording of a satellite programme.
- The station name* may not appear if the VCR does not receive station name information signals.

* not available on SLV-SE500R, SE600N and SE700R

Playing/searching at various speeds

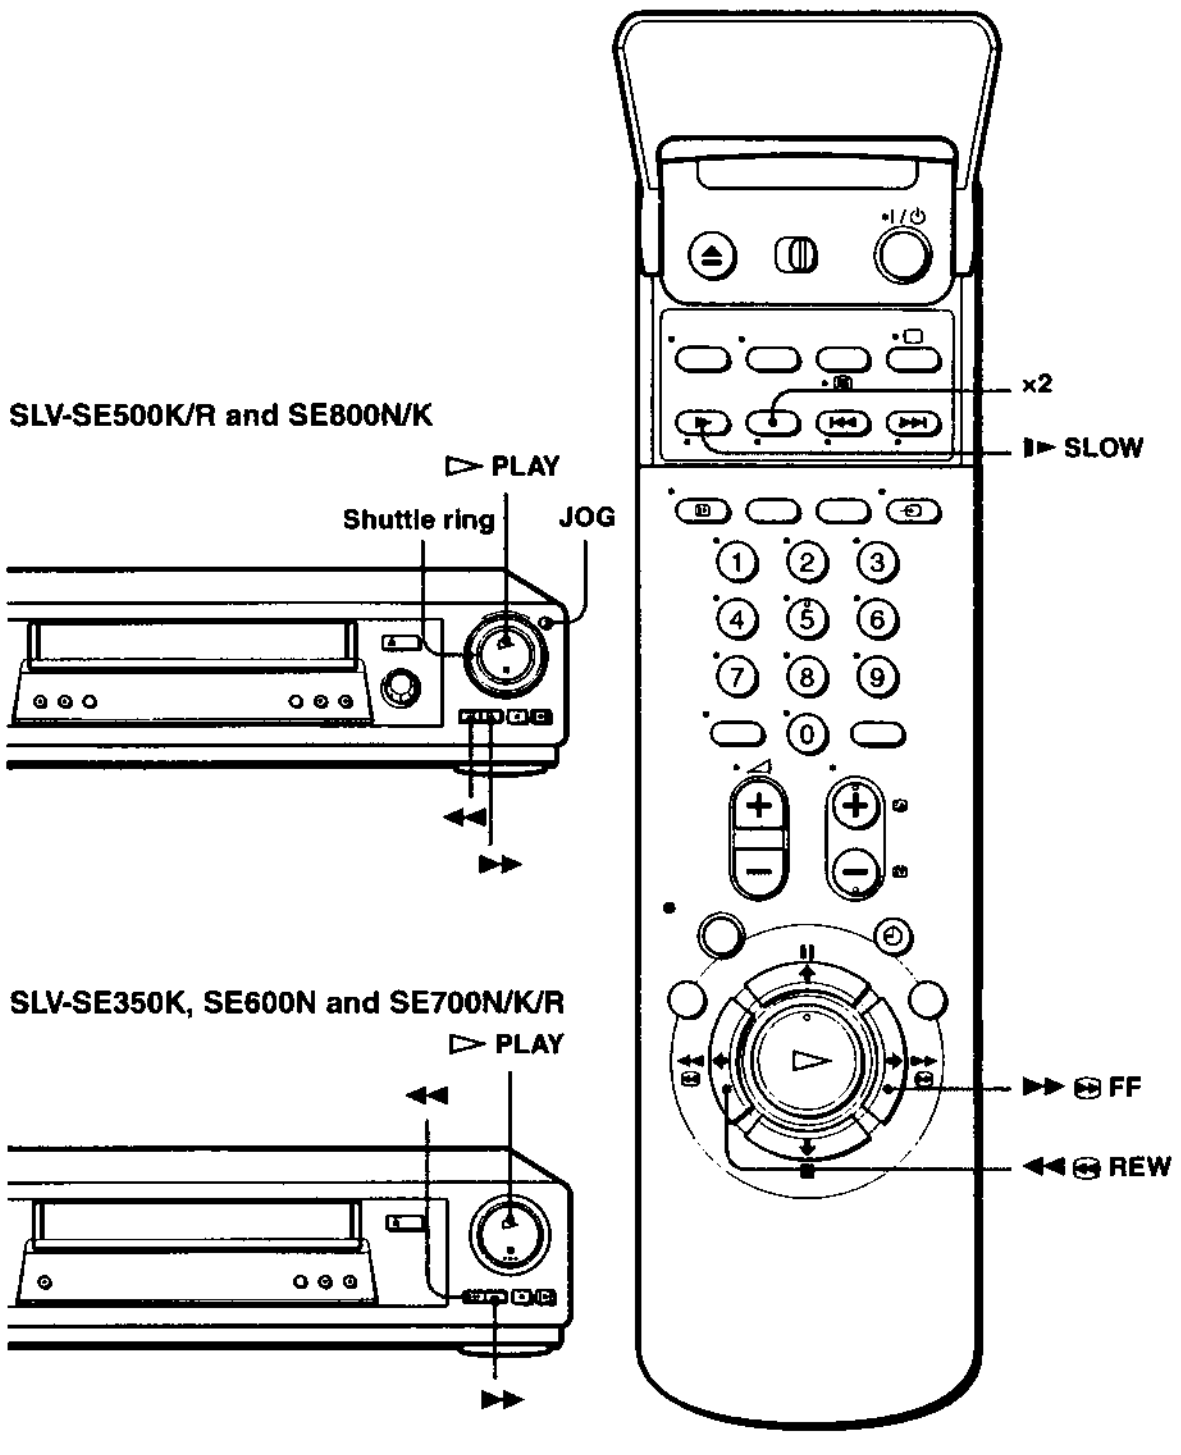

Playback options	Operation
View the picture during fast-forward or rewind	During fast-forward, hold down ▶▶ ⊕ FF/▶▶. During rewind, hold down ◀◀ ⊕ REW/◀◀.

continued

Playback options	Operation
Play at high speed	• During playback, press ▶▶ ⊕ FF or ◀◀ ⊕ REW on the remote commander. • During playback, hold down ▶▶ ⊕ FF/▶▶ or ◀◀ ⊕ REW/◀◀. When you release the button, normal playback resumes.
Play at twice the normal speed	During playback, press ×2.
Play in slow motion	During playback, press I▶ SLOW.
Play frame by frame	During pause, press ▶▶ ⊕ FF or ◀◀ ⊕ REW on the remote commander. Hold down ▶▶ ⊕ FF or ◀◀ ⊕ REW to play one frame each second.
Rewind and start play	During stop, press ▷ PLAY on the VCR while holding down ◀◀ on the VCR.

To resume normal playback

Press ▷ PLAY.

Using the shuttle ring (SLV-SE500K/R and SE800N/K only)

With the shuttle ring, you can operate a variety of playback options. There are two ways for using the shuttle ring, normal mode and jog mode.

To use the shuttle ring in normal mode

During playback or pause, turn the shuttle ring clockwise or anticlockwise. Each change in the shuttle ring position changes the playback mode in the following way.

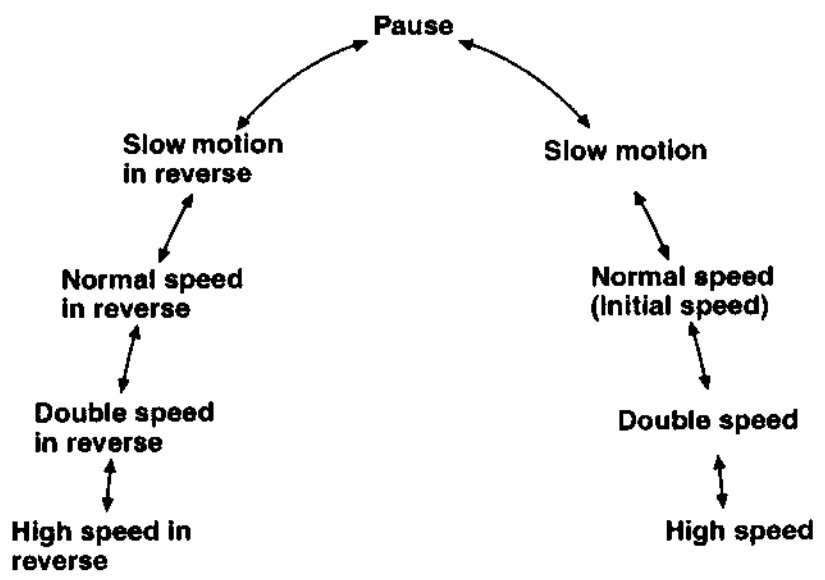

To use the shuttle ring in jog mode

Use this mode for frame-by-frame playback.

Press JOG to enter the jog mode. The JOG button lights up. If you change to the jog mode during any playback mode, playback pauses so you can see a still picture. Each change in the shuttle ring position shifts the picture one frame. To shift frames in reverse, turn the shuttle ring anticlockwise. The frame shift speed depends on the speed you turn the shuttle ring.

To resume normal mode, press JOG again. The JOG button turns off.

Tip

- Adjust the picture using the TRACKING +/– buttons if:
  - – Streaks appear while playing in slow motion.
  - – Bands appear at the top or bottom while pausing.
  - – The picture shakes while pausing.

  To set tracking to the centre position, press both buttons (+/–) at the same time.

Notes

- The sound is muted during these operations.
- In the LP mode, noise may appear or there may be no colour.
- If the playback mode mark doesn't appear on the TV screen, press ⊕ DISPLAY.
- The picture may show noise when playing at high speed in reverse.*

* SLV-SE350K only

Setting the recording duration time

After you have started recording in the normal way, you can have the VCR stop recording automatically after a specified duration.

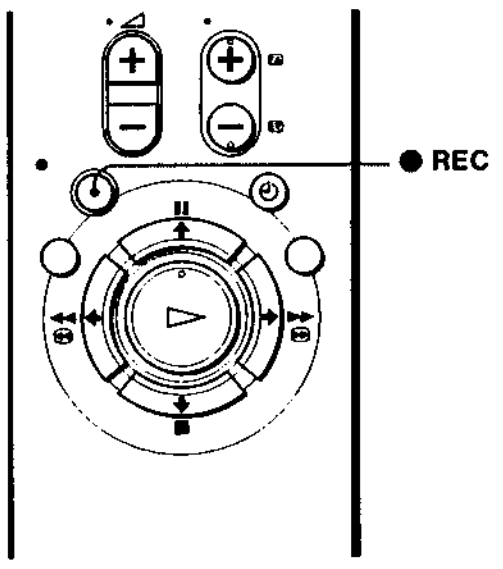

1 While recording, press ● REC.

The ⏲ indicator appears in the display window.



2 Press ● REC repeatedly to set the duration time.

Each press advances the time in increments of 30 minutes.

→ 0:30 → 1:00 - - - - → 5:30 → 6:00 → Normal recording

The tape counter decreases minute by minute to 0:00, then the VCR stops recording and turns off automatically.

To extend the duration

Press ● REC repeatedly to set a new duration time.

To cancel the duration

Press ● REC repeatedly until the ⏲ indicator disappears and the VCR returns to the normal recording mode.

To stop recording

To stop the VCR while recording, press ■ STOP.

Note

- You cannot display the current tape time in the display window when setting the recording duration time.

Synchronized Recording
(SLV-SE500K and SE800N/K only)

You can set the VCR to automatically record programmes from equipment such as a satellite tuner by connecting the equipment to the DECODER/LINE-3 IN connector. The connected equipment must have a timer function for this feature to work.

When the connected equipment turns on, the VCR also automatically turns on and starts recording a programme from DECODER/LINE-3 IN.

How to connect for Synchronized Recording

Connect the DECODER/LINE-3 IN connector of the VCR to the TV Scart connector of the satellite tuner. Then connect the LINE-1 (TV) connector to the TV.

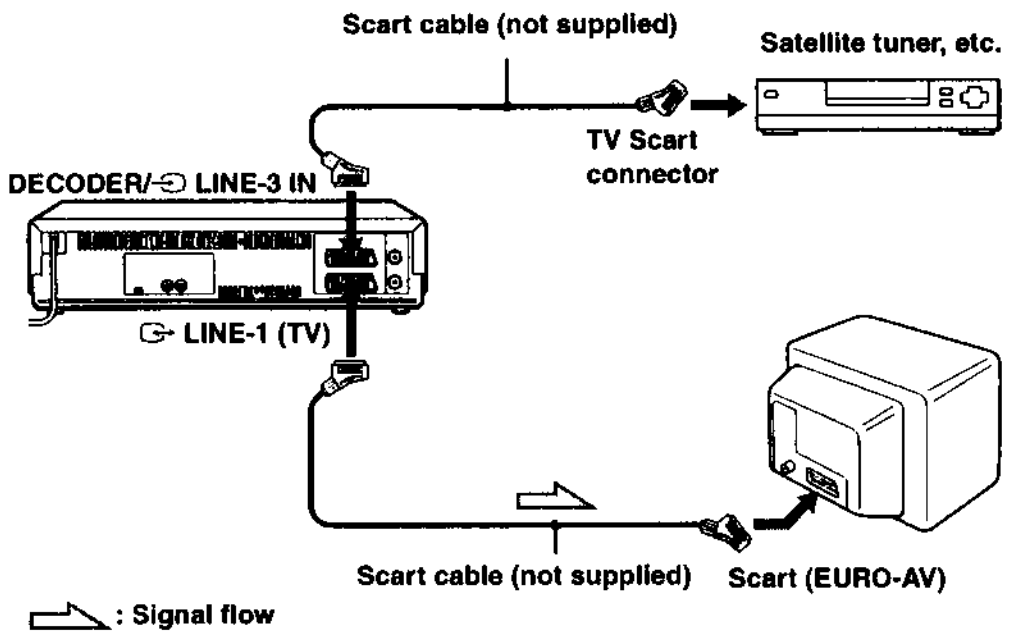

continued

Recording programmes using the Synchronized Recording function

Before you start...

- Insert a tape with its safety tab in place. Make sure the tape is longer than the total recording time.
- Set DECODER/LINE3 to LINE3 in the OPTIONS-2 menu (see page 79).

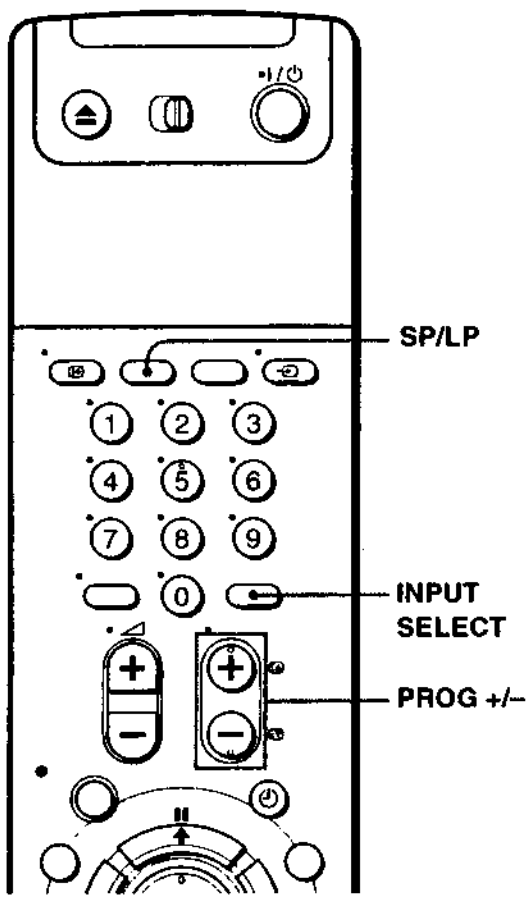



1 Press INPUT SELECT or PROG +/– to display "L3" in the display window.

2 Set the timer on the connected equipment to the time of the programme you want to record, then turn it off.

3 Press SP/LP to select the tape speed.

4 Hold down SYNCHRO REC for more than two seconds.

The SYNCHRO REC button lights up and the VCR stands by for recording.

The VCR automatically turns on and starts recording when it receives an input signal from the connected equipment.

The VCR automatically stops recording when the tape reaches the end or when the connected equipment stops transmitting an input signal.

To cancel the Synchronized Recording function

Press SYNCHRO REC. The SYNCHRO REC button turns off.

To stop recording

Press ■ STOP while recording.

Notes

- This function may not work with some types of satellite tuners.
- Some TVs or other equipment with timer functions will automatically turn off if no operation is performed within a certain amount of time. In this case, the Synchronized Recording also stops automatically.
- When the connected equipment turns on while the SYNCHRO REC button is lit, recording starts automatically.
- If the settings for timer recording and Synchronized Recording overlap, the programme that starts first has priority and the second programme starts recording only after the first programme has finished.
- The Auto Clock Set function does not work while the VCR stands by for Synchronized Recording.

Checking/changing/cancelling timer settings

Before you start…

- Turn on your TV and set it to the video channel.

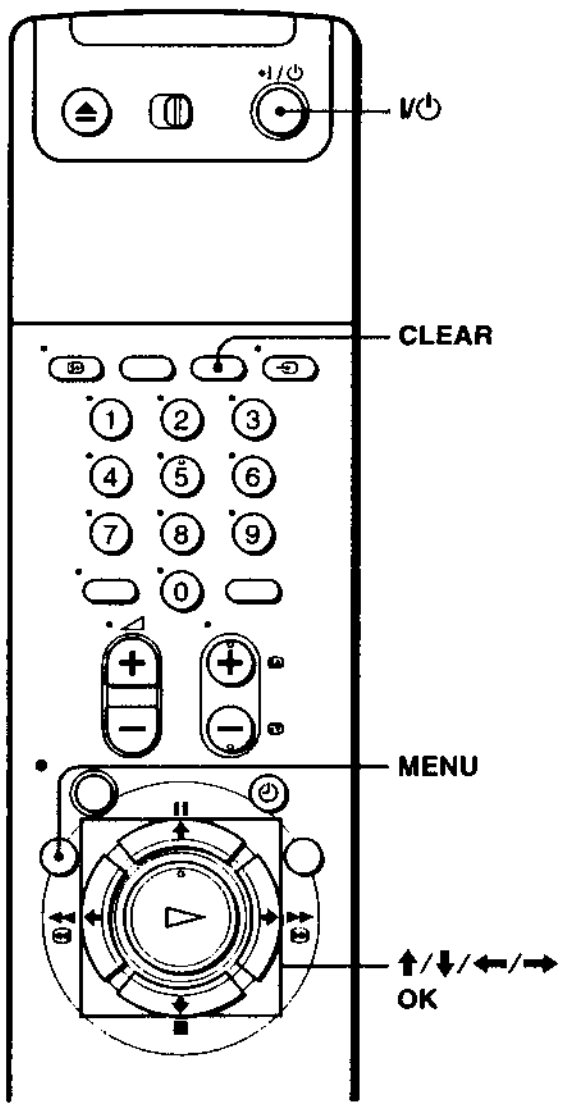

1 Press I/⏻ to turn on the VCR.

2 Press MENU, then press ↑/↓ to highlight LISTS and press OK.

3 Press ↑/↓ to highlight TIMER LIST, then press OK:

- If you want to change or cancel a setting, go on to the next step.
- If you do not need to change or cancel the settings, press MENU, then turn off the VCR to return to recording standby.

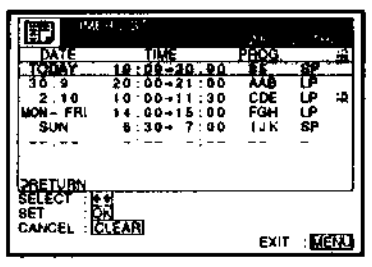

```
 DATE        TIME          PROG.
 TODAY    18:00→20:00      [illegible]  SP
 30.9     20:00→21:00      AAB   LP
  2.10    10:00→11:30      CDE   LP
MON-FRI   14:00→15:00      FGH   LP
  SUN      6:30→ 7:00      IJK   SP
 --.--    --:--→--:--      ---   -
RETURN
SELECT : ↑↓
SET    : OK
CANCEL : CLEAR
                         EXIT : MENU
```

4 Press ↑/↓ to select the setting you want to change or cancel, then press OK.

The selected setting appears in the TIMER menu.

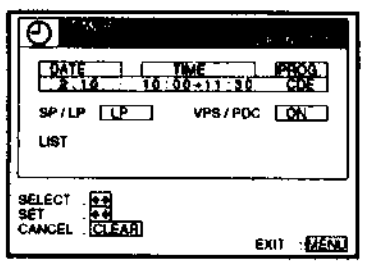

```
 DATE        TIME          PROG.
  2.10    10:00→11:30      CDE
SP/LP  LP          VPS/PDC  ON
LIST
SELECT : ↑↓
SET    : ←→
CANCEL : CLEAR
                         EXIT : MENU
```

5 • To change the setting, press ←/→ to highlight the item you want to change, then press ↑/↓ to reset it.

• To cancel the setting, press CLEAR.

6 Press MENU to exit the menu.

If any settings remain, turn off the VCR to return to recording standby.

When the timer settings overlap

The programme that starts first has priority and the second programme starts recording only after the first programme has finished. If the programmes start at the same time, the programme listed first in the menu has priority.

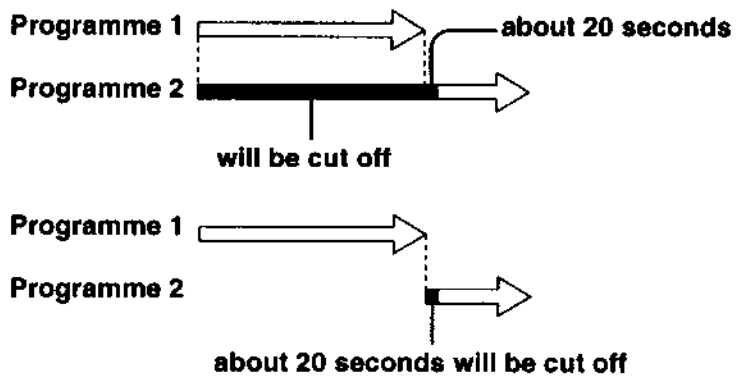

Tip

- In step 6 above, you can check the TIMER LIST by selecting LIST and pressing OK. Press MENU to exit the TIMER LIST.

Recording stereo and bilingual programmes

(not available on SLV-SE350K, SE500K/R and SE700R)

In ZWEITON (German stereo) system

This VCR automatically receives and records stereo and bilingual programmes based on the ZWEITON system. When a stereo or bilingual programme is received, the STEREO indicator appears in the display window.

To select bilingual sound while recording

Press AUDIO MONITOR to select the sound you want.

To listen to	On-screen display	Display window
Main	MAIN	STEREO
Sub	SUB	STEREO
Main and sub	MAIN/SUB	STEREO

In NICAM system (SLV-SE600N, SE700N, and SE800N only)

This VCR receives and records stereo and bilingual programmes based on the NICAM system (The NICAM indicator appears). When a stereo or bilingual programme is received, the STEREO indicator appears in the display window.

To record a NICAM programme, HIFI AUDIO in the OPTIONS-1 menu should be set to NICAM (initial setting). To check the menu setting, see page 78 for details.

To select the sound while recording

Press AUDIO MONITOR to select the sound you want.

Stereo programmes

To listen to	On-screen display	Display window
Stereo	STEREO	STEREO
Standard sound*	No indicator	No indicator

* Usually the mixed sound of left and right channels (monaural)

Bilingual programmes

To listen to	On-screen display	Display window
Main	MAIN	STEREO
Sub	SUB	STEREO
Main and sub	MAIN/SUB	STEREO
Standard sound*	No indicator	No indicator

* Usually the main sound (monaural)

Selecting the sound during playback

Press AUDIO MONITOR to select the sound you want.

To listen to	On-screen display	Display window
Stereo/main and sub (left and right channels)	STEREO	STEREO
Left channel/main	LCH	STEREO
Right channel/sub	RCH	STEREO
Standard sound	No indicator	No indicator

How sound is recorded on a video tape

The VCR records sound onto two separate tracks. Hi-fi audio is recorded onto the main track along with the picture. Monaural sound is recorded onto the normal audio track along the edge of the tape.

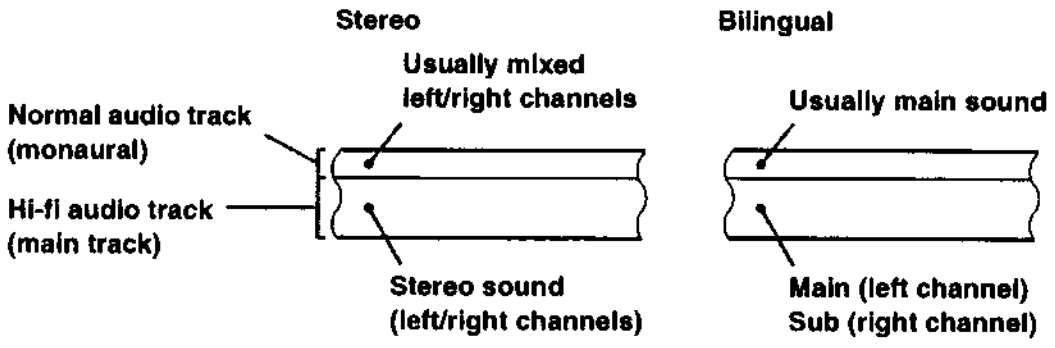
Stereo
Bilingual
Usually mixed left/right channels
Usually main sound
Normal audio track (monaural)
Hi-fi audio track (main track)
Stereo sound (left/right channels)
Main (left channel)
Sub (right channel)

Notes

- To listen to playback sounds in stereo, you must use the Scart or AUDIO OUT connections.
- When you play a tape recorded in monaural, the sound is heard in monaural regardless of the AUDIO MONITOR setting.
- If the AUDIO MONITOR button does not function, check that AUDIO MIX in the OPTIONS-1 menu is set to OFF (see page 78).
- If HIFI AUDIO* is set to STANDARD, the standard sound will be recorded on both the hi-fi and normal audio tracks. Pressing AUDIO MONITOR will not change the sound.

* SLV-SE600N, SE700N, and SE800N only

Searching using the Smart Search function

If you record multiple programmes on a tape, use the Smart Search function to see what has been recorded on your tape. You can see information such as date, time, and programme position of programmes recorded on a tape. You can also start playback directly from the selected programme using the SMART SEARCH screen.

All programmes are listed on the screen, regardless of how the programme was recorded.

The data of the last tape inserted into the VCR is automatically stored in memory. If you want to recall the latest data screen, select LATEST DATA in the SMART SEARCH screen (see page 73).

Before you start...

- Turn on your TV and set it to the video channel.

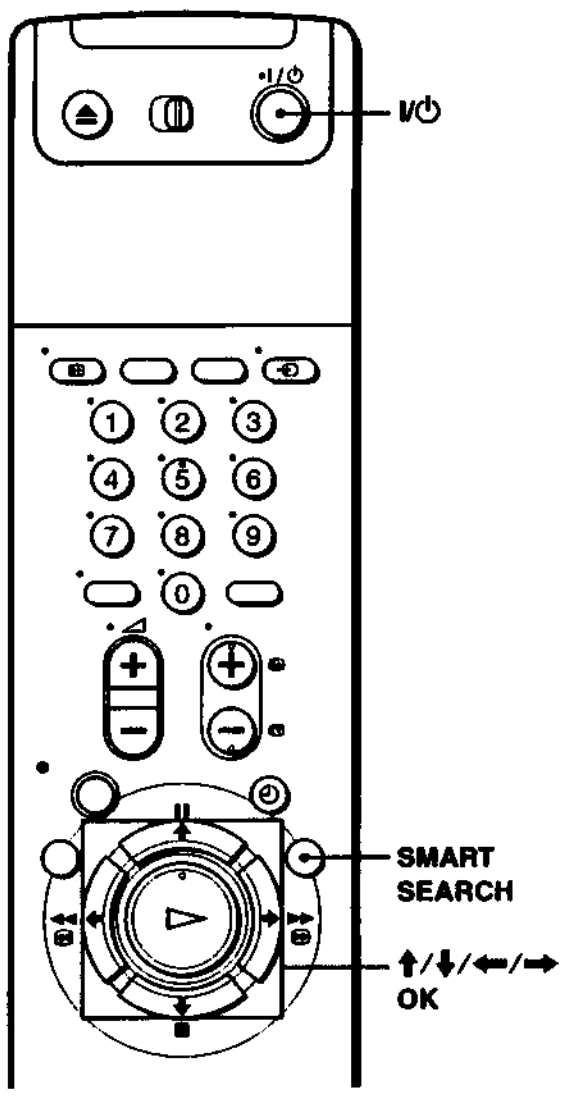

1 After recording, press I/⏻ to turn on the VCR.

2 Press SMART SEARCH.

3 Press ↑/↓/←/→ to select the programme you want to start viewing.

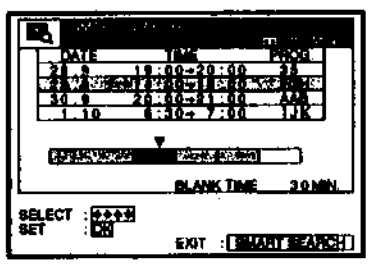

4 Press OK.

The VCR starts searching, and playback starts automatically from the beginning of the selected programme.

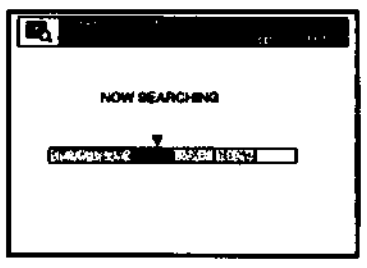

To stop searching

Press ■ STOP.

To exit the SMART SEARCH screen

Press SMART SEARCH.

To record in a blank space

Blank space on the tape will appear as a blank row in the SMART SEARCH screen. Select the last blank row in step 3, then press OK. The VCR rewinds/fast-forwards the tape to the beginning of the blank space, then stops. Start recording. Note that "BLANK TIME" and the remaining time indication only refers to the length of the last blank space.

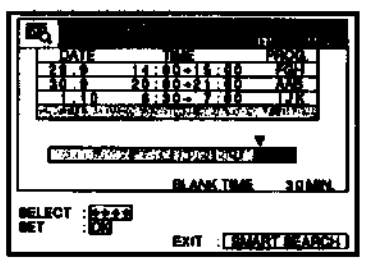

To recall the latest data screen after you remove the tape

You can display the data of the last tape used to record a programme, even after you have removed the tape.

If you reinsert the tape and record additional programmes, be sure to select LATEST DATA. Otherwise, all of the data for the tape is deleted.

1 Reinsert the last tape that you used to record a programme.

2 Press SMART SEARCH.

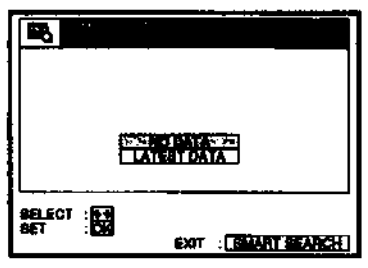

continued

3 Press ↑/↓ to highlight LATEST DATA.

If you want to reset the latest data screen, highlight NO DATA and press OK, then record a programme.

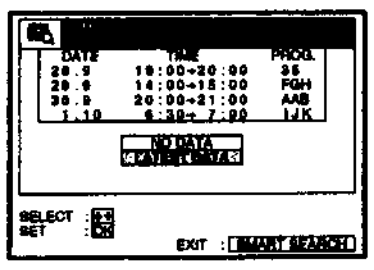

4 Press OK.

The latest data stored in the VCR's memory is displayed.

Tips

- You can store information for up to 24 programmes on a single list.
- While recording, you can display the SMART SEARCH screen using the SMART SEARCH button. If you decide to stop recording, press SMART SEARCH to make the SMART SEARCH screen disappear first. Then press ■ STOP.

Notes

- You cannot use this function unless the clock is set.
- Depending on the tape, the total or remaining time may not appear correctly.
- If many short programmes are recorded on a tape, multiple programmes may be included in a single block. In this case, only the latest programme information will appear in the SMART SEARCH screen.
- Blank time is measured from the end of the last recorded programme to the end of the tape. However, if you eject the tape and then make a new recording on the same tape, the original recorded programme(s) is displayed as a blank space.
- If no information is stored in the VCR's memory, LATEST DATA does not appear in the SMART SEARCH screen.
- The station name* may not appear if the VCR does not receive station name information signals.
- If you start recording a programme "D" from the middle of a previously recorded programme "A" and into another previously recorded programme "B," the Smart Search information for the second programme "B," which is recorded over, is deleted.

Originally recorded programmes



Recording the programme "D" over the programme "A" and "B"



* not available on SLV-SE500R, SE600N and SE700R

Searching using the index function

The VCR automatically marks the tape with an index signal at the point where each recording begins. Use these signals as references to find a specific recording.

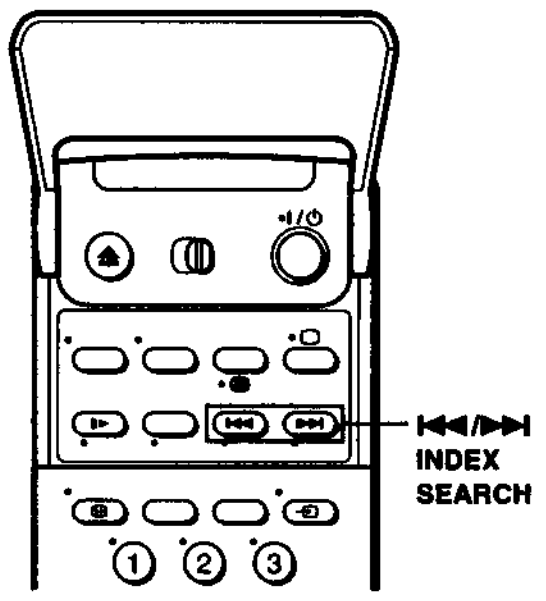

1 Insert an indexed tape into the VCR.

2 Press ⏮/⏭ INDEX SEARCH.

- To search ahead, press ⏭ INDEX SEARCH.
- To search backwards, press ⏮ INDEX SEARCH.

The VCR starts searching, and playback starts automatically from that point.

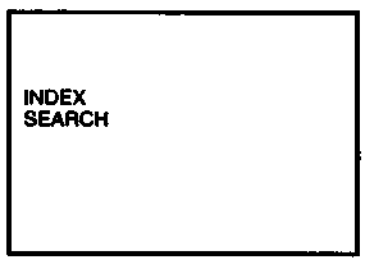

To stop searching

Press ■ STOP.

Note

- No index signal will be added when recording starts from recording pause. However, an index signal will be marked if you change the programme position during recording pause.

Adjusting the picture

Adjusting the tracking

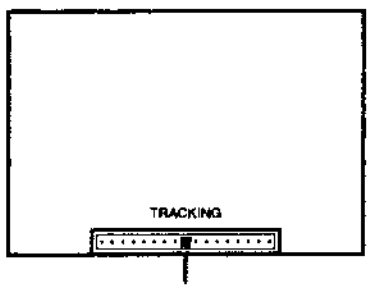

Tracking meter

Although the VCR automatically adjusts the tracking when playing a tape (the ▨ indicator flashes in the display window, then turns off), distortion may occur if the recording is in poor condition. In this case, manually adjust the tracking.

During playback, press TRACKING +/– to display the tracking meter. The distortion should disappear as you press one of the two buttons (the ▨ indicator lights up). To resume automatic tracking adjustments, eject the tape and re-insert it.

About the Reality Regenerator (RR) function (not available on SLV-SE350K and SE600N)

The Reality Regenerator (RR) function automatically restores the picture to its original quality during playback.



To use the RR function, press RR. The RR button lights up. You can set RR to NORMAL or HIGH in the OPTIONS-2 menu (see page 79).

To turn it off, press RR. The RR button turns off.

About the Optimum Picture Control (OPC) function

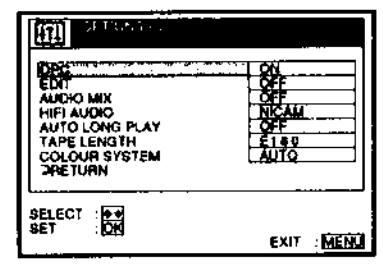

The Optimum Picture Control (OPC) function automatically improves recording and playback quality by adjusting the VCR to the condition of the video heads and tape. To maintain better picture quality, we recommend that you set OPC to ON in the OPTIONS-1 menu (the OPC indicator lights up in the display window). For details, see page 78.

OPC playback

The OPC function automatically works on all types of tapes, including rental tapes and tapes that were not recorded with OPC.

OPC recording

Whenever you insert a tape and start recording for the first time, the VCR adjusts to the tape using the OPC function (the OPC indicator flashes rapidly). This adjustment is retained until the tape is ejected.

To deactivate the OPC function

Set OPC to OFF in the OPTIONS-1 menu. The OPC indicator in the display window turns off.

Tip

- To set tracking to the centre position, press the TRACKING + and – buttons at the same time.

Notes

- You can adjust the tracking for an NTSC-recorded tape but the tracking meter won't be displayed.
- With the Auto Long Play function on, the OPC function will work only in SP mode. If the tape speed automatically switches from SP to LP, the OPC function turns off. If, however, the entire programme is recorded in LP mode, the OPC function will work.
- There is a delay of about ten seconds before the VCR actually starts recording while the VCR analyses the tape. To avoid the delay, first set the VCR to recording pause (the OPC indicator flashes slowly) and press ● REC to have the VCR analyse the tape (the OPC indicator flashes rapidly) and return to recording pause. After the OPC indicator stops flashing, press ❚❚ PAUSE to start recording immediately.
  If you want to start recording quickly without using the OPC function, first set the VCR to recording pause (the OPC indicator flashes slowly) and press ❚❚ PAUSE again to start recording.

Changing menu options

1 Press MENU, then select OPTIONS and press OK.

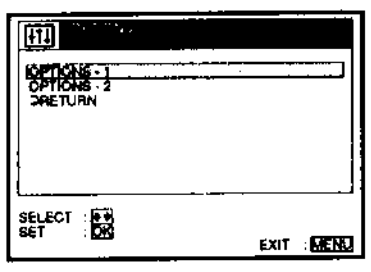

2 Press ⬆/⬇ to highlight OPTIONS-1 or OPTIONS-2, then press OK.

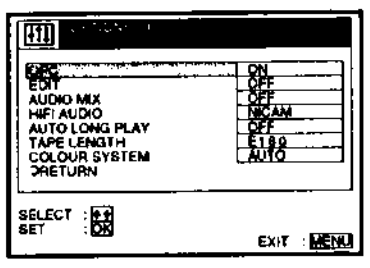

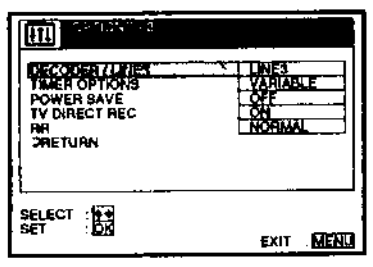

3 Press ⬆/⬇ to select the option, then press OK.

4 Press ⬆/⬇ to change the setting, then press OK.

5 Press MENU to return to the original screen.

Menu choices

Initial settings are indicated in bold print.

OPTIONS-1

Menu option	Set this option to
OPC	• **ON** to switch on the OPC (Optimum Picture Control) function and improve picture quality. • OFF to switch off OPC.
EDIT	• ON to minimize picture deterioration when editing. • **OFF** to turn off EDIT.
AUDIO MIX*[1]	• ON to listen to the hi-fi and normal audio tracks at the same time. The AUDIO MONITOR button will not function. • **OFF** to listen to the hi-fi and normal audio tracks separately. Select the sound using the AUDIO MONITOR button. If you press ⏏ EJECT or turn the VCR off, AUDIO MIX will be reset to OFF. For details, see page 71.
HIFI AUDIO*[2]	• **NICAM** to record NICAM broadcasts on the hi-fi audio track. • STANDARD to record standard sound on the hi-fi audio track. For details, see page 70.
AUTO LONG PLAY	• ON to change the timer recording tape speed automatically to the LP mode when the remaining tape length becomes shorter than the recording time. Note that for AUTO LONG PLAY to work correctly, the TAPE LENGTH setting must be accurate. • **OFF** to keep the set tape speed.
TAPE LENGTH	• **E180** to use an E-180 or shorter type tape. • E195 to use an E-195 type tape. • E240 to use an E-240 type tape. • E300 to use an E-300 type tape.
COLOUR SYSTEM	• **AUTO** to set the colour system automatically. • PAL to play back a tape recorded in the PAL colour system. • MESECAM to play back a tape recorded in the MESECAM colour system. If you press ⏏ EJECT or turn the VCR off, COLOUR SYSTEM will be reset to AUTO.

OPTIONS-2

Menu option	Set this option to
DECODER/LINE2*[3]	• DECODER to use the DECODER/LINE-2 IN*[3] connector as the Canal Plus decoder connector. • **LINE2***[3] to use the DECODER/LINE-2 IN*[3] connector as the line input connector.
DECODER/LINE3*[4]	• DECODER to use the DECODER/LINE-3 IN*[4] connector as the Canal Plus decoder connector. • **LINE3***[4] to use the DECODER/LINE-3 IN*[4] connector as the line input connector.
TIMER OPTIONS*[5]	• **VARIABLE** to display the TIMER METHOD menu for selecting STANDARD or SHOWVIEW when pressing the ⏲ TIMER button. • STANDARD to display the TIMER menu when pressing the ⏲ TIMER button. • SHOWVIEW to display the SHOWVIEW menu when pressing the ⏲ TIMER button. For details, see page 53 and 57.
POWER SAVE	• ON to turn off the indicators in the display window to conserve the VCR's power. • **OFF** to turn on the indicators in the display window while the VCR is standing by.
TV DIRECT REC*[6]	• **ON** to activate the TV Direct Rec function. • OFF to deactivate it.
RR*[7]	• **NORMAL** for normal everyday use. • HIGH for well-used video tapes such as rented tapes. Select this option when NORMAL does not improve the picture quality.

continued

Notes

- When you set a timer recording, the indicators in the display window remain on, even though POWER SAVE is set to ON.
- With the EDIT option ON, the OPC function does not work.

*[1] not available on SLV-SE350K and SE500K/R
*[2] SLV-SE600N, SE700N and SE800N only
*[3] SLV-SE700N/K only
*[4] SLV-SE500K and SE800N/K only
*[5] not available on SLV-SE500R, SE600N and SE700R
*[6] not available on SLV-SE600N and SE700R
*[7] not available on SLV-SE350K and SE600N

Connecting to a VCR or stereo system

How to connect to record on this VCR

Connect the line outputs of the other VCR to the LINE IN connector or jacks of this VCR. Refer to the examples A through C and choose the connection that best suits your VCR.

Example A

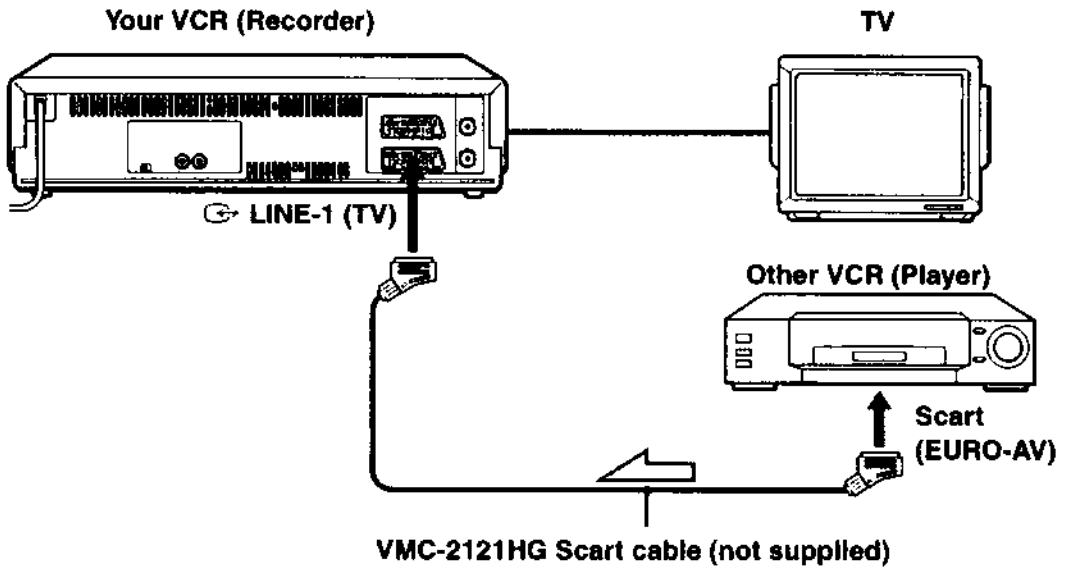
Your VCR (Recorder)
TV
LINE-1 (TV)
Other VCR (Player)
Scart
(EURO-AV)
VMC-2121HG Scart cable (not supplied)

⇦ : Signal flow

Example B

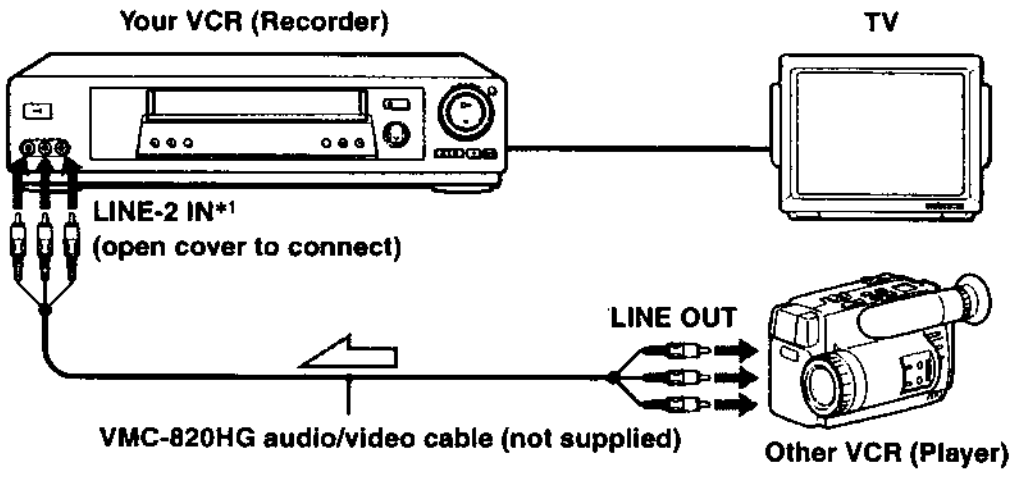
Your VCR (Recorder)
TV
LINE-2 IN*[1]
(open cover to connect)
LINE OUT
VMC-820HG audio/video cable (not supplied)
Other VCR (Player)

⇦ : Signal flow

continued

Example C

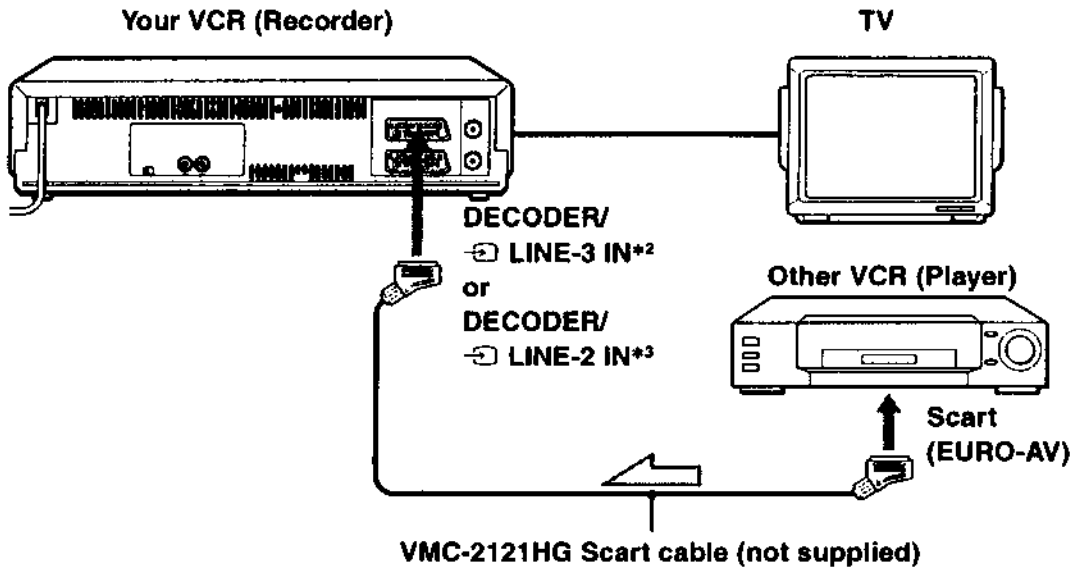
Your VCR (Recorder)
TV
DECODER/
LINE-3 IN*[2]
or
DECODER/
LINE-2 IN*[3]
Other VCR (Player)
Scart
(EURO-AV)
VMC-2121HG Scart cable (not supplied)

⇦ : Signal flow

How to connect to a stereo system (SLV-SE500K/R and SE800N/K only)

Connect the LINE-2 IN AUDIO L/R jacks on this VCR to the audio output jacks on the stereo system, using the RK-C510HG audio cable (not supplied).

Notes

- Make sure you connect the plugs to jacks of the same colour.
- If the other VCR is a monaural type, leave the red plugs unconnected.
- If you connect this VCR to both the LINE IN and LINE OUT jacks of the other VCR, select the input correctly to prevent a humming noise.
- If the other VCR does not have a Scart (EURO-AV) connecter, use the VMC-2106HG cable instead and connect the cable to the line out jacks of the other VCR.
- When you connect another VCR to the DECODER/LINE-3 IN*[2] (or DECODER/LINE-2 IN*[3]) connector, set DECODER/LINE3*[2] (or DECODER/LINE2*[3]) to LINE3*[2] (or LINE2*[3]) in the OPTIONS-2 menu.

*[1] SLV-SE500K/R and SE800N/K only (AUDIO R (right) jack is not available on SLV-SE500K/R.)
*[2] SLV-SE500K and SE800N/K only
*[3] SLV-SE700N/K only

Basic editing

(when recording on this VCR)

Before you start editing

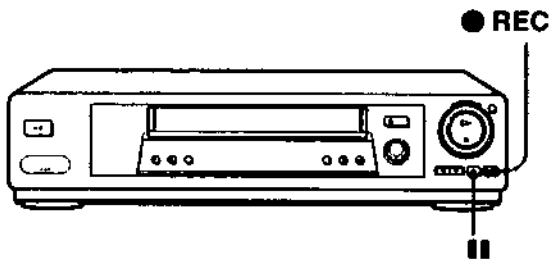

- Turn on your TV and set it to the video channel.
- Press INPUT SELECT to display the connected line in the display window.
- Press SP/LP to select the tape speed, SP or LP.
- On this VCR, set EDIT to ON in the OPTIONS-1 menu. If the other VCR has a similar function, turn it on as well.

1 Insert a source tape with its safety tab removed into the other (playback) VCR. Search for the point to start playback and set it to playback pause.

2 Insert a tape with its safety tab in place into this (recording) VCR. Search for the point to start recording and press II (pause).

3 Press ● REC on this VCR to set it to recording pause.

4 To start editing, press the II (pause) buttons on both VCRs at the same time.

To stop editing

Press the ■ STOP buttons on both VCRs.

Tip

- To cut out unwanted scenes while editing, press II (pause) on this VCR when an unwanted scene begins. When it ends, press II (pause) again to resume recording.

Note

- If you start editing following the procedure above, the VCR won't start recording with the OPC function. To record a tape with the OPC function, press ● REC again during recording pause in step 3 so the VCR analyses the tape. Then, press II (pause) after the OPC indicator stops flashing to start recording. If you press II (pause) before the OPC indicator stops flashing, the OPC function is cancelled.

Audio dubbing

(SLV-SE500K/R and SE800N/K only)

This feature lets you record over the normal audio track. The monaural sound previously recorded is replaced while the original hi-fi sound remains unchanged. Use this feature to add commentary to a tape that you have recorded with a camcorder.

Before you start...

- Open the LINE-2 IN AUDIO L/R jacks cover on the front panel and connect a playback source.*
- Turn on the TV and set it to the video channel.

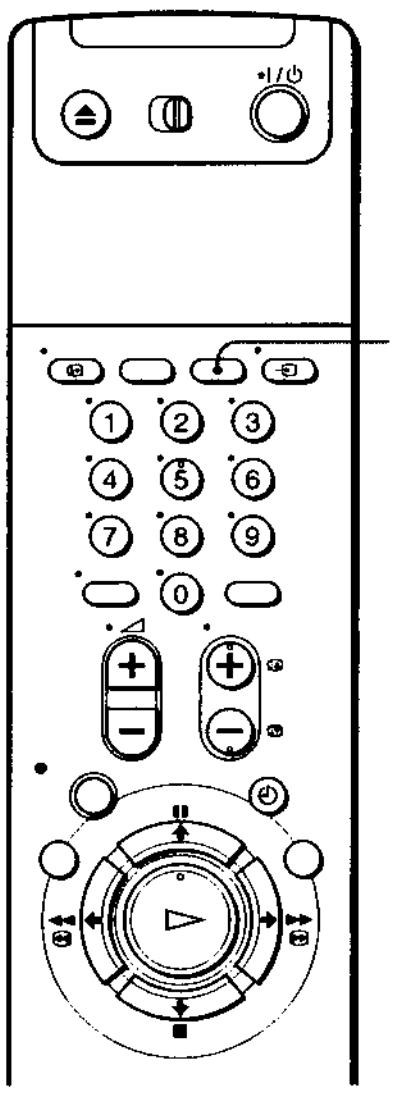

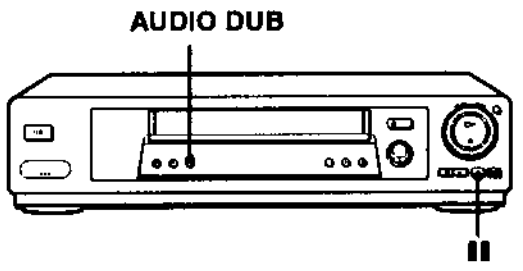

1 Insert a source tape into your stereo system (or the playback VCR). Search for the point to start playback and set it to playback pause.

2 Insert a prerecorded tape with its safety tab in place into this (recording) VCR. Search for the start of the section to be replaced and press ❚❚ (pause).

The VCR enters pause mode.

3 Press AUDIO DUB.

The programme position changes to "L2," and the ⊜ indicator appears in the display window.

4 To start editing, press the ❚❚ (pause) buttons on this VCR and the stereo system (or other VCR) at the same time.

After you use this feature, the audio in playback mode is automatically set to monaural.

To stop editing

Press ■ STOP on this VCR and the stereo system (or other VCR).

To listen to both the hi-fi and normal audio (not available on SLV-SE350K and SE500K/R)

Set AUDIO MIX to ON in the OPTIONS-1 menu (page 78). Use this feature to listen to dubbed audio over the original hi-fi audio. When AUDIO MIX is set to ON, the AUDIO MONITOR button does not function.

Remember to reset AUDIO MIX to OFF after playing the tape.

Note

- If you eject the tape or turn the VCR off, AUDIO MIX is automatically set to OFF.

* SLV-SE500K/R does not have the AUDIO R (right) jack.

Index to parts and controls

Refer to the pages indicated in parentheses ( ) for details.

Front panel

SLV-SE500K/R and SE800N/K

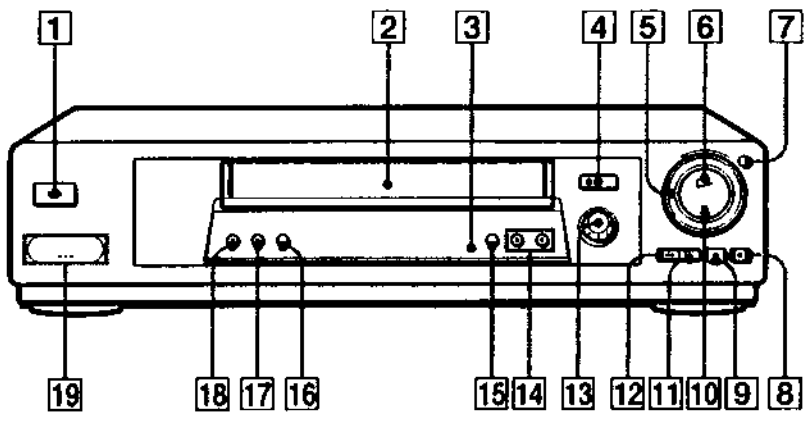

1 I/⏻ ON/STANDBY switch (14)

2 Tape compartment

3 Remote sensor (5)

4 ⏏ EJECT button (42)

5 Shuttle ring (62)

6 ▷ PLAY button (42) (62)

7 JOG button (63)

8 ● REC (record) button (45) (64) (83)

9 ❚❚ (pause) button (42) (83)

10 ■ STOP button (42) (83)

11 ▶▶ (fast-forward) button (42) (61)

12 ◀◀ (rewind) button (42) (61)

13 DIAL TIMER*1 (48)

14 PROGRAM/TRACKING +/– buttons (17) (63) (76)

15 AUTO SET UP/ RF (Radio Frequency) CHANNEL button (14) (17)

16 AUDIO DUB button (84)

17 SYNCHRO REC button*2 (66)

18 RR (Reality Regenerator) button (76)

19 LINE-2 IN VIDEO/AUDIO L (left)/R (right) jacks*3 (covered) (81) (82)

*1 not available on SLV-SE500K/R

*2 not available on SLV-SE500R

*3 AUDIO R (right) jack is not available on SLV-SE500K/R.

continued

SLV-SE350K, SE600N and SE700N/K/R

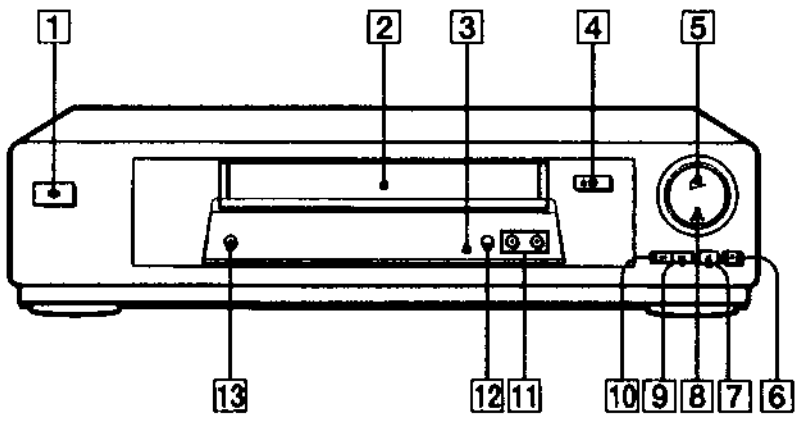

1 I/⏻ ON/STANDBY switch/indicator (14)

2 Tape compartment

3 Remote sensor (5)

4 ⏏ EJECT button (42)

5 ▷ PLAY button (42) (62)

6 ● REC (record) button (45) (64) (83)

7 ❚❚ (pause) button (42) (83)

8 ■ STOP button (42) (83)

9 ▶▶ (fast-forward) button (42) (61)

10 ◀◀ (rewind) button (42) (61)

11 PROGRAM/TRACKING +/– buttons (17) (63) (76)

12 AUTO SET UP/ RF (Radio Frequency) CHANNEL button (14) (17)

13 RR (Reality Regenerator) button* (76)

* not available on SLV-SE350K and SE600N

Display window

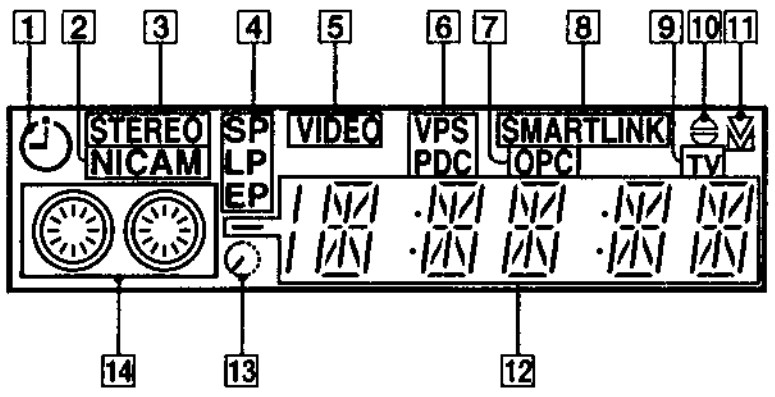

1 Timer indicator (50) (55) (59)

2 NICAM indicator*1 (70)

3 STEREO indicator*2 (70)

4 Tape speed indicators (45)

5 VIDEO indicator (10) (45)

6 VPS (Video Programme System)/PDC (Programme Delivery Control) indicator*3 (55)

7 OPC (Optimum Picture Control) indicator (76)

8 SMARTLINK indicator*4 (11)

9 TV indicator*4 (47)

10 Audio dubbing indicator*5 (84)

11 Tracking indicator (76)

12 Time counter/clock/line/programme position indicator (42) (45) (83)

13 Remaining time indicator (45)

14 Tape/recording indicator (45)

*1 SLV-SE600N, SE700N and SE800N only
*2 not available on SLV-SE350K, and SE500K/R
*3 not available on SLV-SE500R, SE600N and SE700R
*4 not available on SLV-SE600N and SE700R
*5 SLV-SE500K/R and SE800N/K only

continued

Rear panel

SLV-SE350K, SE500K, SE600N, SE700N/K, and SE800N

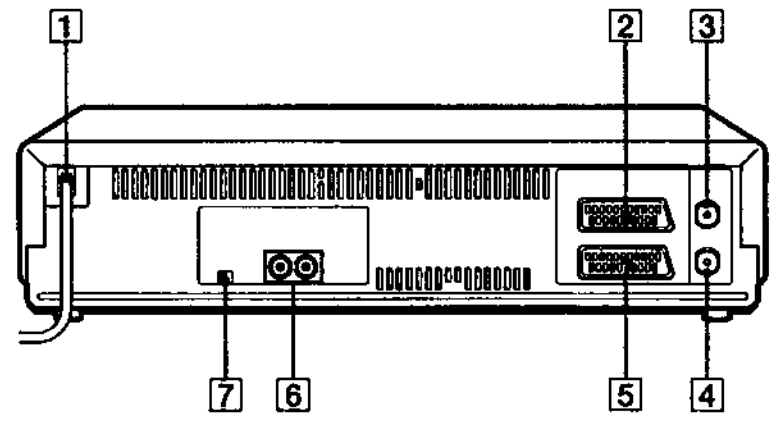

1 Mains lead (9) (10)

2 DECODER/⇤ LINE-2 IN
DECODEUR/⇤ ENTREE LIGNE-2 connector*1 (36) (82)

DECODER/⇤ LINE-3 IN
DECODEUR/⇤ ENTREE LIGNE-3 connector*2 (12) (36) (65) (82)

3 AERIAL IN
ANTENNE ENTREE connector (9) (10)

4 AERIAL OUT
ANTENNE SORTIE connector (9) (10)

5 ⇥ LINE-1 (TV)
⇥ LIGNE-1 (TV) connector (10) (36)

6 AUDIO OUT R (right)/L (left)
SORTIE AUDIO D/G jacks*3 (12)

7 NTSC PB (Play Back) switch (42)

*1 SLV-SE700N/K only
*2 SLV-SE500K and SE800N only
*3 SLV-SE700N/K and SE800N only

SLV-SE500R, SE700R and SE800K

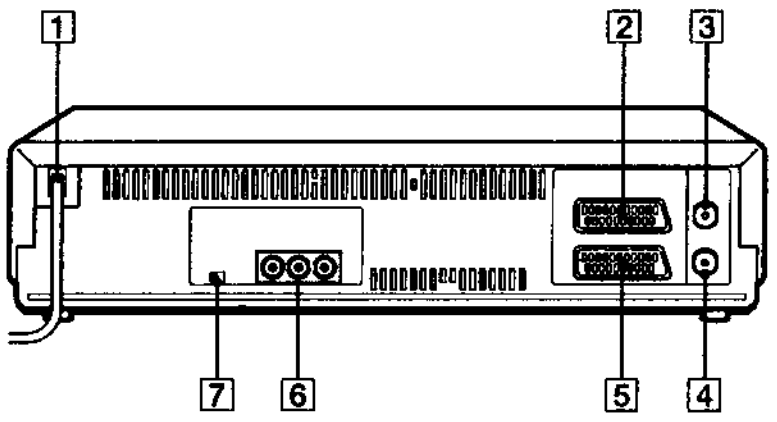

1 Mains lead (9) (10)

2 DECODER/⇤ LINE-3 IN
DECODEUR/⇤ ENTREE LIGNE-3 connector*1 (12) (36) (65) (82)

3 AERIAL IN
ANTENNE ENTREE connector (9) (10)

4 AERIAL OUT
ANTENNE SORTIE connector (9) (10)

5 ⇥ LINE-1 (TV)
⇥ LIGNE-1 (TV) connector (10) (36)

6 AUDIO OUT R (right)/L (left)/VIDEO jacks*2 (12)

7 NTSC PB (Play Back) switch (42)

*1 SLV-SE800K only
*2 AUDIO R (right) jack is not available on SLV-SE500R.

continued

Remote commander

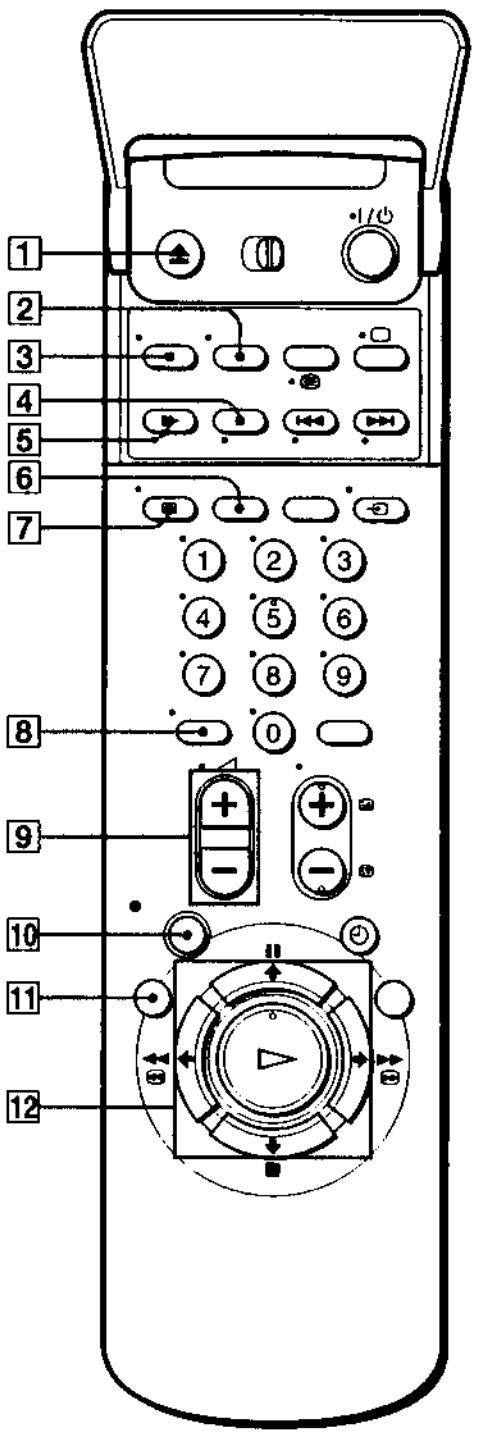

1 ⏏ EJECT button (42)

2 WIDE button (*for TV*) (7)

3 AUDIO MONITOR button (70)

4 ×2 button*1 (62)

5 I▶ SLOW button*1 (62)

6 SP (Standard Play)/LP (Long Play) button (45)

7 ⊕ DISPLAY button (45)

8 -/-- (ten's digit) button (6) (46)

9 ◿ (volume) +/– buttons (*for TV*) (7)

10 ● REC (record) button (45) (64)

11 MENU button (19) (68)

12 ❚❚ PAUSE/⬆ button (19) (42)
■ STOP/⬇ button (19) (42)
◀◀ ⊕ REW (rewind)/⬅ button (42) (61)
▶▶ ⊕ FF (fast-forward)/➡ button (42) (61)
▷ PLAY/OK button (19) (42)

*1 FASTEXT buttons (*for TV*) (not available on SLV-SE350K and SE600N)

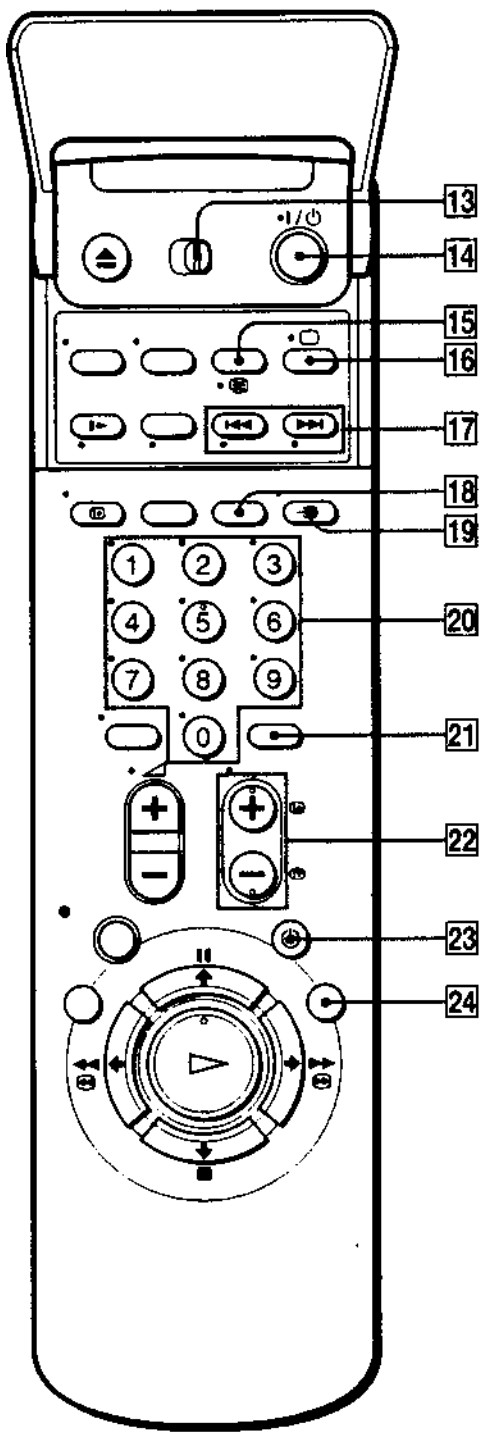

13 TV / VIDEO remote control switch (5)

14 I/⏻ (on/standby) switch (6) (55)

15 COUNTER/REMAIN button (45)

▤ (Teletext) button*[2] (*for TV*) (7)

16 ▢ TV power on/TV mode select button*[2] (*for TV*) (6)

17 ⏮/⏭ INDEX SEARCH buttons*[1] (75)

18 CLEAR button (42) (54) (69)

19 ⇥ TV/VIDEO button (6) (10) (45)

20 Programme number buttons (6) (46)

21 INPUT SELECT button (46) (58) (83)

22 PROG (programme) +/– buttons (6) (27) (45)

▲/▼ Teletext page access buttons*[2] (*for TV*) (7)

23 ⏲ TIMER button (54) (58)

24 SMART SEARCH button (72)

*[1] FASTEXT buttons (*for TV*) (not available on SLV-SE350K and SE600N)

*[2] not available on SLV-SE350K and SE600N

SECTION 2
DISASSEMBLY

Note: Follow the disassembly procedure in the numerical order given.

2-1. UPPER CASE REMOVAL

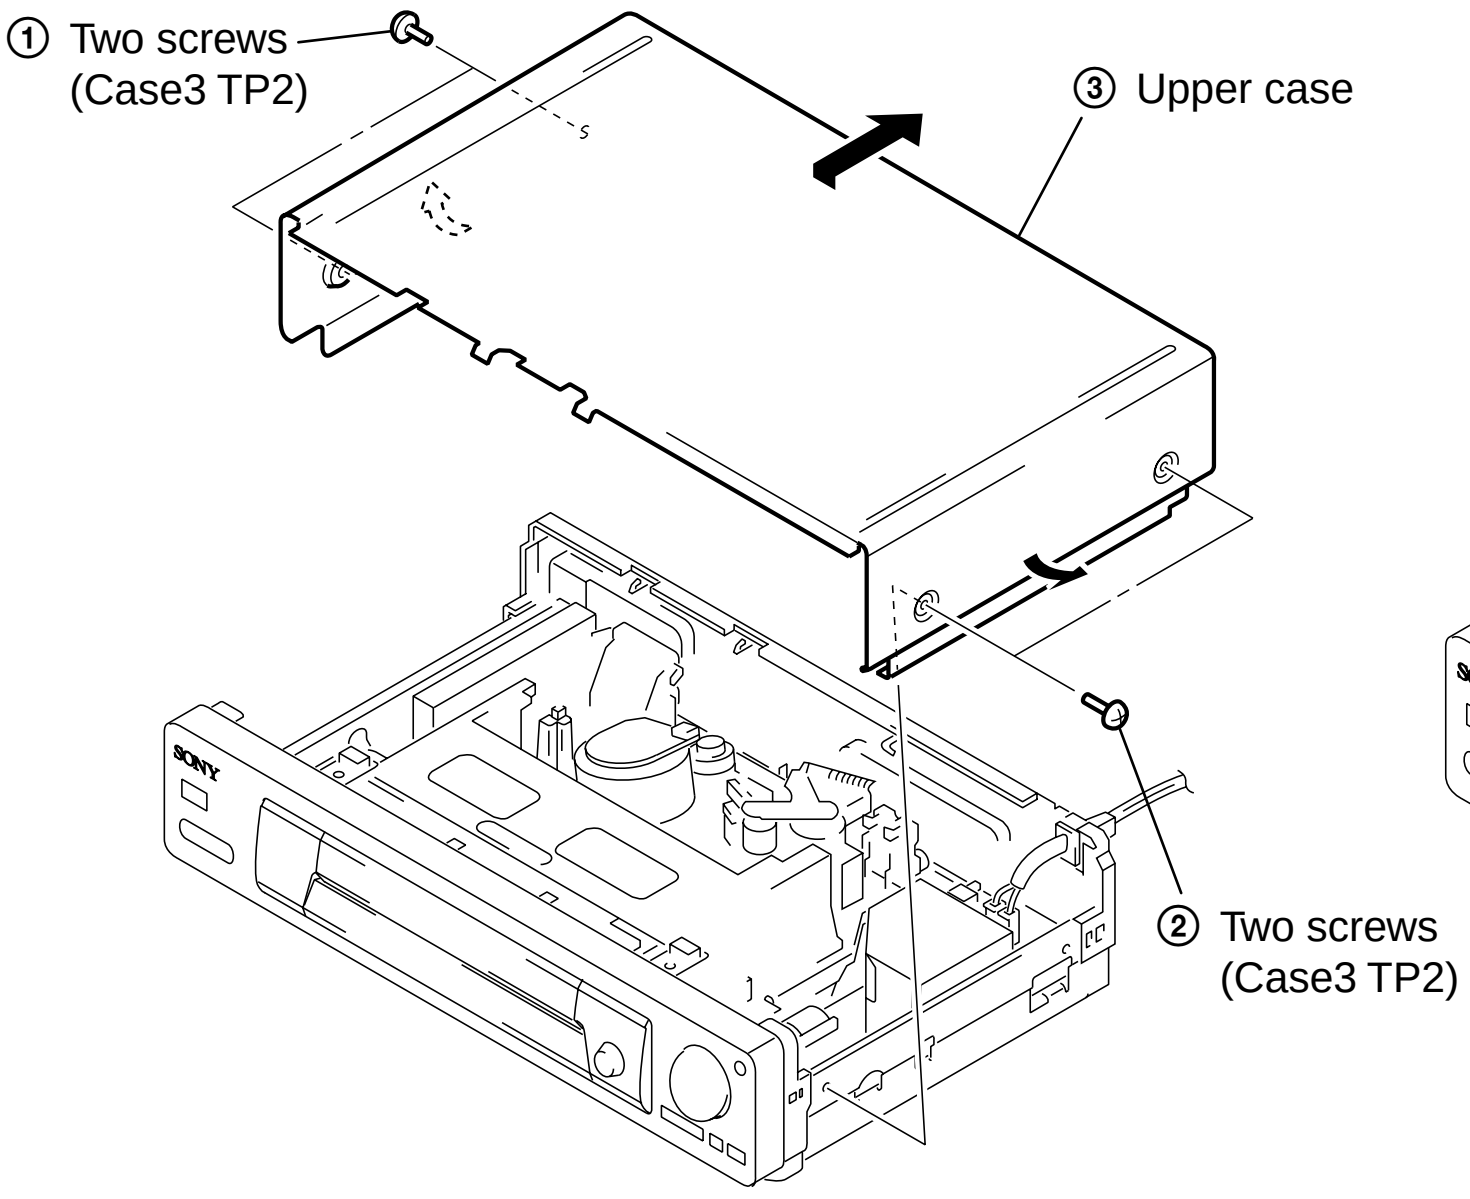
① Two screws
(Case3 TP2)
③ Upper case
② Two screws
(Case3 TP2)

2-2. REAR PANEL REMOVAL

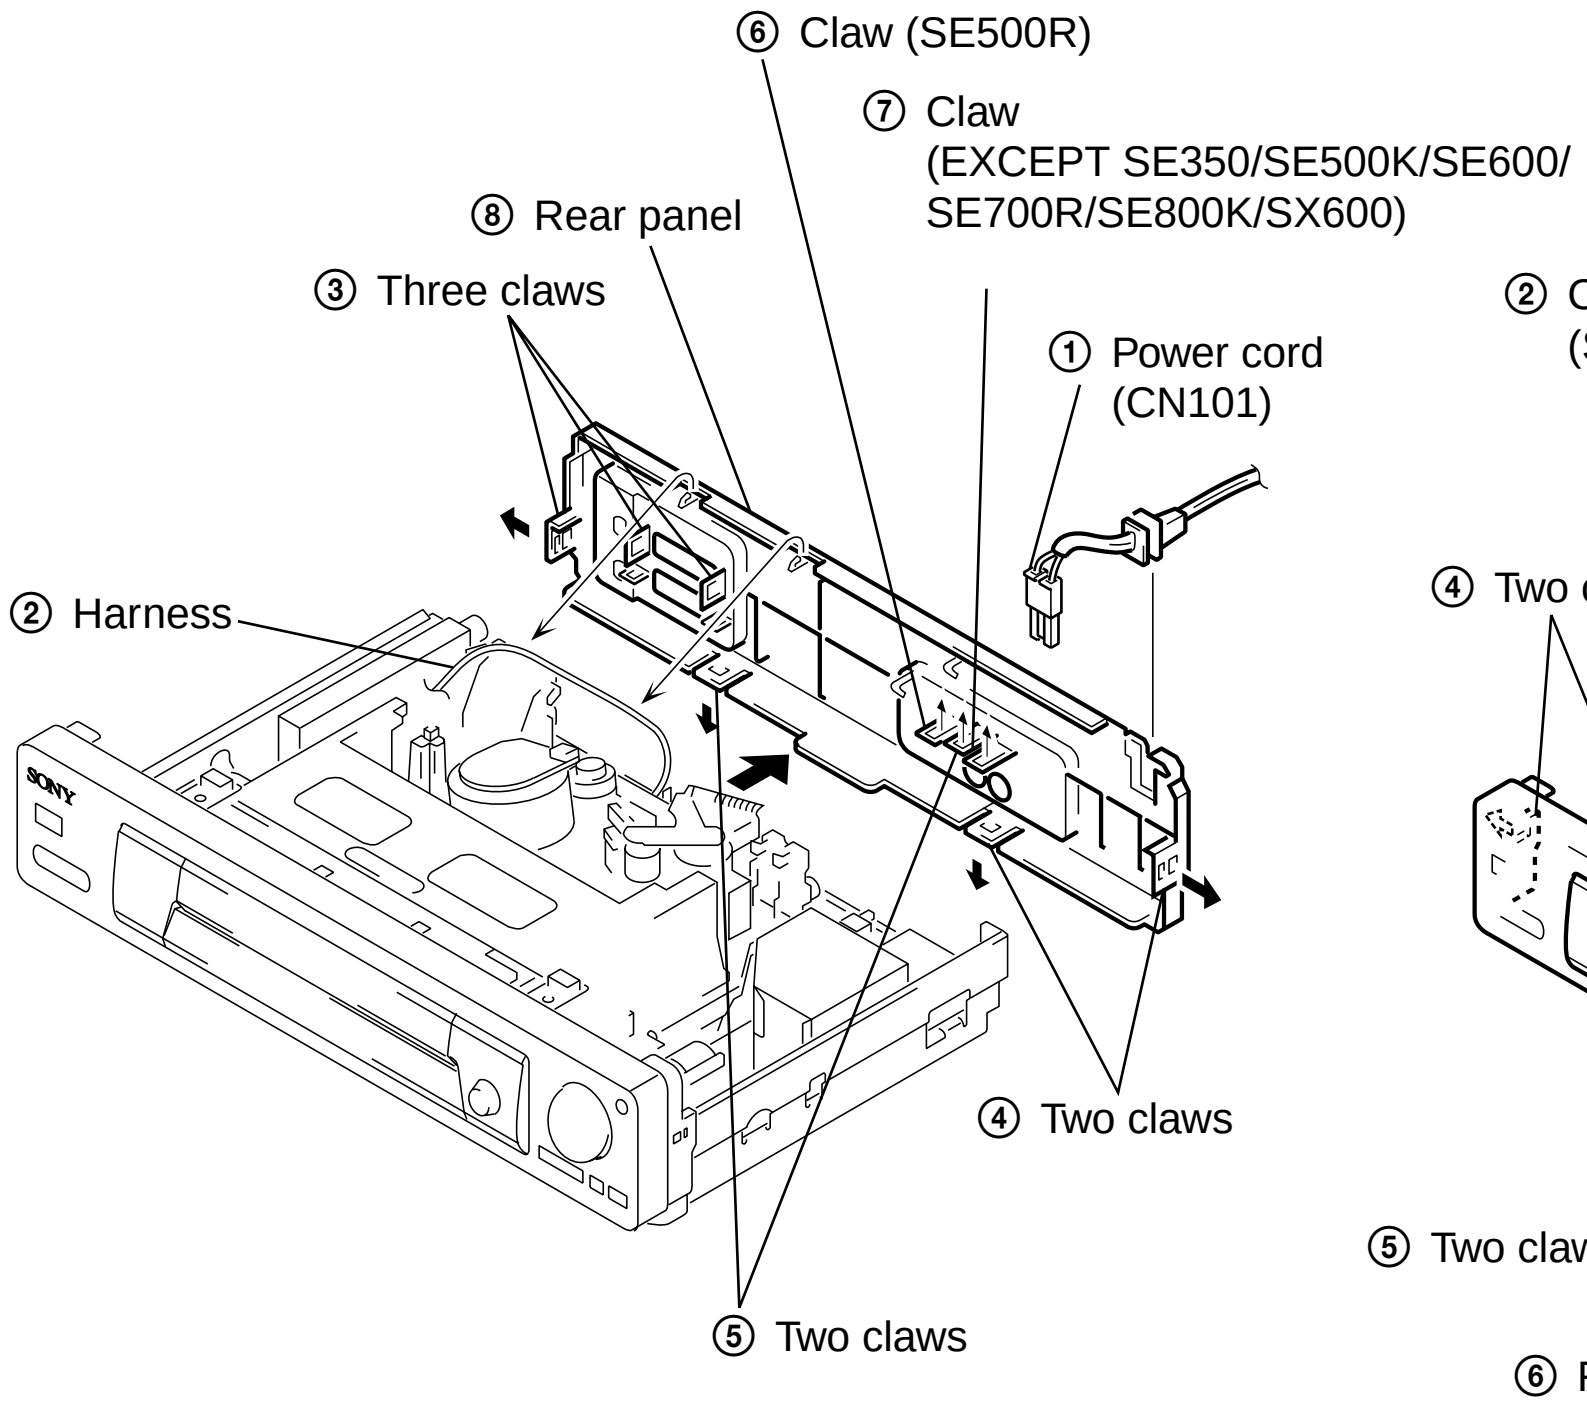
⑥ Claw (SE500R)
⑦ Claw
(EXCEPT SE350/SE500K/SE600/
SE700R/SE800K/SX600)
⑧ Rear panel
③ Three claws
① Power cord
(CN101)
② Harness
④ Two claws
⑤ Two claws

2-3. POWER BLOCK (SRV938EK) REMOVAL

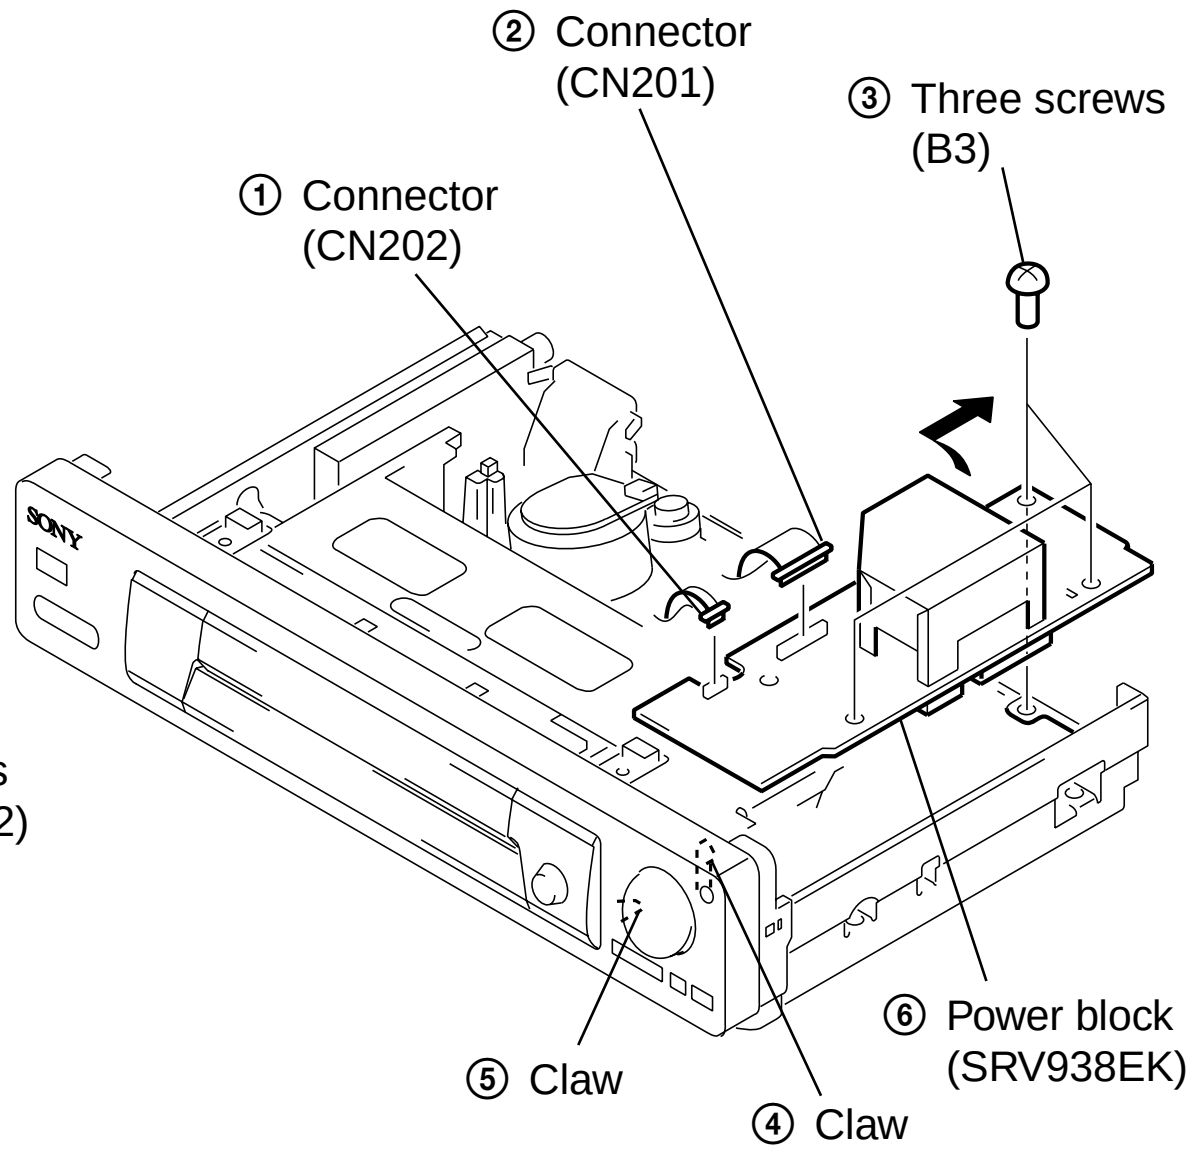
② Connector
(CN201)
③ Three screws
(B3)
① Connector
(CN202)
⑥ Power block
(SRV938EK)
⑤ Claw
④ Claw

2-4. FRONT PANEL SECTION REMOVAL

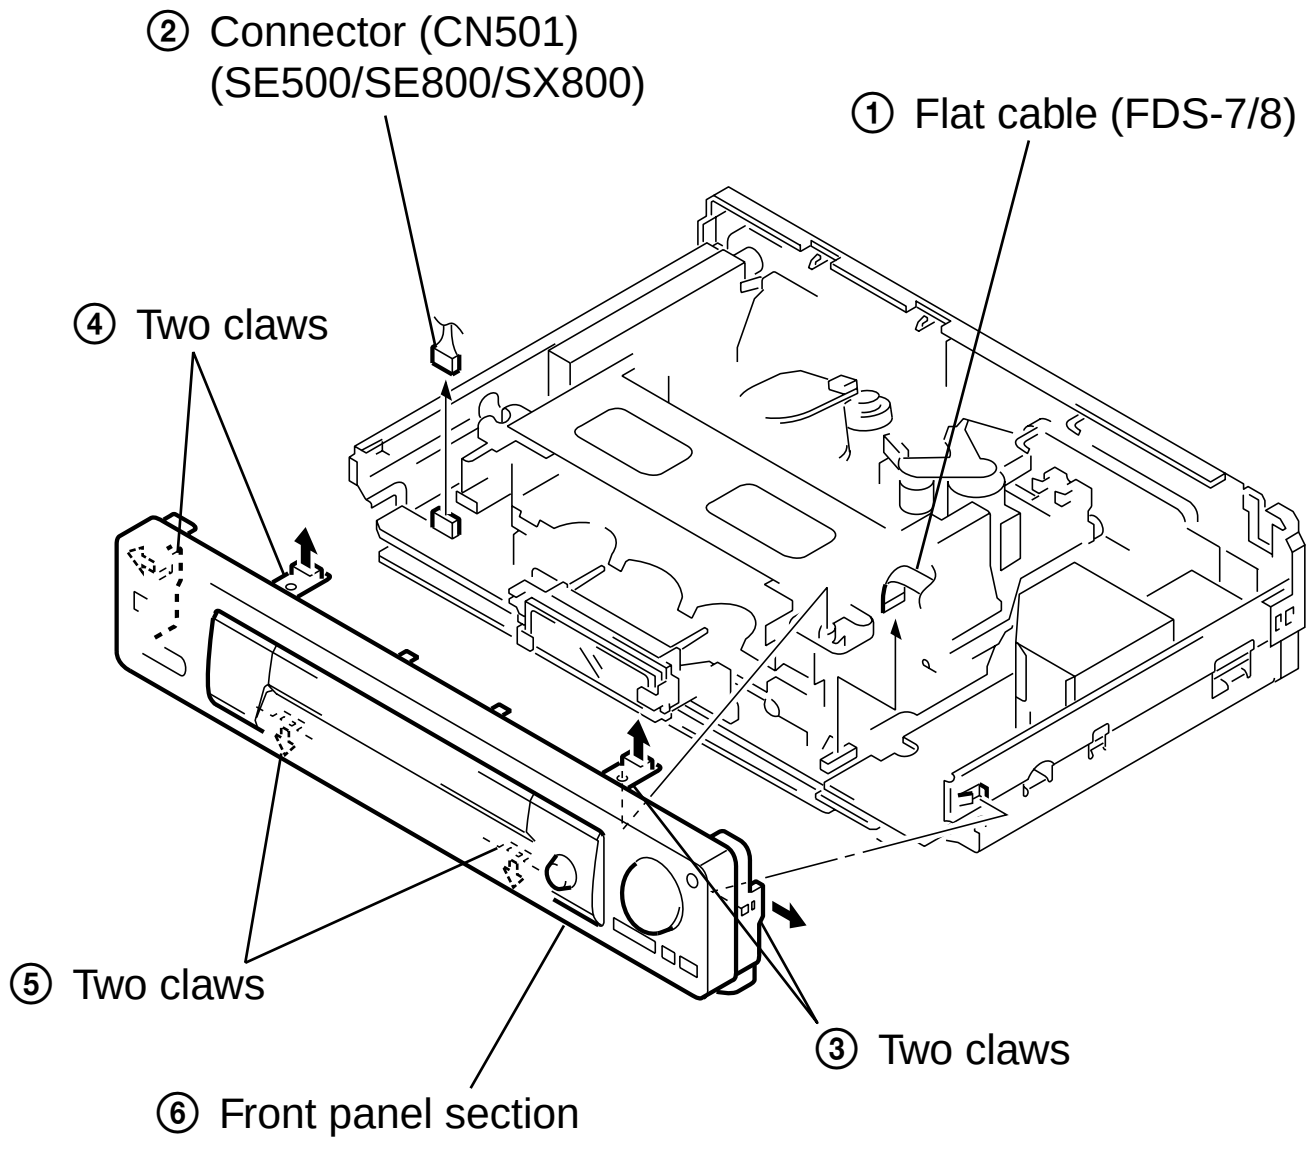
② Connector (CN501)
(SE500/SE800/SX800)
① Flat cable (FDS-7/8)
④ Two claws
⑤ Two claws
③ Two claws
⑥ Front panel section

2-5. MECHANISM DECK REMOVAL

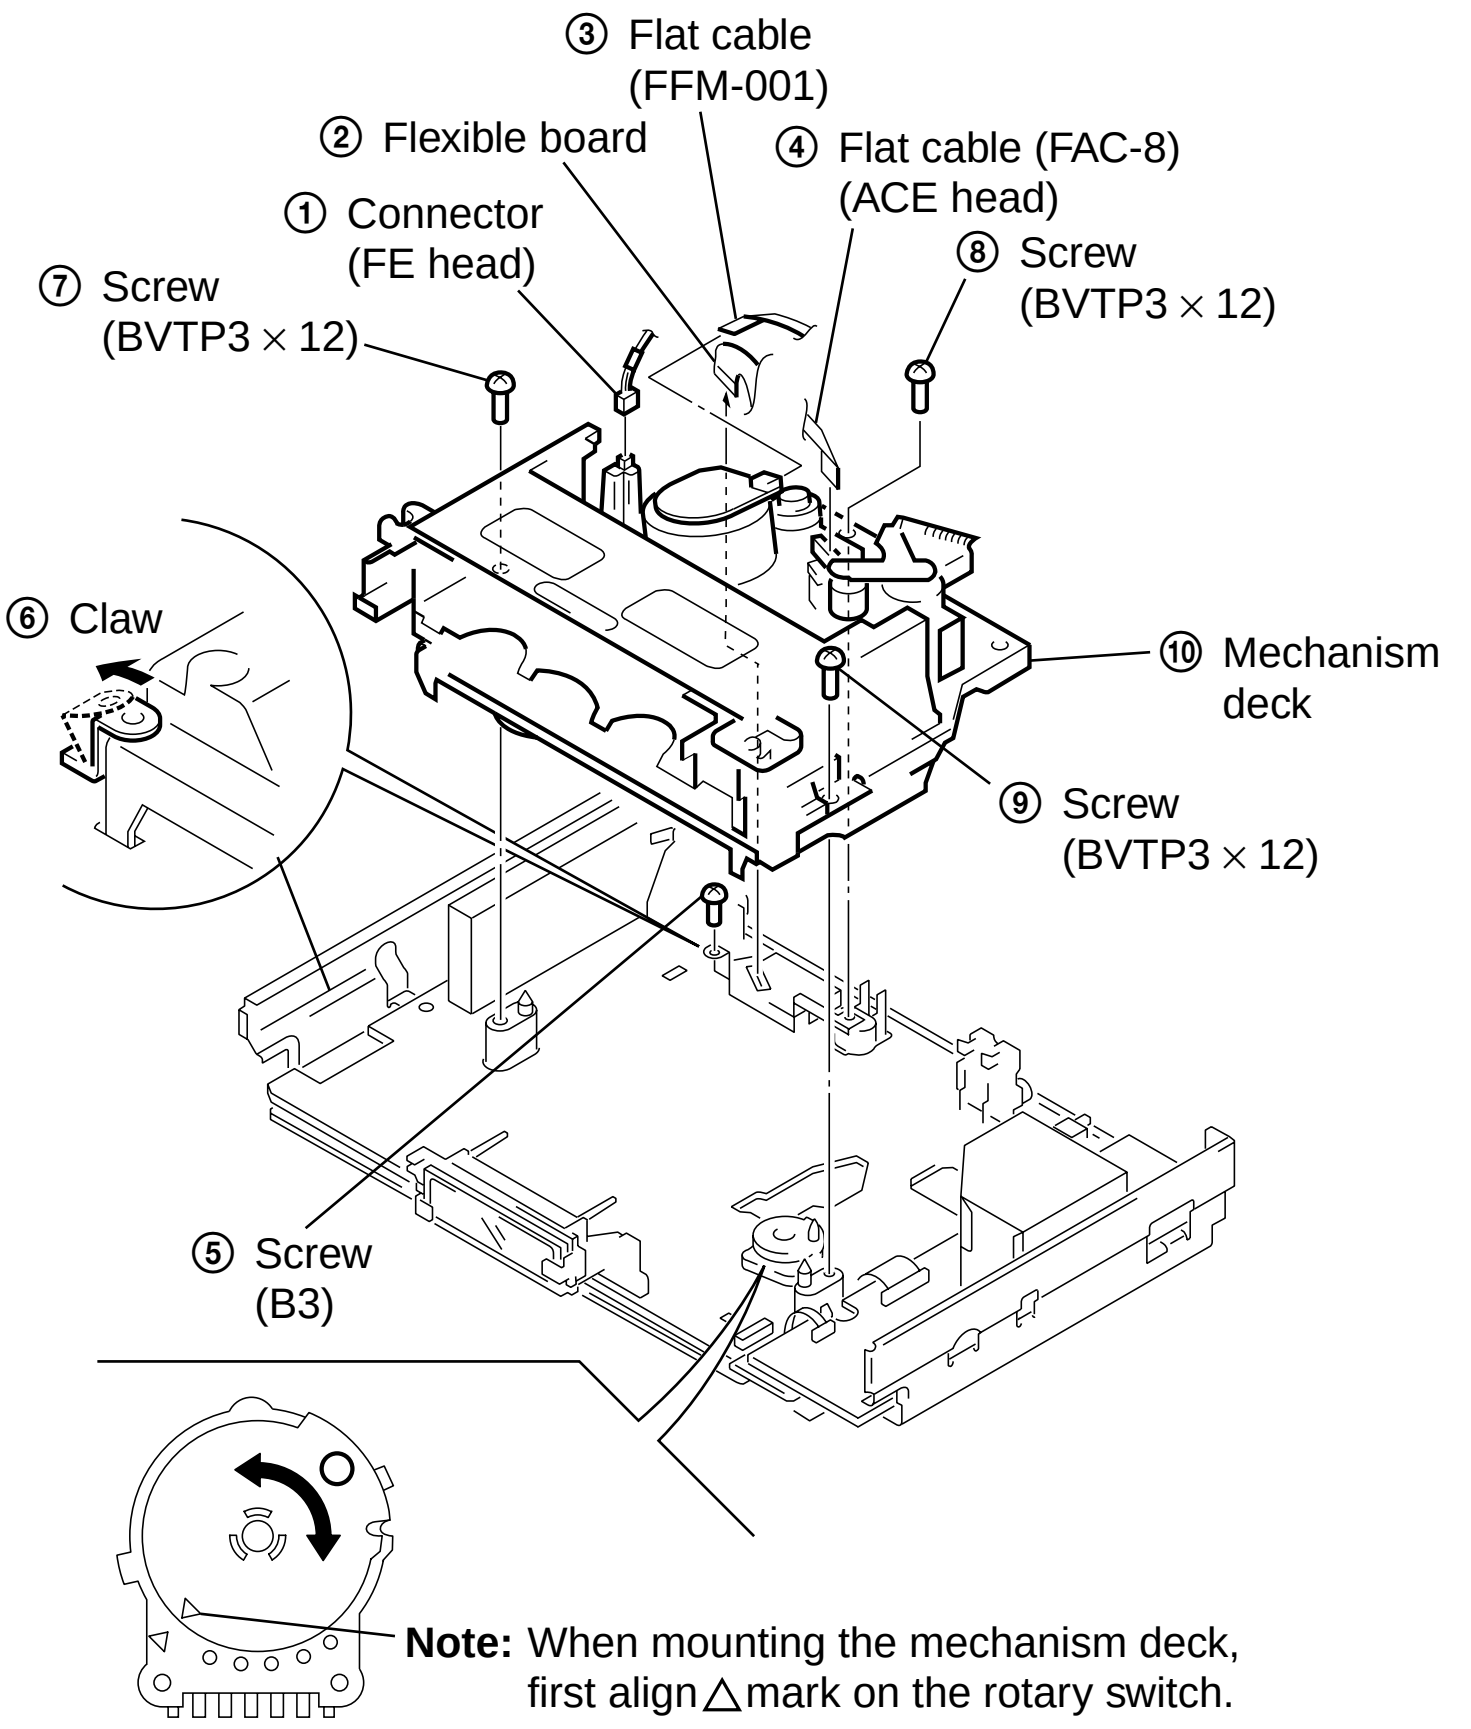
③ Flat cable (FFM-001)
② Flexible board
④ Flat cable (FAC-8) (ACE head)
① Connector (FE head)
⑧ Screw (BVTP3 × 12)
⑦ Screw (BVTP3 × 12)
⑥ Claw
⑩ Mechanism deck
⑨ Screw (BVTP3 × 12)
⑤ Screw (B3)

Note: When mounting the mechanism deck, first align △ mark on the rotary switch.

2-6. MA-373 BOARD REMOVAL

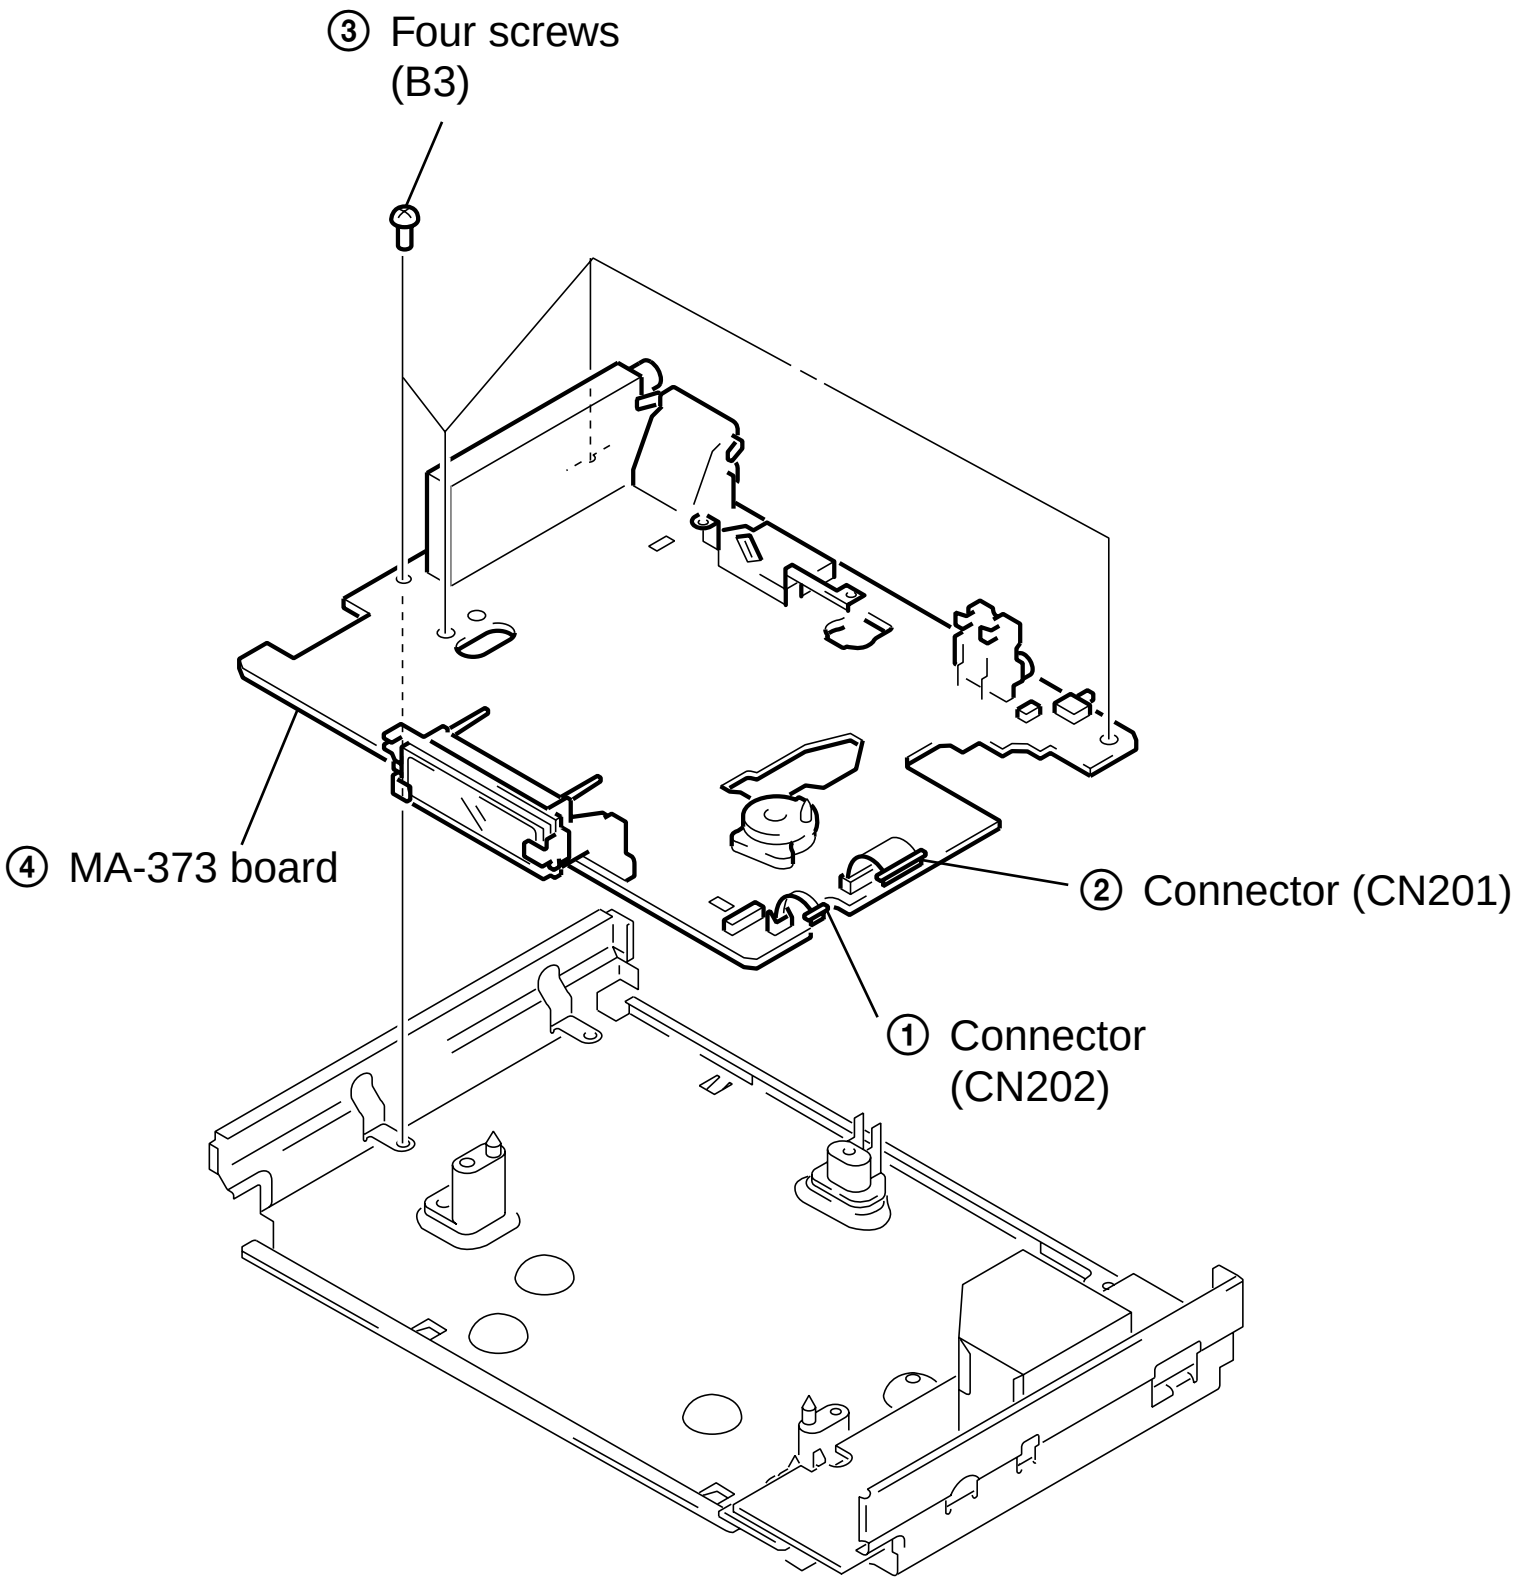
③ Four screws (B3)
④ MA-373 board
② Connector (CN201)
① Connector (CN202)

2-7. INTERNAL VIEWS

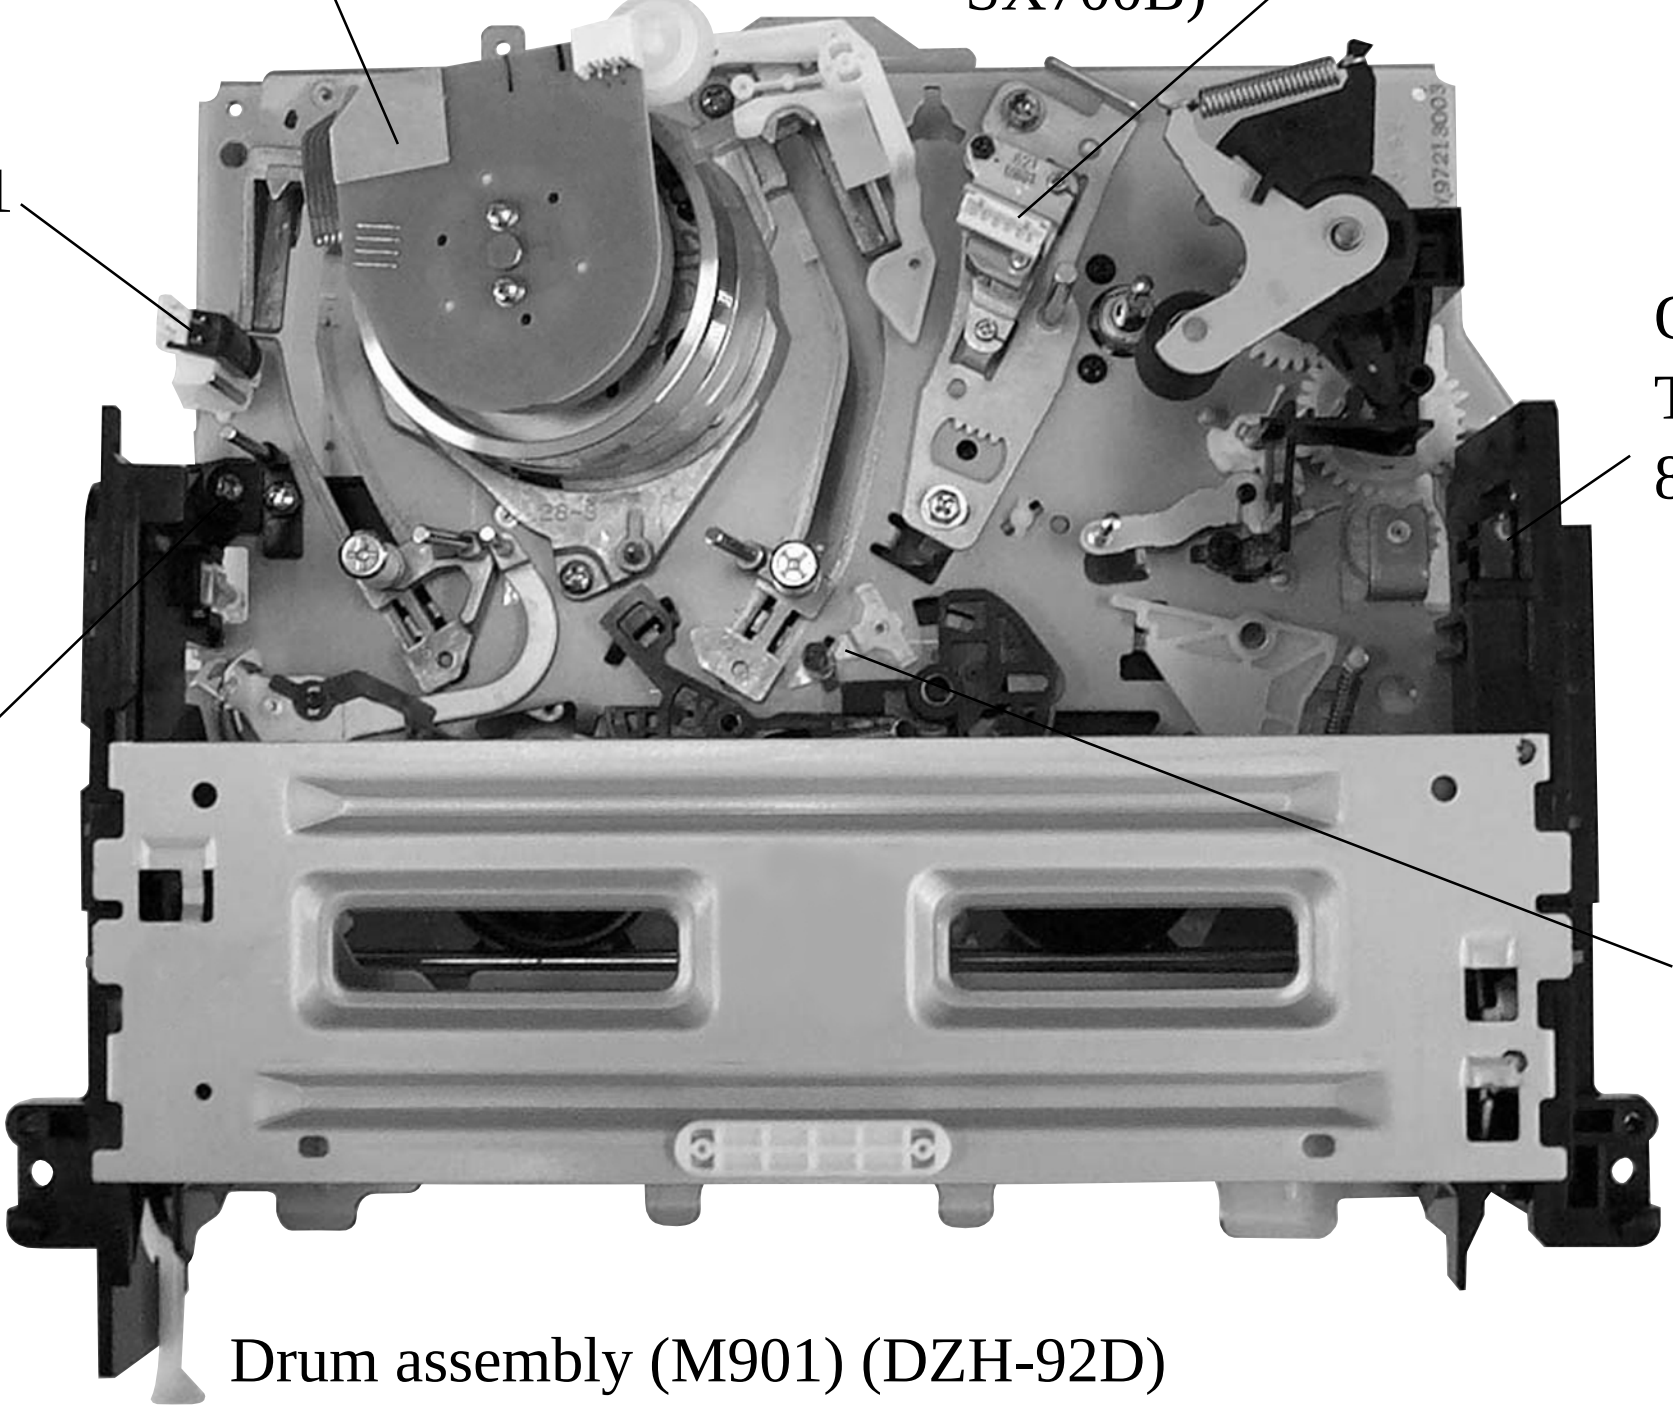

Drum assembly (M901) (DZH-92D)
1-772-361-11 (SE350)
Drum assembly (M901) (DZH-93D)
1-772-362-11 (SE500)
Drum assembly (M901) (DZH-0B5A)
1-772-364-11 (EXCEPT SE350/SE500/SE600B/SE700B/SE800B/SX700B)
Drum assembly (M901) (DZH-0B6A)
1-772-365-11 (SE600B/SE700B/SE800B/SX700B)

ACE head assembly
A-6775-791-A

FE head
1-500-144-11

Q001
Tape end sensor
8-729-043-84

Q002
Tape top sensor
8-729-043-84

D001
Tape top/end LED
8-719-048-26

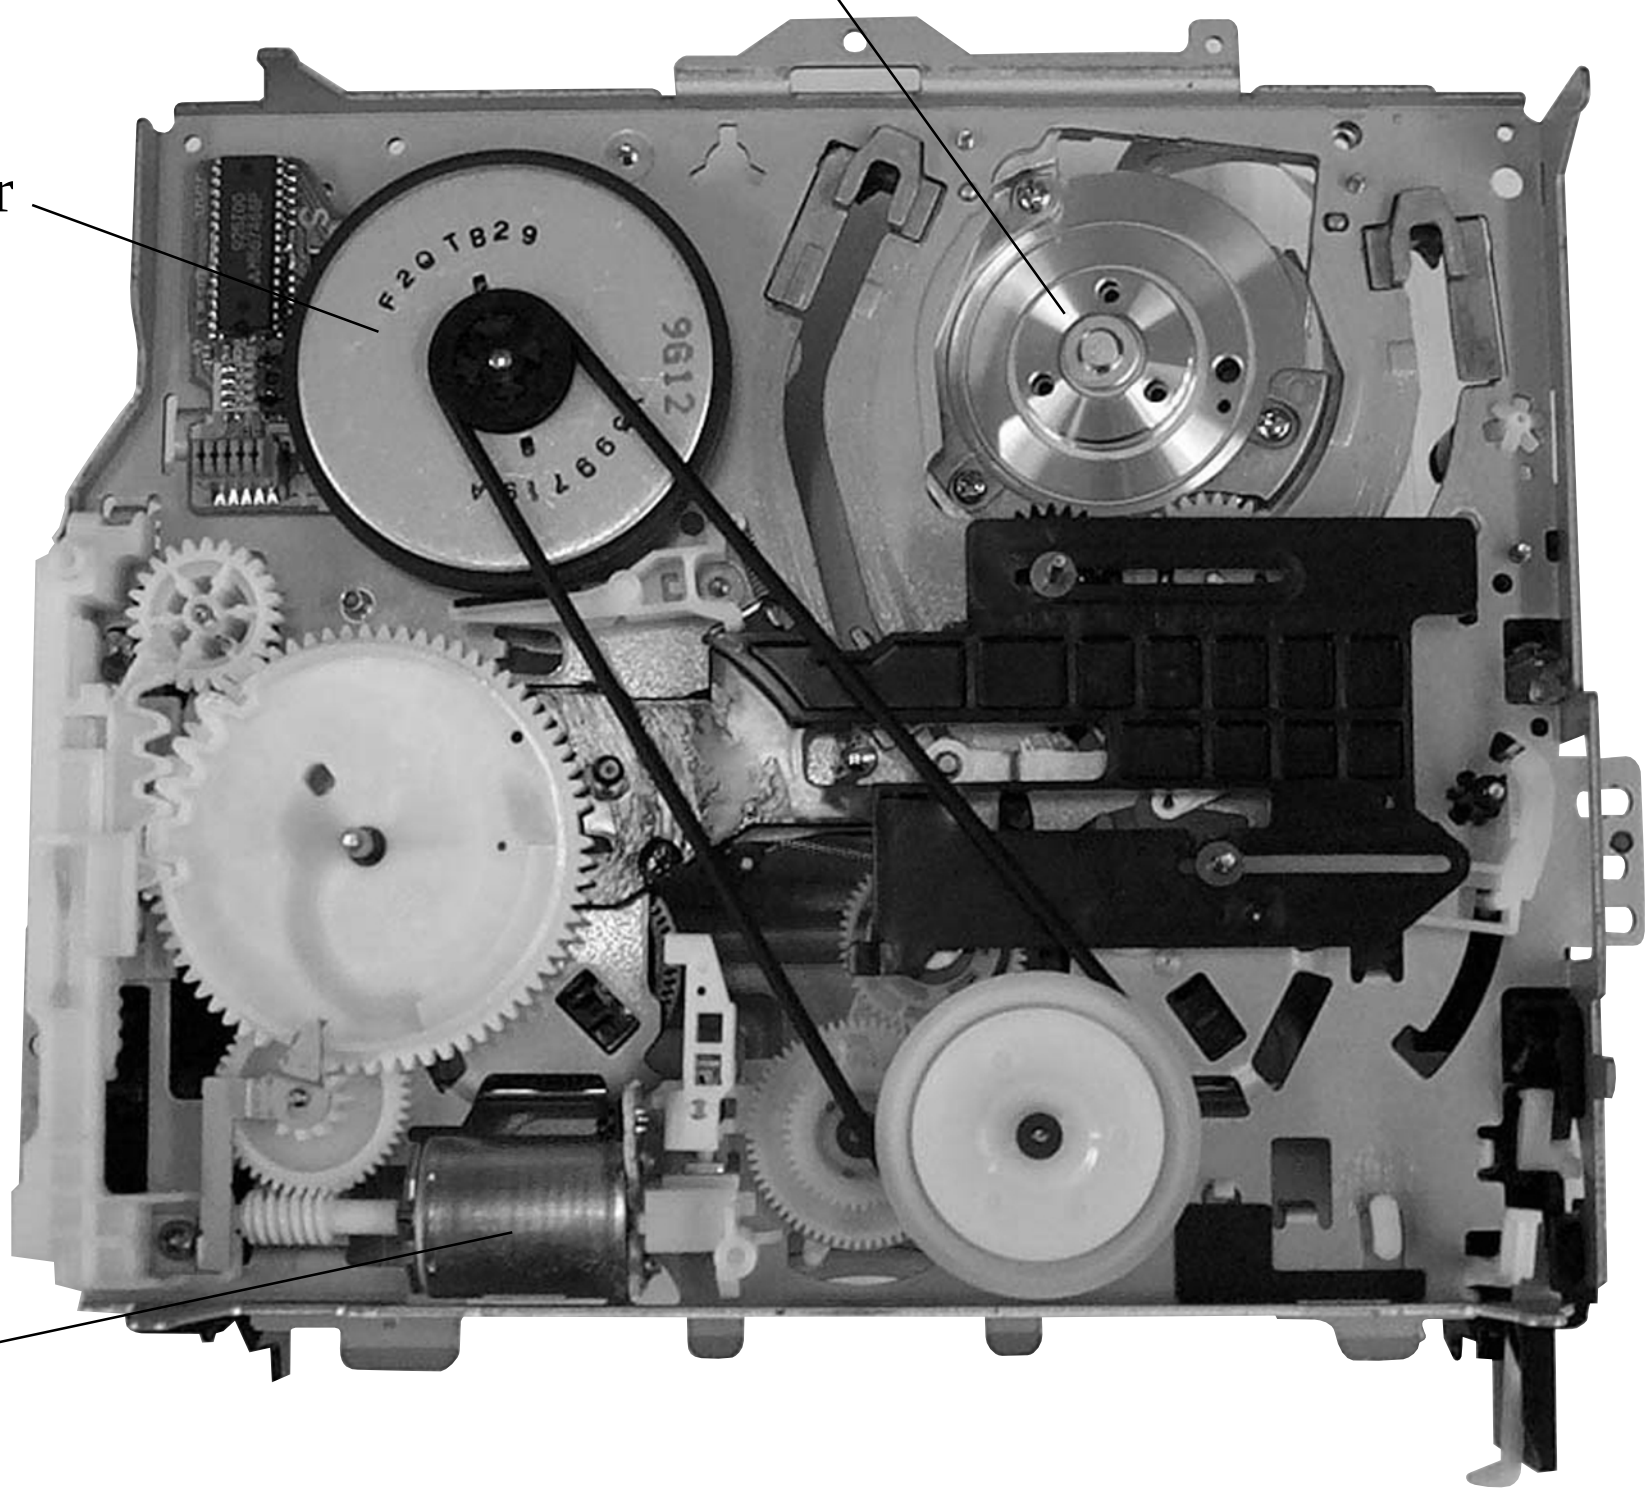

Drum assembly (M901) (DZH-92D)
1-772-361-11 (SE350)
Drum assembly (M901) (DZH-93D)
1-772-362-11 (SE500)
Drum assembly (M901) (DZH-0B5A)
1-772-364-11 (EXCEPT SE350/SE500/SE600B/SE700B/SE800B/SX700B)
Drum assembly (M901) (DZH-0B6A)
1-772-365-11 (SE600B/SE700B/SE800B/SX700B)

M902
Capstan motor
1-698-971-11

M903
Cam motor assembly
X-3947-577-1

2-8. CIRCUIT BOARDS LOCATION

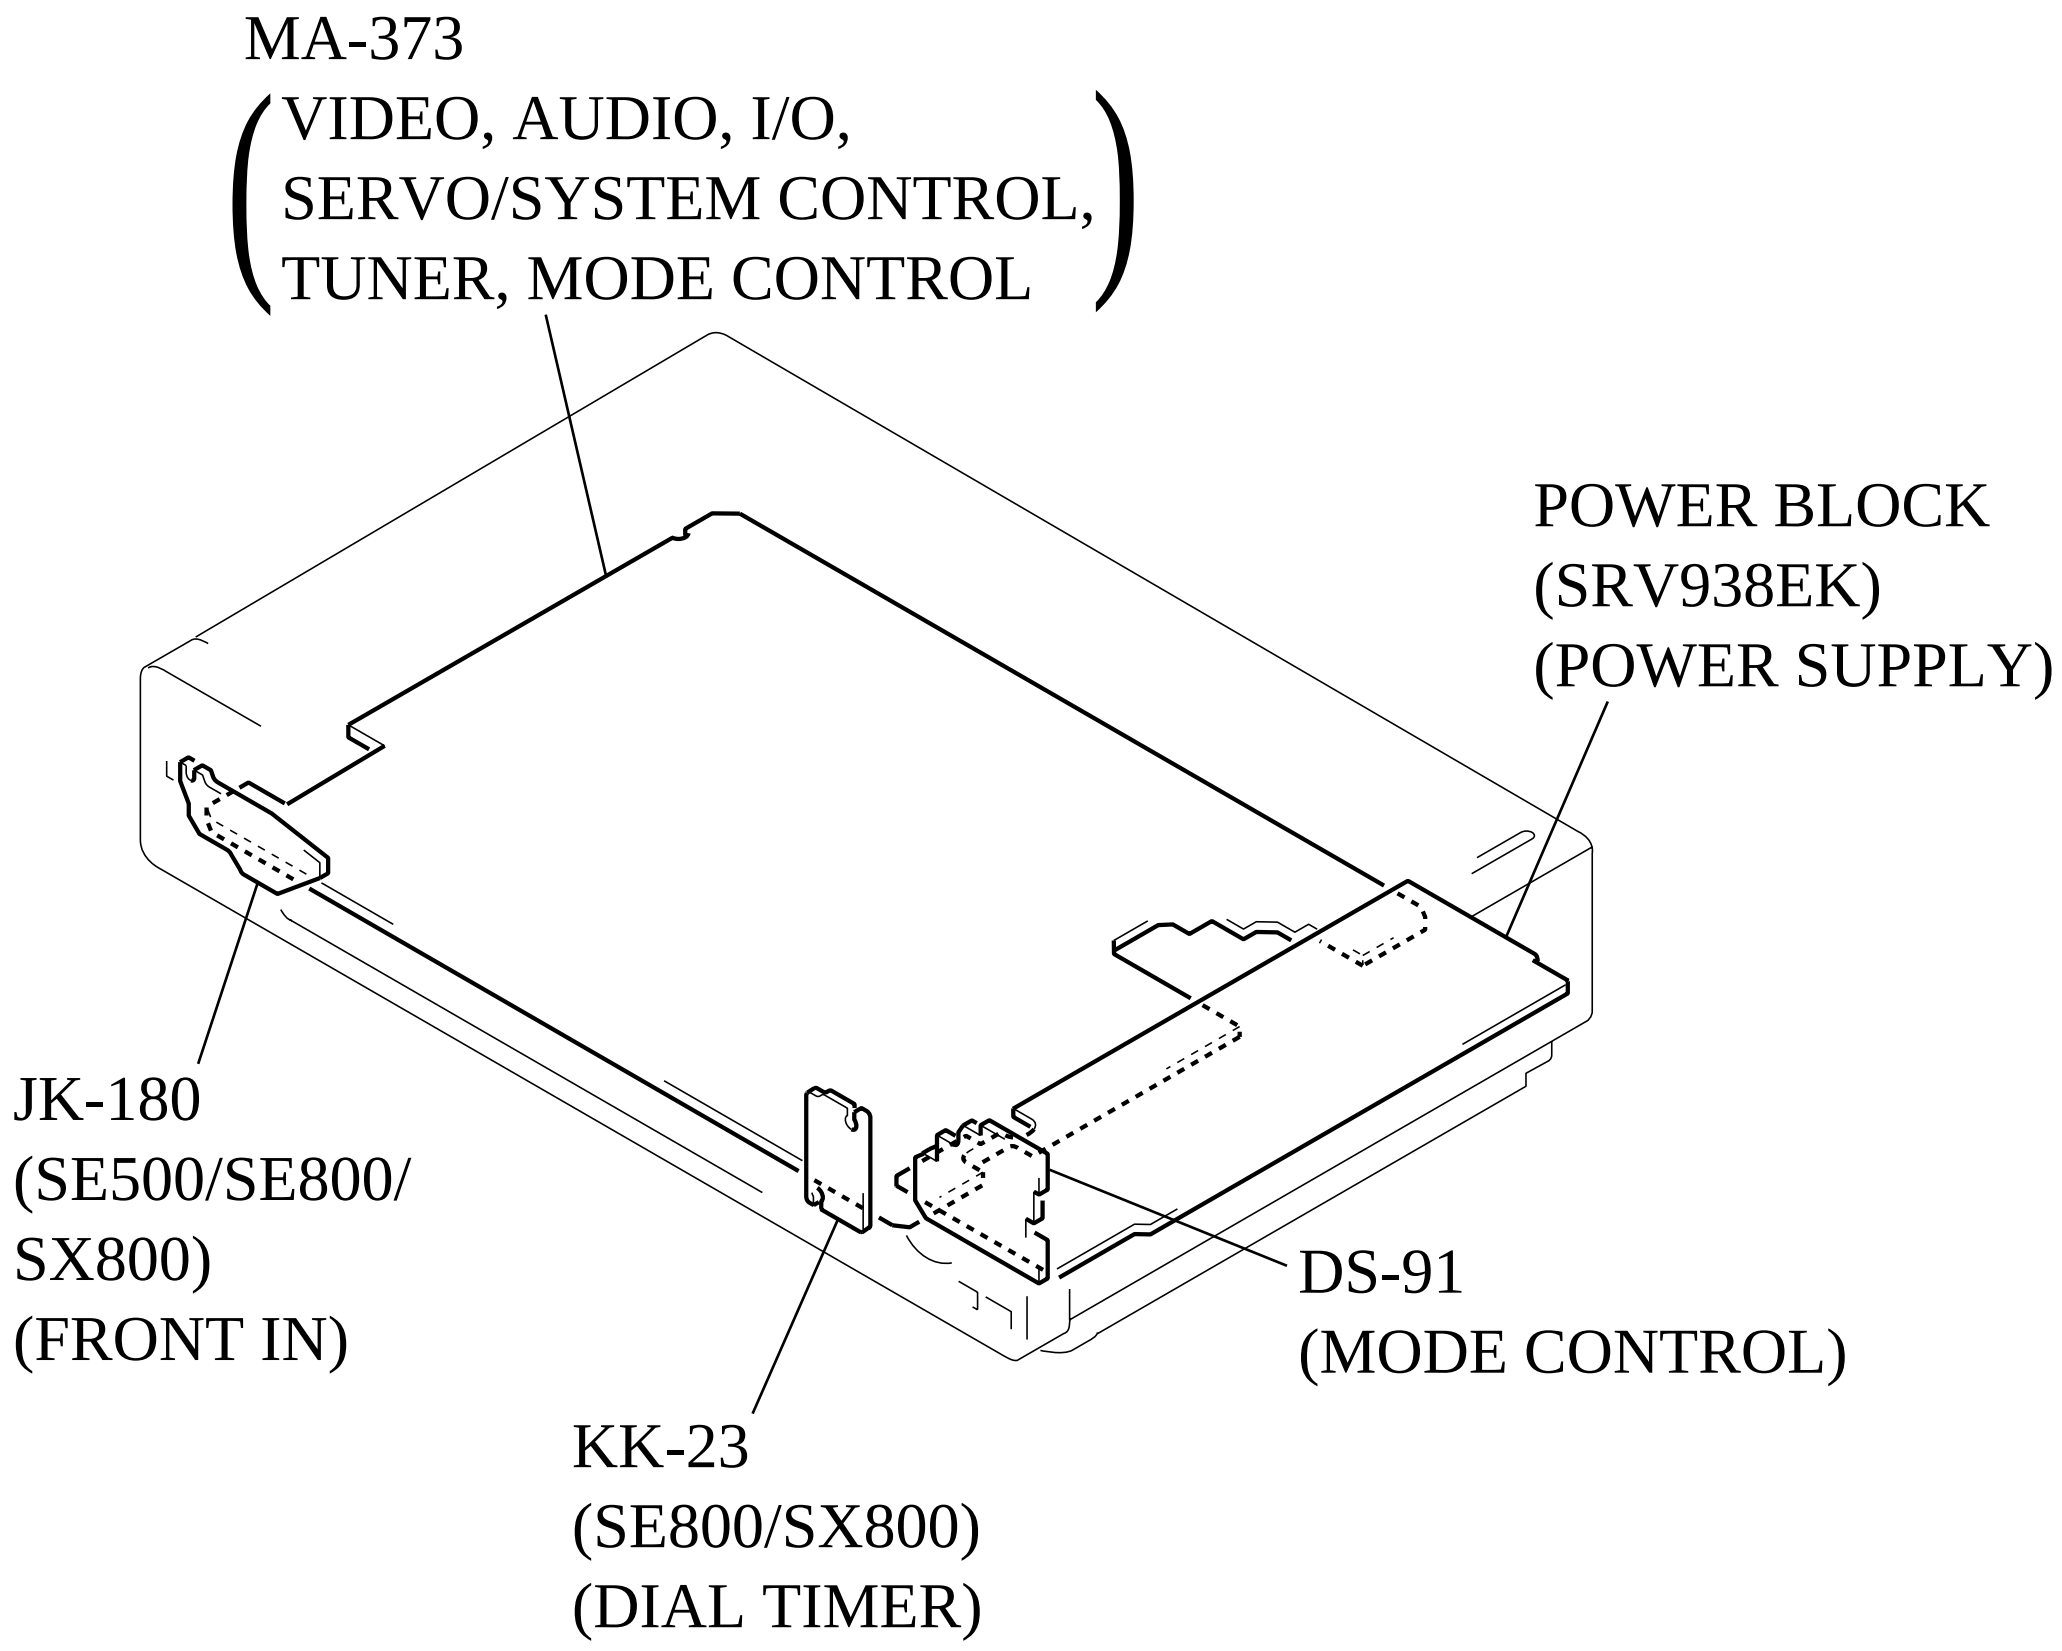
MA-373
(VIDEO, AUDIO, I/O,
SERVO/SYSTEM CONTROL,
TUNER, MODE CONTROL)
POWER BLOCK
(SRV938EK)
(POWER SUPPLY)
JK-180
(SE500/SE800/
SX800)
(FRONT IN)
DS-91
(MODE CONTROL)
KK-23
(SE800/SX800)
(DIAL TIMER)

SECTION 3
BLOCK DIAGRAMS

3-1. OVERALL BLOCK DIAGRAM

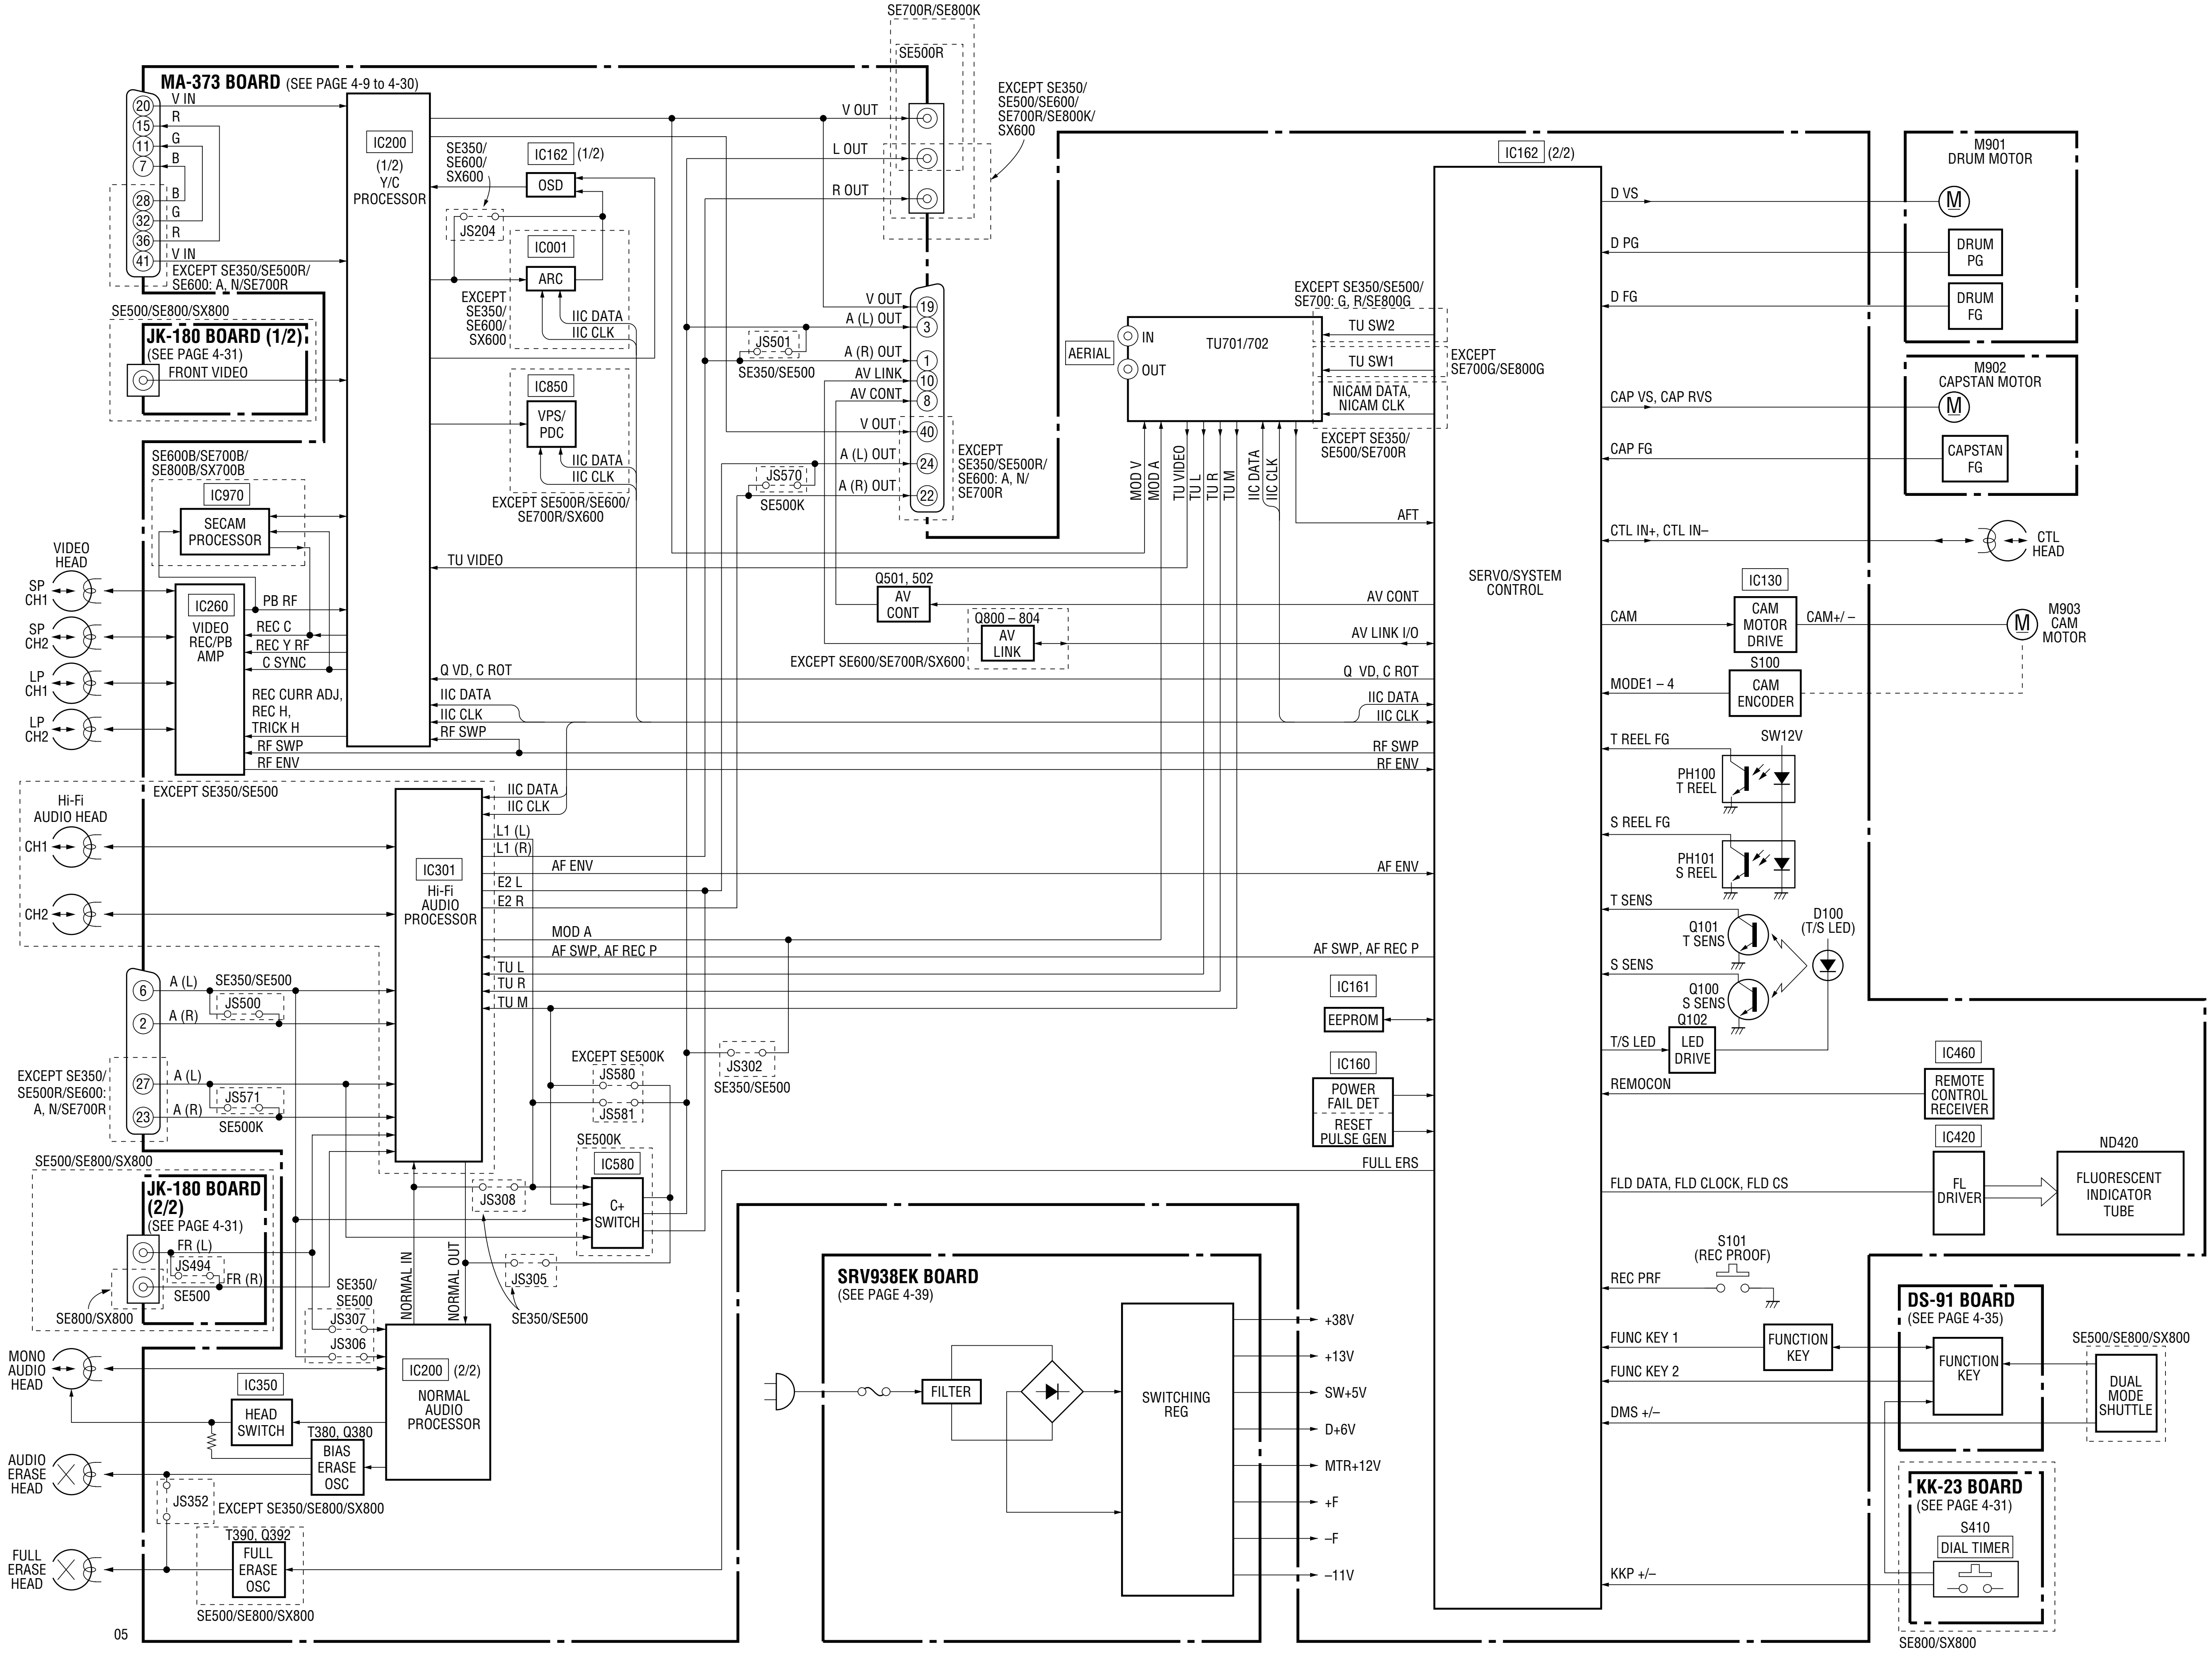
SE700R/SE800K
SE500R
EXCEPT SE350/ SE500/SE600/ SE700R/SE800K/ SX600
MA-373 BOARD (SEE PAGE 4-9 to 4-30)
V IN
R
G
B
B
G
R
V IN
EXCEPT SE350/SE500R/ SE600: A, N/SE700R
IC200
(1/2) Y/C PROCESSOR
SE350/ SE600/ SX600
IC162 (1/2)
OSD
JS204
IC001
ARC
EXCEPT SE350/ SE600/ SX600
IIC DATA
IIC CLK
IC850
VPS/ PDC
EXCEPT SE500R/SE600/ SE700R/SX600
V OUT
L OUT
R OUT
V OUT
A (L) OUT
A (R) OUT
AV LINK
AV CONT
V OUT
A (L) OUT
A (R) OUT
JS501
SE350/SE500
JS570
SE500K
EXCEPT SE350/SE500R/ SE600: A, N/ SE700R
SE500/SE800/SX800
JK-180 BOARD (1/2)
(SEE PAGE 4-31)
FRONT VIDEO
SE600B/SE700B/ SE800B/SX700B
IC970
SECAM PROCESSOR
VIDEO HEAD
SP CH1
SP CH2
LP CH1
LP CH2
IC260
VIDEO REC/PB AMP
PB RF
REC C
REC Y RF
C SYNC
REC CURR ADJ, REC H, TRICK H
RF SWP
RF ENV
TU VIDEO
Q VD, C ROT
IIC DATA
IIC CLK
RF SWP
Q501, 502
AV CONT
Q800 – 804
AV LINK
EXCEPT SE600/SE700R/SX600
AERIAL
IN
OUT
TU701/702
EXCEPT SE350/SE500/ SE700: G, R/SE800G
TU SW2
TU SW1
NICAM DATA, NICAM CLK
EXCEPT SE700G/SE800G
EXCEPT SE350/ SE500/SE700R
MOD V
MOD A
TU VIDEO
TU L
TU R
TU M
IIC DATA
IIC CLK
AFT
AV CONT
AV LINK I/O
Q VD, C ROT
IIC DATA
IIC CLK
RF SWP
RF ENV
EXCEPT SE350/SE500
Hi-Fi AUDIO HEAD
CH1
CH2
IIC DATA
IIC CLK
L1 (L)
L1 (R)
AF ENV
E2 L
E2 R
IC301
Hi-Fi AUDIO PROCESSOR
MOD A
AF SWP, AF REC P
TU L
TU R
TU M
AF ENV
AF SWP, AF REC P
A (L)
SE350/SE500
JS500
A (R)
EXCEPT SE350/ SE500R/SE600: A, N/SE700R
A (L)
JS571
A (R)
SE500K
EXCEPT SE500K
JS580
JS581
JS302
SE350/SE500
SE500K
IC580
C+ SWITCH
JS308
JS305
SE350/SE500
SE500/SE800/SX800
JK-180 BOARD (2/2)
(SEE PAGE 4-31)
FR (L)
JS494
FR (R)
SE500
SE800/SX800
SE350/ SE500
JS307
JS306
NORMAL IN
NORMAL OUT
MONO AUDIO HEAD
IC350
HEAD SWITCH
T380, Q380
BIAS ERASE OSC
IC200 (2/2)
NORMAL AUDIO PROCESSOR
AUDIO ERASE HEAD
JS352
EXCEPT SE350/SE800/SX800
T390, Q392
FULL ERASE HEAD
FULL ERASE OSC
SE500/SE800/SX800
05
SRV938EK BOARD
(SEE PAGE 4-39)
FILTER
SWITCHING REG
+38V
+13V
SW+5V
D+6V
MTR+12V
+F
–F
–11V
IC161
EEPROM
IC160
POWER FAIL DET
RESET PULSE GEN
FULL ERS
IC162 (2/2)
SERVO/SYSTEM CONTROL
D VS
D PG
D FG
CAP VS, CAP RVS
CAP FG
CTL IN+, CTL IN–
CAM
MODE1 – 4
T REEL FG
S REEL FG
T SENS
S SENS
T/S LED
REMOCON
FLD DATA, FLD CLOCK, FLD CS
REC PRF
FUNC KEY 1
FUNC KEY 2
DMS +/–
KKP +/–
M901 DRUM MOTOR
M
DRUM PG
DRUM FG
M902 CAPSTAN MOTOR
M
CAPSTAN FG
CTL HEAD
IC130
CAM MOTOR DRIVE
CAM+/ –
M
M903 CAM MOTOR
S100
CAM ENCODER
SW12V
PH100 T REEL
PH101 S REEL
Q101 T SENS
Q100 S SENS
D100 (T/S LED)
Q102
LED DRIVE
IC460
REMOTE CONTROL RECEIVER
IC420
FL DRIVER
ND420
FLUORESCENT INDICATOR TUBE
S101 (REC PROOF)
FUNCTION KEY
DS-91 BOARD
(SEE PAGE 4-35)
FUNCTION KEY
SE500/SE800/SX800
DUAL MODE SHUTTLE
KK-23 BOARD
(SEE PAGE 4-31)
S410
DIAL TIMER
SE800/SX800

3-2. VIDEO BLOCK DIAGRAM

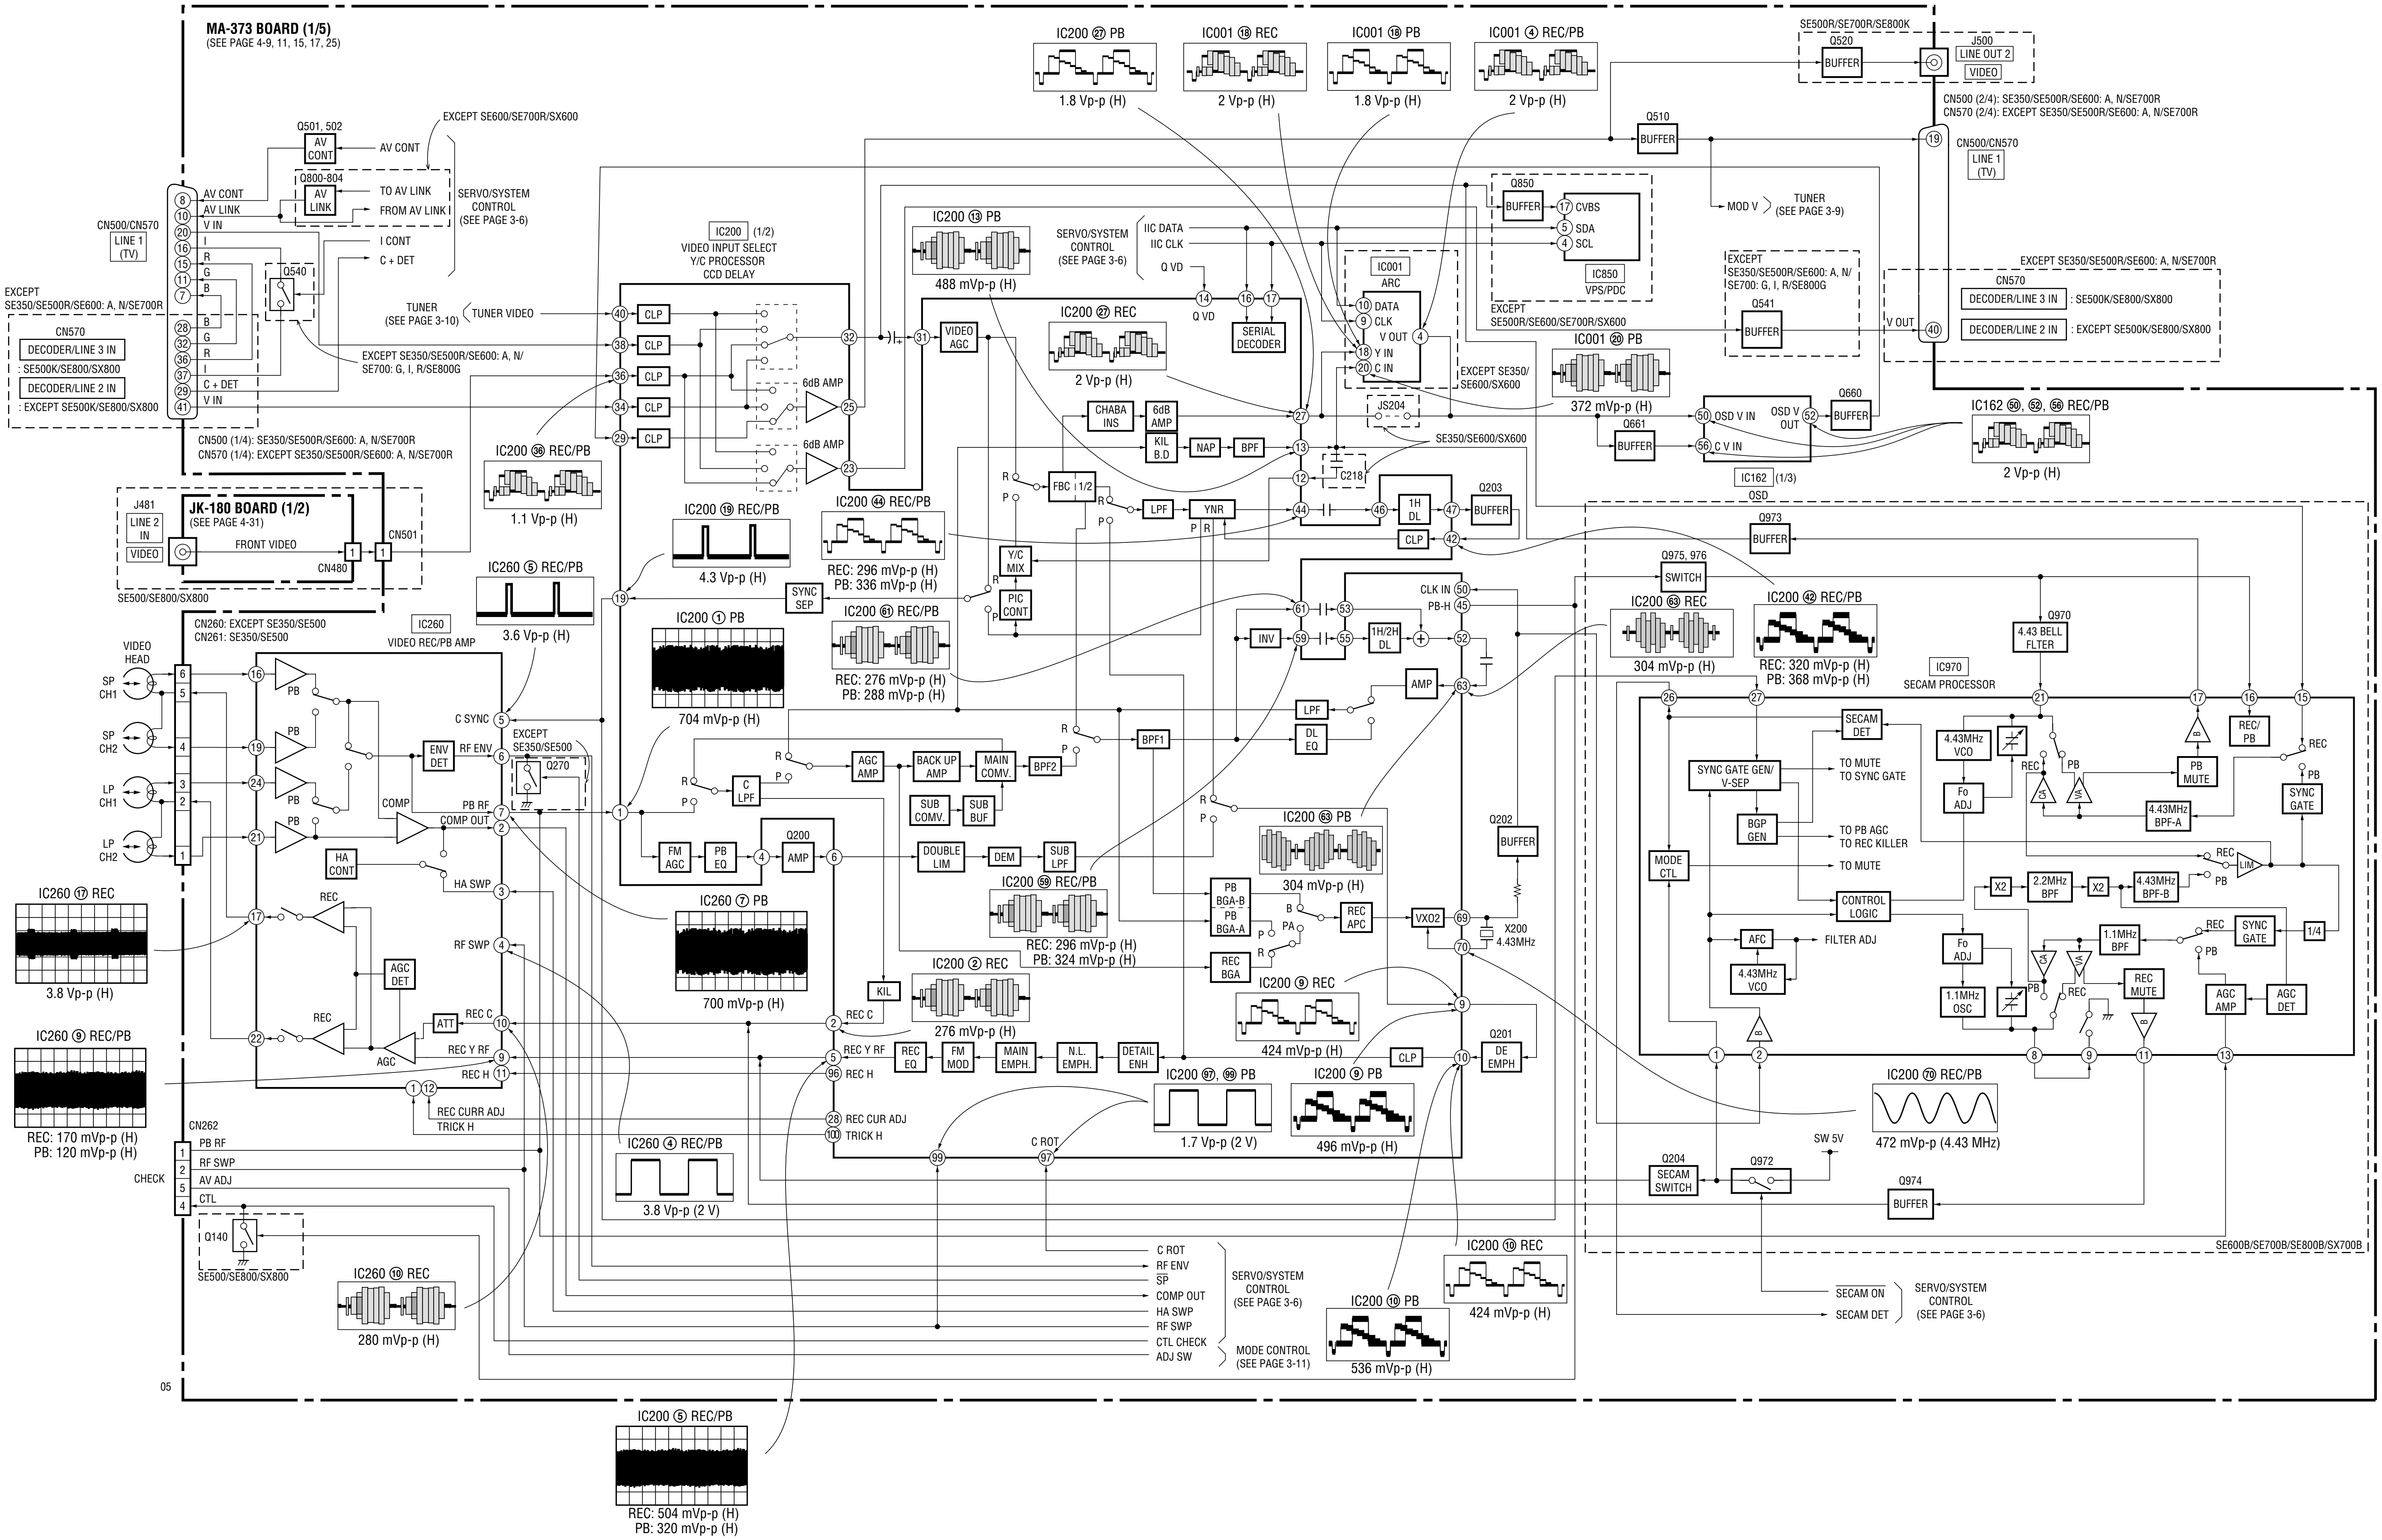
MA-373 BOARD (1/5)
(SEE PAGE 4-9, 11, 15, 17, 25)
IC200 ㉗ PB
1.8 Vp-p (H)
IC001 ⑱ REC
2 Vp-p (H)
IC001 ⑱ PB
1.8 Vp-p (H)
IC001 ④ REC/PB
2 Vp-p (H)
SE500R/SE700R/SE800K
Q520
BUFFER
J500
LINE OUT 2
VIDEO
CN500 (2/4): SE350/SE500R/SE600: A, N/SE700R
CN570 (2/4): EXCEPT SE350/SE500R/SE600: A, N/SE700R
Q510
BUFFER
CN500/CN570
LINE 1 (TV)
EXCEPT SE600/SE700R/SX600
Q501, 502
AV CONT
Q800-804
AV LINK
TO AV LINK
FROM AV LINK
I CONT
C + DET
SERVO/SYSTEM CONTROL (SEE PAGE 3-6)
TUNER (SEE PAGE 3-10)
TUNER VIDEO
Q540
EXCEPT SE350/SE500R/SE600: A, N/SE700R
CN570
DECODER/LINE 3 IN
: SE500K/SE800/SX800
DECODER/LINE 2 IN
: EXCEPT SE500K/SE800/SX800
CN500 (1/4): SE350/SE500R/SE600: A, N/SE700R
CN570 (1/4): EXCEPT SE350/SE500R/SE600: A, N/SE700R
EXCEPT SE350/SE500R/SE600: A, N/SE700: G, I, R/SE800G
IC200 (1/2) VIDEO INPUT SELECT Y/C PROCESSOR CCD DELAY
CLP
6dB AMP
VIDEO AGC
IC200 ⑬ PB
488 mVp-p (H)
SERVO/SYSTEM CONTROL (SEE PAGE 3-6)
IIC DATA
IIC CLK
Q VD
SERIAL DECODER
IC200 ㉗ REC
2 Vp-p (H)
CHABA INS
6dB AMP
KIL B.D
NAP
BPF
FBC 1/2
LPF
YNR
Y/C MIX
PIC CONT
SYNC SEP
IC001 ARC
DATA
CLK
V OUT
Y IN
C IN
JS204
C218
1H DL
CLP
EXCEPT SE350/SE600/SX600
SE350/SE600/SX600
Q850
BUFFER
CVBS
SDA
SCL
IC850 VPS/PDC
EXCEPT SE500R/SE600/SE700R/SX600
IC001 ⑳ PB
372 mVp-p (H)
Q661
BUFFER
OSD V IN
C V IN
OSD V OUT
Q660
BUFFER
IC162 (1/3) OSD
IC162 ㊿, ㊾, ㊻ REC/PB
2 Vp-p (H)
MOD V
TUNER (SEE PAGE 3-9)
EXCEPT SE350/SE500R/SE600: A, N/SE700: G, I, R/SE800G
Q541
BUFFER
V OUT
Q203
BUFFER
Q973
BUFFER
Q975, 976
SWITCH
IC200 ㊱ REC/PB
1.1 Vp-p (H)
JK-180 BOARD (1/2)
(SEE PAGE 4-31)
J481
LINE 2 IN
VIDEO
FRONT VIDEO
CN480
CN501
SE500/SE800/SX800
IC200 ⑲ REC/PB
4.3 Vp-p (H)
IC200 ㊹ REC/PB
REC: 296 mVp-p (H)
PB: 336 mVp-p (H)
IC260 ⑤ REC/PB
3.6 Vp-p (H)
IC200 ① PB
704 mVp-p (H)
IC200 ㊶ REC/PB
REC: 276 mVp-p (H)
PB: 288 mVp-p (H)
CLK IN
PB-H
INV
1H/2H DL
AMP
LPF
DL EQ
BPF1
BPF2
AGC AMP
BACK UP AMP
MAIN COMV.
SUB COMV.
SUB BUF
C LPF
IC200 ⑥ REC
304 mVp-p (H)
IC200 ㊷ REC/PB
REC: 320 mVp-p (H)
PB: 368 mVp-p (H)
IC970 SECAM PROCESSOR
Q970
4.43 BELL FILTER
CN260: EXCEPT SE350/SE500
CN261: SE350/SE500
IC260 VIDEO REC/PB AMP
VIDEO HEAD
SP CH1
SP CH2
LP CH1
LP CH2
PB
COMP
ENV DET
RF ENV
C SYNC
EXCEPT SE350/SE500
Q270
PB RF
COMP OUT
HA CONT
HA SWP
RF SWP
AGC DET
ATT
AGC
REC C
REC Y RF
REC H
REC CURR ADJ
TRICK H
FM AGC
PB EQ
Q200
AMP
DOUBLE LIM
DEM
SUB LPF
IC260 ⑦ PB
700 mVp-p (H)
IC200 ㊺ REC/PB
REC: 296 mVp-p (H)
PB: 324 mVp-p (H)
IC200 ⑥ PB
304 mVp-p (H)
PB BGA-B
PB BGA-A
REC APC
VXO2
X200 4.43MHz
REC BGA
Q202
BUFFER
KIL
IC200 ② REC
276 mVp-p (H)
IC200 ⑨ REC
424 mVp-p (H)
REC EQ
FM MOD
MAIN EMPH.
N.L. EMPH.
DETAIL ENH
Q201
DE EMPH
CLP
REC CUR ADJ
TRICK H
C ROT
IC200 ㊼, ㊾ PB
1.7 Vp-p (2 V)
IC200 ⑨ PB
496 mVp-p (H)
IC260 ⑰ REC
3.8 Vp-p (H)
IC260 ⑨ REC/PB
REC: 170 mVp-p (H)
PB: 120 mVp-p (H)
CN262
PB RF
RF SWP
AV ADJ
CTL
CHECK
Q140
SE500/SE800/SX800
IC260 ④ REC/PB
3.8 Vp-p (2 V)
IC260 ⑩ REC
280 mVp-p (H)
C ROT
RF ENV
SP
COMP OUT
HA SWP
RF SWP
CTL CHECK
ADJ SW
SERVO/SYSTEM CONTROL (SEE PAGE 3-6)
MODE CONTROL (SEE PAGE 3-11)
IC200 ⑩ REC
424 mVp-p (H)
IC200 ⑩ PB
536 mVp-p (H)
IC200 ㊵ REC/PB
472 mVp-p (4.43 MHz)
SW 5V
Q204
SECAM SWITCH
Q972
Q974
BUFFER
SECAM ON
SECAM DET
SE600B/SE700B/SE800B/SX700B
SECAM DET
TO MUTE
TO SYNC GATE
SYNC GATE GEN/ V-SEP
BGP GEN
TO PB AGC
TO REC KILLER
TO MUTE
MODE CTL
CONTROL LOGIC
AFC
FILTER ADJ
4.43MHz VCO
4.43MHz VCO
Fo ADJ
1.1MHz OSC
REC/PB
PB MUTE
4.43MHz BPF-A
SYNC GATE
X2
2.2MHz BPF
4.43MHz BPF-B
LIM
1.1MHz BPF
REC MUTE
AGC AMP
AGC DET
1/4
IC200 ⑤ REC/PB
REC: 504 mVp-p (H)
PB: 320 mVp-p (H)
05

3-3. SERVO/SYSTEM CONTROL BLOCK DIAGRAM

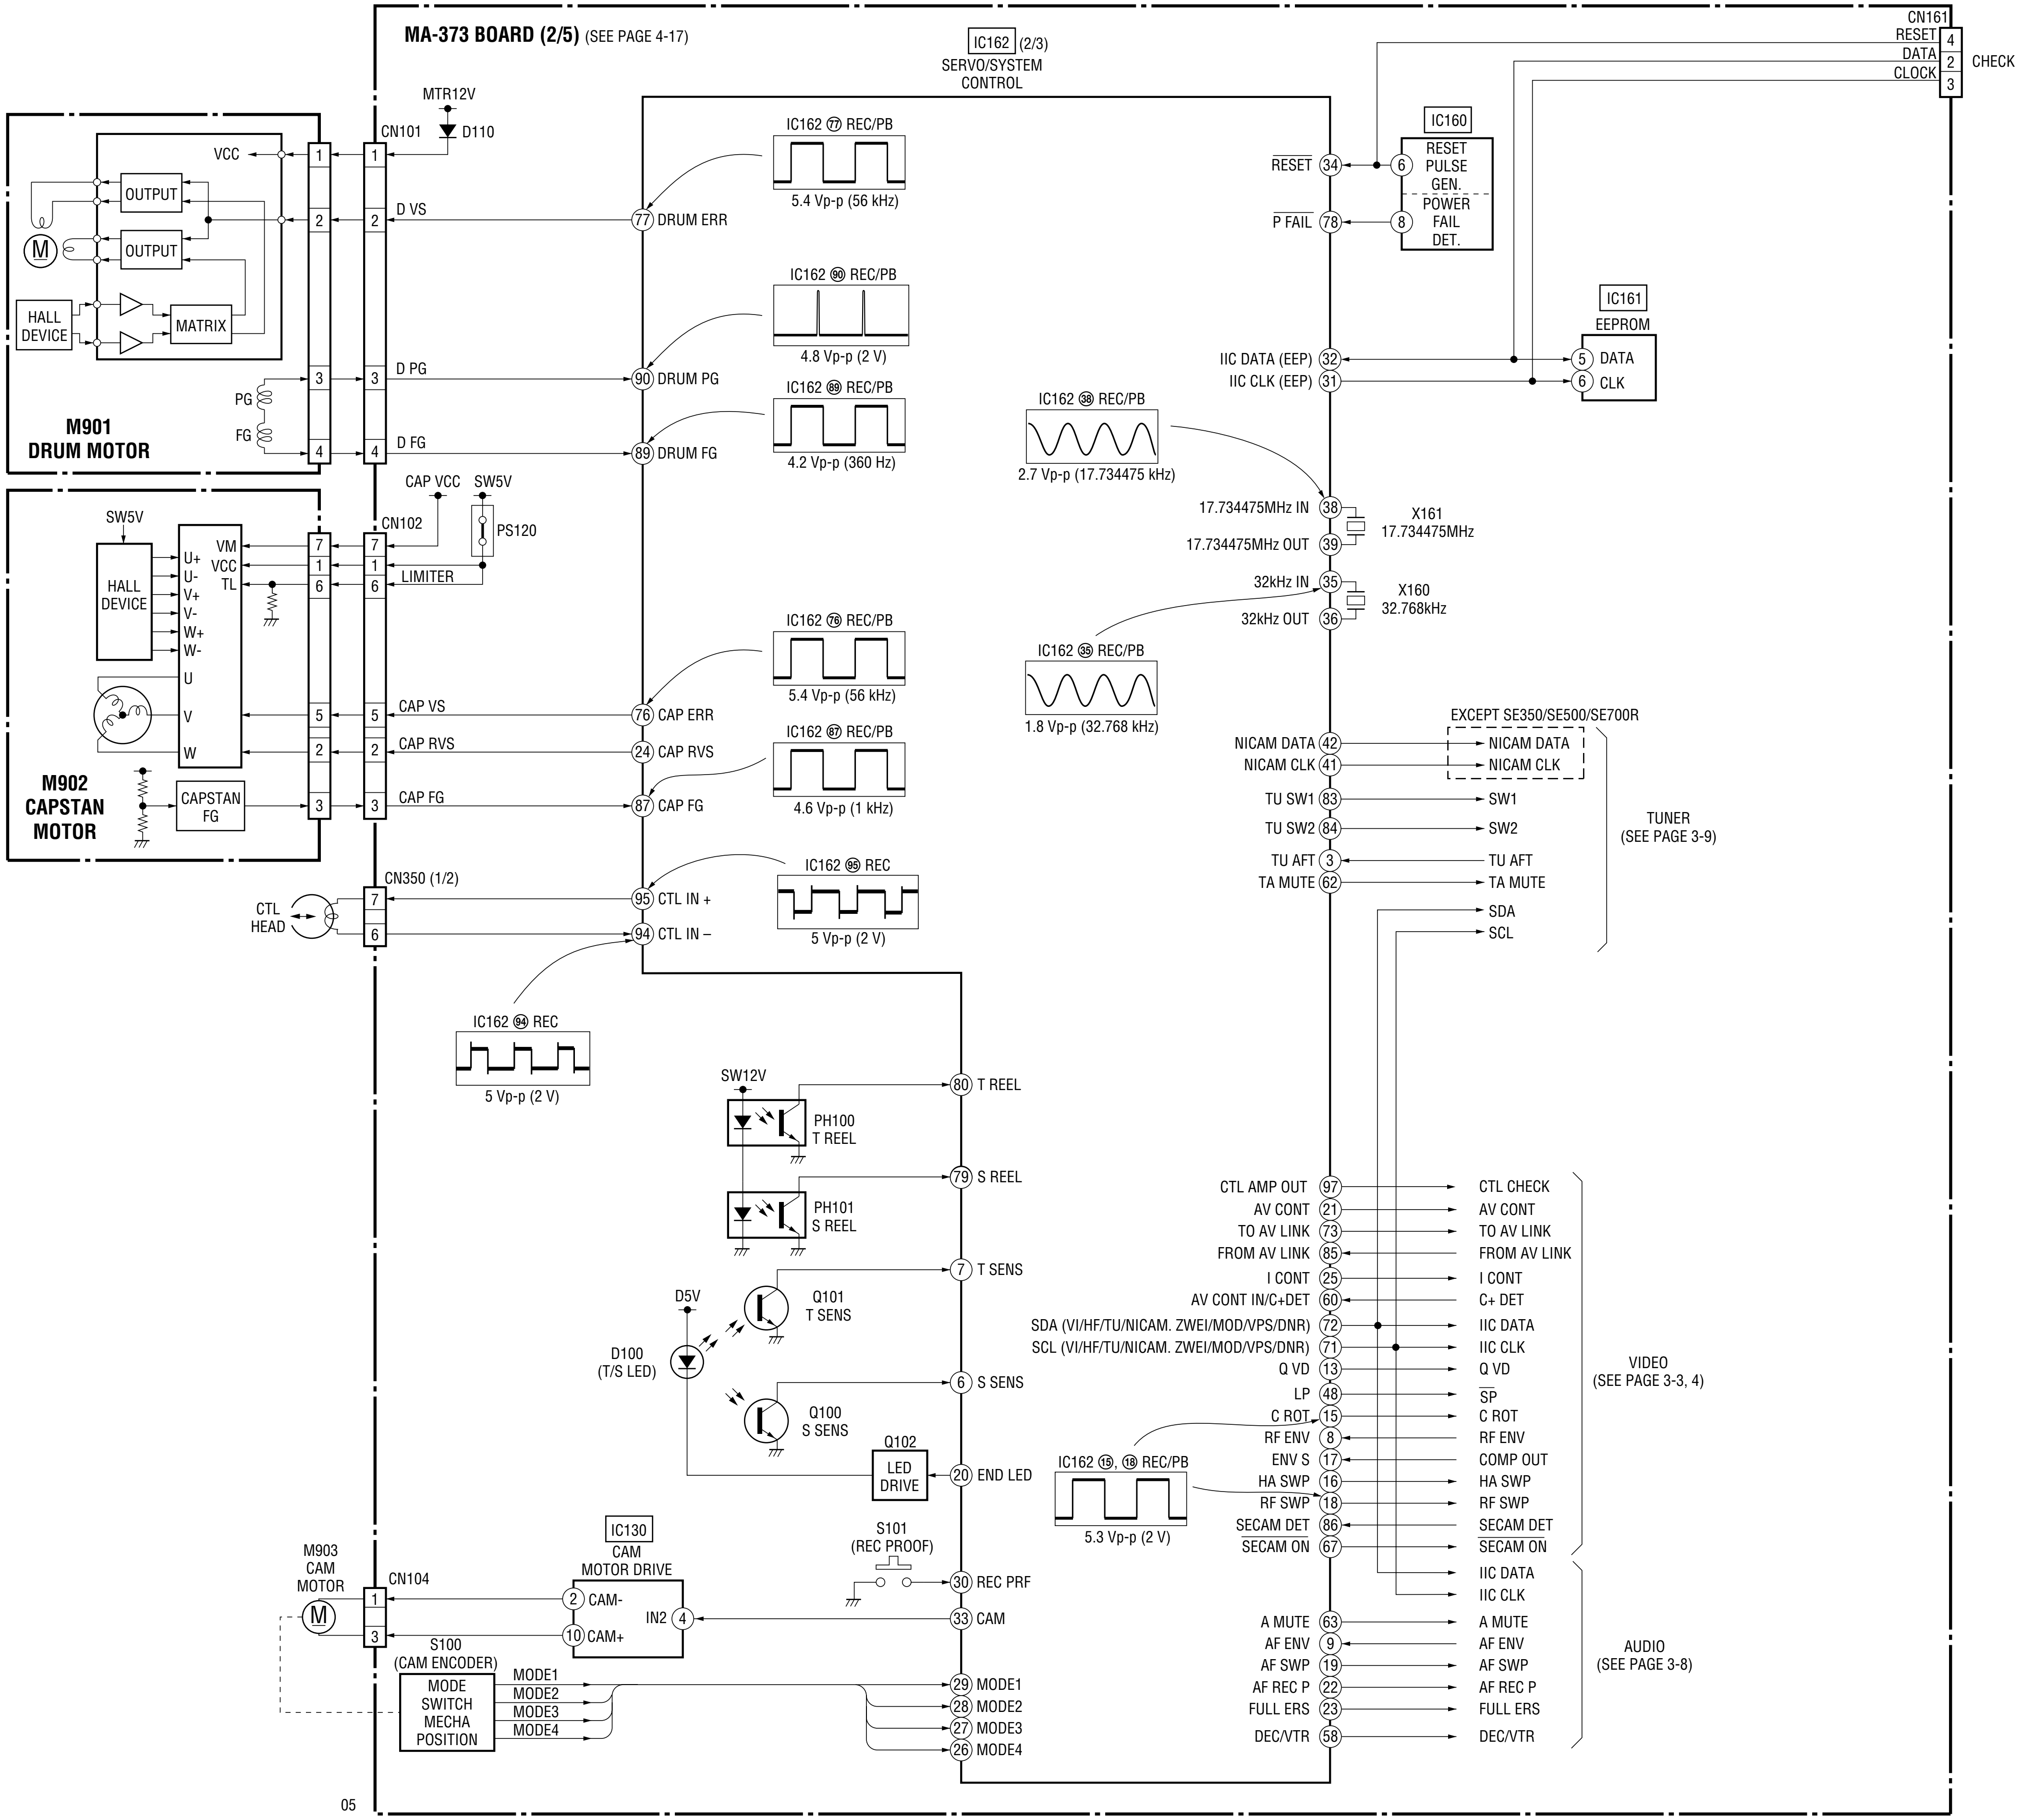
MA-373 BOARD (2/5) (SEE PAGE 4-17)
IC162 (2/3)
SERVO/SYSTEM CONTROL
MTR12V
D110
CN101
VCC
OUTPUT
OUTPUT
M
HALL DEVICE
MATRIX
PG
FG
M901
DRUM MOTOR
D VS
D PG
D FG
77 DRUM ERR
90 DRUM PG
89 DRUM FG
IC162 ⑦⑦ REC/PB
5.4 Vp-p (56 kHz)
IC162 ⑨⓪ REC/PB
4.8 Vp-p (2 V)
IC162 ⑧⑨ REC/PB
4.2 Vp-p (360 Hz)
CAP VCC
SW5V
PS120
CN102
SW5V
HALL DEVICE
U+
U-
V+
V-
W+
W-
VM
VCC
TL
U
V
W
LIMITER
M902
CAPSTAN MOTOR
CAPSTAN FG
CAP VS
CAP RVS
CAP FG
76 CAP ERR
24 CAP RVS
87 CAP FG
IC162 ⑦⑥ REC/PB
5.4 Vp-p (56 kHz)
IC162 ⑧⑦ REC/PB
4.6 Vp-p (1 kHz)
CN350 (1/2)
CTL HEAD
95 CTL IN +
94 CTL IN –
IC162 ⑨⑤ REC
5 Vp-p (2 V)
IC162 ⑨④ REC
5 Vp-p (2 V)
IC162 ㊳ REC/PB
2.7 Vp-p (17.734475 kHz)
IC162 ㉟ REC/PB
1.8 Vp-p (32.768 kHz)
CN161
RESET 4
DATA 2
CLOCK 3
CHECK
IC160
RESET PULSE GEN.
POWER FAIL DET.
RESET 34
P FAIL 78
IC161
EEPROM
IIC DATA (EEP) 32
IIC CLK (EEP) 31
5 DATA
6 CLK
17.734475MHz IN 38
17.734475MHz OUT 39
X161
17.734475MHz
32kHz IN 35
32kHz OUT 36
X160
32.768kHz
EXCEPT SE350/SE500/SE700R
NICAM DATA 42
NICAM CLK 41
TU SW1 83
TU SW2 84
TU AFT 3
TA MUTE 62
NICAM DATA
NICAM CLK
SW1
SW2
TU AFT
TA MUTE
SDA
SCL
TUNER
(SEE PAGE 3-9)
SW12V
PH100
T REEL
PH101
S REEL
80 T REEL
79 S REEL
D5V
Q101
T SENS
D100
(T/S LED)
Q100
S SENS
Q102
LED DRIVE
7 T SENS
6 S SENS
20 END LED
IC130
CAM MOTOR DRIVE
M903
CAM MOTOR
CN104
CAM-
CAM+
IN2
S100
(CAM ENCODER)
MODE SWITCH MECHA POSITION
MODE1
MODE2
MODE3
MODE4
S101
(REC PROOF)
30 REC PRF
33 CAM
29 MODE1
28 MODE2
27 MODE3
26 MODE4
IC162 ⑮, ⑱ REC/PB
5.3 Vp-p (2 V)
CTL AMP OUT 97
AV CONT 21
TO AV LINK 73
FROM AV LINK 85
I CONT 25
AV CONT IN/C+DET 60
SDA (VI/HF/TU/NICAM. ZWEI/MOD/VPS/DNR) 72
SCL (VI/HF/TU/NICAM. ZWEI/MOD/VPS/DNR) 71
Q VD 13
LP 48
C ROT 15
RF ENV 8
ENV S 17
HA SWP 16
RF SWP 18
SECAM DET 86
SECAM ON 67
CTL CHECK
AV CONT
TO AV LINK
FROM AV LINK
I CONT
C+ DET
IIC DATA
IIC CLK
Q VD
SP
C ROT
RF ENV
COMP OUT
HA SWP
RF SWP
SECAM DET
SECAM ON
VIDEO
(SEE PAGE 3-3, 4)
IIC DATA
IIC CLK
A MUTE 63
AF ENV 9
AF SWP 19
AF REC P 22
FULL ERS 23
DEC/VTR 58
A MUTE
AF ENV
AF SWP
AF REC P
FULL ERS
DEC/VTR
AUDIO
(SEE PAGE 3-8)
05

3-4. AUDIO BLOCK DIAGRAM

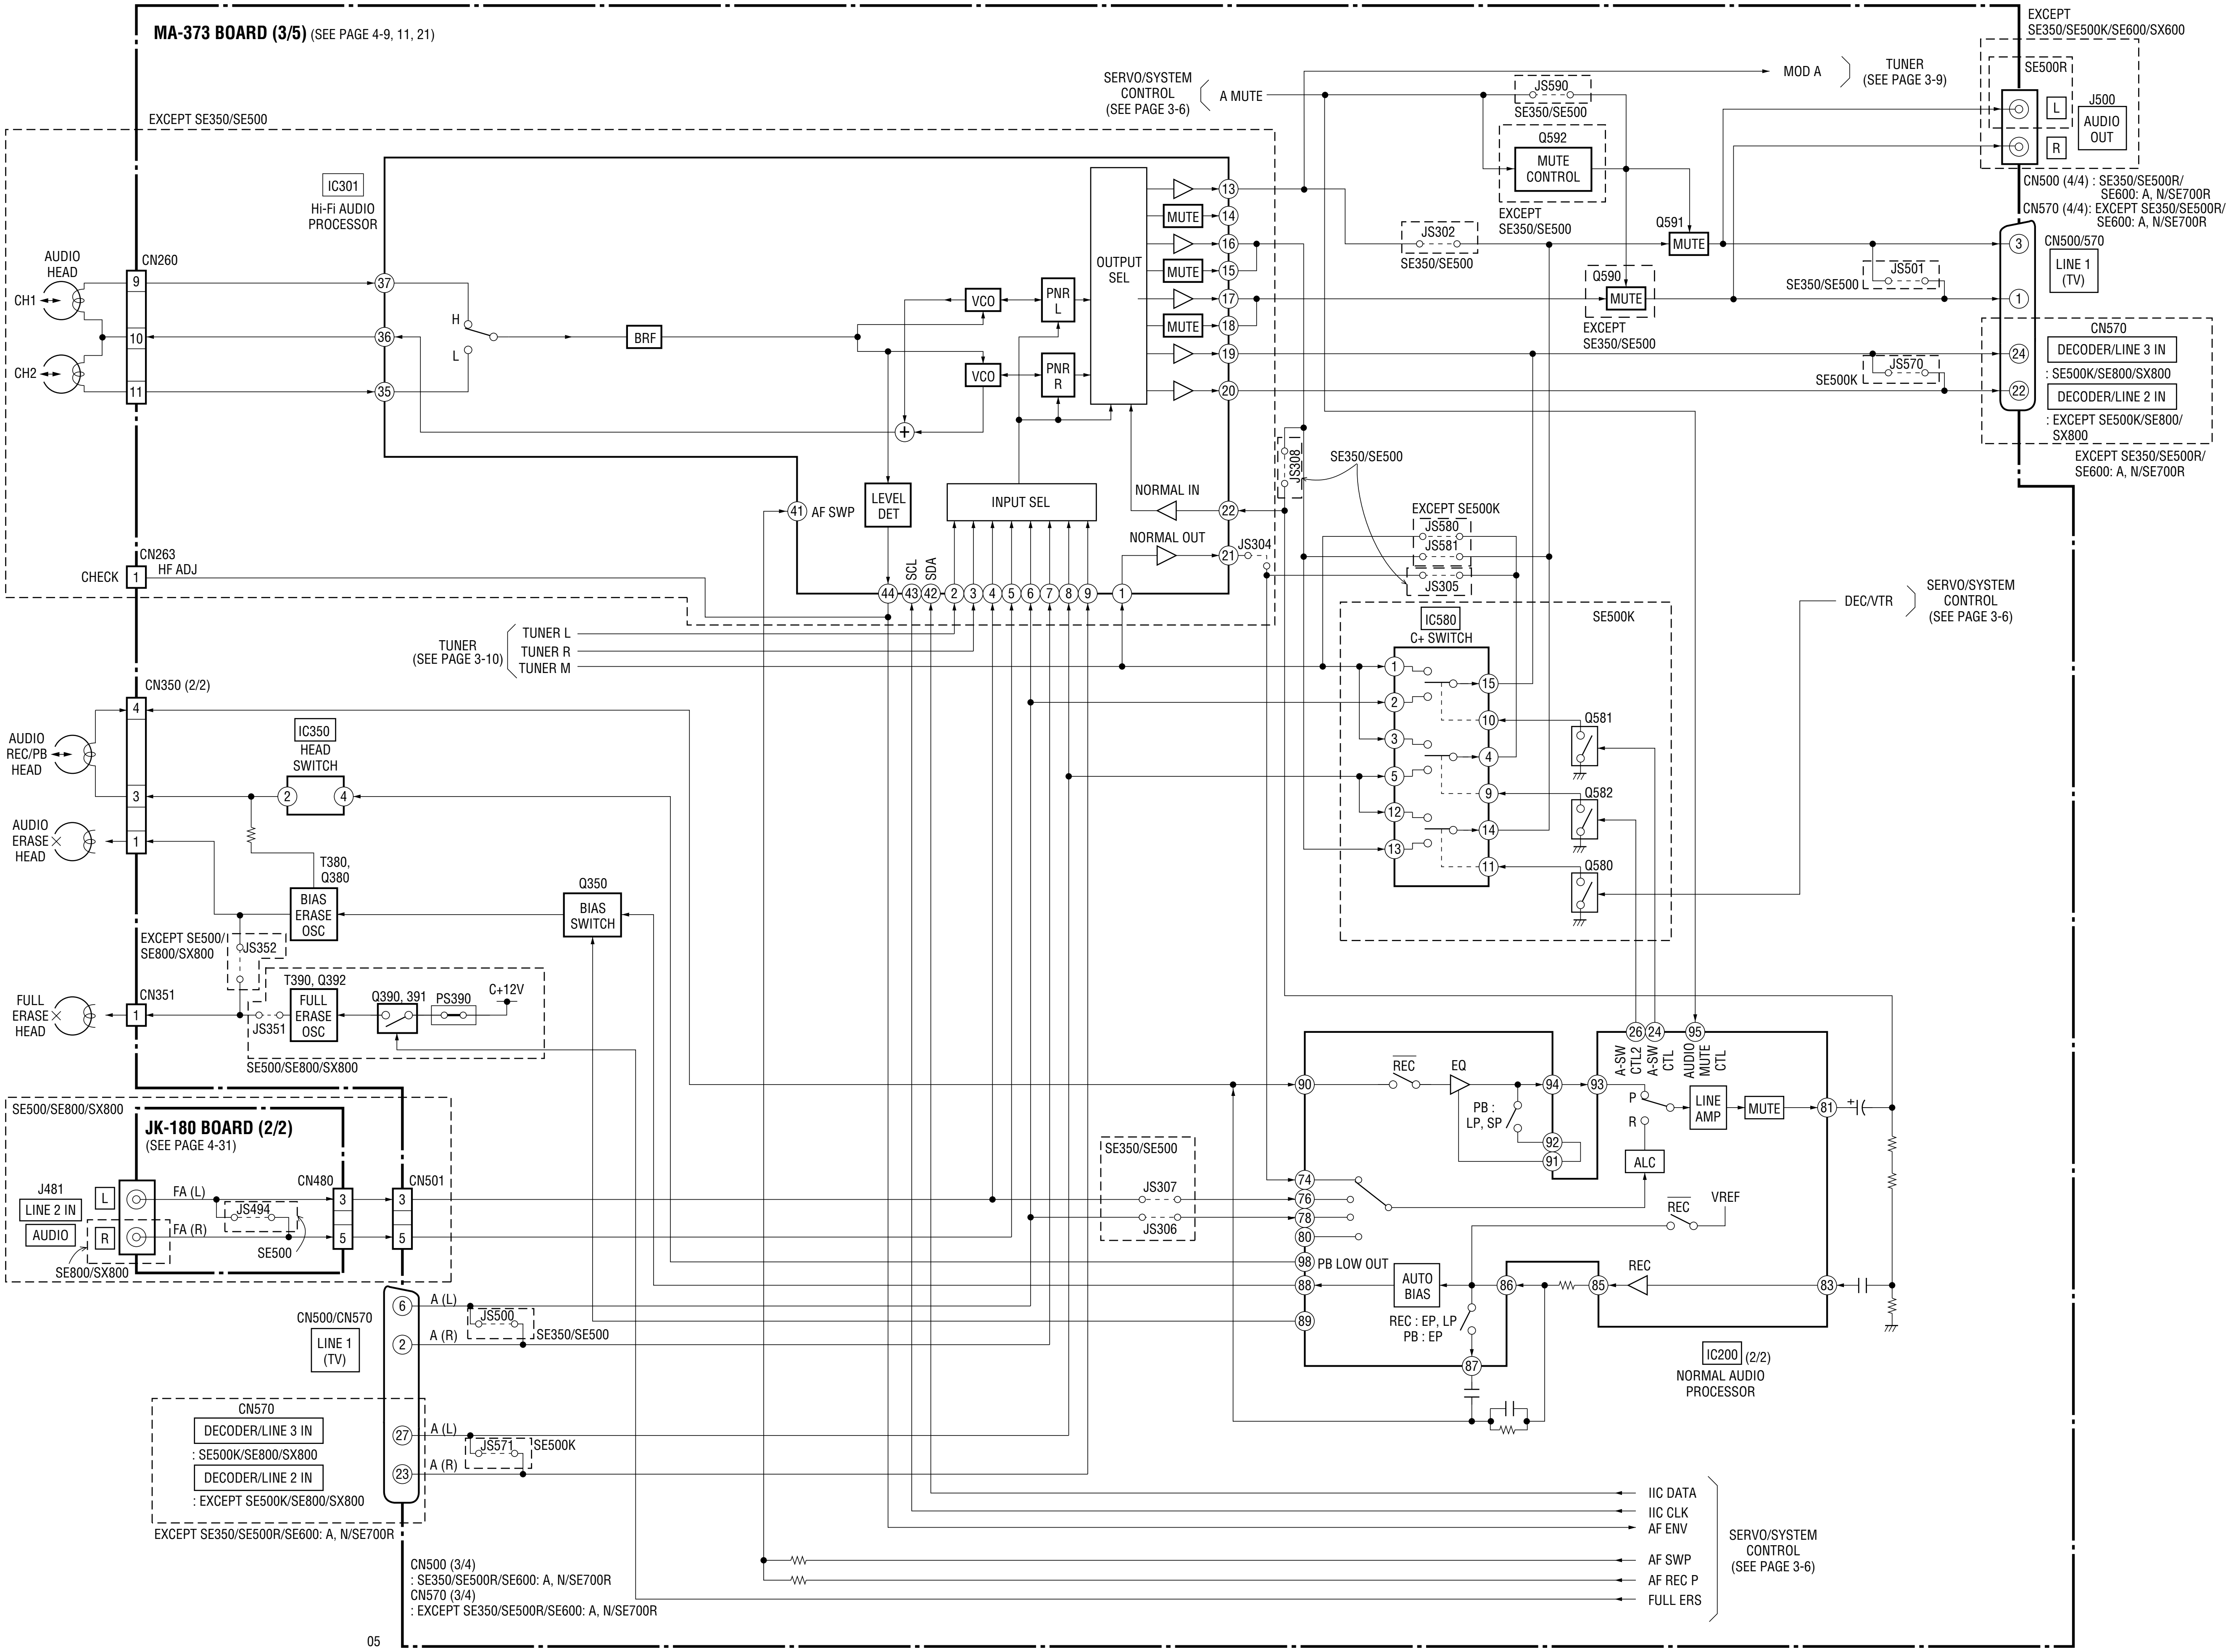
MA-373 BOARD (3/5) (SEE PAGE 4-9, 11, 21)
EXCEPT SE350/SE500
IC301
Hi-Fi AUDIO PROCESSOR
AUDIO HEAD
CH1
CH2
CN260
9
10
11
37
36
35
H
L
BRF
VCO
VCO
PNR L
PNR R
+
OUTPUT SEL
MUTE
MUTE
MUTE
13
14
16
15
17
18
19
20
LEVEL DET
INPUT SEL
NORMAL IN
NORMAL OUT
22
21
JS304
JS308
41
AF SWP
44
43
42
2
3
4
5
6
7
8
9
1
SCL
SDA
CN263
HF ADJ
CHECK
1
TUNER (SEE PAGE 3-10)
TUNER L
TUNER R
TUNER M
SERVO/SYSTEM CONTROL (SEE PAGE 3-6)
A MUTE
MOD A
TUNER (SEE PAGE 3-9)
JS590
SE350/SE500
Q592
MUTE CONTROL
EXCEPT SE350/SE500
JS302
SE350/SE500
Q591
MUTE
Q590
MUTE
EXCEPT SE350/SE500
EXCEPT SE350/SE500K/SE600/SX600
SE500R
J500
AUDIO OUT
L
R
CN500 (4/4) : SE350/SE500R/ SE600: A, N/SE700R
CN570 (4/4): EXCEPT SE350/SE500R/ SE600: A, N/SE700R
CN500/570
LINE 1 (TV)
3
1
JS501
SE350/SE500
CN570
DECODER/LINE 3 IN
: SE500K/SE800/SX800
DECODER/LINE 2 IN
: EXCEPT SE500K/SE800/ SX800
24
22
JS570
SE500K
EXCEPT SE350/SE500R/ SE600: A, N/SE700R
SE350/SE500
EXCEPT SE500K
JS580
JS581
JS305
SERVO/SYSTEM CONTROL (SEE PAGE 3-6)
DEC/VTR
IC580
C+ SWITCH
SE500K
1
2
3
5
12
13
15
10
4
9
14
11
Q581
Q582
Q580
CN350 (2/2)
AUDIO REC/PB HEAD
4
3
1
IC350
HEAD SWITCH
2
4
AUDIO ERASE HEAD
T380, Q380
BIAS ERASE OSC
Q350
BIAS SWITCH
EXCEPT SE500/ SE800/SX800
JS352
T390, Q392
CN351
FULL ERASE HEAD
1
JS351
FULL ERASE OSC
Q390, 391
PS390
C+12V
SE500/SE800/SX800
SE500/SE800/SX800
JK-180 BOARD (2/2) (SEE PAGE 4-31)
J481
LINE 2 IN
AUDIO
L
R
FA (L)
FA (R)
JS494
SE500
SE800/SX800
CN480
3
5
CN501
3
5
CN500/CN570
LINE 1 (TV)
6
2
27
23
A (L)
A (R)
JS500
SE350/SE500
A (L)
A (R)
JS571
SE500K
CN570
DECODER/LINE 3 IN
: SE500K/SE800/SX800
DECODER/LINE 2 IN
: EXCEPT SE500K/SE800/SX800
EXCEPT SE350/SE500R/SE600: A, N/SE700R
CN500 (3/4)
: SE350/SE500R/SE600: A, N/SE700R
CN570 (3/4)
: EXCEPT SE350/SE500R/SE600: A, N/SE700R
05
SE350/SE500
JS307
JS306
90
74
76
78
80
98
PB LOW OUT
88
89
REC
EQ
PB : LP, SP
94
93
92
91
AUTO BIAS
REC : EP, LP
PB : EP
87
86
85
REC
26
24
95
A-SW CTL2
A-SW CTL
AUDIO MUTE CTL
P
R
LINE AMP
MUTE
ALC
81
REC
VREF
83
IC200 (2/2)
NORMAL AUDIO PROCESSOR
IIC DATA
IIC CLK
AF ENV
AF SWP
AF REC P
FULL ERS
SERVO/SYSTEM CONTROL (SEE PAGE 3-6)

3-5. TUNER BLOCK DIAGRAM

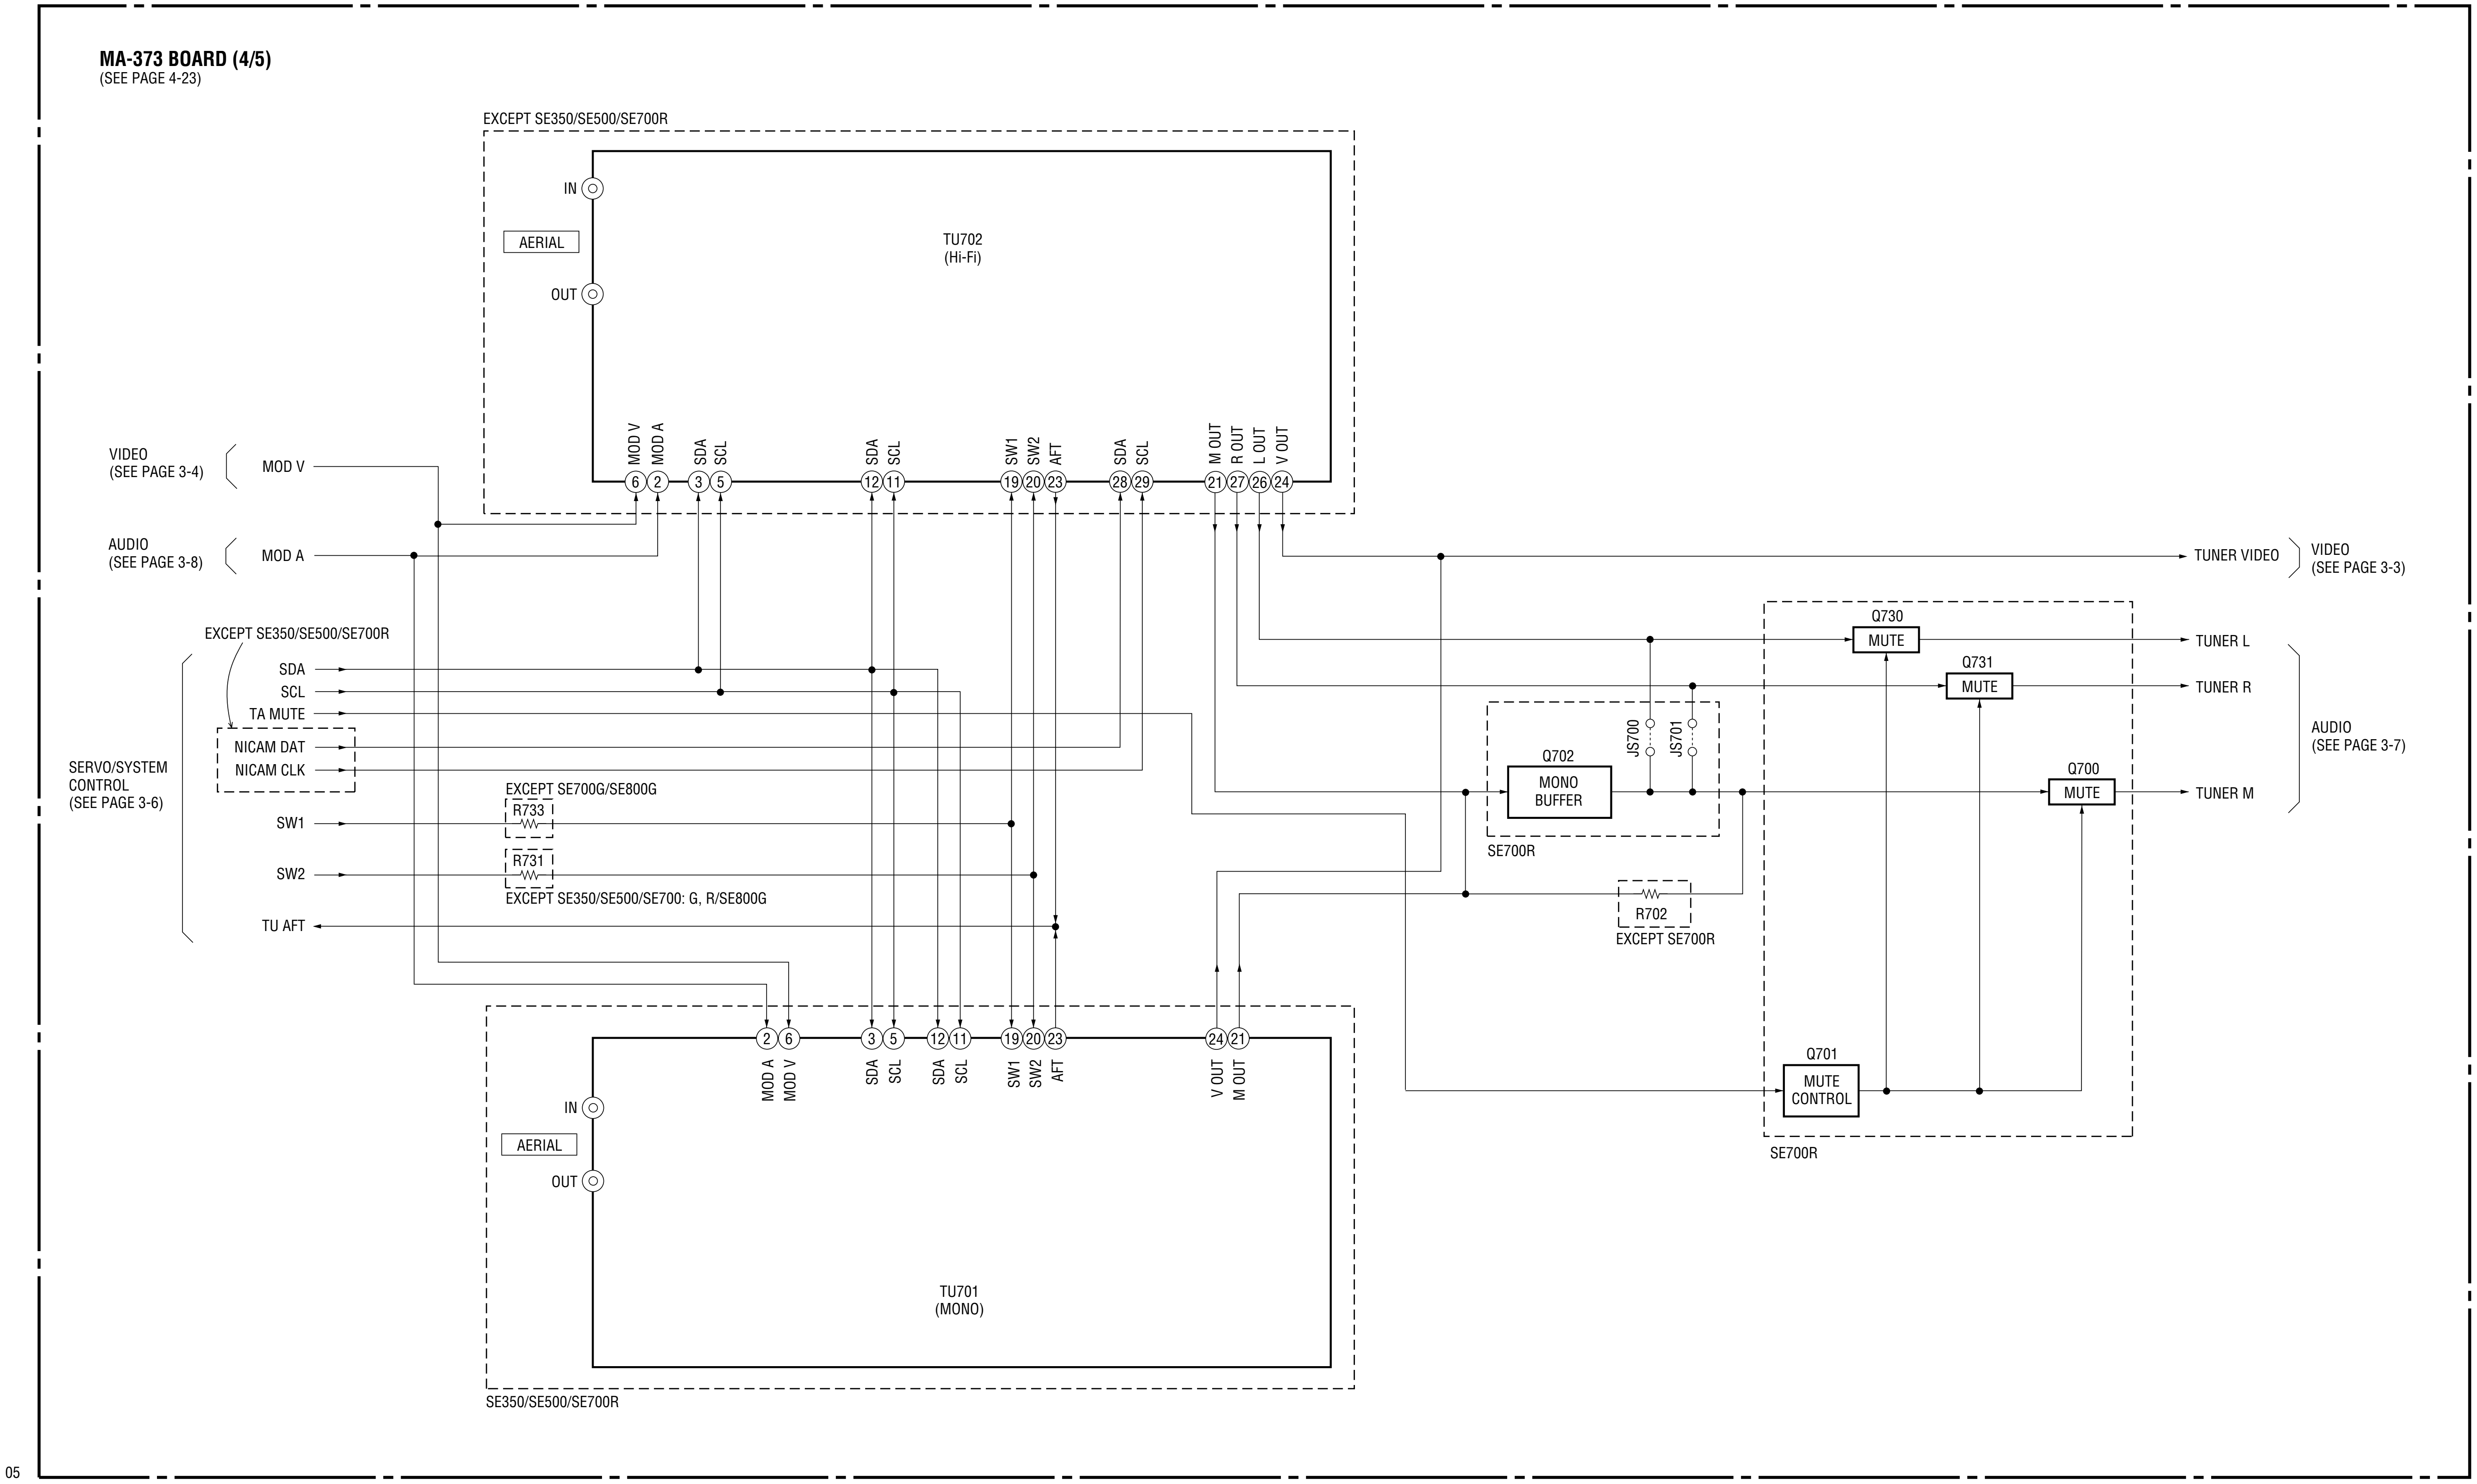
MA-373 BOARD (4/5)
(SEE PAGE 4-23)
EXCEPT SE350/SE500/SE700R
IN
AERIAL
OUT
TU702
(Hi-Fi)
MOD V
MOD A
SDA
SCL
SDA
SCL
SW1
SW2
AFT
SDA
SCL
M OUT
R OUT
L OUT
V OUT
6
2
3
5
12
11
19
20
23
28
29
21
27
26
24
VIDEO
(SEE PAGE 3-4)
MOD V
AUDIO
(SEE PAGE 3-8)
MOD A
TUNER VIDEO
VIDEO
(SEE PAGE 3-3)
EXCEPT SE350/SE500/SE700R
SDA
SCL
TA MUTE
NICAM DAT
NICAM CLK
SERVO/SYSTEM
CONTROL
(SEE PAGE 3-6)
SW1
SW2
TU AFT
EXCEPT SE700G/SE800G
R733
R731
EXCEPT SE350/SE500/SE700: G, R/SE800G
Q730
MUTE
TUNER L
Q731
MUTE
TUNER R
AUDIO
(SEE PAGE 3-7)
Q702
MONO
BUFFER
JS700
JS701
Q700
MUTE
TUNER M
SE700R
R702
EXCEPT SE700R
Q701
MUTE
CONTROL
SE700R
2
6
3
5
12
11
19
20
23
24
21
MOD A
MOD V
SDA
SCL
SDA
SCL
SW1
SW2
AFT
V OUT
M OUT
IN
AERIAL
OUT
TU701
(MONO)
SE350/SE500/SE700R
05

3-6. MODE CONTROL BLOCK DIAGRAM

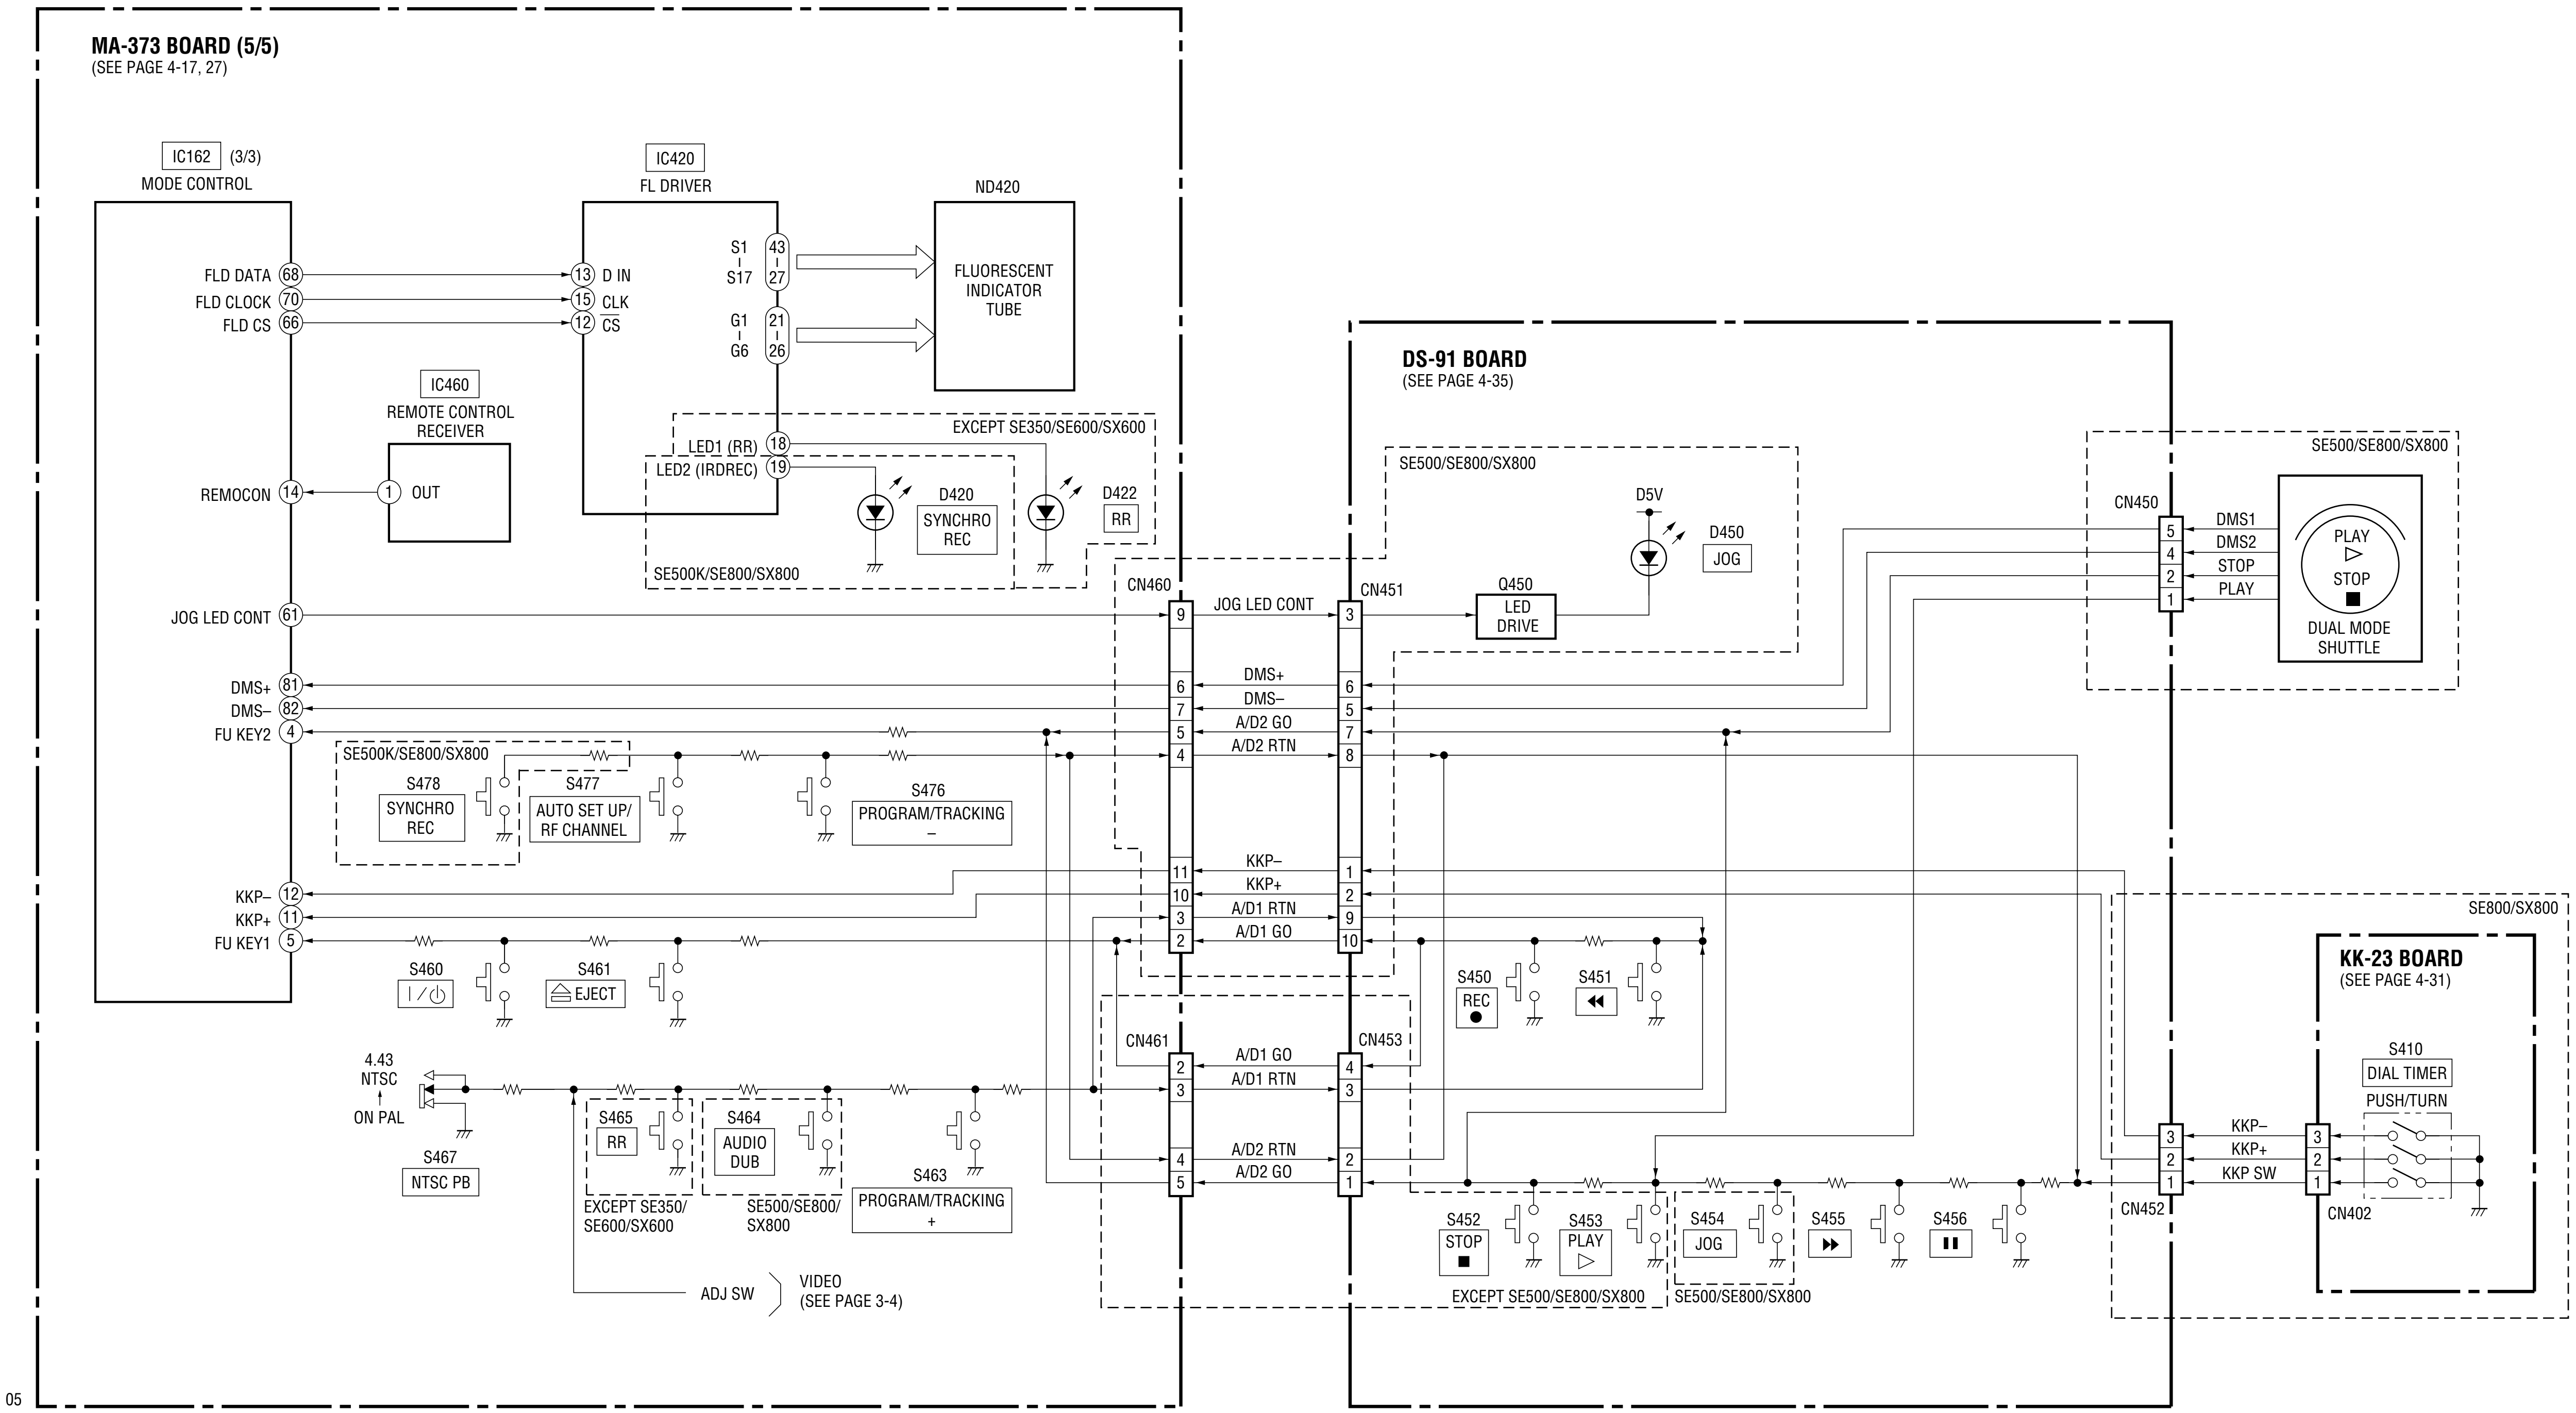
MA-373 BOARD (5/5)
(SEE PAGE 4-17, 27)
IC162 (3/3)
MODE CONTROL
IC420
FL DRIVER
ND420
FLUORESCENT INDICATOR TUBE
FLD DATA 68
FLD CLOCK 70
FLD CS 66
13 D IN
15 CLK
12 CS
S1 – S17 43 – 27
G1 – G6 21 – 26
IC460
REMOTE CONTROL RECEIVER
REMOCON 14
1 OUT
EXCEPT SE350/SE600/SX600
LED1 (RR) 18
LED2 (IRDREC) 19
D420 SYNCHRO REC
D422 RR
SE500K/SE800/SX800
JOG LED CONT 61
DMS+ 81
DMS– 82
FU KEY2 4
KKP– 12
KKP+ 11
FU KEY1 5
SE500K/SE800/SX800
S478 SYNCHRO REC
S477 AUTO SET UP/ RF CHANNEL
S476 PROGRAM/TRACKING –
S460 I/⏻
S461 ⏏ EJECT
4.43 NTSC
ON PAL
S467 NTSC PB
S465 RR
S464 AUDIO DUB
S463 PROGRAM/TRACKING +
EXCEPT SE350/ SE600/SX600
SE500/SE800/ SX800
ADJ SW
VIDEO (SEE PAGE 3-4)
05
CN460
CN461
JOG LED CONT
DMS+
DMS–
A/D2 GO
A/D2 RTN
KKP–
KKP+
A/D1 RTN
A/D1 GO
A/D1 GO
A/D1 RTN
A/D2 RTN
A/D2 GO
DS-91 BOARD
(SEE PAGE 4-35)
SE500/SE800/SX800
CN451
CN453
Q450 LED DRIVE
D5V
D450 JOG
S450 REC ●
S451 ◀◀
S452 STOP ■
S453 PLAY ▷
S454 JOG
S455 ▶▶
S456 ❚❚
EXCEPT SE500/SE800/SX800
SE500/SE800/SX800
SE500/SE800/SX800
CN450
DMS1
DMS2
STOP
PLAY
PLAY ▷
STOP ■
DUAL MODE SHUTTLE
SE800/SX800
KK-23 BOARD
(SEE PAGE 4-31)
S410 DIAL TIMER
PUSH/TURN
CN452
CN402
KKP–
KKP+
KKP SW

3-7. POWER BLOCK DIAGRAM

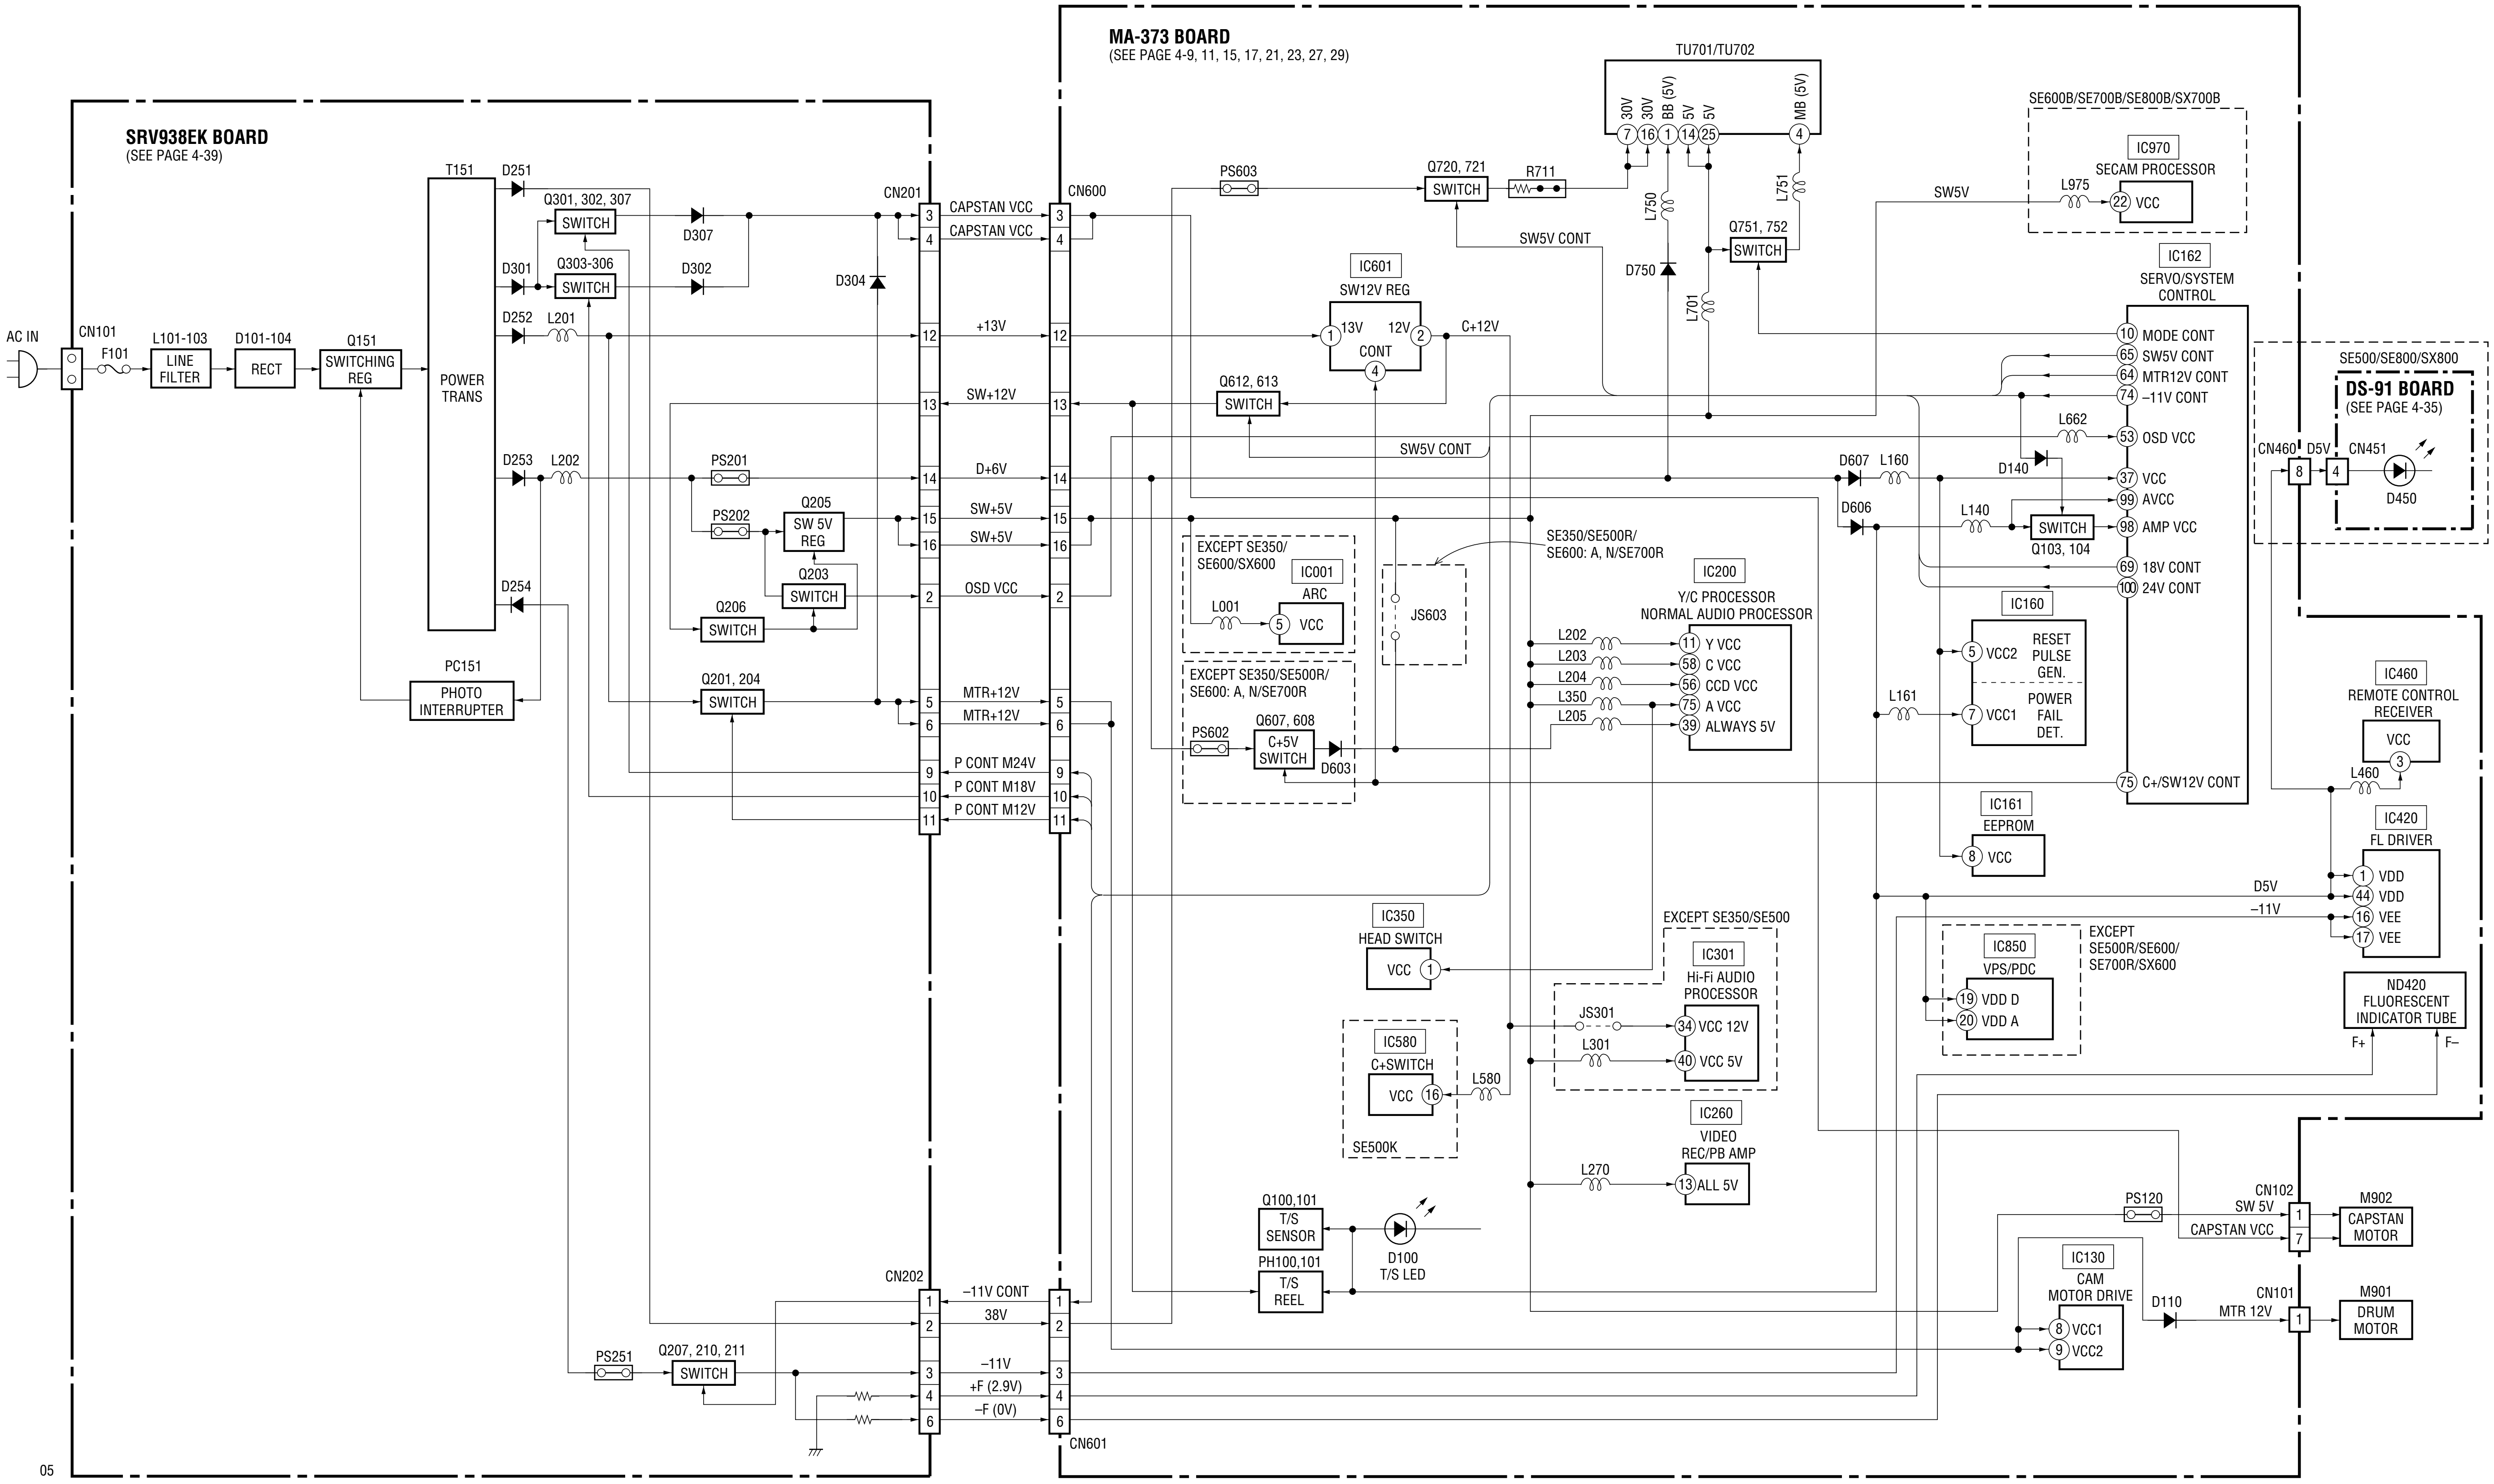
SRV938EK BOARD
(SEE PAGE 4-39)
AC IN
CN101
F101
L101-103
LINE FILTER
D101-104
RECT
Q151
SWITCHING REG
T151
POWER TRANS
PC151
PHOTO INTERRUPTER
D251
D252
D253
D254
D301
D302
D304
D307
L201
L202
Q301, 302, 307
SWITCH
Q303-306
SWITCH
PS201
PS202
Q205
SW 5V REG
Q203
SWITCH
Q206
SWITCH
Q201, 204
SWITCH
PS251
Q207, 210, 211
SWITCH
CN201
CAPSTAN VCC
CAPSTAN VCC
+13V
SW+12V
D+6V
SW+5V
SW+5V
OSD VCC
MTR+12V
MTR+12V
P CONT M24V
P CONT M18V
P CONT M12V
CN202
–11V CONT
38V
–11V
+F (2.9V)
–F (0V)
05
MA-373 BOARD
(SEE PAGE 4-9, 11, 15, 17, 21, 23, 27, 29)
CN600
CN601
PS603
Q720, 721
SWITCH
R711
SW5V CONT
TU701/TU702
30V
30V
BB (5V)
5V
5V
MB (5V)
L750
D750
L701
L751
Q751, 752
SWITCH
IC601
SW12V REG
13V
12V
CONT
C+12V
Q612, 613
SWITCH
SW5V CONT
EXCEPT SE350/SE600/SX600
IC001
ARC
L001
VCC
EXCEPT SE350/SE500R/SE600: A, N/SE700R
PS602
Q607, 608
C+5V SWITCH
D603
JS603
SE350/SE500R/SE600: A, N/SE700R
IC200
Y/C PROCESSOR
NORMAL AUDIO PROCESSOR
L202
L203
L204
L350
L205
Y VCC
C VCC
CCD VCC
A VCC
ALWAYS 5V
IC350
HEAD SWITCH
VCC
IC580
C+SWITCH
VCC
SE500K
L580
EXCEPT SE350/SE500
IC301
Hi-Fi AUDIO PROCESSOR
JS301
L301
VCC 12V
VCC 5V
IC260
VIDEO REC/PB AMP
L270
ALL 5V
Q100,101
T/S SENSOR
PH100,101
T/S REEL
D100
T/S LED
SE600B/SE700B/SE800B/SX700B
IC970
SECAM PROCESSOR
L975
VCC
SW5V
IC162
SERVO/SYSTEM CONTROL
MODE CONT
SW5V CONT
MTR12V CONT
–11V CONT
L662
OSD VCC
D607
L160
D140
VCC
AVCC
D606
L140
SWITCH
Q103, 104
AMP VCC
18V CONT
24V CONT
C+/SW12V CONT
IC160
VCC2
RESET PULSE GEN.
VCC1
POWER FAIL DET.
L161
IC161
EEPROM
VCC
IC850
VPS/PDC
VDD D
VDD A
EXCEPT SE500R/SE600/SE700R/SX600
SE500/SE800/SX800
DS-91 BOARD
(SEE PAGE 4-35)
CN460
D5V
CN451
D450
IC460
REMOTE CONTROL RECEIVER
VCC
L460
IC420
FL DRIVER
D5V
–11V
VDD
VDD
VEE
VEE
ND420
FLUORESCENT INDICATOR TUBE
F+
F–
PS120
CN102
SW 5V
CAPSTAN VCC
M902
CAPSTAN MOTOR
IC130
CAM MOTOR DRIVE
VCC1
VCC2
D110
CN101
MTR 12V
M901
DRUM MOTOR

SECTION 4

PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS

THIS NOTE IS COMMON FOR PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS.
(In addition to this, the necessary note is printed in each block.)

For printed wiring board:

- ○—— : indicates a lead wire mounted on the component side.
- ●—— : indicates a lead wire mounted on the printed side.
- ▨ : Pattern from the side which enables seeing.

(The other layers' patterns are not indicated.)

For schematic Diagram:

- Caution when replacing chip parts.
  New parts must be attached after removal of chip.
  Be careful not to heat the minus side of tantalum capacitor, because it is damaged by the heat.
- All resistors are in ohms, 1/4 W (Chip resistors : 1/10 W) unless otherwise specified.
  kΩ : 1000Ω, MW : 1000kΩ.
- All capacitors are in μF unless otherwise noted. pF : μμF 50V or less are not indicated except for electrolytics and tantalums.
- All variable and adjustable resistors have characteristic curve B, unless otherwise noted.
- ▭ : nonflammable resistor.
- ▭ : fusible resistor.
- ▭ : panel designation.
- △ : internal component.
- ▭ : adjustment for repair.
- B + : B+ Line.
- B – : B– Line.
- Circled numbers refer to waveforms.
- Voltages are dc between measurement point.
- Readings are taken with a color-bar signal input.
- Readings are taken with a digital multimeter (DC 10MW).
- Voltage variations may be noted due to normal production tolerances.

Note: The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.
Replace only with part number specified.

When indicating parts by reference number, please include the board name.

4-1. FRAME SCHEMATIC DIAGRAM

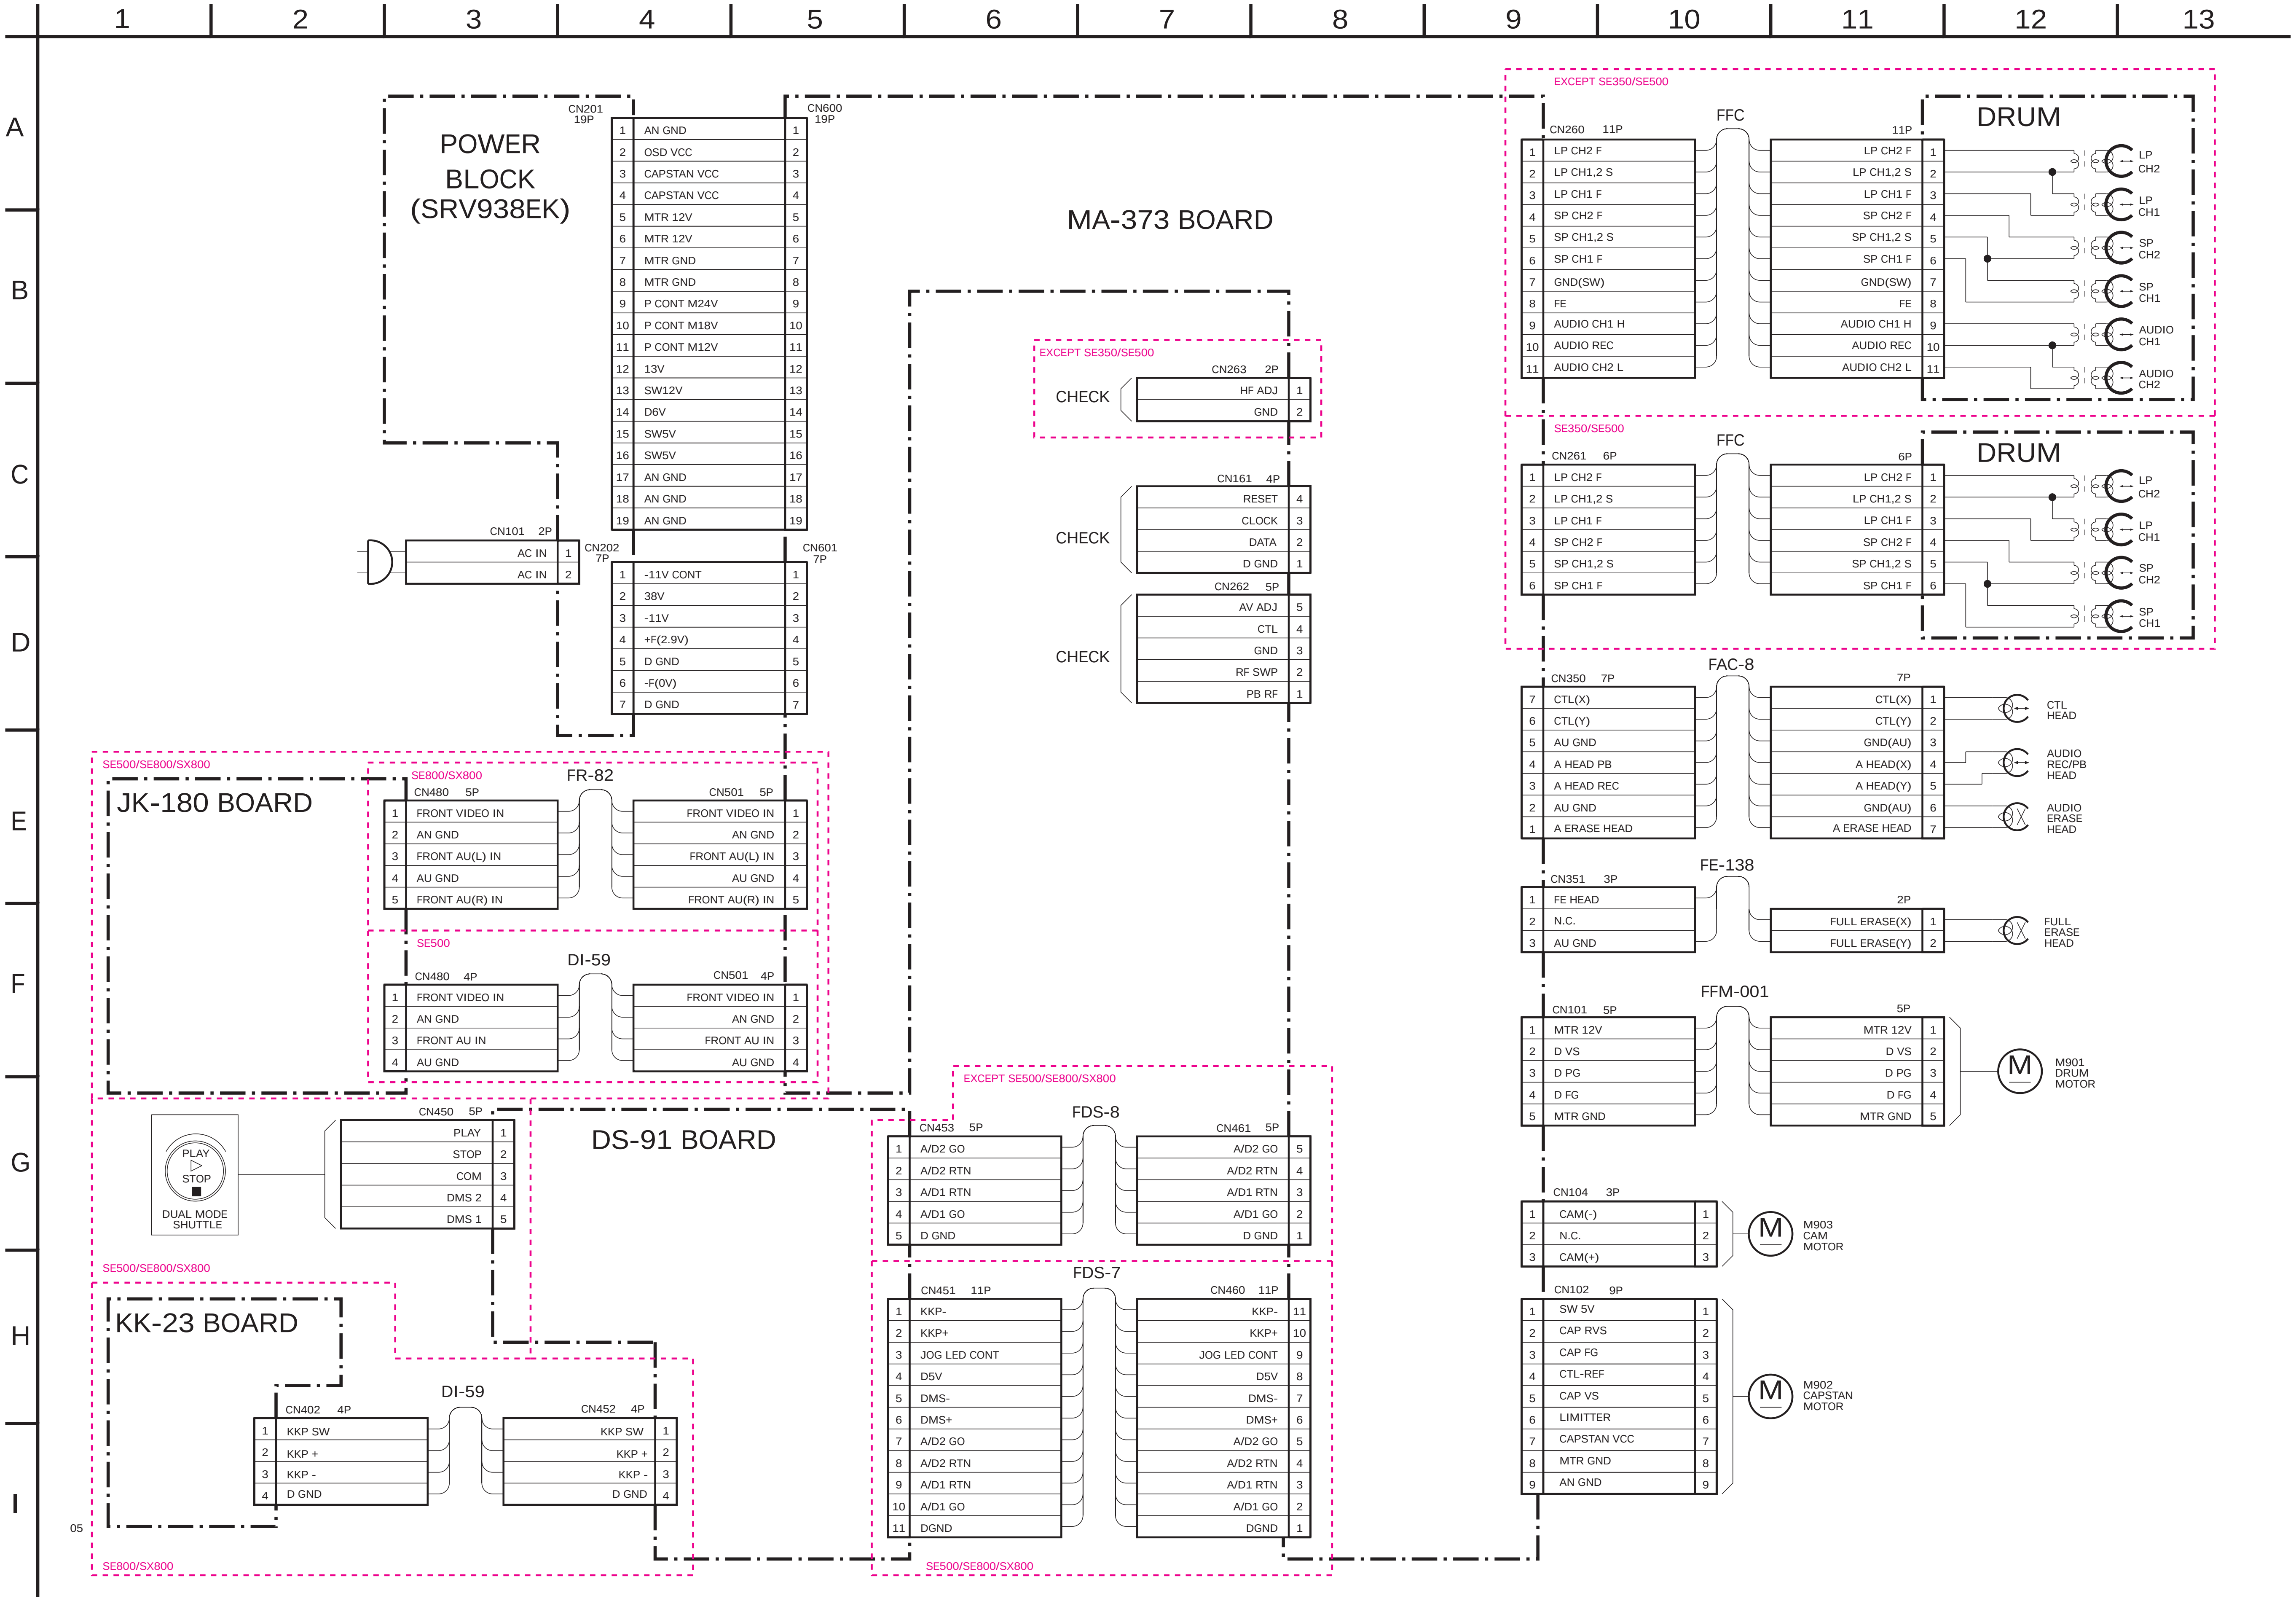
1 2 3 4 5 6 7 8 9 10 11 12 13
A B C D E F G H I
POWER BLOCK (SRV938EK)
CN201 19P
CN600 19P
1 AN GND
2 OSD VCC
3 CAPSTAN VCC
4 CAPSTAN VCC
5 MTR 12V
6 MTR 12V
7 MTR GND
8 MTR GND
9 P CONT M24V
10 P CONT M18V
11 P CONT M12V
12 13V
13 SW12V
14 D6V
15 SW5V
16 SW5V
17 AN GND
18 AN GND
19 AN GND
CN101 2P
1 AC IN
2 AC IN
CN202 7P
CN601 7P
1 -11V CONT
2 38V
3 -11V
4 +F(2.9V)
5 D GND
6 -F(0V)
7 D GND
MA-373 BOARD
EXCEPT SE350/SE500
CN263 2P
CHECK
1 HF ADJ
2 GND
CN161 4P
CHECK
4 RESET
3 CLOCK
2 DATA
1 D GND
CN262 5P
CHECK
5 AV ADJ
4 CTL
3 GND
2 RF SWP
1 PB RF
EXCEPT SE350/SE500
FFC
DRUM
CN260 11P
11P
1 LP CH2 F
2 LP CH1,2 S
3 LP CH1 F
4 SP CH2 F
5 SP CH1,2 S
6 SP CH1 F
7 GND(SW)
8 FE
9 AUDIO CH1 H
10 AUDIO REC
11 AUDIO CH2 L
LP CH2
LP CH1
SP CH2
SP CH1
AUDIO CH1
AUDIO CH2
SE350/SE500
FFC
DRUM
CN261 6P
6P
1 LP CH2 F
2 LP CH1,2 S
3 LP CH1 F
4 SP CH2 F
5 SP CH1,2 S
6 SP CH1 F
LP CH2
LP CH1
SP CH2
SP CH1
FAC-8
CN350 7P
7P
7 CTL(X)
6 CTL(Y)
5 AU GND
4 A HEAD PB
3 A HEAD REC
2 AU GND
1 A ERASE HEAD
1 CTL(X)
2 CTL(Y)
3 GND(AU)
4 A HEAD(X)
5 A HEAD(Y)
6 GND(AU)
7 A ERASE HEAD
CTL HEAD
AUDIO REC/PB HEAD
AUDIO ERASE HEAD
FE-138
CN351 3P
1 FE HEAD
2 N.C.
3 AU GND
2P
1 FULL ERASE(X)
2 FULL ERASE(Y)
FULL ERASE HEAD
FFM-001
CN101 5P
5P
1 MTR 12V
2 D VS
3 D PG
4 D FG
5 MTR GND
M
M901 DRUM MOTOR
CN104 3P
1 CAM(-)
2 N.C.
3 CAM(+)
M
M903 CAM MOTOR
CN102 9P
1 SW 5V
2 CAP RVS
3 CAP FG
4 CTL-REF
5 CAP VS
6 LIMITTER
7 CAPSTAN VCC
8 MTR GND
9 AN GND
M
M902 CAPSTAN MOTOR
SE500/SE800/SX800
JK-180 BOARD
SE800/SX800
FR-82
CN480 5P
CN501 5P
1 FRONT VIDEO IN
2 AN GND
3 FRONT AU(L) IN
4 AU GND
5 FRONT AU(R) IN
SE500
DI-59
CN480 4P
CN501 4P
1 FRONT VIDEO IN
2 AN GND
3 FRONT AU IN
4 AU GND
CN450 5P
PLAY
STOP
DUAL MODE SHUTTLE
1 PLAY
2 STOP
3 COM
4 DMS 2
5 DMS 1
DS-91 BOARD
EXCEPT SE500/SE800/SX800
FDS-8
CN453 5P
CN461 5P
1 A/D2 GO
2 A/D2 RTN
3 A/D1 RTN
4 A/D1 GO
5 D GND
FDS-7
CN451 11P
CN460 11P
1 KKP-
2 KKP+
3 JOG LED CONT
4 D5V
5 DMS-
6 DMS+
7 A/D2 GO
8 A/D2 RTN
9 A/D1 RTN
10 A/D1 GO
11 DGND
SE500/SE800/SX800
SE500/SE800/SX800
KK-23 BOARD
DI-59
CN402 4P
CN452 4P
1 KKP SW
2 KKP +
3 KKP -
4 D GND
05
SE800/SX800

There are few cases that the part isn't mounted in this model is printed on this diagram.

4-2. PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS

MA-373 (VIDEO, AUDIO, I/O, SERVO/SYSTEM CONTROL, TUNER, MODE CONTROL) PRINTED WIRING BOARD

– Ref. No.: MA-373 board; 1,000 series –

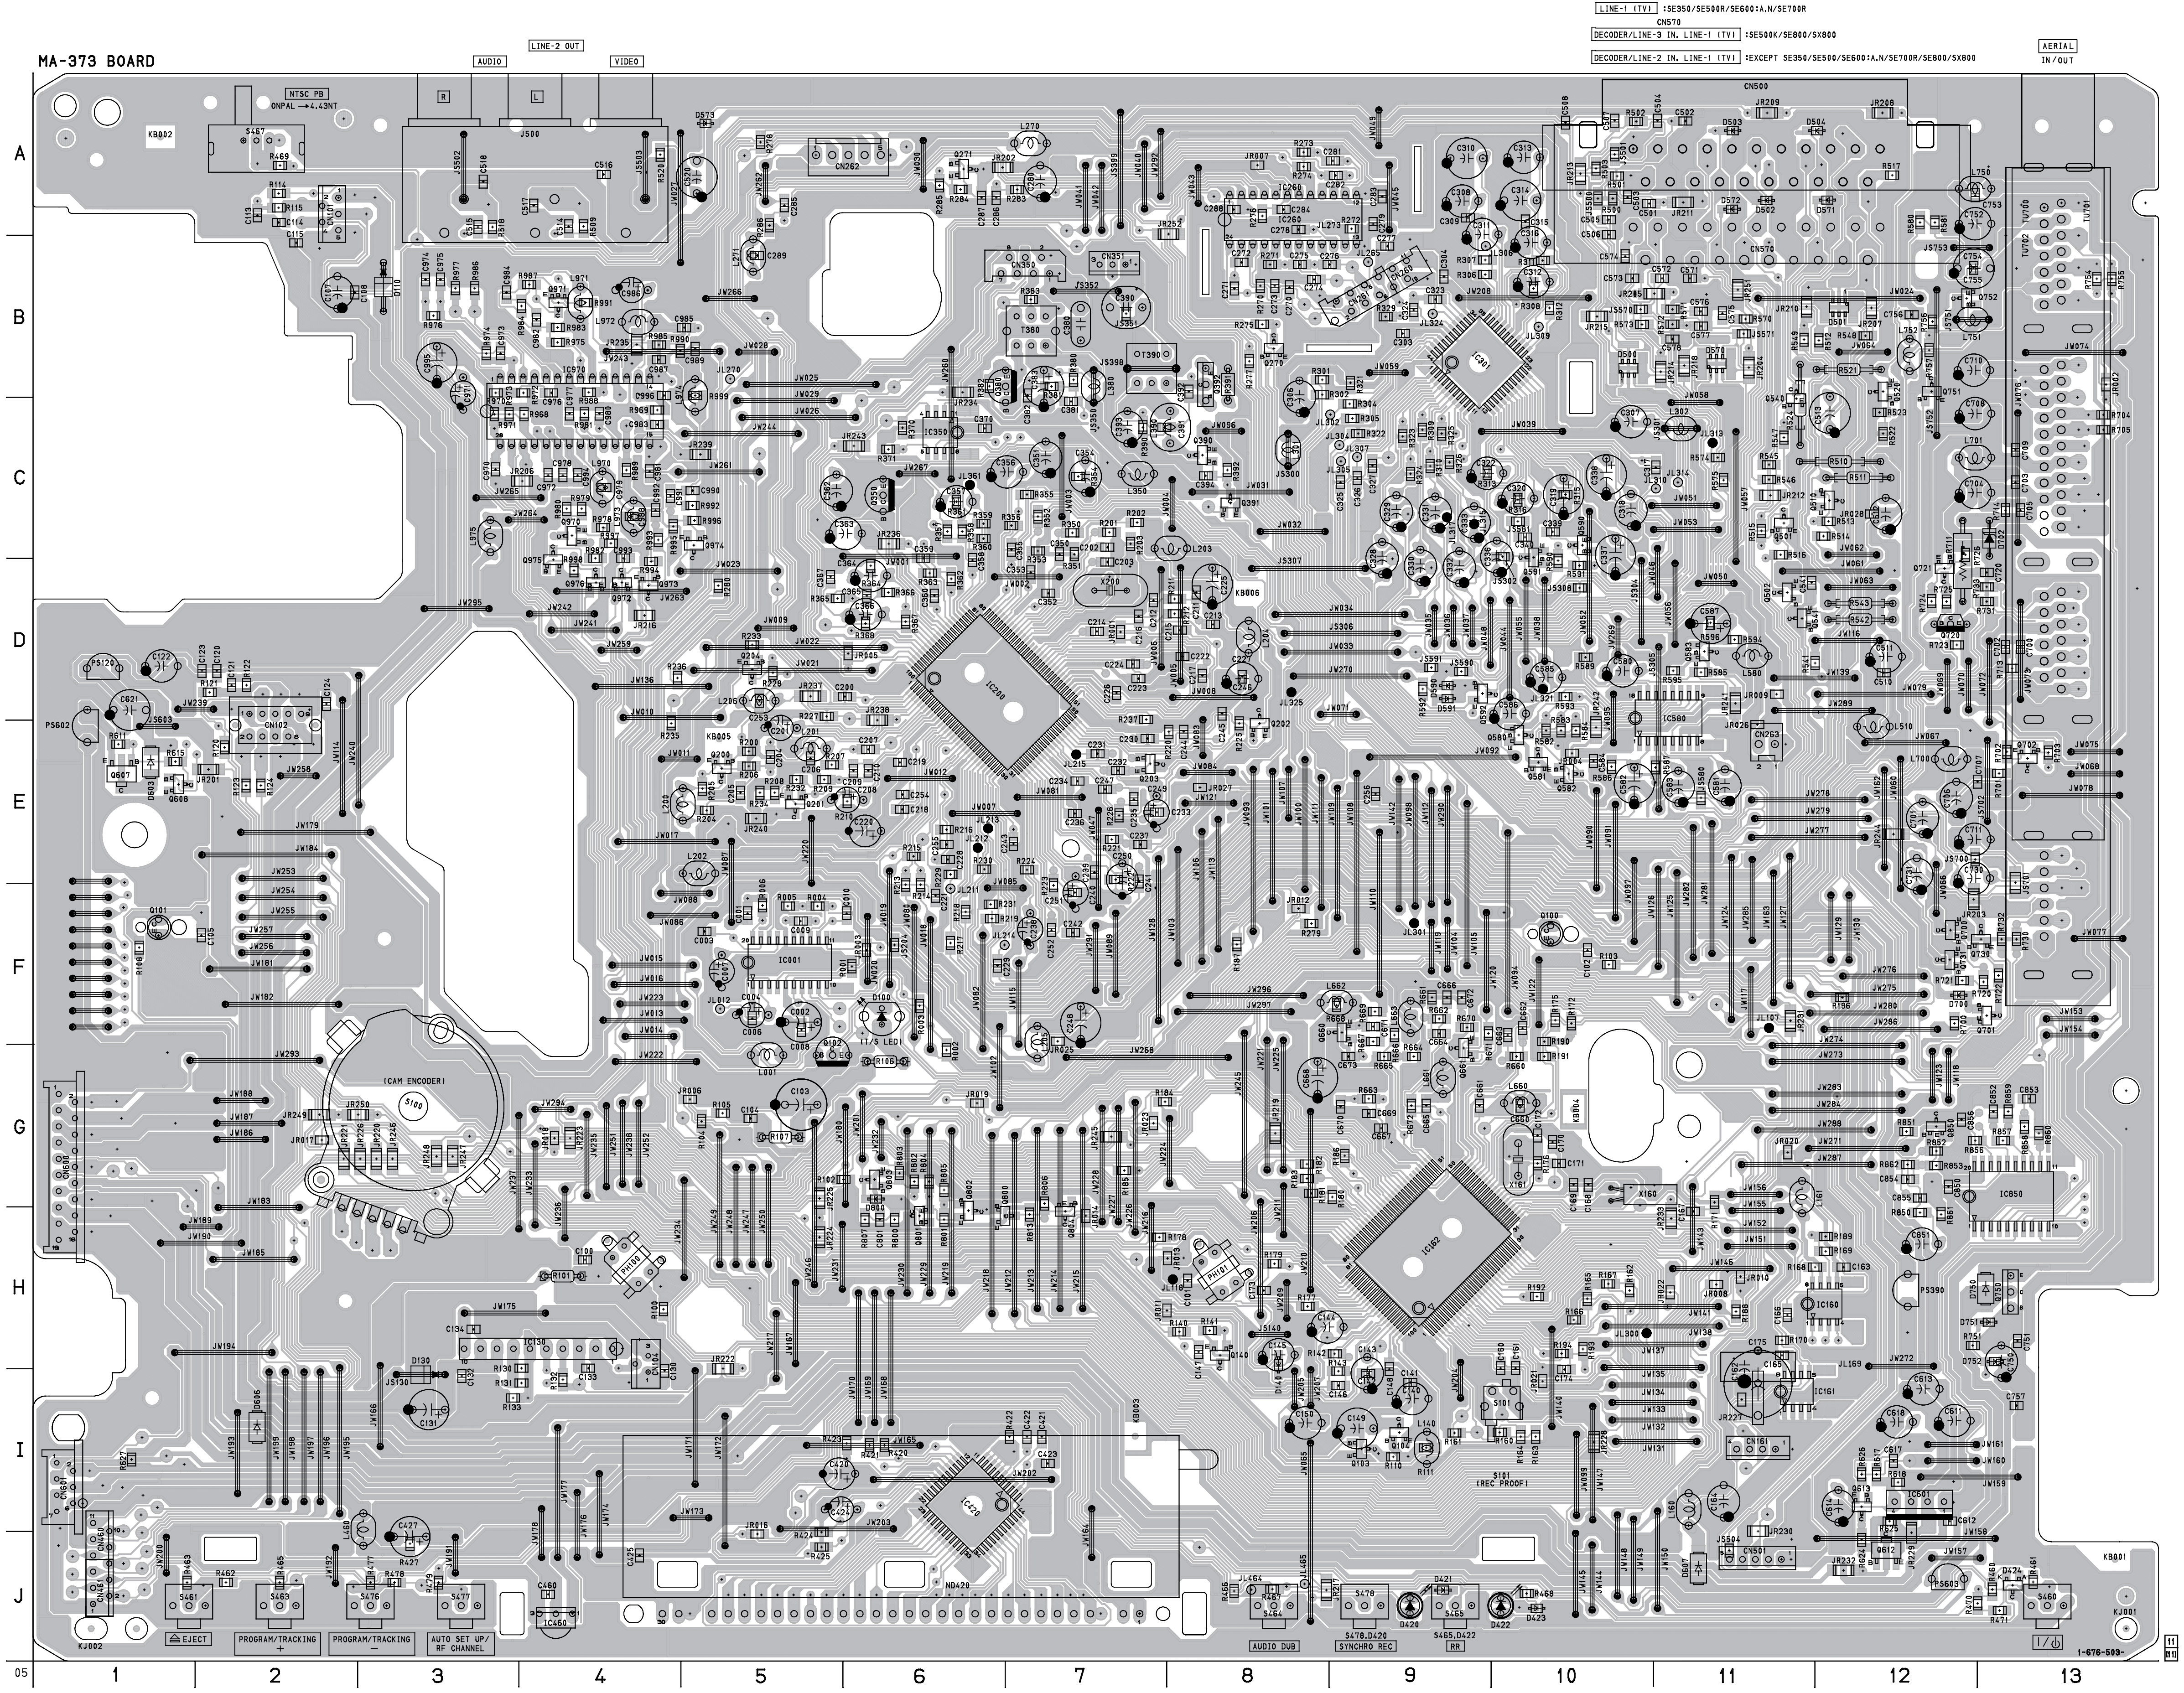

CN500
LINE-1 (TV) :SE350/SE500R/SE600:A.N/SE700R
CN570
DECODER/LINE-3 IN. LINE-1 (TV) :SE500K/SE800/SX800
DECODER/LINE-2 IN. LINE-1 (TV) :EXCEPT SE350/SE500/SE600:A.N/SE700R/SE800/SX800
AERIAL
IN/OUT
MA-373 BOARD
AUDIO
LINE-2 OUT
VIDEO
NTSC PB
ONPAL → 4.43NT
CN500
IC301
IC200
IC001
IC502
IC420
IC850
IC580
(CAM ENCODER)
T/S LED
S101 (REC PROOF)
ND420
EJECT
PROGRAM/TRACKING +
PROGRAM/TRACKING –
AUTO SET UP/ RF CHANNEL
AUDIO DUB
S478,D420
SYNCHRO REC
S465,D422
RR
I/⏻
KJ002
KJ001
KB001
KB002
1-676-509-
11
(11)
A
B
C
D
E
F
G
H
I
J
05
1
2
3
4
5
6
7
8
9
10
11
12
13

MA-373 BOARD

CN101	A-2
CN102	E-2
CN104	H-4
CN161	I-11
CN260	B-9
CN261	B-9
CN262	A-6
CN263	E-11
CN350	B-7
CN351	B-7
CN460	J-1
CN461	J-1
CN500	A-11
CN501	J-11
CN570	B-11
CN600	G-1
CN601	I-1

D100	F-6
D110	B-3
D140	I-8
D420	J-9
D421	J-9
D422	J-10
D423	J-10
D424	J-13
D500	B-10
D501	B-12
D502	A-11
D503	A-11
D504	A-11
D570	B-11
D571	A-12
D572	A-11
D573	A-5
D590	D-9
D591	D-9
D603	E-1
D606	I-2
D607	J-11
D700	F-12
D702	C-13
D750	H-13
D800	G-6

IC001	F-5
IC130	H-4
IC160	H-12
IC161	I-11
IC162	H-9
IC200	D-6
IC260	A-6
IC301	B-9
IC350	C-6
IC420	I-6
IC460	J-4
IC580	D-11
IC601	I-12
IC850	G-13
IC970	B-4

Q100	F-10
Q101	F-1
Q102	F-5
Q103	I-9
Q104	I-9
Q140	H-8
Q200	E-5
Q201	E-5
Q202	E-8
Q203	E-7
Q204	D-5
Q270	B-8
Q350	C-6
Q380	B-6
Q390	C-8
Q391	C-8
Q392	B-8
Q501	C-11
Q502	D-11
Q510	C-11
Q520	B-12
Q540	C-11
Q541	D-11
Q580	E-10
Q581	E-10
Q582	E-10
Q583	D-11
Q590	C-10
Q591	D-10
Q592	D-9
Q607	E-1
Q608	E-1
Q612	J-12
Q613	I-12
Q660	F-8
Q661	G-9
Q700	F-12
Q701	F-13
Q702	E-13
Q720	D-12
Q721	D-12
Q730	F-13
Q731	F-12
Q751	B-12
Q752	B-13
Q800	G-6
Q801	H-6
Q802	G-6
Q803	G-6
Q804	H-7
Q850	G-12
Q970	C-4
Q972	D-4
Q973	D-4
Q974	C-5
Q975	D-4
Q976	D-4

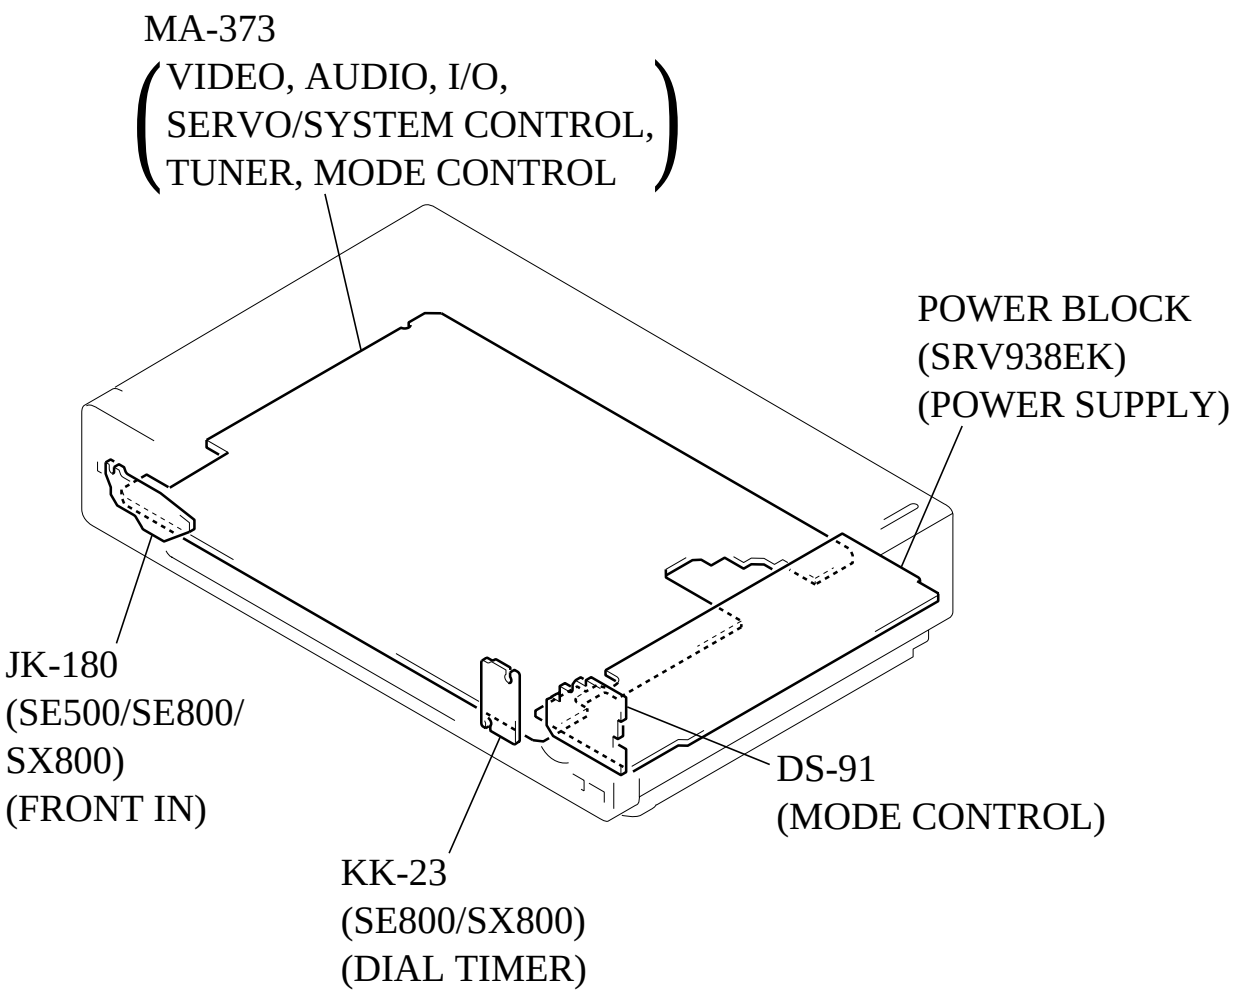
MA-373
(VIDEO, AUDIO, I/O,
SERVO/SYSTEM CONTROL,
TUNER, MODE CONTROL)
POWER BLOCK
(SRV938EK)
(POWER SUPPLY)
JK-180
(SE500/SE800/
SX800)
(FRONT IN)
DS-91
(MODE CONTROL)
KK-23
(SE800/SX800)
(DIAL TIMER)

• Waveforms

❶ IC260 ⑰ REC

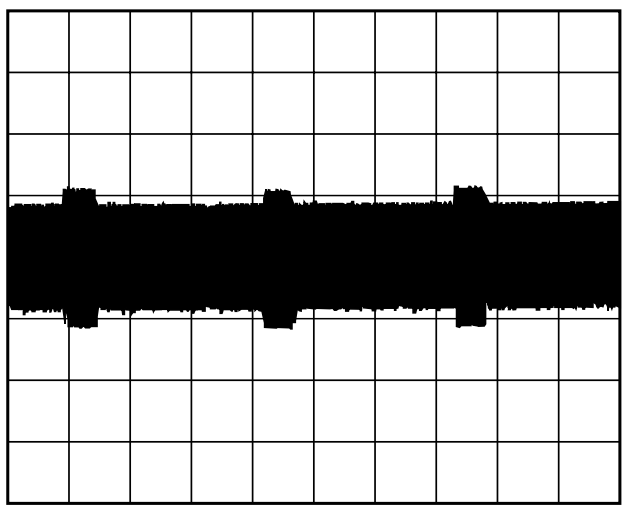

3.8 Vp-p (H)

❺ IC260 ⑤ REC/PB



3.6 Vp-p (H)

❷ IC260 ⑩ REC

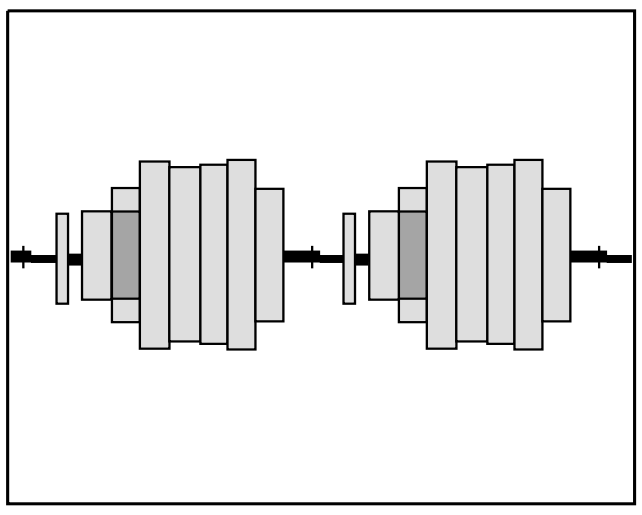

280 mVp-p (H)

❻ IC260 ④ REC/PB

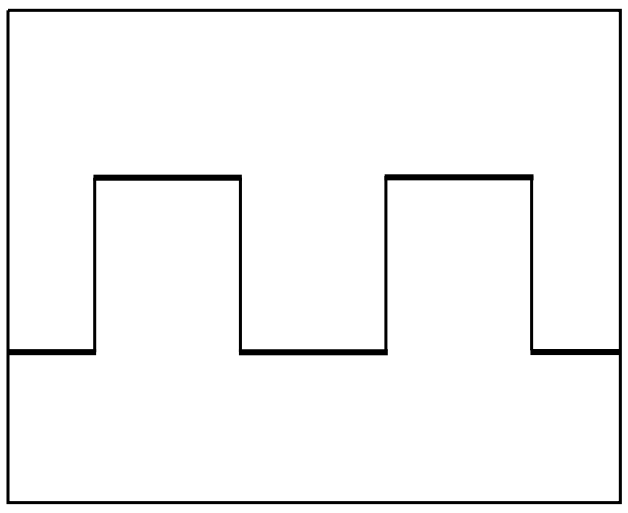

3.8 Vp-p (2 V)

❸ IC260 ⑨ REC/PB

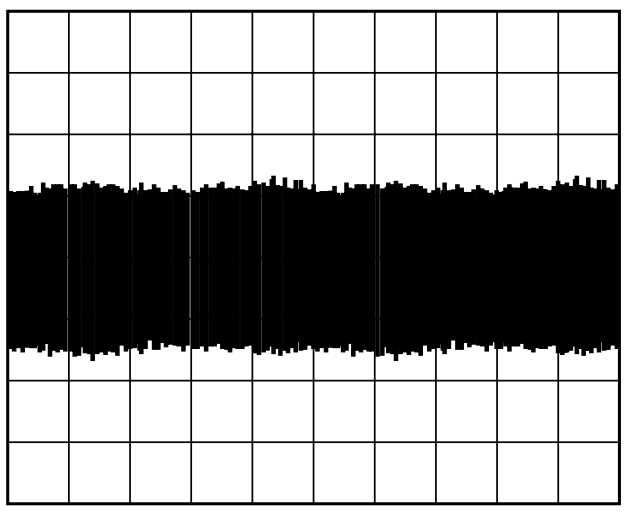

REC : 170 mVp-p (H)
PB : 120 mVp-p (H)

❹ IC260 ⑦ PB

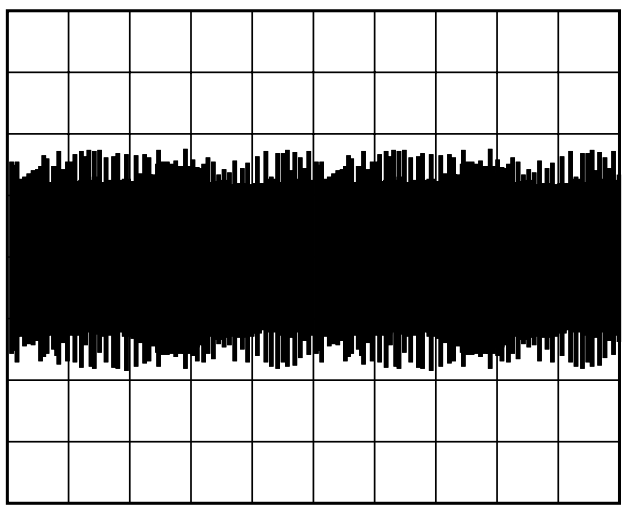

700 mVp-p (H)

MA-373 (HEAD AMP) SCHEMATIC DIAGRAM • See page 4-5 for printed wiring board.
– Ref. No.: MA-373 board; 1,000 series –

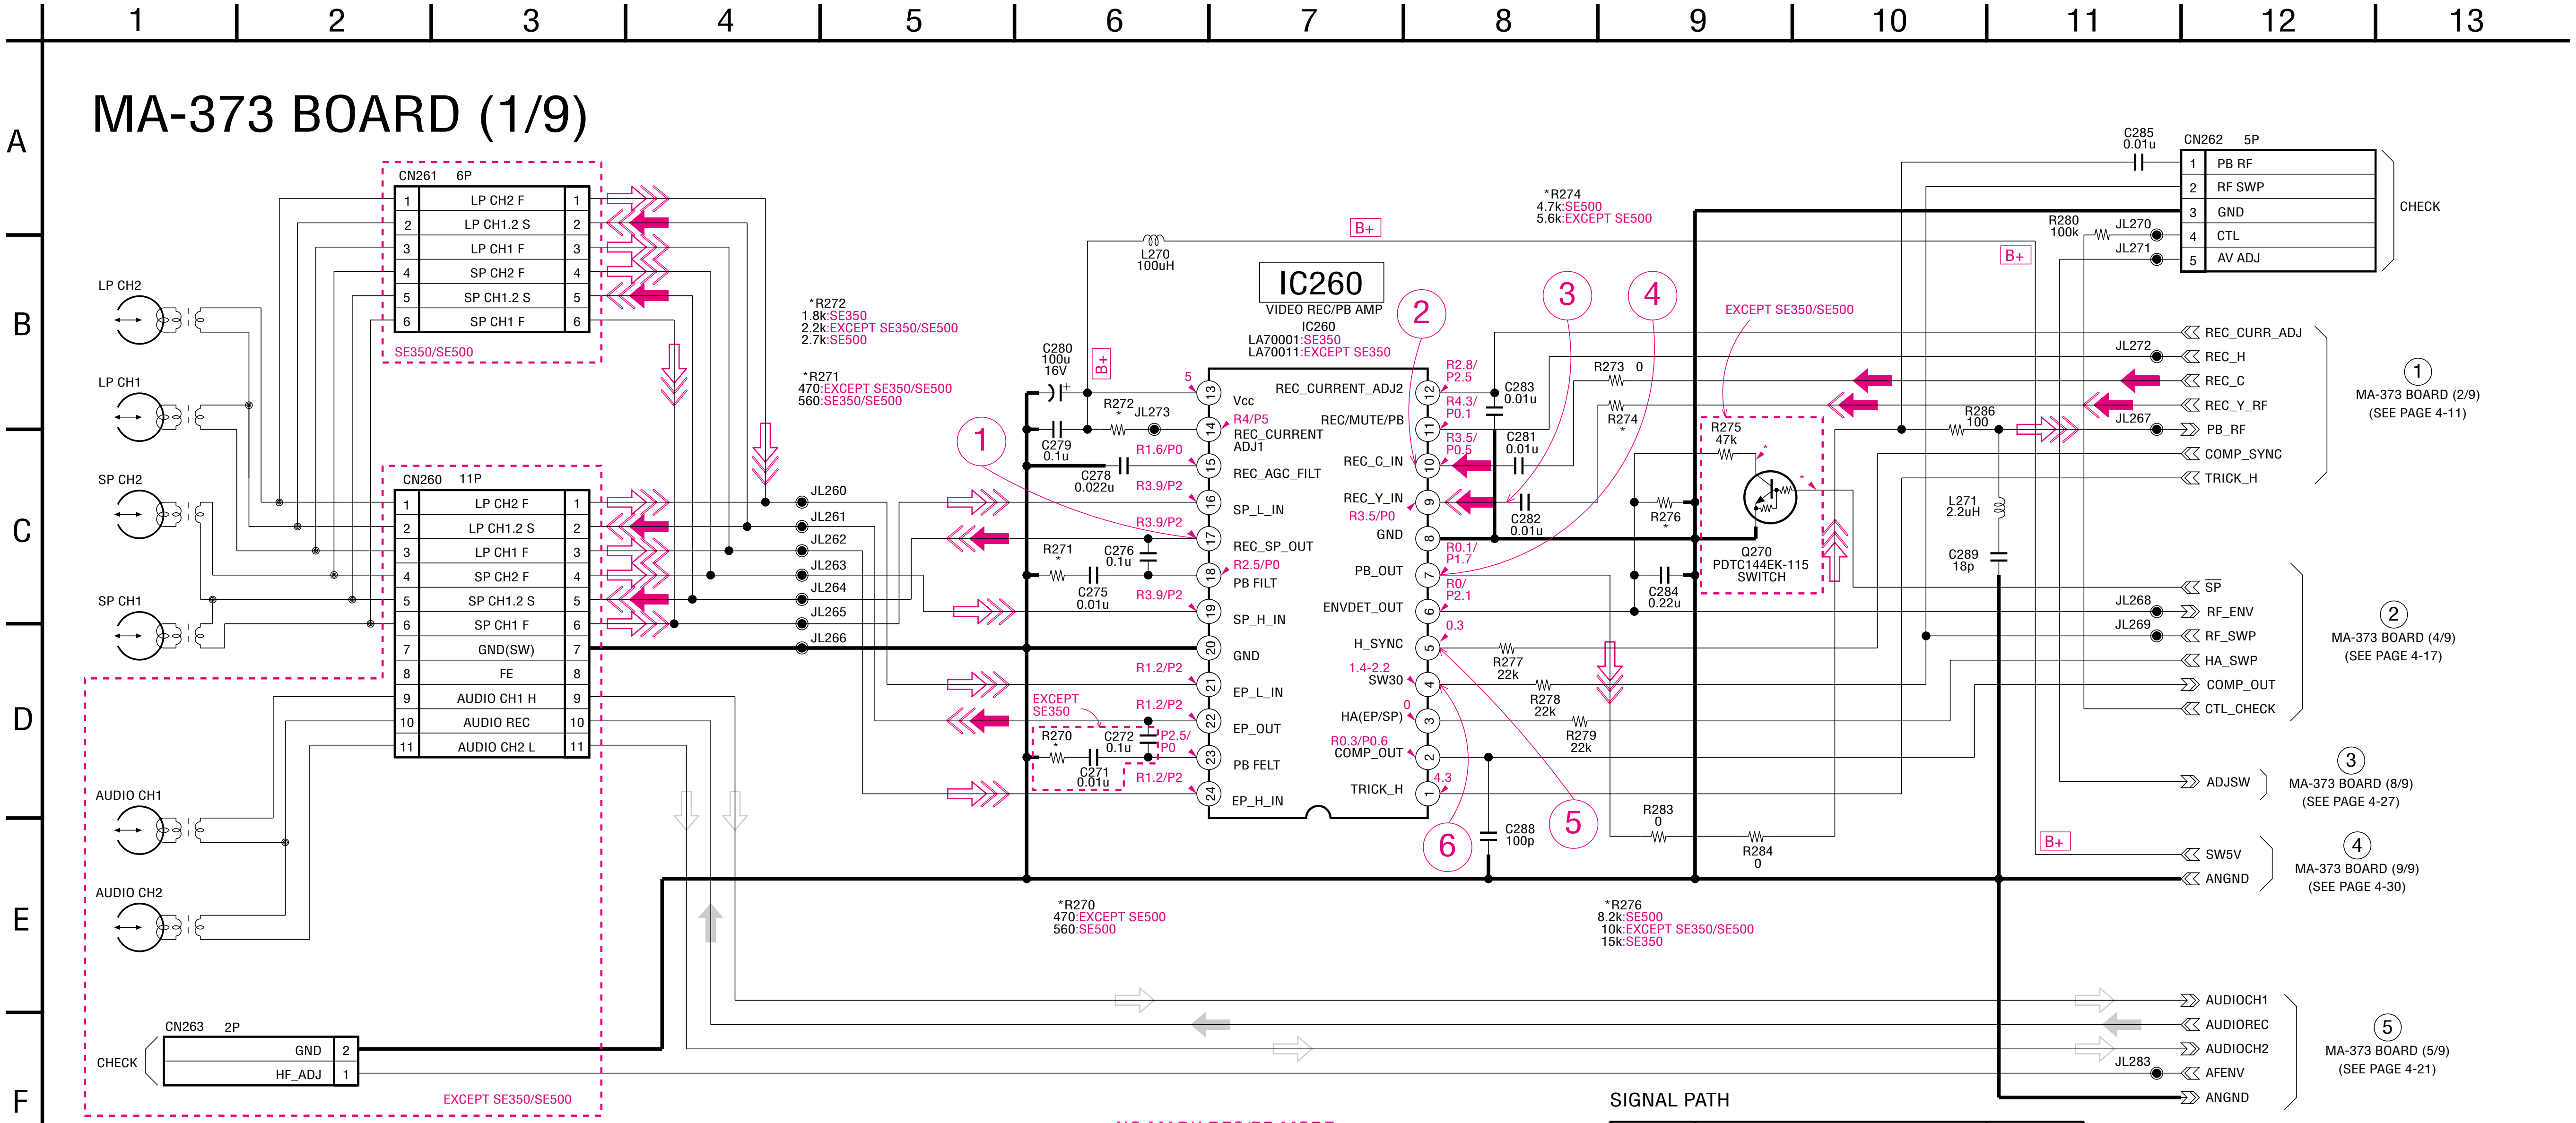
1
2
3
4
5
6
7
8
9
10
11
12
13
A
B
C
D
E
F
MA-373 BOARD (1/9)
CN261 6P
LP CH2 F
LP CH1.2 S
LP CH1 F
SP CH2 F
SP CH1.2 S
SP CH1 F
SE350/SE500
LP CH2
LP CH1
SP CH2
SP CH1
CN260 11P
GND(SW)
FE
AUDIO CH1 H
AUDIO REC
AUDIO CH2 L
AUDIO CH1
AUDIO CH2
CN263 2P
GND
HF_ADJ
CHECK
EXCEPT SE350/SE500
05
JL260
JL261
JL262
JL263
JL264
JL265
JL266
*R272
1.8k:SE350
2.2k:EXCEPT SE350/SE500
2.7k:SE500
*R271
470:EXCEPT SE350/SE500
560:SE350/SE500
L270
100uH
B+
IC260
VIDEO REC/PB AMP
IC260
LA70001:SE350
LA70011:EXCEPT SE350
C280
100u
16V
C279
0.1u
R272
JL273
C278
0.022u
R271
C276
0.1u
C275
0.01u
EXCEPT
SE350
R270
C272
0.1u
C271
0.01u
Vcc
REC_CURRENT
ADJ1
REC_AGC_FILT
SP_L_IN
REC_SP_OUT
PB FILT
SP_H_IN
GND
EP_L_IN
EP_OUT
PB FELT
EP_H_IN
REC_CURRENT_ADJ2
REC/MUTE/PB
REC_C_IN
REC_Y_IN
GND
PB_OUT
ENVDET_OUT
H_SYNC
SW30
HA(EP/SP)
COMP_OUT
TRICK_H
R4/P5
R1.6/P0
R3.9/P2
R3.9/P2
R2.5/P0
R3.9/P2
R1.2/P2
R1.2/P2
P2.5/
*P0
R1.2/P2
R2.8/
P2.5
R4.3/
P0.1
R3.5/
P0.5
R3.5/P0
R0.1/
P1.7
R0/
P2.1
0.3
1.4-2.2
0
R0.3/P0.6
4.3
*R274
4.7k:SE500
5.6k:EXCEPT SE500
C283
0.01u
R273 0
R274
C281
0.01u
C282
0.01u
R277
22k
R278
22k
R279
22k
C288
100p
R283
0
R284
0
R275
47k
R276
C284
0.22u
Q270
PDTC144EK-115
SWITCH
EXCEPT SE350/SE500
*R270
470:EXCEPT SE500
560:SE500
*R276
8.2k:SE500
10k:EXCEPT SE350/SE500
15k:SE350
C285
0.01u
CN262 5P
PB RF
RF SWP
GND
CTL
AV ADJ
CHECK
R280
100k
JL270
JL271
JL272
R286
100
JL267
L271
2.2uH
C289
18p
JL268
JL269
JL283
REC_CURR_ADJ
REC_H
REC_C
REC_Y_RF
PB_RF
COMP_SYNC
TRICK_H
SP
RF_ENV
RF_SWP
HA_SWP
COMP_OUT
CTL_CHECK
ADJSW
SW5V
ANGND
AUDIOCH1
AUDIOREC
AUDIOCH2
AFENV
ANGND
① MA-373 BOARD (2/9) (SEE PAGE 4-11)
② MA-373 BOARD (4/9) (SEE PAGE 4-17)
③ MA-373 BOARD (8/9) (SEE PAGE 4-27)
④ MA-373 BOARD (9/9) (SEE PAGE 4-30)
⑤ MA-373 BOARD (5/9) (SEE PAGE 4-21)

NO MARK:REC/PB MODE
R:REC MODE
P:PB MODE
*:IMPOSSIBLE TO MEASURE THE VOLTAGE AT THE MARKED POINTS.

SIGNAL PATH

	VIDEO SIGNAL			AUDIO SIGNAL
	CHROMA	Y	Y/CHROMA	
REC	➡	⇛	⇛	➡
PB			⇛	⇨

SLV-SE350/SE500/SE600/SE650/SE700/SE800/SX600/SX700/SX800

MA-373 (VIDEO, AUDIO) SCHEMATIC DIAGRAM • See page 4-5 for printed wiring board.

– Ref. No.: MA-373 board; 1,000 series –

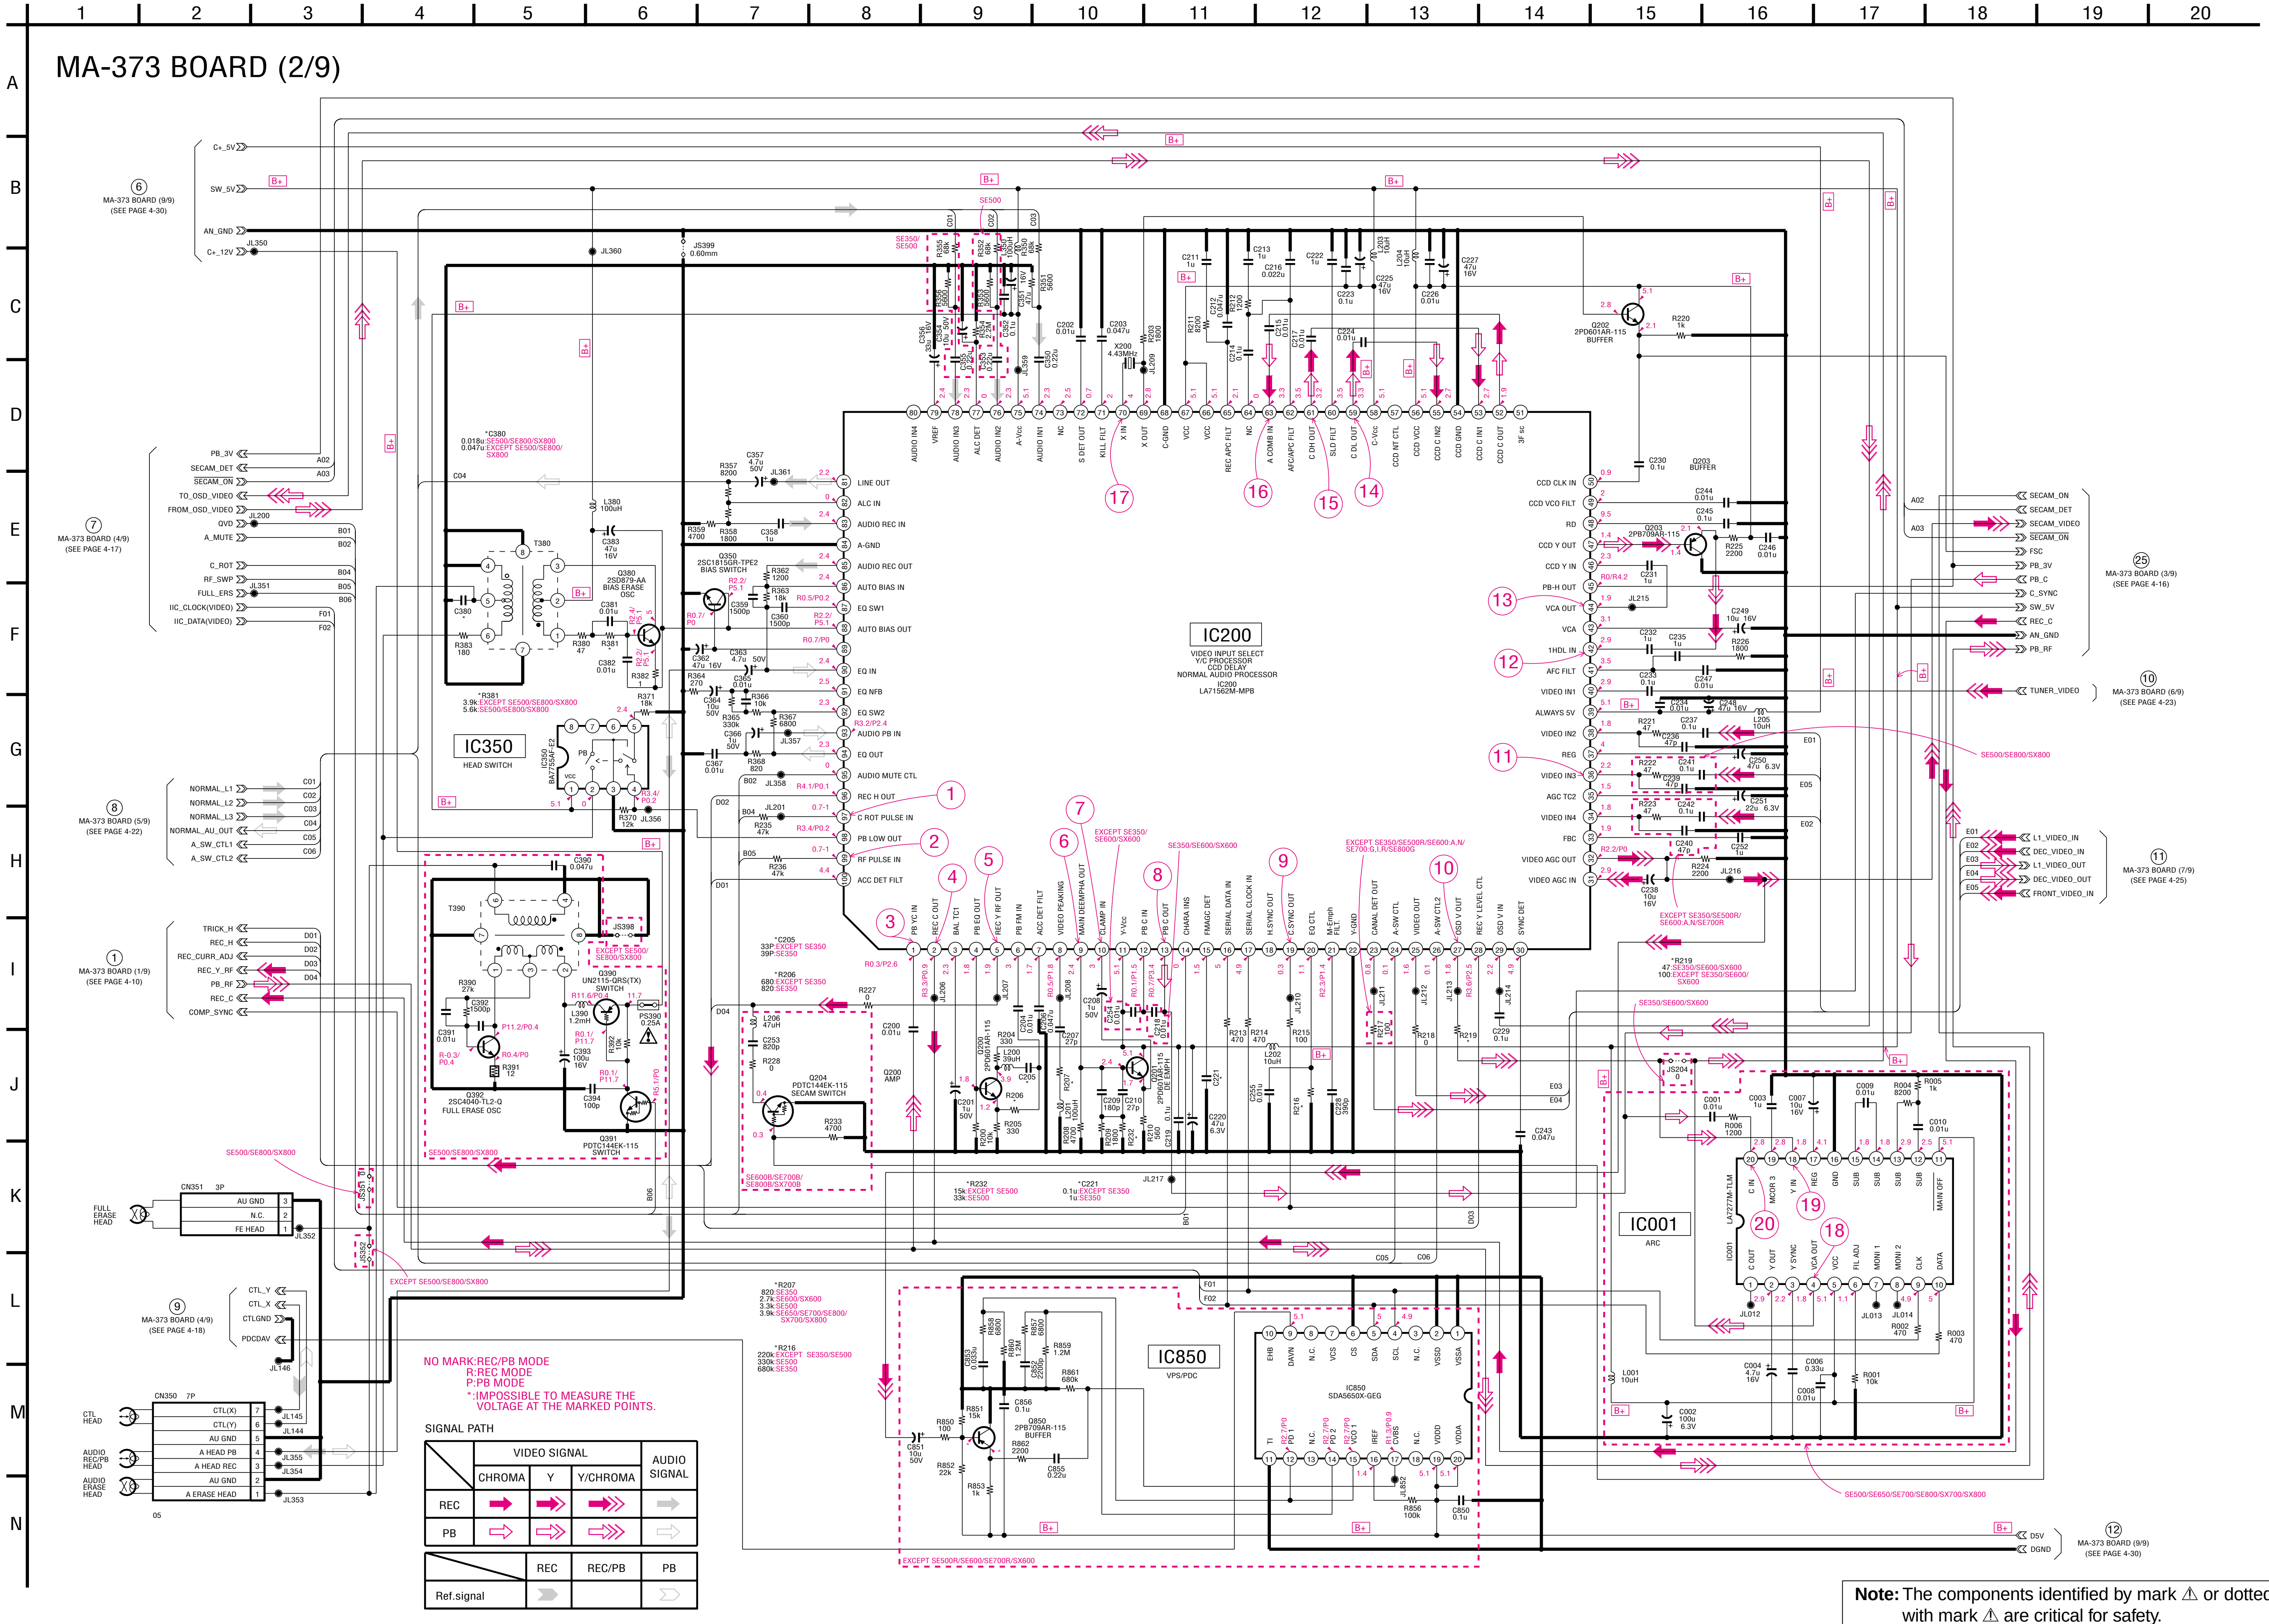

MA-373 BOARD (2/9)
IC350 HEAD SWITCH
IC200 VIDEO INPUT SELECT Y/C PROCESSOR CCD DELAY NORMAL AUDIO PROCESSOR IC200 LA71562M-MPB
IC850 VPS/PDC
IC850 SDA5650X-GEG
IC001 ARC
IC001 LA7277M-TLM
Q380 2SD879-AA BIAS ERASE OSC
Q350 2SC1815GR-TPE2 BIAS SWITCH
Q390 UN2115-QRS(TX) SWITCH
Q391 PDTC144EK-115 SWITCH
Q392 2SC4040-TL2-Q FULL ERASE OSC
Q204 PDTC144EK-115 SECAM SWITCH
Q200 AMP
Q202 2PD601AR-115 BUFFER
Q203 2PB709AR-115 BUFFER
Q850 2PB709AR-115 BUFFER
T380
T390
MA-373 BOARD (9/9) (SEE PAGE 4-30)
MA-373 BOARD (4/9) (SEE PAGE 4-17)
MA-373 BOARD (5/9) (SEE PAGE 4-22)
MA-373 BOARD (1/9) (SEE PAGE 4-10)
MA-373 BOARD (4/9) (SEE PAGE 4-18)
MA-373 BOARD (3/9) (SEE PAGE 4-16)
MA-373 BOARD (6/9) (SEE PAGE 4-23)
MA-373 BOARD (7/9) (SEE PAGE 4-25)
MA-373 BOARD (9/9) (SEE PAGE 4-30)
FULL ERASE HEAD
CTL HEAD
AUDIO REC/PB HEAD
AUDIO ERASE HEAD
CN351 3P
CN350 7P
SE500/SE800/SX800
EXCEPT SE500/SE800/SX800
SE350/SE600/SX600
SE500/SE650/SE700/SE800/SX700/SX800
EXCEPT SE500R/SE600/SE700R/SX600

NO MARK:REC/PB MODE
R:REC MODE
P:PB MODE
*:IMPOSSIBLE TO MEASURE THE VOLTAGE AT THE MARKED POINTS.

SIGNAL PATH

	VIDEO SIGNAL			AUDIO SIGNAL
	CHROMA	Y	Y/CHROMA	
REC	➡	➡»	➡»»	➡
PB	⇨	⇨»	⇨»»	⇨

	REC	REC/PB	PB
Ref.signal	➤		➢

Note: The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.
Replace only with part number specified.

VIDEO, AUDIO
MA-373 (2/9)

• Waveforms

❶ IC200 (97) PB

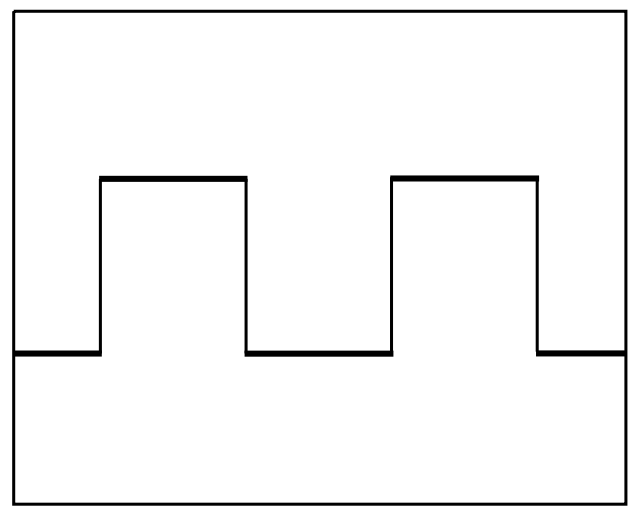

1.7 Vp-p (2 V)

❷ IC200 (99) PB

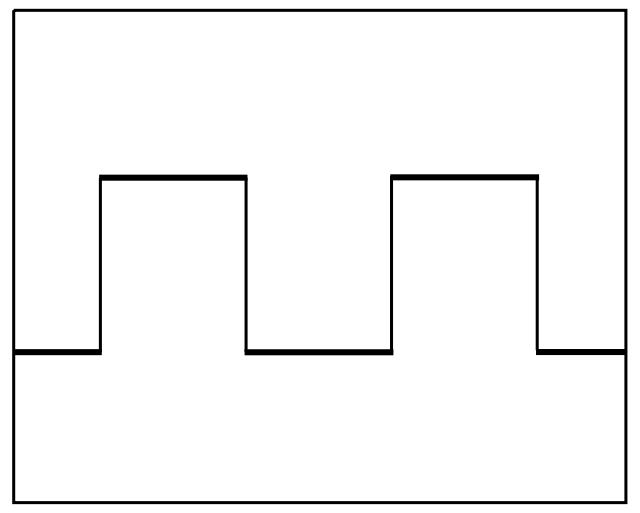

1.7 Vp-p (2 V)

❸ IC200 ① PB

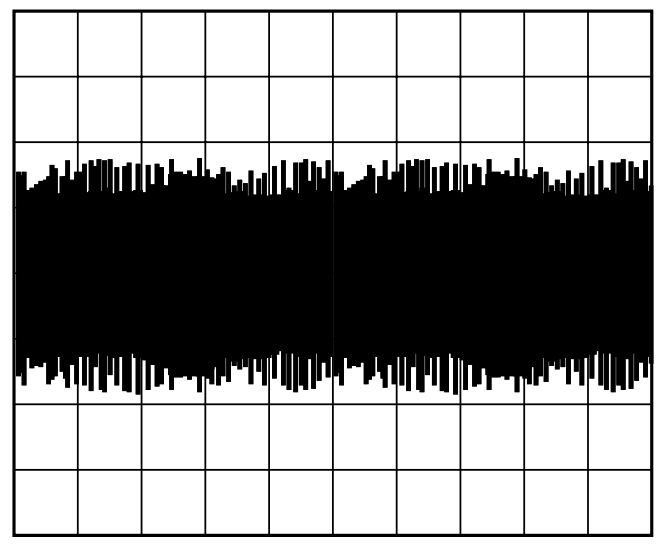

704 mVp-p (H)

❹ IC200 ② REC

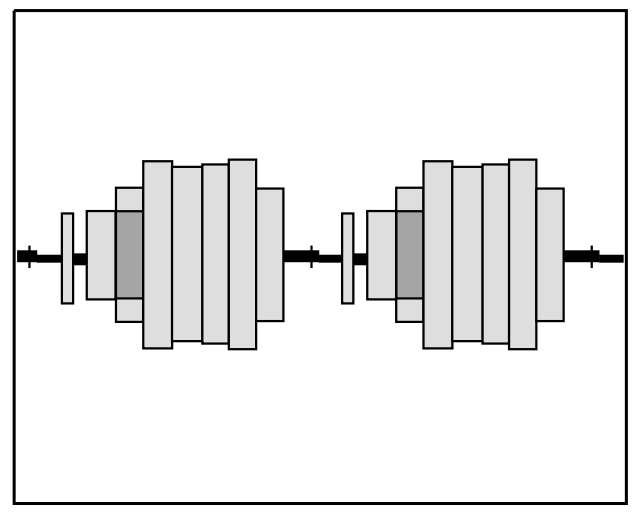

276 mVp-p (H)

❺ IC200 ⑤ REC/PB

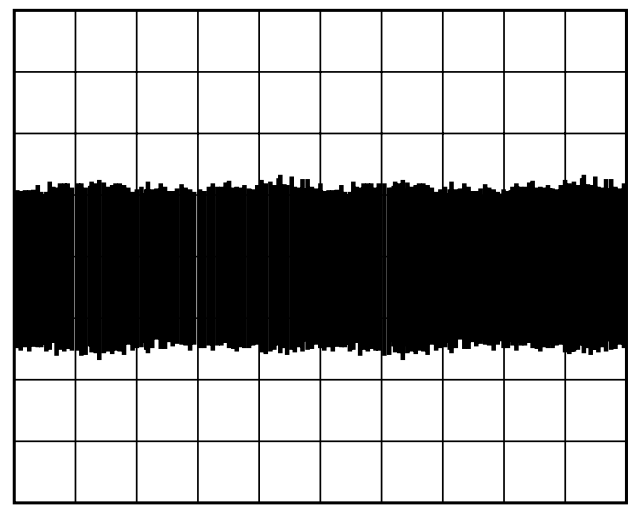

REC : 504 mVp-p (H)
PB : 320 mVp-p (H)

❻ IC200 ⑨ REC

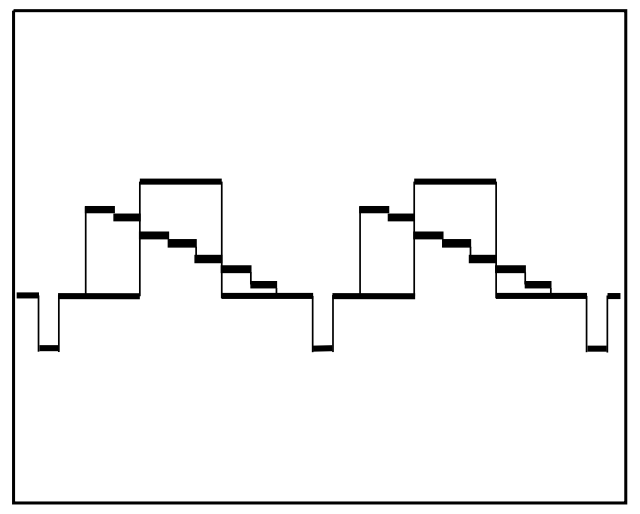

424 mVp-p (H)

❻ IC200 ⑨ PB

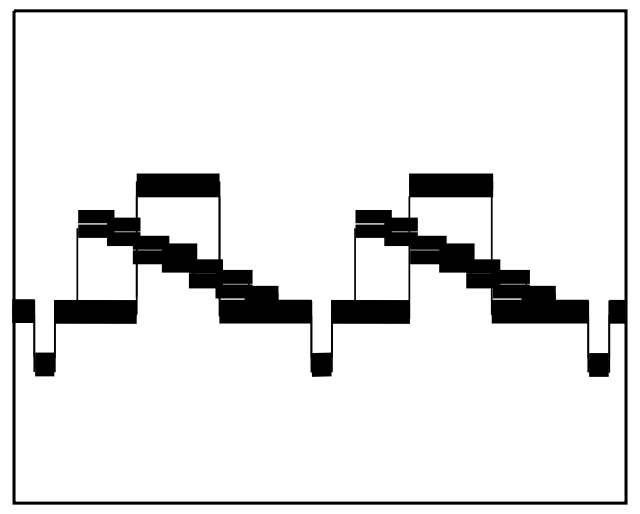

496 mVp-p (H)

❼ IC200 ⑩ REC

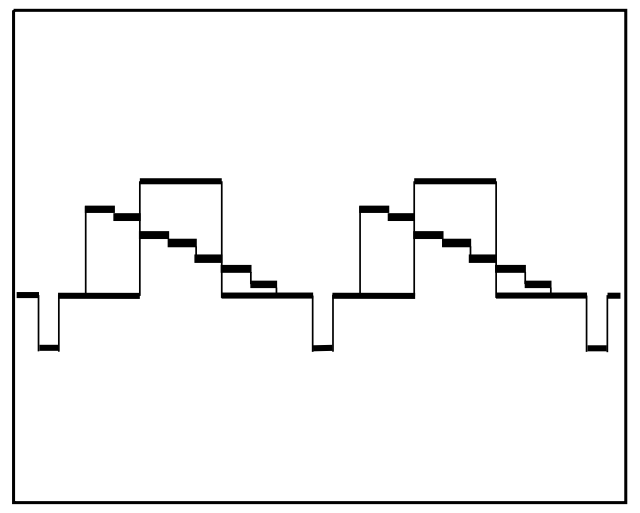

424 mVp-p (H)

❼ IC200 ⑩ PB

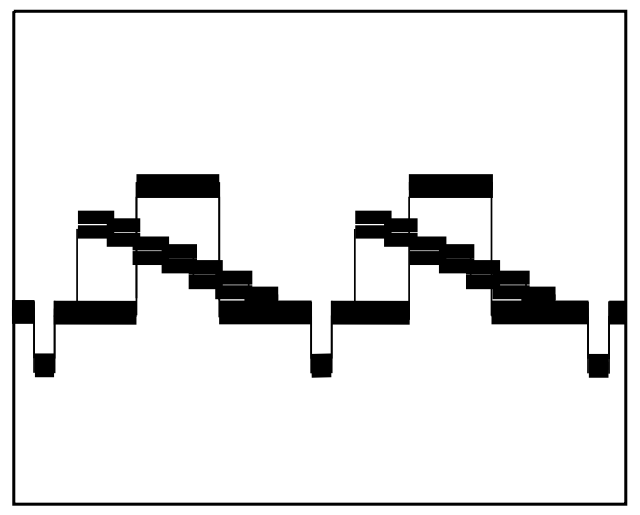

536 mVp-p (H)

❽ IC200 ⑬ PB

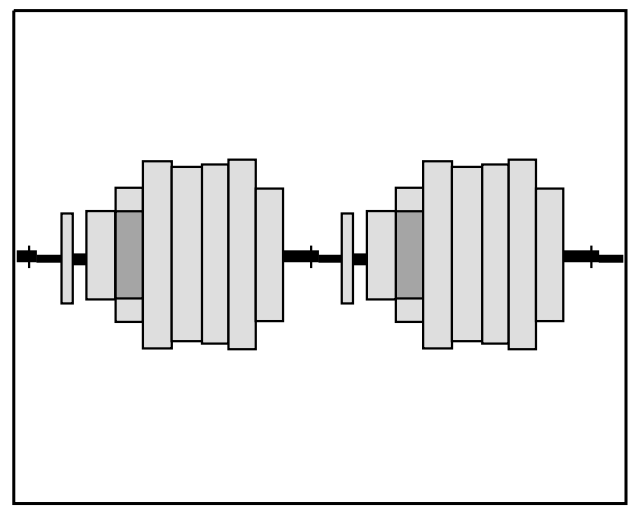

488 mVp-p (H)

❾ IC200 ⑲ REC/PB



4.3 Vp-p (H)

❿ IC200 ㉗ REC

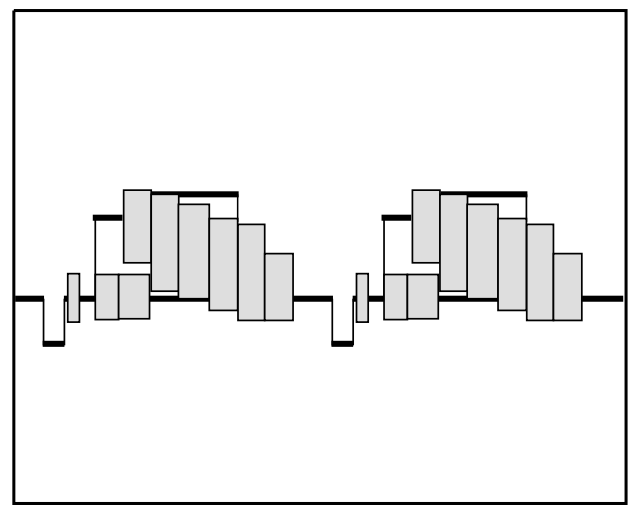

2 Vp-p (H)

❿ IC200 ㉗ PB

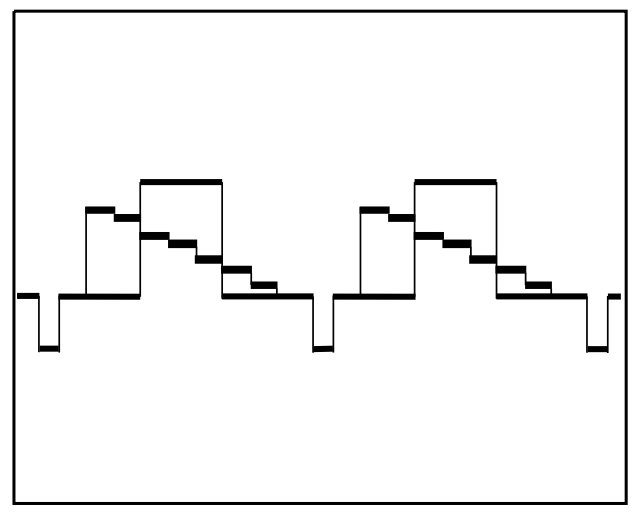

1.8 Vp-p (H)

⓫ IC200 ㊱ REC/PB

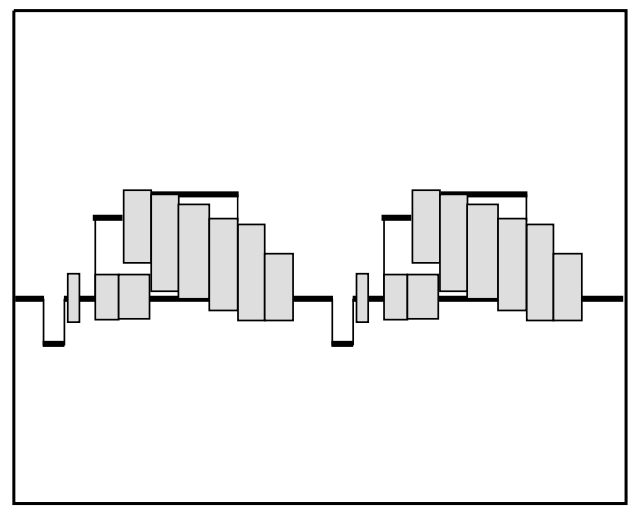

1.1 Vp-p (H)

⓬ IC200 ㊷ REC/PB

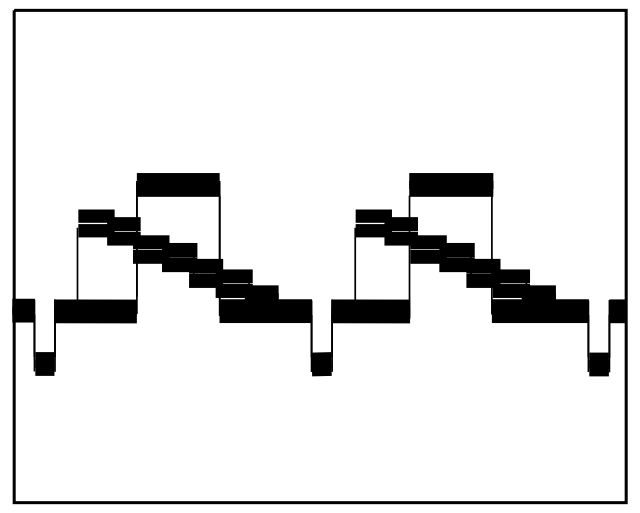

REC : 320 mVp-p (H)
PB : 368 mVp-p (H)

⓭ IC200 ㊹ REC/PB

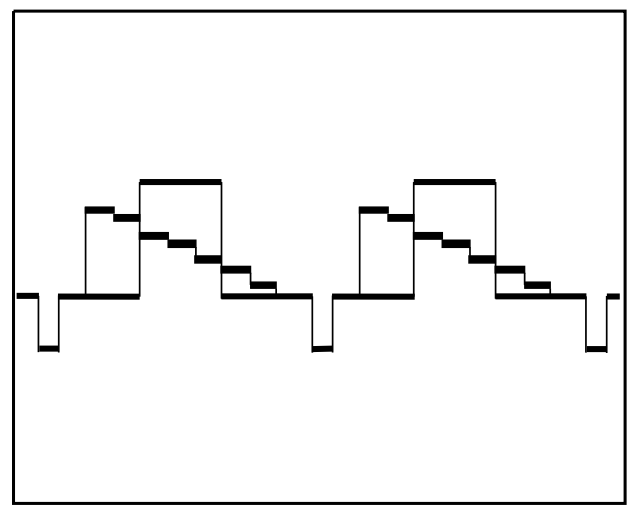

REC : 296 mVp-p (H)
PB : 336 mVp-p (H)

⓮ IC200 (59) REC/PB

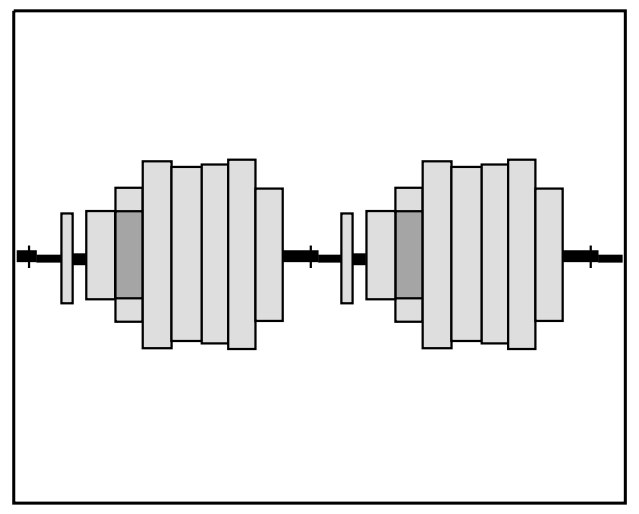

REC : 296 mVp-p (H)
PB : 324 mVp-p (H)

⓯ IC200 (61) REC/PB

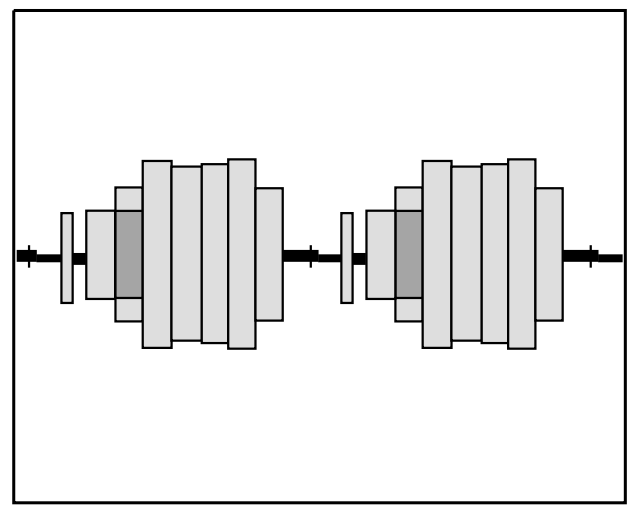

REC : 276 mVp-p (H)
PB : 288 mVp-p (H)

⓰ IC200 (63) REC

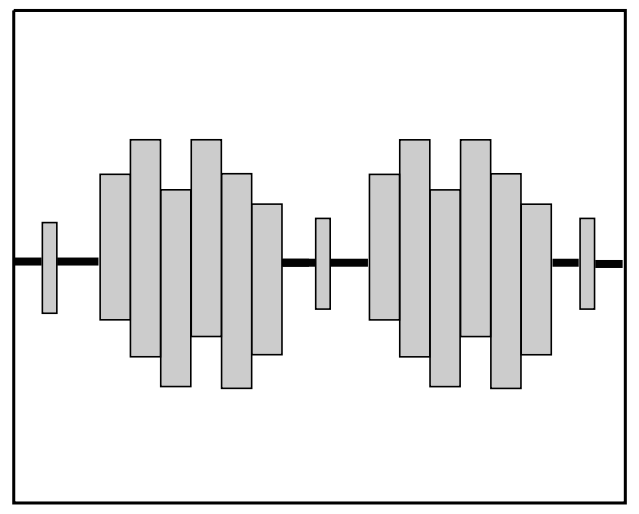

304 mVp-p (H)

⓰ IC200 (63) PB

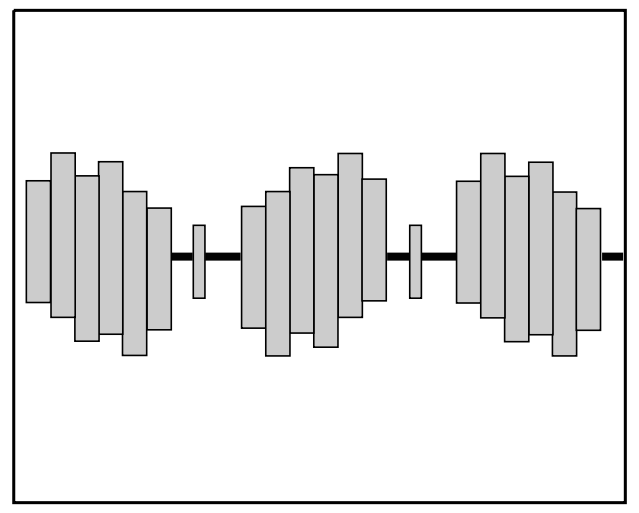

304 mVp-p (H)

⓱ IC200 (70) REC/PB

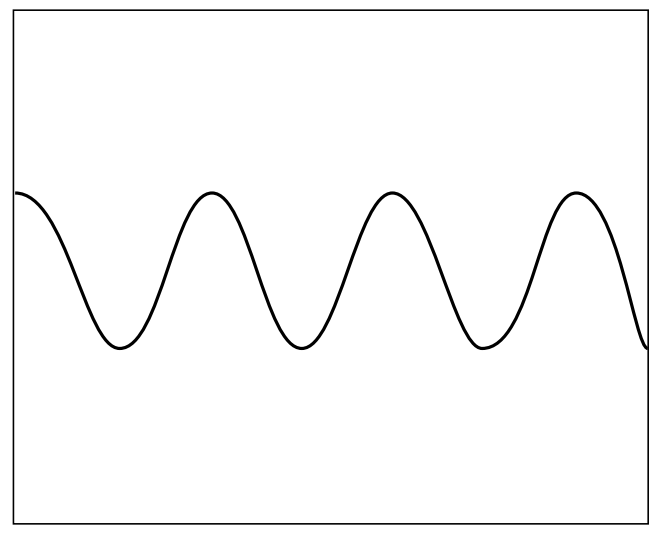

472 mVp-p (4.43 MHz)

⓲ IC001 ④ REC/PB

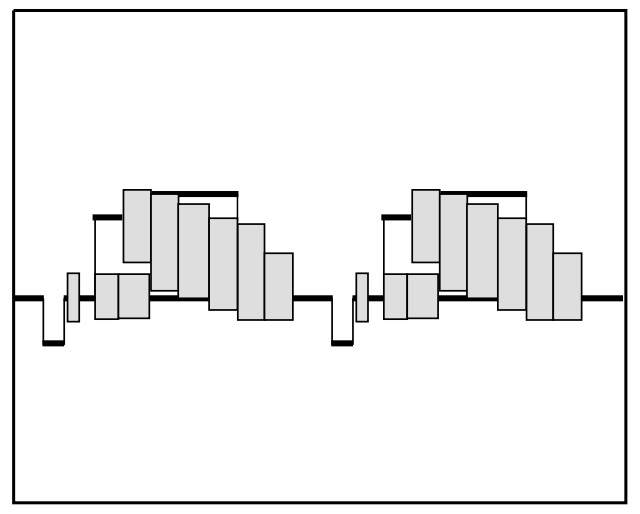

2 Vp-p (H)

⓳ IC001 ⑱ REC

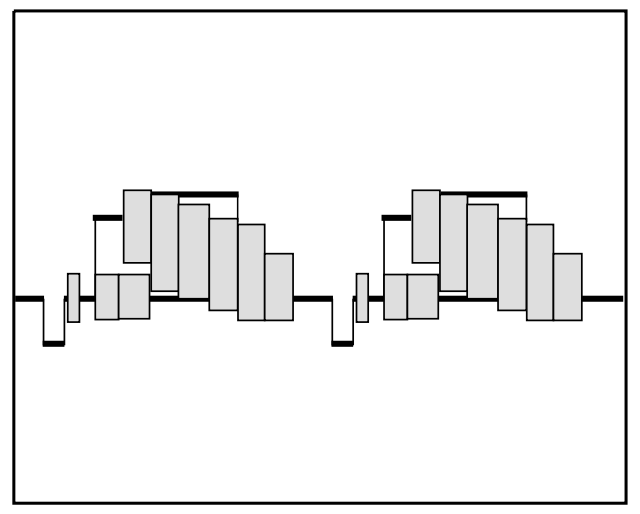

2 Vp-p (H)

⓳ IC001 ⑱ PB

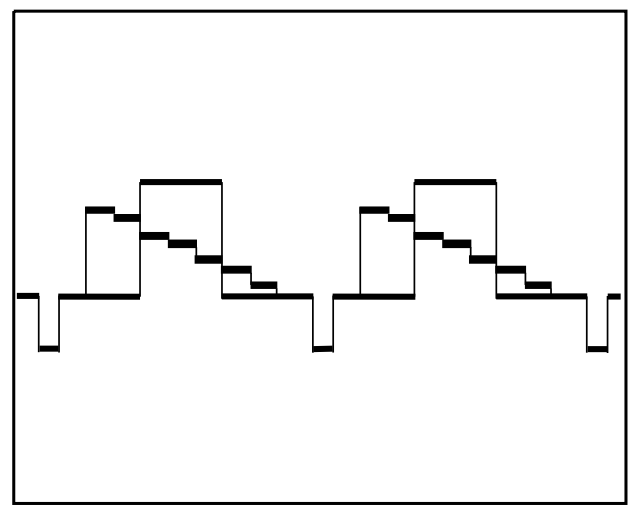

1.8 Vp-p (H)

⓴ IC001 ⑳ PB

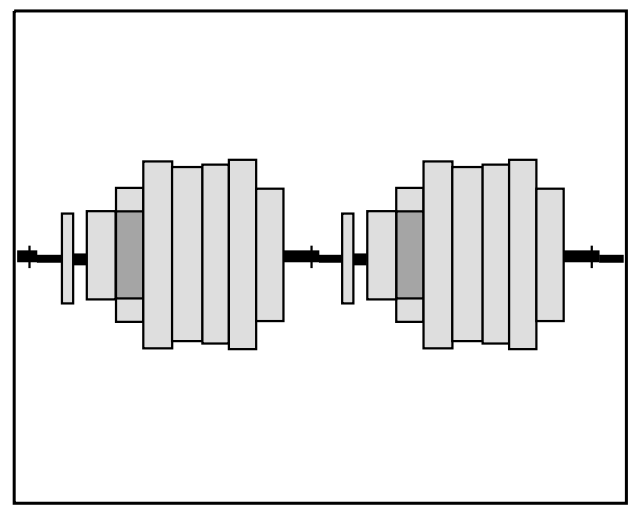

372 mVp-p (H)

SLV-SE350/SE500/SE600/SE650/SE700/SE800/SX600/SX700/SX800

MA-373 (SECAM) SCHEMATIC DIAGRAM **• See page 4-5 for printed wiring board.**

– Ref. No.: MA-373 board; 1,000 series –

MA-373 BOARD (3/9)

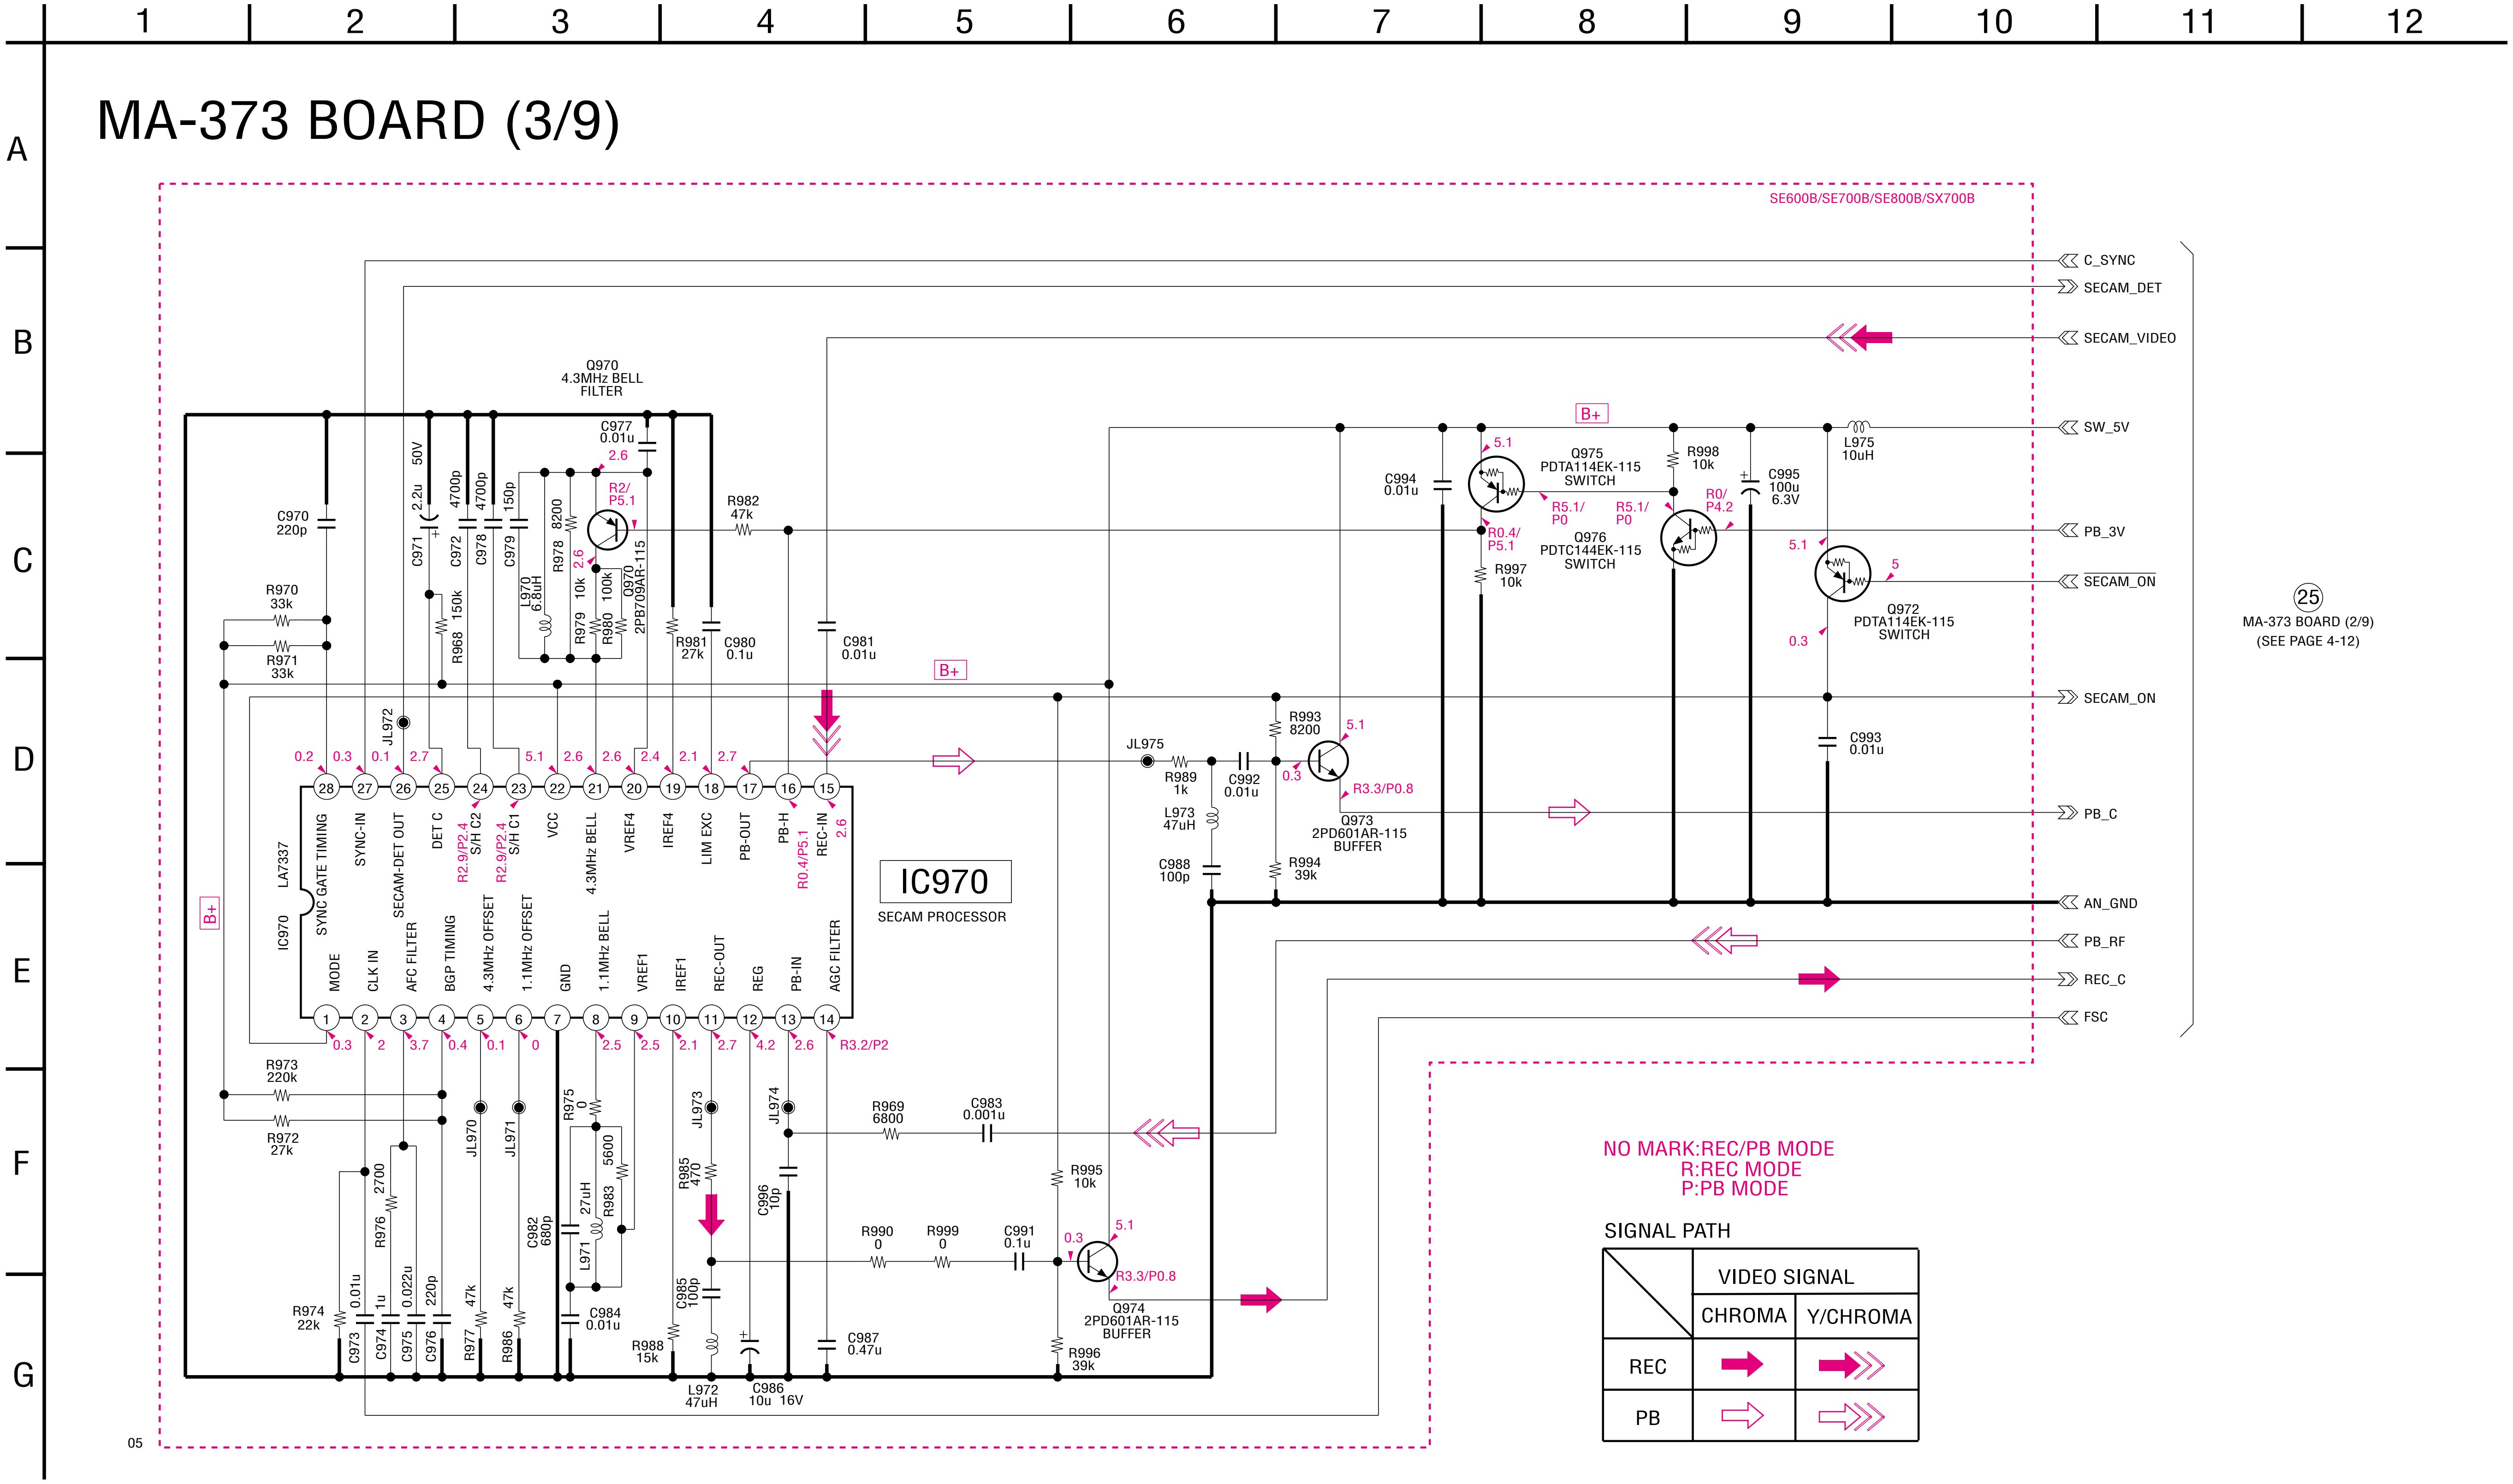
1
2
3
4
5
6
7
8
9
10
11
12
A
B
C
D
E
F
G
SE600B/SE700B/SE800B/SX700B
C_SYNC
SECAM_DET
SECAM_VIDEO
SW_5V
PB_3V
SECAM_ON
SECAM_ON
PB_C
AN_GND
PB_RF
REC_C
FSC
25
MA-373 BOARD (2/9)
(SEE PAGE 4-12)
Q970
4.3MHz BELL
FILTER
C977
0.01u
2.6
R2/
P5.1
2.6
Q970
2PB709AR-115
C970
220p
R970
33k
R971
33k
C971
2.2u 50V
C972
4700p
C978
4700p
C979
150p
R968
150k
L970
6.8uH
R978
8200
R979
10k
R980
100k
R981
27k
C980
0.1u
R982
47k
C981
0.01u
B+
JL972
0.2
0.3
0.1
2.7
5.1
2.6
2.6
2.4
2.1
2.7
28
27
26
25
24
23
22
21
20
19
18
17
16
15
SYNC GATE TIMING
SYNC-IN
SECAM-DET OUT
DET C
S/H C2
S/H C1
VCC
4.3MHz BELL
VREF4
IREF4
LIM EXC
PB-OUT
PB-H
REC-IN
R2.9/P2.4
R2.9/P2.4
R0.4/P5.1
2.6
IC970
LA7337
IC970
SECAM PROCESSOR
MODE
CLK IN
AFC FILTER
BGP TIMING
4.3MHz OFFSET
1.1MHz OFFSET
GND
1.1MHz BELL
VREF1
IREF1
REC-OUT
REG
PB-IN
AGC FILTER
1
2
3
4
5
6
7
8
9
10
11
12
13
14
0.3
2
3.7
0.4
0.1
0
2.5
2.5
2.1
2.7
4.2
2.6
R3.2/P2
R973
220k
R972
27k
JL970
JL971
R975
0
5600
R983
27uH
L971
C982
680p
C984
0.01u
JL973
R985
470
C985
100p
R988
15k
L972
47uH
JL974
C996
10p
C986
10u 16V
C987
0.47u
R969
6800
C983
0.001u
R976
2700
R974
22k
C973
0.01u
C974
1u
C975
0.022u
C976
220p
R977
47k
R986
47k
R990
0
R999
0
C991
0.1u
0.3
5.1
R3.3/P0.8
Q974
2PD601AR-115
BUFFER
R995
10k
R996
39k
JL975
R989
1k
C992
0.01u
L973
47uH
C988
100p
R993
8200
R994
39k
0.3
5.1
R3.3/P0.8
Q973
2PD601AR-115
BUFFER
C994
0.01u
5.1
Q975
PDTA114EK-115
SWITCH
R5.1/
P0
R5.1/
P0
R0.4/
P5.1
R997
10k
Q976
PDTC144EK-115
SWITCH
R998
10k
R0/
P4.2
C995
100u
6.3V
L975
10uH
5.1
5
0.3
Q972
PDTA114EK-115
SWITCH
C993
0.01u
05

NO MARK:REC/PB MODE
R:REC MODE
P:PB MODE

SIGNAL PATH

	VIDEO SIGNAL	
	CHROMA	Y/CHROMA
REC	➡	➡⋙
PB	⇨	⇨⋙

MA-373 (SERVO/SYSTEM CONTROL) SCHEMATIC DIAGRAM • See page 4-5 for printed wiring board and page 4-19 for waveforms.

– Ref. No.: MA-373 board; 1,000 series –

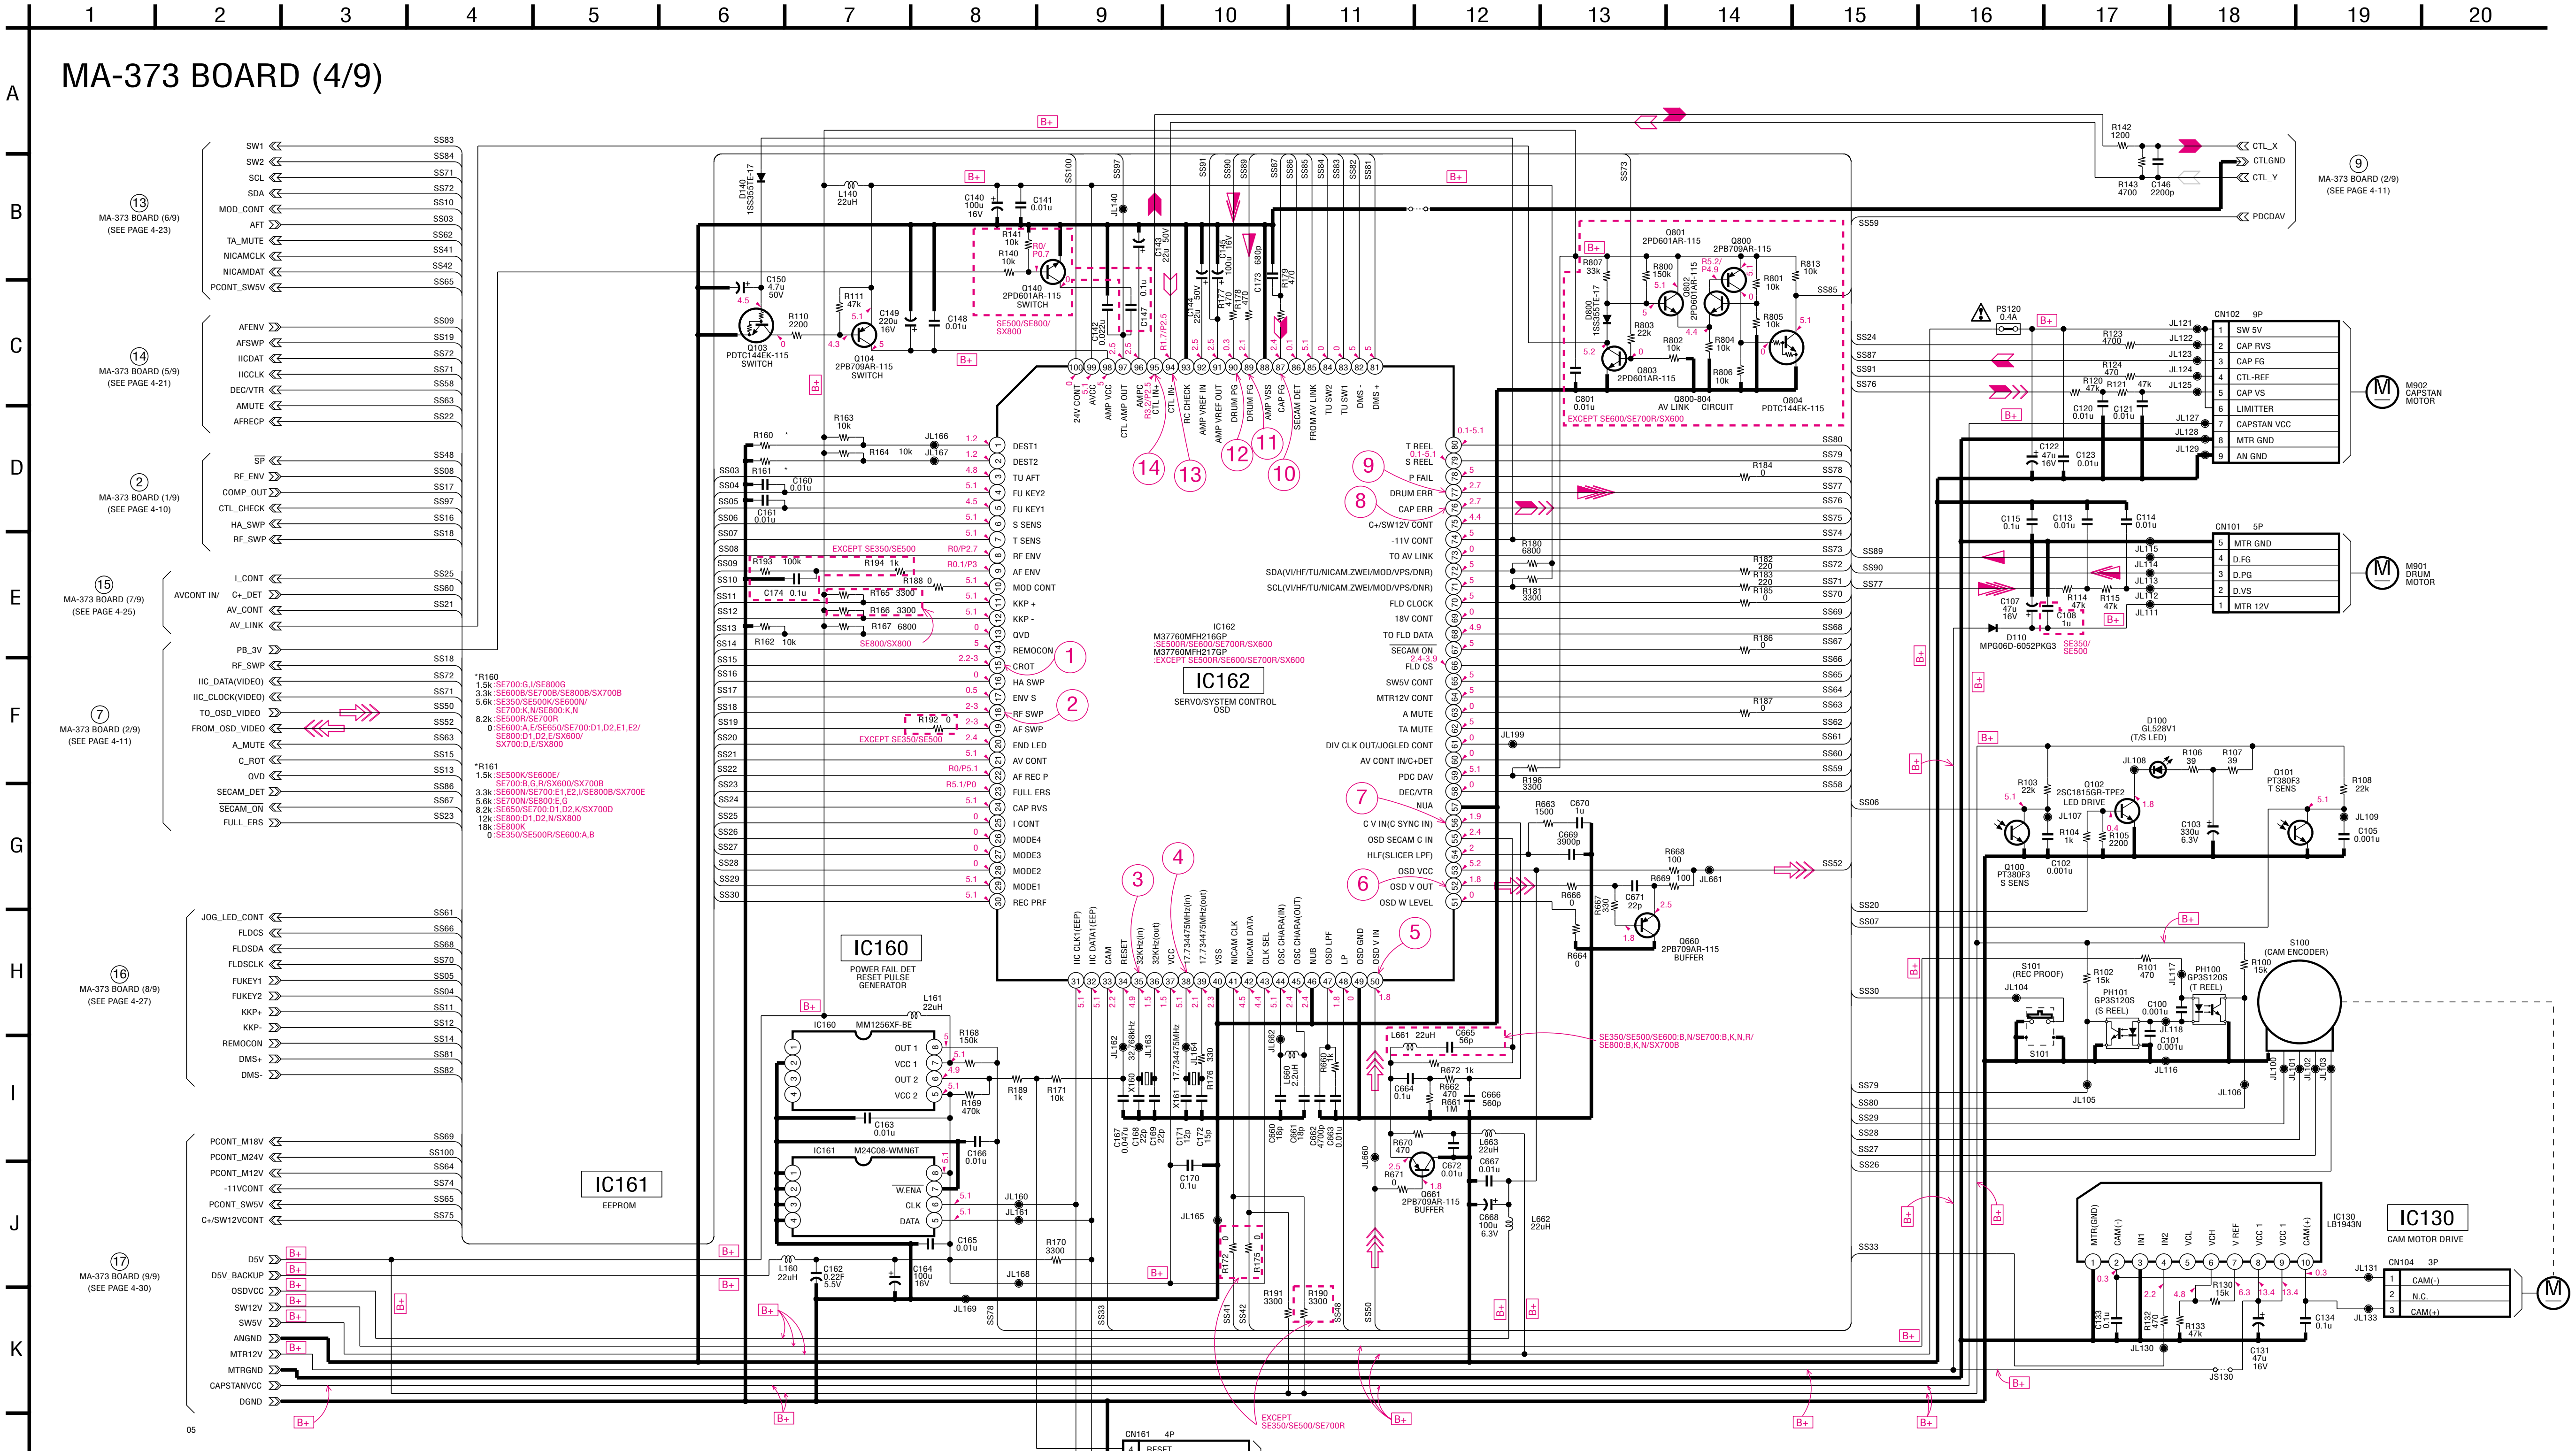
MA-373 BOARD (4/9)
1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20
A B C D E F G H I J K L M
⑬ MA-373 BOARD (6/9) (SEE PAGE 4-23)
⑭ MA-373 BOARD (5/9) (SEE PAGE 4-21)
② MA-373 BOARD (1/9) (SEE PAGE 4-10)
⑮ MA-373 BOARD (7/9) (SEE PAGE 4-25)
⑦ MA-373 BOARD (2/9) (SEE PAGE 4-11)
⑯ MA-373 BOARD (8/9) (SEE PAGE 4-27)
⑰ MA-373 BOARD (9/9) (SEE PAGE 4-30)
⑨ MA-373 BOARD (2/9) (SEE PAGE 4-11)
IC162 M37760MFH216GP SERVO/SYSTEM CONTROL OSD
IC160 POWER FAIL DET RESET PULSE GENERATOR
IC160 MM1256XF-BE
IC161 EEPROM
IC161 M24C08-WMN6T
IC130 CAM MOTOR DRIVE
IC130 LB1943N
M902 CAPSTAN MOTOR
M901 DRUM MOTOR
M903 CAM MOTOR
CN102 9P
CN101 5P
CN104 3P
CN161 4P
CHECK
S100 (CAM ENCODER)
S101 (REC PROOF)
PH100 GP3S120S (T REEL)
PH101 GP3S120S (S REEL)
Q100 PT380F3 S SENS
Q101 PT380F3 T SENS
Q102 2SC1815GR-TPE2 LED DRIVE
D100 GL528V1 (T/S LED)
D110 MPG06D-6052PKG3
Q103 PDTC144EK-115 SWITCH
Q104 2PB709AR-115 SWITCH
Q140 2PD601AR-115 SWITCH
Q660 2PB709AR-115 BUFFER
Q661 2PB709AR-115 BUFFER
Q800 2PB709AR-115
Q801 2PD601AR-115
Q803 2PD601AR-115
Q804 PDTC144EK-115
Q800-804 AV LINK CIRCUIT
PS120 0.4A
EXCEPT SE600/SE700R/SX600
EXCEPT SE350/SE500
SE800/SX800
SE500/SE800/SX800
SE350/SE500
SE350/SE500/SE600:B,N/SE700:B,K,N,R/SE800:B,K,N/SX700B
EXCEPT SE350/SE500/SE700R
05

NO MARK:REC/PB MODE
R:REC MODE
P:PB MODE

SIGNAL PATH

	REC	REC/PB	PB
Drum speed servo		►	
Drum phase servo		►	
Drum servo(speed and phase)		►	

	REC	REC/PB	PB
Capstan speed servo		►	
Capstan servo(speed and phase)		⇒	
Ref.signal	➤		▷

SIGNAL PATH

	VIDEO SIGNAL
	Y/CHROMA
PB	⇒

Note: The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.
Replace only with part number specified.

• Waveforms

❶ IC162 ⑮ REC/PB

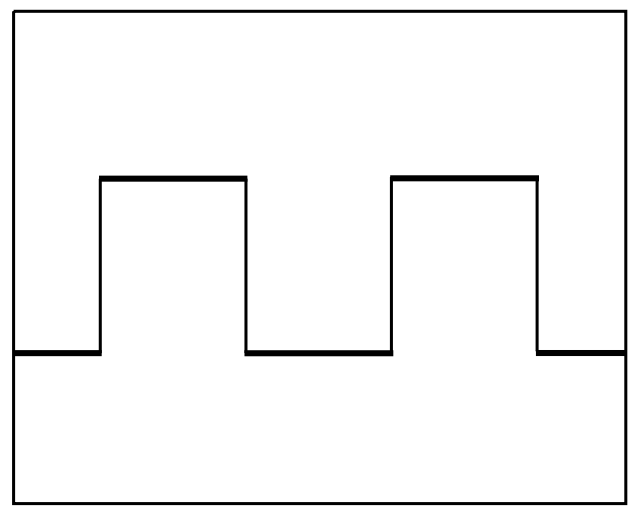

5.3 Vp-p (2 V)

❷ IC162 ⑱ REC/PB

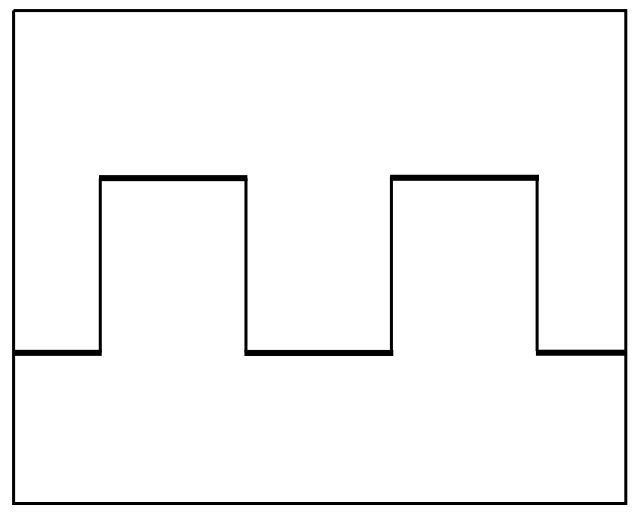

5.3 Vp-p (2 V)

❸ IC162 ㉟ REC/PB

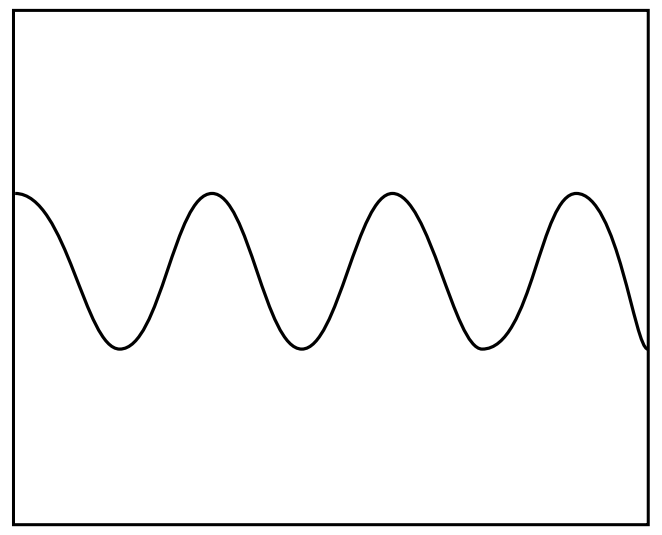

1.8 Vp-p (32.768 kHz)

❹ IC162 ㊳ REC/PB

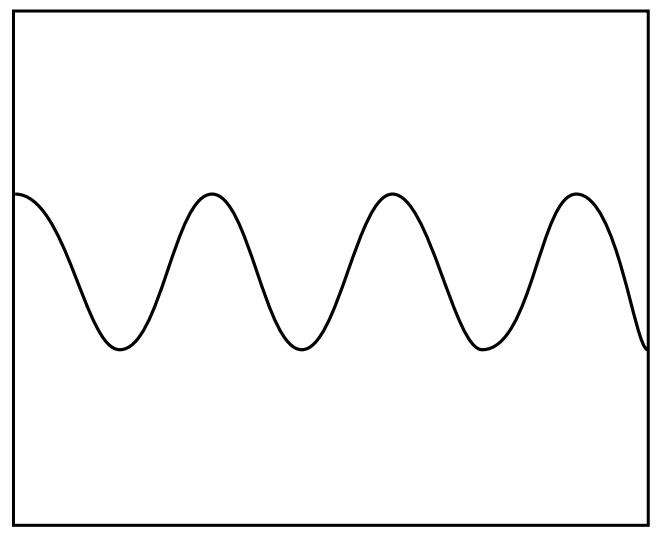

2.7 Vp-p (17.734475 MHz)

❺ IC162 ㊿ REC/PB

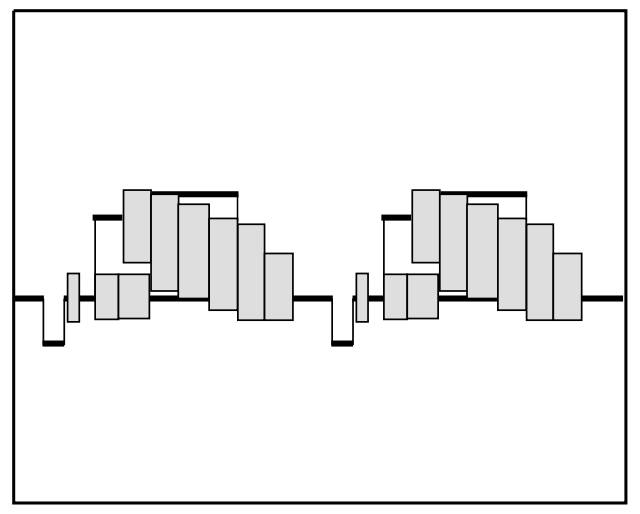

2 Vp-p (H)

❻ IC162 (52) REC/PB

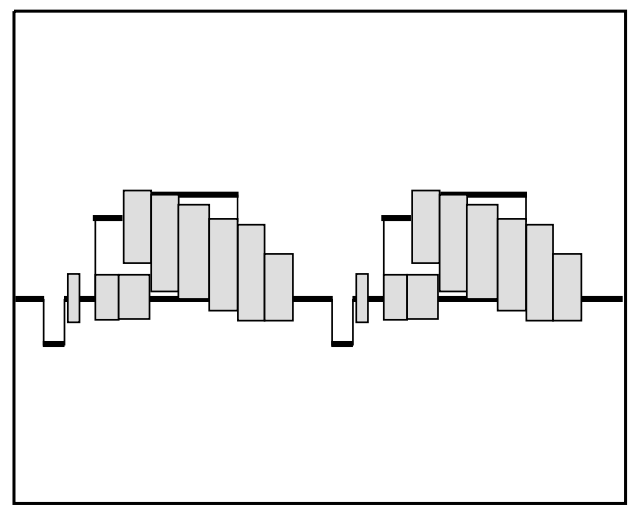

2 Vp-p (H)

❼ IC162 (56) REC/PB

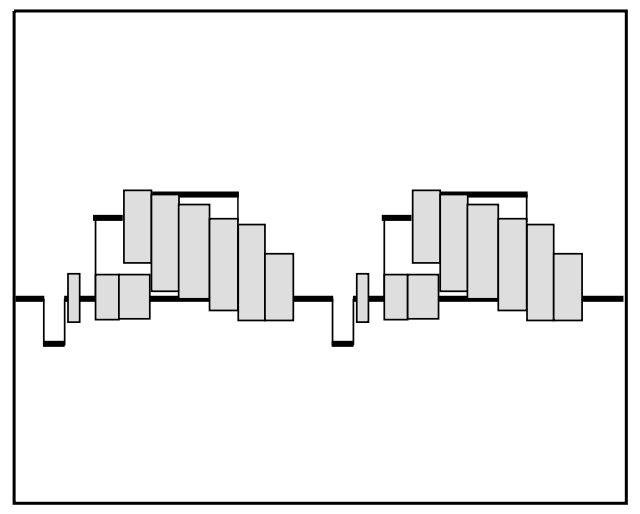

2 Vp-p (H)

❽ IC162 (76) REC/PB

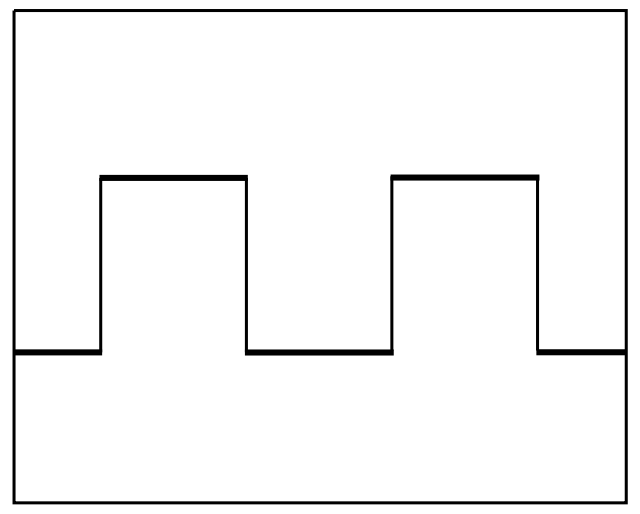

5.4 Vp-p (56 kHz)

❾ IC162 (77) REC/PB

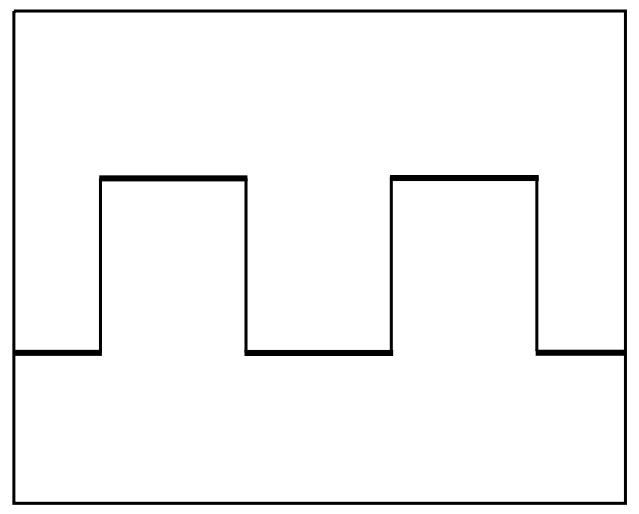

5.4 Vp-p (56 kHz)

❿ IC162 (87) REC/PB

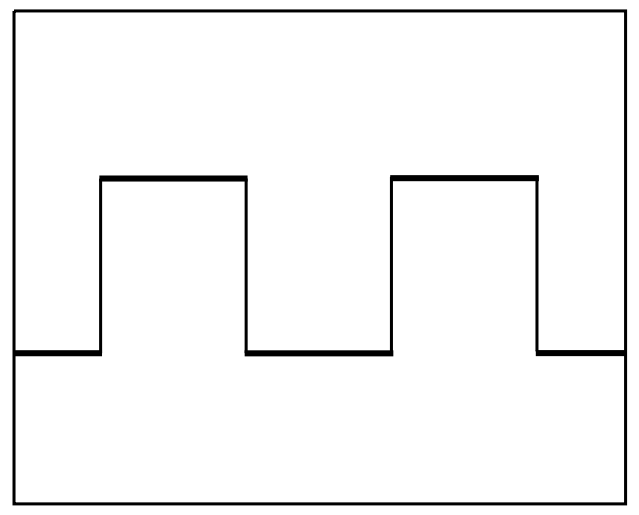

4.6 Vp-p (1 kHz)

⓫ IC162 (89) REC/PB

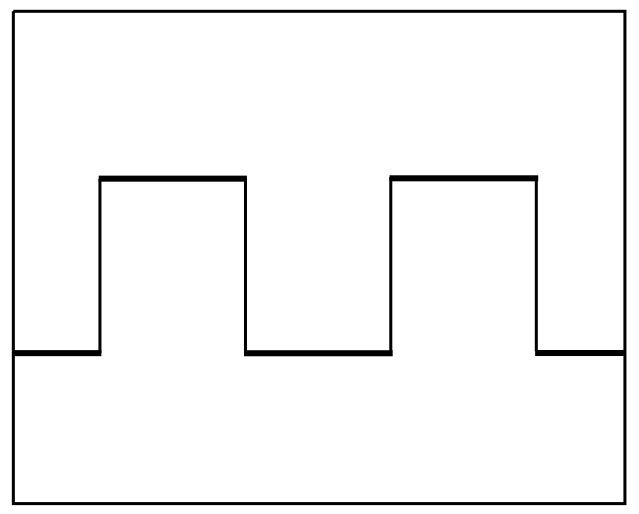

4.2 Vp-p (360 Hz)

⓬ IC162 (90) REC/PB

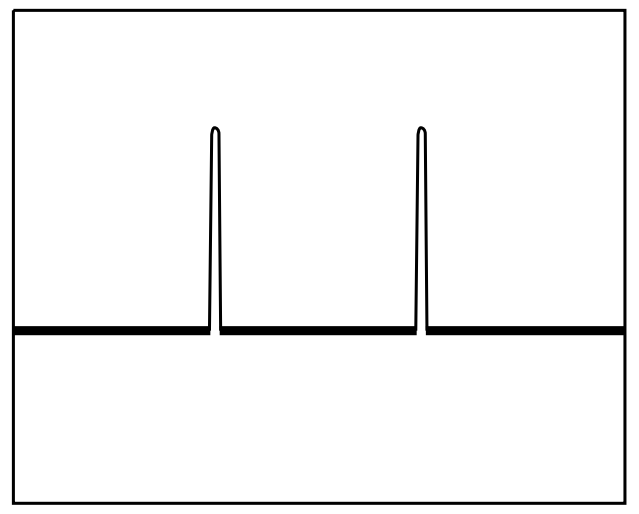

4.8 Vp-p (2 V)

⓭ IC162 (94) REC

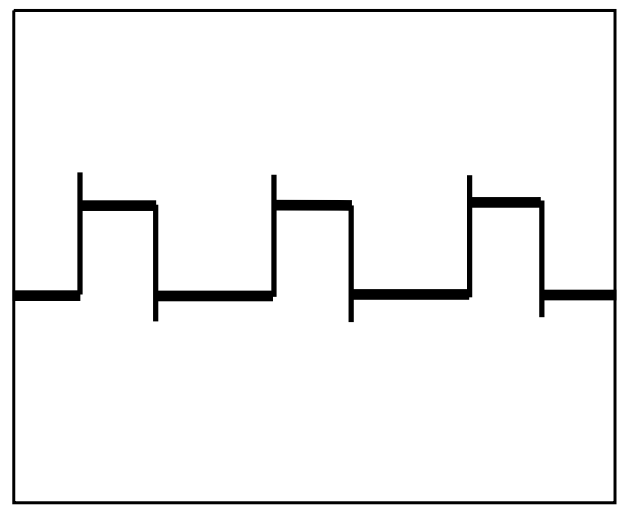

5 Vp-p (2 V)

⓮ IC200 (95) REC

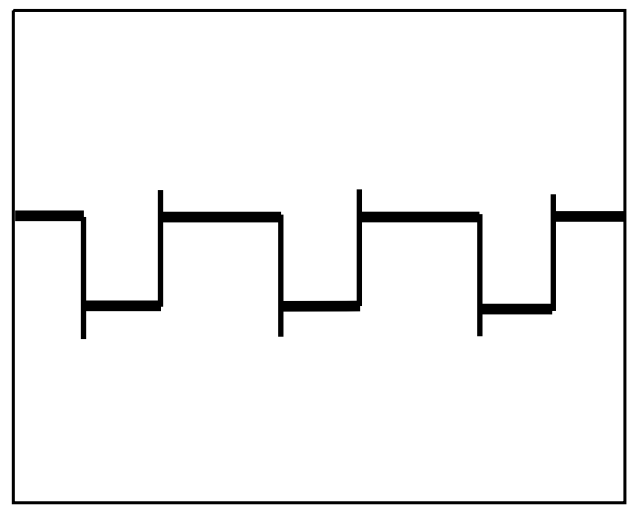

5 Vp-p (2 V)

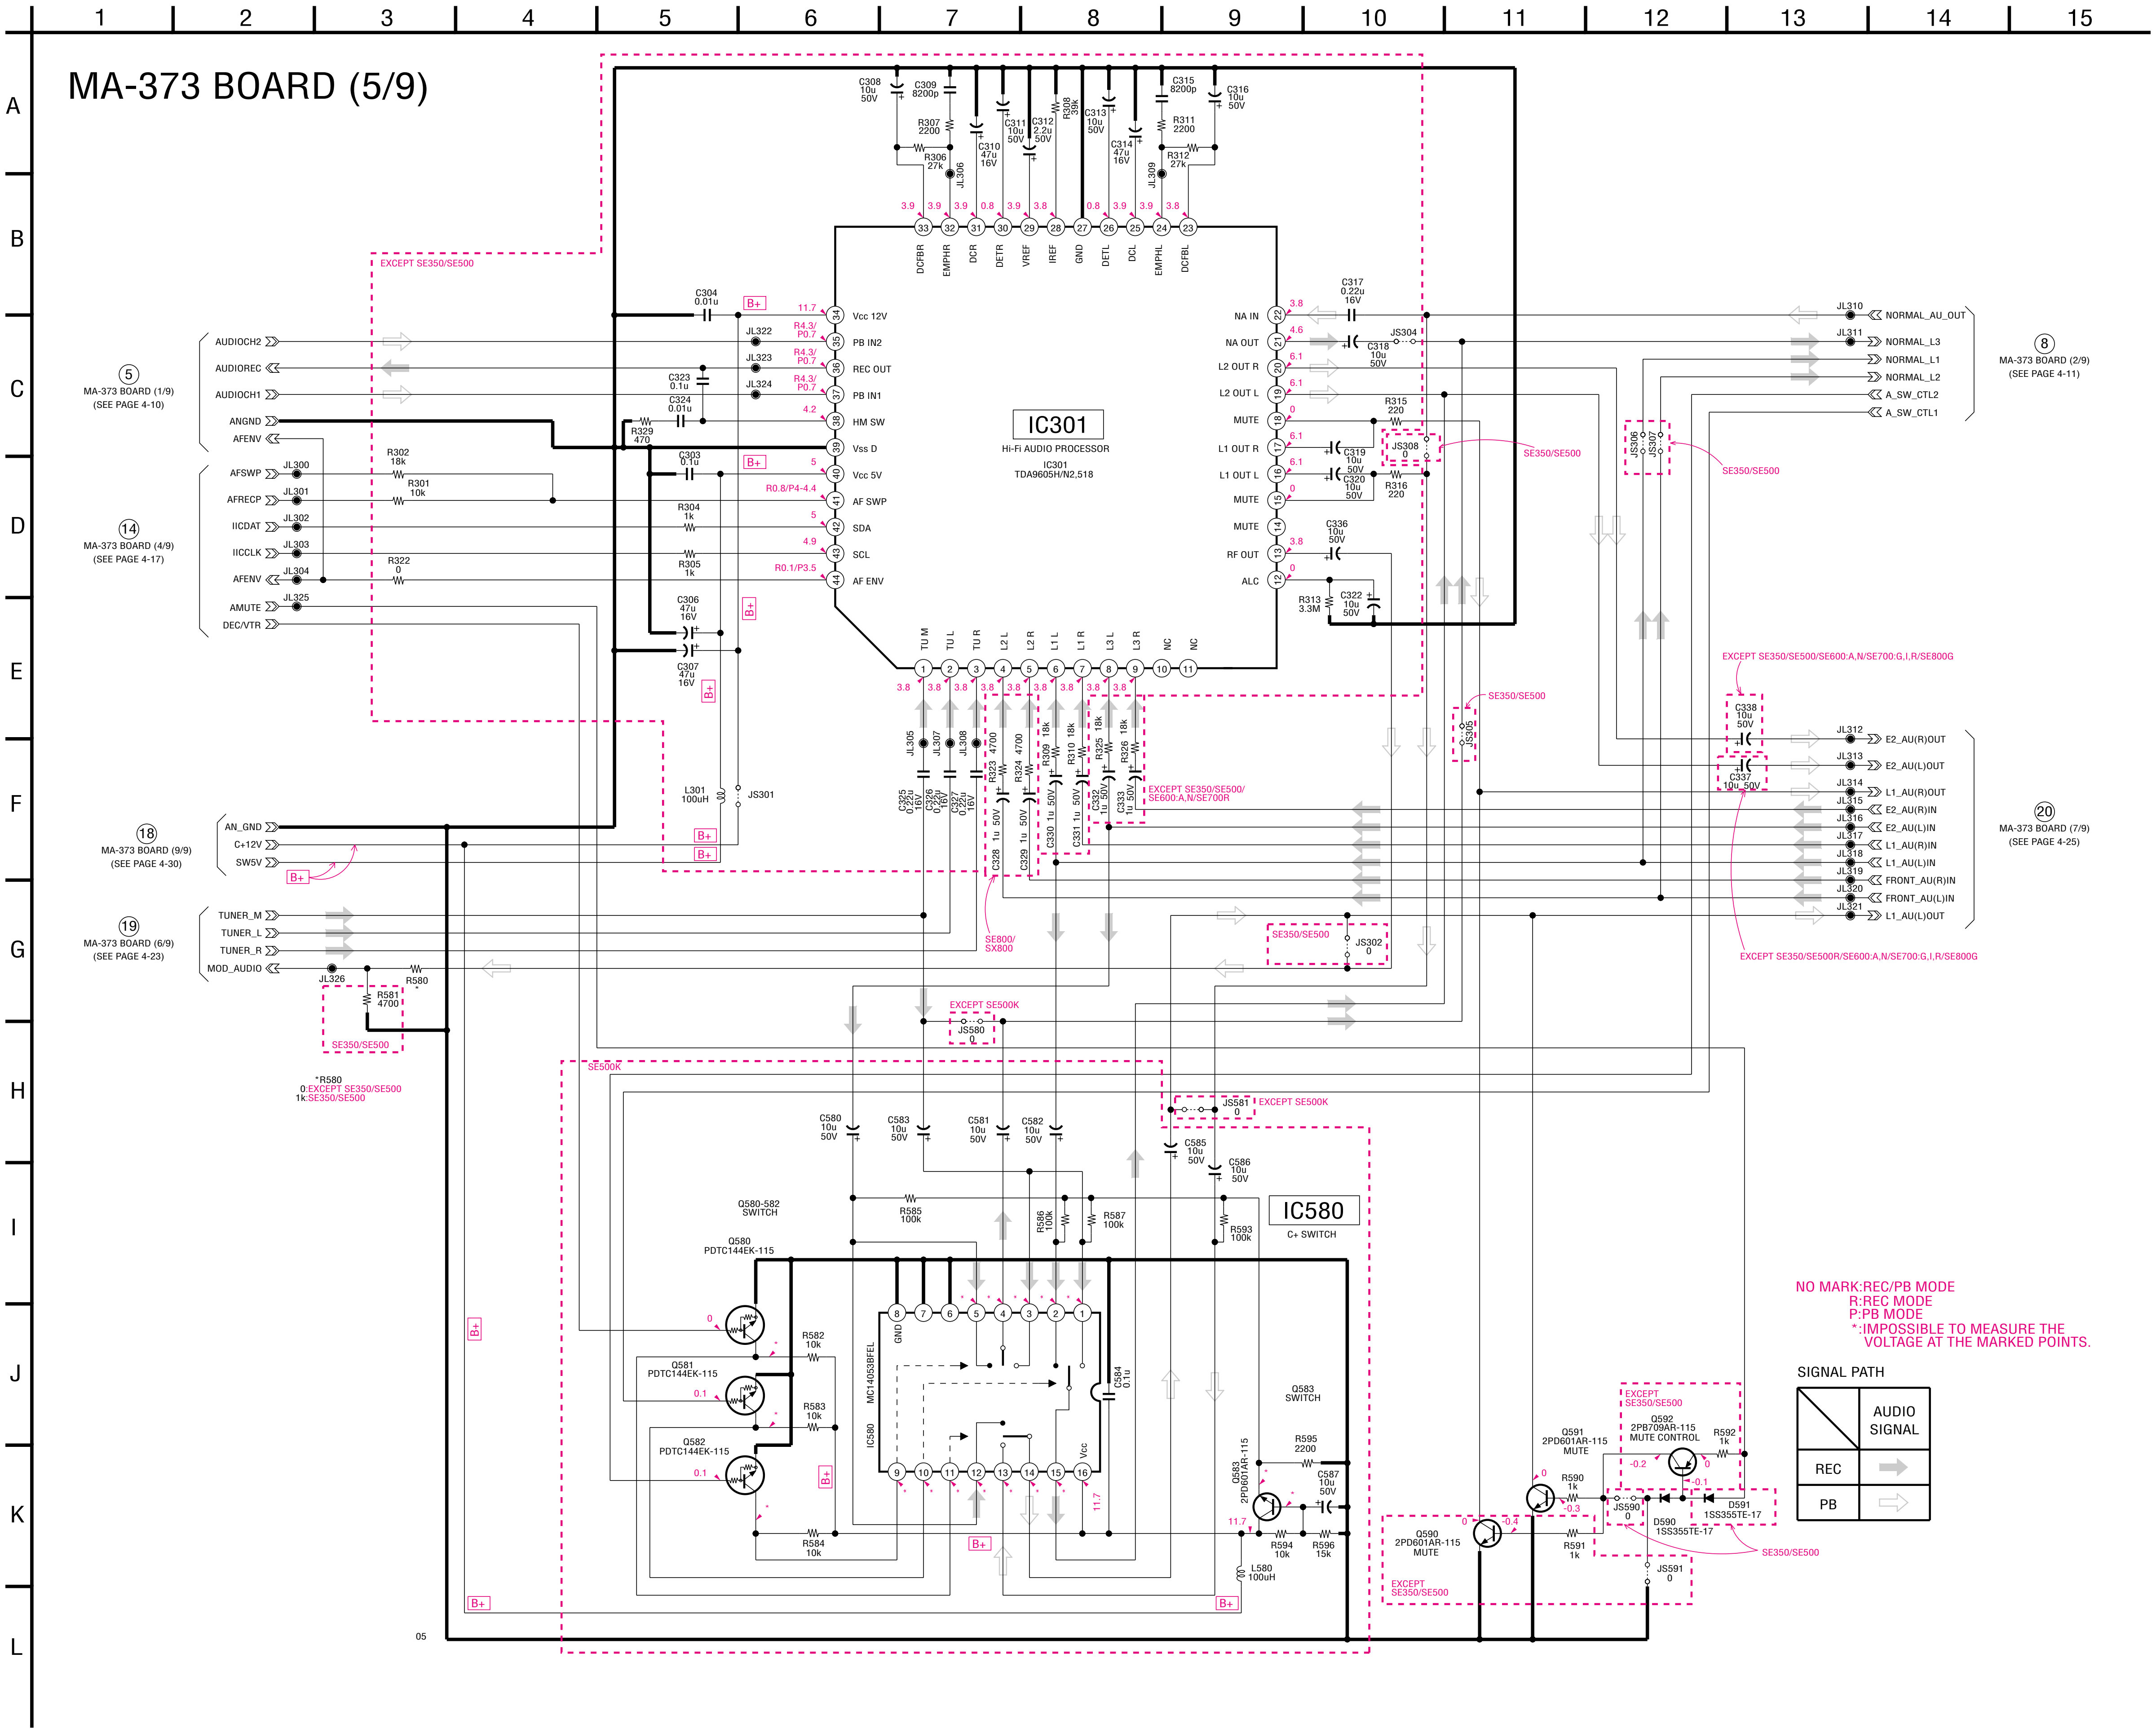
MA-373 BOARD (5/9)
1 2 3 4 5 6 7 8 9 10 11 12 13 14 15
A B C D E F G H I J K L
IC301
Hi-Fi AUDIO PROCESSOR
IC301
TDA9605H/N2,518
IC580
C+ SWITCH
IC580 MC14053BFEL
Q580-582 SWITCH
Q580 PDTC144EK-115
Q581 PDTC144EK-115
Q582 PDTC144EK-115
Q583 SWITCH
Q583 2PD601AR-115
Q590 2PD601AR-115 MUTE
Q591 2PD601AR-115 MUTE
Q592 2PB709AR-115 MUTE CONTROL
D590 1SS355TE-17
D591 1SS355TE-17
5 MA-373 BOARD (1/9) (SEE PAGE 4-10)
14 MA-373 BOARD (4/9) (SEE PAGE 4-17)
18 MA-373 BOARD (9/9) (SEE PAGE 4-30)
19 MA-373 BOARD (6/9) (SEE PAGE 4-23)
8 MA-373 BOARD (2/9) (SEE PAGE 4-11)
20 MA-373 BOARD (7/9) (SEE PAGE 4-25)
AUDIOCH2
AUDIOREC
AUDIOCH1
ANGND
AFENV
AFSWP
AFRECP
IICDAT
IICCLK
AFENV
AMUTE
DEC/VTR
AN_GND
C+12V
SW5V
TUNER_M
TUNER_L
TUNER_R
MOD_AUDIO
NORMAL_AU_OUT
NORMAL_L3
NORMAL_L1
NORMAL_L2
A_SW_CTL2
A_SW_CTL1
E2_AU(R)OUT
E2_AU(L)OUT
L1_AU(R)OUT
E2_AU(R)IN
E2_AU(L)IN
L1_AU(R)IN
L1_AU(L)IN
FRONT_AU(R)IN
FRONT_AU(L)IN
L1_AU(L)OUT
Vcc 12V
PB IN2
REC OUT
PB IN1
HM SW
Vss D
Vcc 5V
AF SWP
SDA
SCL
AF ENV
NA IN
NA OUT
L2 OUT R
L2 OUT L
MUTE
L1 OUT R
L1 OUT L
MUTE
MUTE
RF OUT
ALC
DCFBR EMPHR DCR DETR VREF IREF GND DETL DCL EMPHL DCFBL
TU M TU L TU R L2 L L2 R L1 L L1 R L3 L L3 R NC NC
EXCEPT SE350/SE500
SE350/SE500
SE500K
EXCEPT SE500K
SE800/SX800
EXCEPT SE350/SE500/SE600:A,N/SE700R
EXCEPT SE350/SE500/SE600:A,N/SE700:G,I,R/SE800G
EXCEPT SE350/SE500R/SE600:A,N/SE700:G,I,R/SE800G
*R580 0:EXCEPT SE350/SE500 1k:SE350/SE500
L301 100uH
L580 100uH
05

NO MARK:REC/PB MODE
R:REC MODE
P:PB MODE
*:IMPOSSIBLE TO MEASURE THE VOLTAGE AT THE MARKED POINTS.

SIGNAL PATH

	AUDIO SIGNAL
REC	➡
PB	⇨

MA-373 (TUNER) SCHEMATIC DIAGRAM • See page 4-5 for printed wiring board.

– Ref. No.: MA-373 board; 1,000 series –

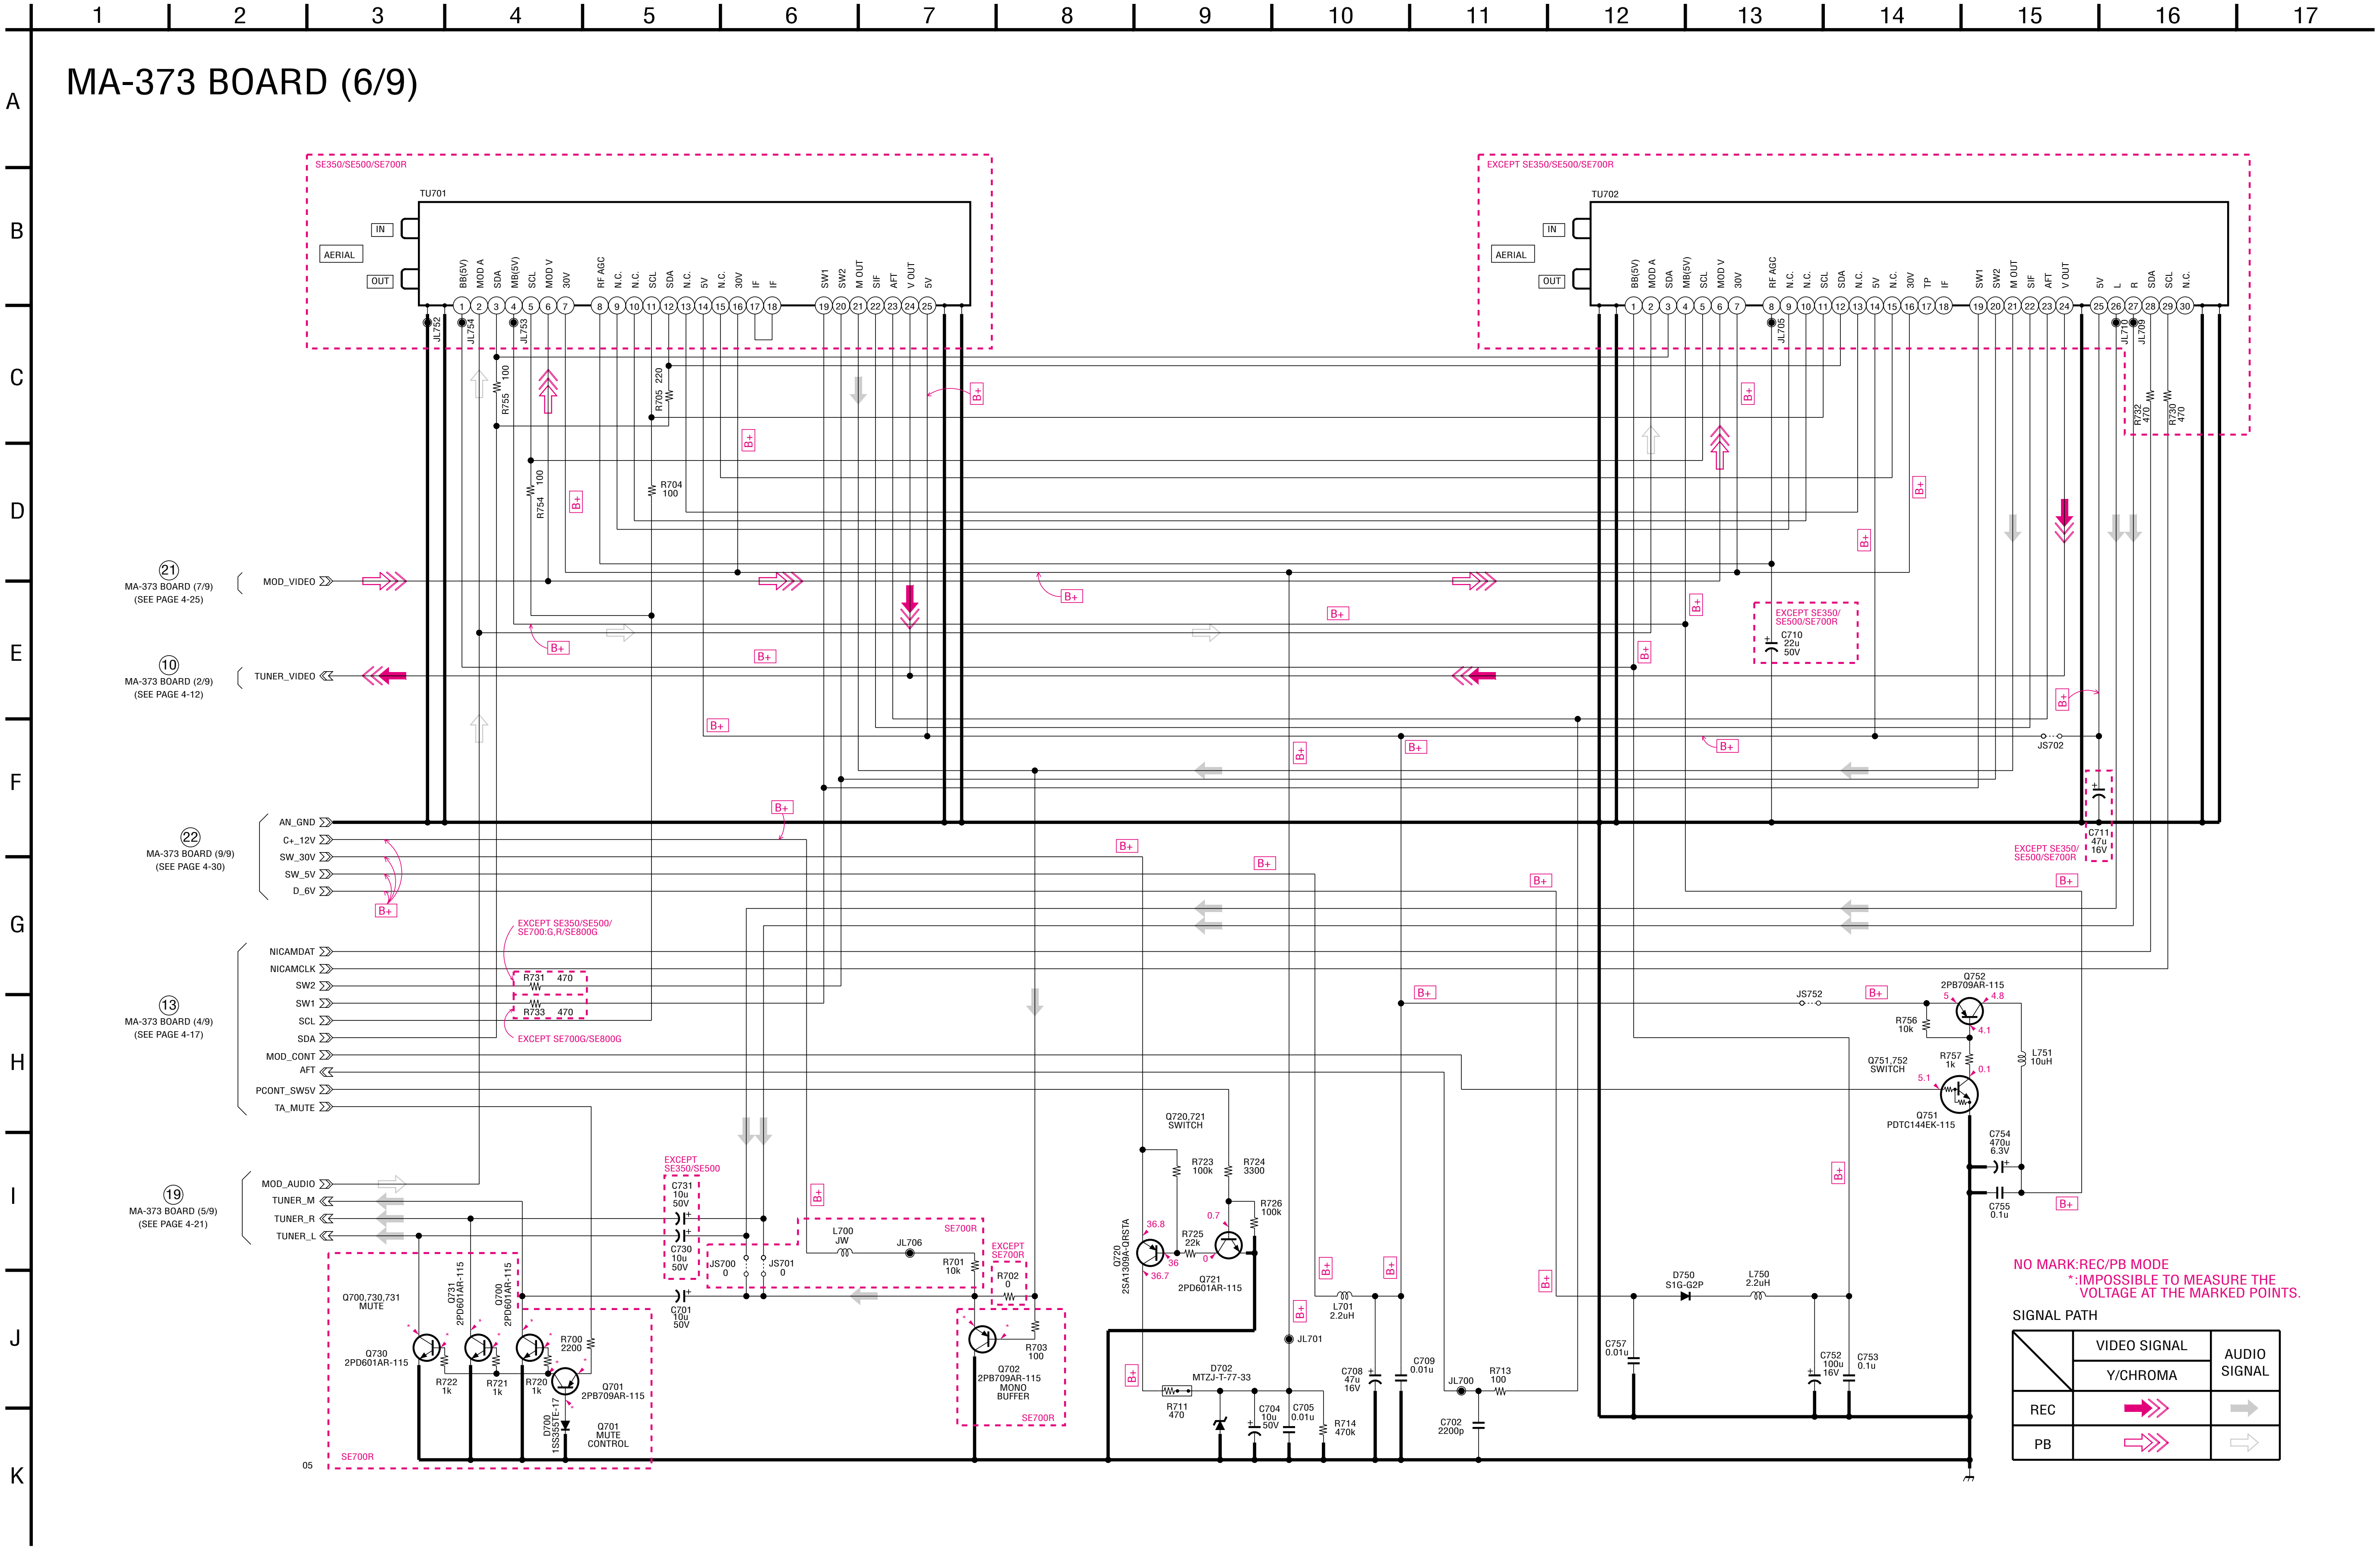

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
A
B
C
D
E
F
G
H
I
J
K
MA-373 BOARD (6/9)
SE350/SE500/SE700R
TU701
IN
AERIAL
OUT
BB(5V)
MOD A
SDA
MB(5V)
SCL
MOD V
30V
RF AGC
N.C.
N.C.
SCL
SDA
N.C.
5V
N.C.
30V
IF
IF
SW1
SW2
M OUT
SIF
AFT
V OUT
5V
JL752
JL754
JL753
R755 100
R705 220
R754 100
R704 100
EXCEPT SE350/SE500/SE700R
TU702
TP
L
R
JL705
JL710
JL709
R732 470
R730 470
EXCEPT SE350/ SE500/SE700R
C710 22u 50V
JS702
C711 47u 16V
EXCEPT SE350/ SE500/SE700R
B+
㉑ MA-373 BOARD (7/9) (SEE PAGE 4-25)
MOD_VIDEO
⑩ MA-373 BOARD (2/9) (SEE PAGE 4-12)
TUNER_VIDEO
㉒ MA-373 BOARD (9/9) (SEE PAGE 4-30)
AN_GND
C+_12V
SW_30V
SW_5V
D_6V
EXCEPT SE350/SE500/ SE700:G,R/SE800G
R731 470
R733 470
EXCEPT SE700G/SE800G
⑬ MA-373 BOARD (4/9) (SEE PAGE 4-17)
NICAMDAT
NICAMCLK
SW2
SW1
SCL
SDA
MOD_CONT
AFT
PCONT_SW5V
TA_MUTE
⑲ MA-373 BOARD (5/9) (SEE PAGE 4-21)
MOD_AUDIO
TUNER_M
TUNER_R
TUNER_L
Q700,730,731 MUTE
Q730 2PD601AR-115
Q731 2PD601AR-115
Q700 2PD601AR-115
R722 1k
R721 1k
R720 1k
R700 2200
Q701 2PB709AR-115
D700 1SS355TE-17
Q701 MUTE CONTROL
SE700R
05
EXCEPT SE350/SE500
C731 10u 50V
C730 10u 50V
C701 10u 50V
JS700 0
JS701 0
L700 JW
JL706
SE700R
R701 10k
EXCEPT SE700R
R702 0
R703 100
Q702 2PB709AR-115 MONO BUFFER
SE700R
Q720,721 SWITCH
R723 100k
R724 3300
R726 100k
R725 22k
36.8
36
36.7
0.7
0
Q720 2SA1309A-QRSTA
Q721 2PD601AR-115
JL701
D702 MTZJ-T-77-33
R711 470
C704 10u 50V
C705 0.01u
R714 470k
L701 2.2uH
C708 47u 16V
C709 0.01u
JL700
R713 100
C702 2200p
JS752
Q752 2PB709AR-115
5
4.8
4.1
R756 10k
Q751,752 SWITCH
R757 1k
0.1
5.1
L751 10uH
Q751 PDTC144EK-115
C754 470u 6.3V
C755 0.1u
D750 S1G-G2P
L750 2.2uH
C757 0.01u
C752 100u 16V
C753 0.1u

NO MARK:REC/PB MODE

* :IMPOSSIBLE TO MEASURE THE VOLTAGE AT THE MARKED POINTS.

SIGNAL PATH

	VIDEO SIGNAL Y/CHROMA	AUDIO SIGNAL
REC	➡	➡
PB	⇨	⇨

MA-373 (I/O) SCHEMATIC DIAGRAM • See page 4-5 for printed wiring board.

– Ref. No.: MA-373 board; 1,000 series –

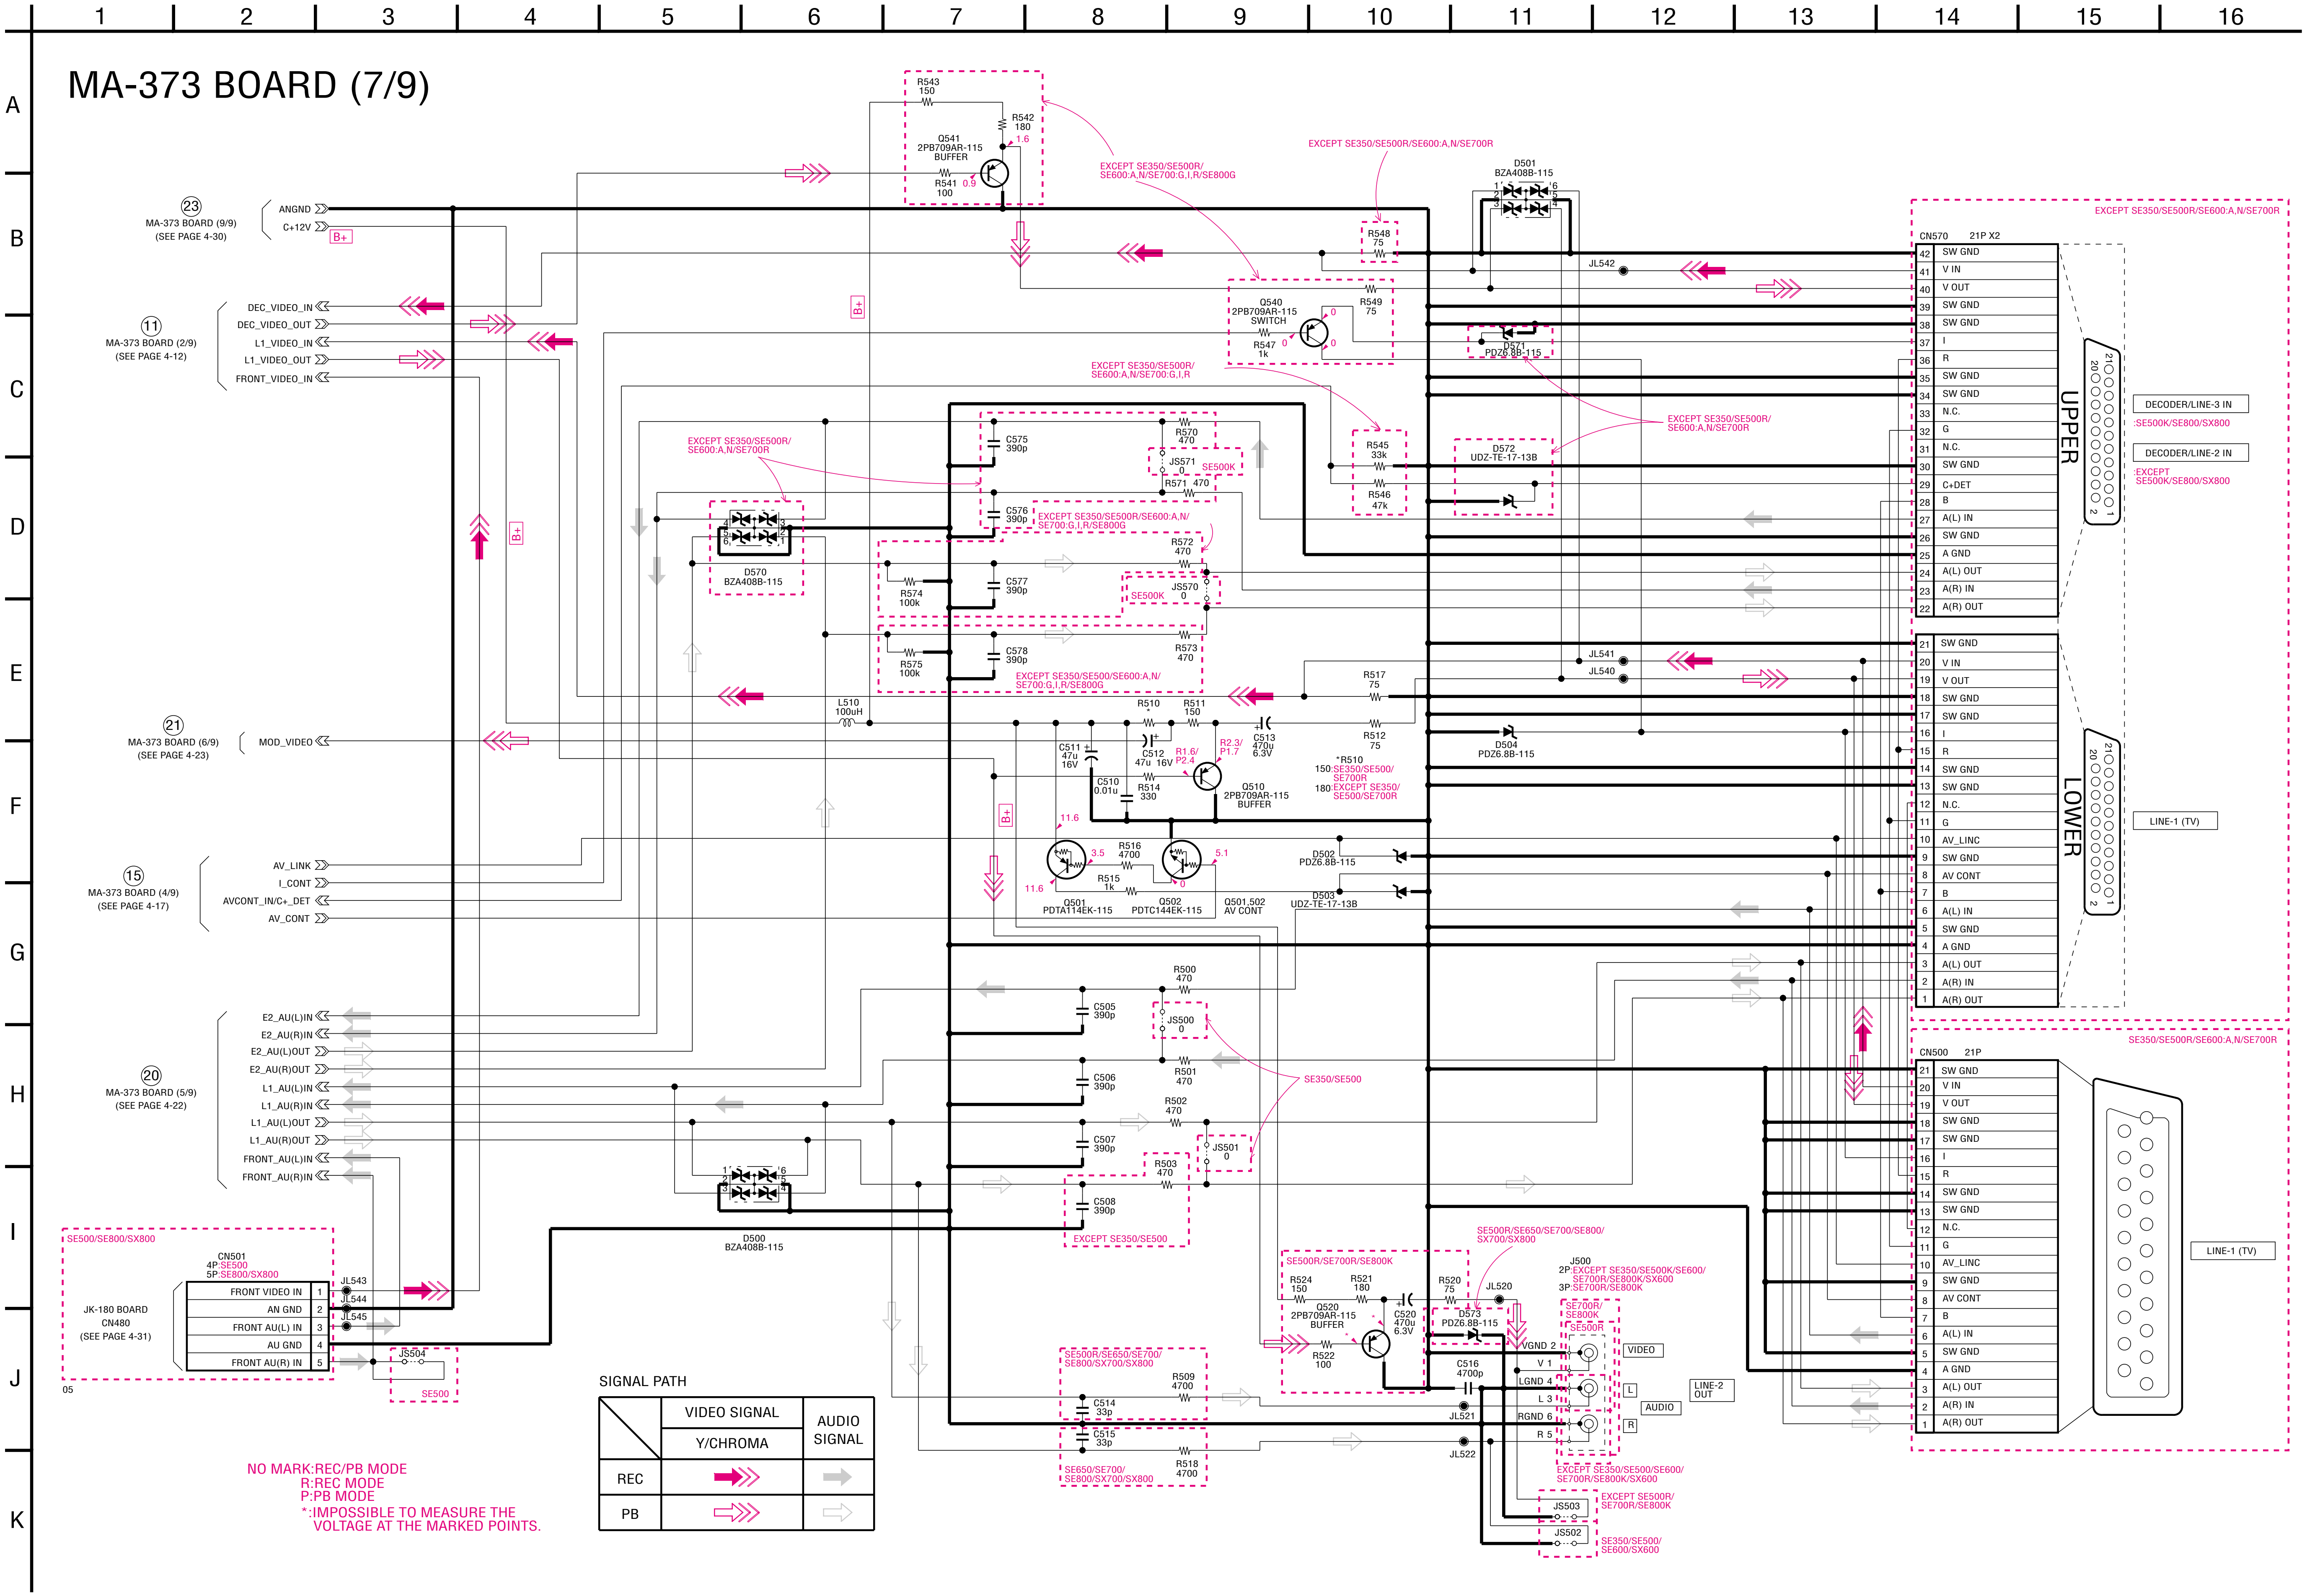
1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
A
B
C
D
E
F
G
H
I
J
K
MA-373 BOARD (7/9)
㉓ MA-373 BOARD (9/9) (SEE PAGE 4-30)
ANGND
C+12V
B+
⑪ MA-373 BOARD (2/9) (SEE PAGE 4-12)
DEC_VIDEO_IN
DEC_VIDEO_OUT
L1_VIDEO_IN
L1_VIDEO_OUT
FRONT_VIDEO_IN
㉑ MA-373 BOARD (6/9) (SEE PAGE 4-23)
MOD_VIDEO
⑮ MA-373 BOARD (4/9) (SEE PAGE 4-17)
AV_LINK
I_CONT
AVCONT_IN/C+_DET
AV_CONT
⑳ MA-373 BOARD (5/9) (SEE PAGE 4-22)
E2_AU(L)IN
E2_AU(R)IN
E2_AU(L)OUT
E2_AU(R)OUT
L1_AU(L)IN
L1_AU(R)IN
L1_AU(L)OUT
L1_AU(R)OUT
FRONT_AU(L)IN
FRONT_AU(R)IN
SE500/SE800/SX800
CN501 4P:SE500 5P:SE800/SX800
JK-180 BOARD CN480 (SEE PAGE 4-31)
FRONT VIDEO IN
AN GND
FRONT AU(L) IN
AU GND
FRONT AU(R) IN
JL543
JL544
JL545
JS504
SE500
05
R543 150
R542 180
1.6
Q541 2PB709AR-115 BUFFER
R541 100
0.9
EXCEPT SE350/SE500R/SE600:A,N/SE700:G,I,R/SE800G
EXCEPT SE350/SE500R/SE600:A,N/SE700R
D501 BZA408B-115
R548 75
JL542
Q540 2PB709AR-115 SWITCH
R547 1k
R549 75
D571 PDZ6.8B-115
EXCEPT SE350/SE500R/SE600:A,N/SE700:G,I,R
EXCEPT SE350/SE500R/SE600:A,N/SE700R
C575 390p
R570 470
JS571 0
SE500K
R571 470
R545 33k
R546 47k
D572 UDZ-TE-17-13B
EXCEPT SE350/SE500R/SE600:A,N/SE700R
D570 BZA408B-115
C576 390p
EXCEPT SE350/SE500R/SE600:A,N/SE700:G,I,R/SE800G
R572 470
R574 100k
C577 390p
SE500K
JS570 0
R575 100k
C578 390p
R573 470
EXCEPT SE350/SE500/SE600:A,N/SE700:G,I,R/SE800G
L510 100uH
R510 *
R511 150
C513 470u 6.3V
C511 47u 16V
C512 47u 16V
R1.6/P2.4
R2.3/P1.7
C510 0.01u
R514 330
Q510 2PB709AR-115 BUFFER
R512 75
R517 75
*R510 150:SE350/SE500/SE700R 180:EXCEPT SE350/SE500/SE700R
JL541
JL540
D504 PDZ6.8B-115
11.6
3.5
R516 4700
5.1
R515 1k
0
11.6
Q501 PDTA114EK-115
Q502 PDTC144EK-115
Q501,502 AV CONT
D502 PDZ6.8B-115
D503 UDZ-TE-17-13B
R500 470
C505 390p
JS500 0
R501 470
SE350/SE500
R502 470
C506 390p
C507 390p
JS501 0
R503 470
C508 390p
EXCEPT SE350/SE500
D500 BZA408B-115
SE500R/SE700R/SE800K
R524 150
R521 180
Q520 2PB709AR-115 BUFFER
R522 100
R520 75
C520 470u 6.3V
D573 PDZ6.8B-115
JL520
SE500R/SE650/SE700/SE800/SX700/SX800
J500 2P:EXCEPT SE350/SE500K/SE600/SE700R/SE800K/SX600 3P:SE700R/SE800K
SE700R/SE800K
SE500R
VGND 2
V 1
LGND 4
L 3
RGND 6
R 5
VIDEO
L
AUDIO
R
LINE-2 OUT
C516 4700p
JL521
JL522
SE500R/SE650/SE700/SE800/SX700/SX800
R509 4700
C514 33p
C515 33p
R518 4700
SE650/SE700/SE800/SX700/SX800
EXCEPT SE350/SE500/SE600/SE700R/SE800K/SX600
JS503
EXCEPT SE500R/SE700R/SE800K
JS502
SE350/SE500/SE600/SX600
EXCEPT SE350/SE500R/SE600:A,N/SE700R
CN570 21P X2
42 SW GND
41 V IN
40 V OUT
39 SW GND
38 SW GND
37 I
36 R
35 SW GND
34 SW GND
33 N.C.
32 G
31 N.C.
30 SW GND
29 C+DET
28 B
27 A(L) IN
26 SW GND
25 A GND
24 A(L) OUT
23 A(R) IN
22 A(R) OUT
21 SW GND
20 V IN
19 V OUT
18 SW GND
17 SW GND
16 I
15 R
14 SW GND
13 SW GND
12 N.C.
11 G
10 AV_LINC
9 SW GND
8 AV CONT
7 B
6 A(L) IN
5 SW GND
4 A GND
3 A(L) OUT
2 A(R) IN
1 A(R) OUT
UPPER
LOWER
DECODER/LINE-3 IN :SE500K/SE800/SX800
DECODER/LINE-2 IN :EXCEPT SE500K/SE800/SX800
LINE-1 (TV)
SE350/SE500R/SE600:A,N/SE700R
CN500 21P
21 SW GND
20 V IN
19 V OUT
18 SW GND
17 SW GND
16 I
15 R
14 SW GND
13 SW GND
12 N.C.
11 G
10 AV_LINC
9 SW GND
8 AV CONT
7 B
6 A(L) IN
5 SW GND
4 A GND
3 A(L) OUT
2 A(R) IN
1 A(R) OUT
LINE-1 (TV)

SIGNAL PATH

	VIDEO SIGNAL	AUDIO SIGNAL
	Y/CHROMA	
REC	➡	➡
PB	⇨	⇨

NO MARK:REC/PB MODE
R:REC MODE
P:PB MODE
*:IMPOSSIBLE TO MEASURE THE VOLTAGE AT THE MARKED POINTS.

MA-373 (MODE CONTROL) SCHEMATIC DIAGRAM • See page 4-5 for printed wiring board.

– Ref. No.: MA-373 board; 1,000 series –

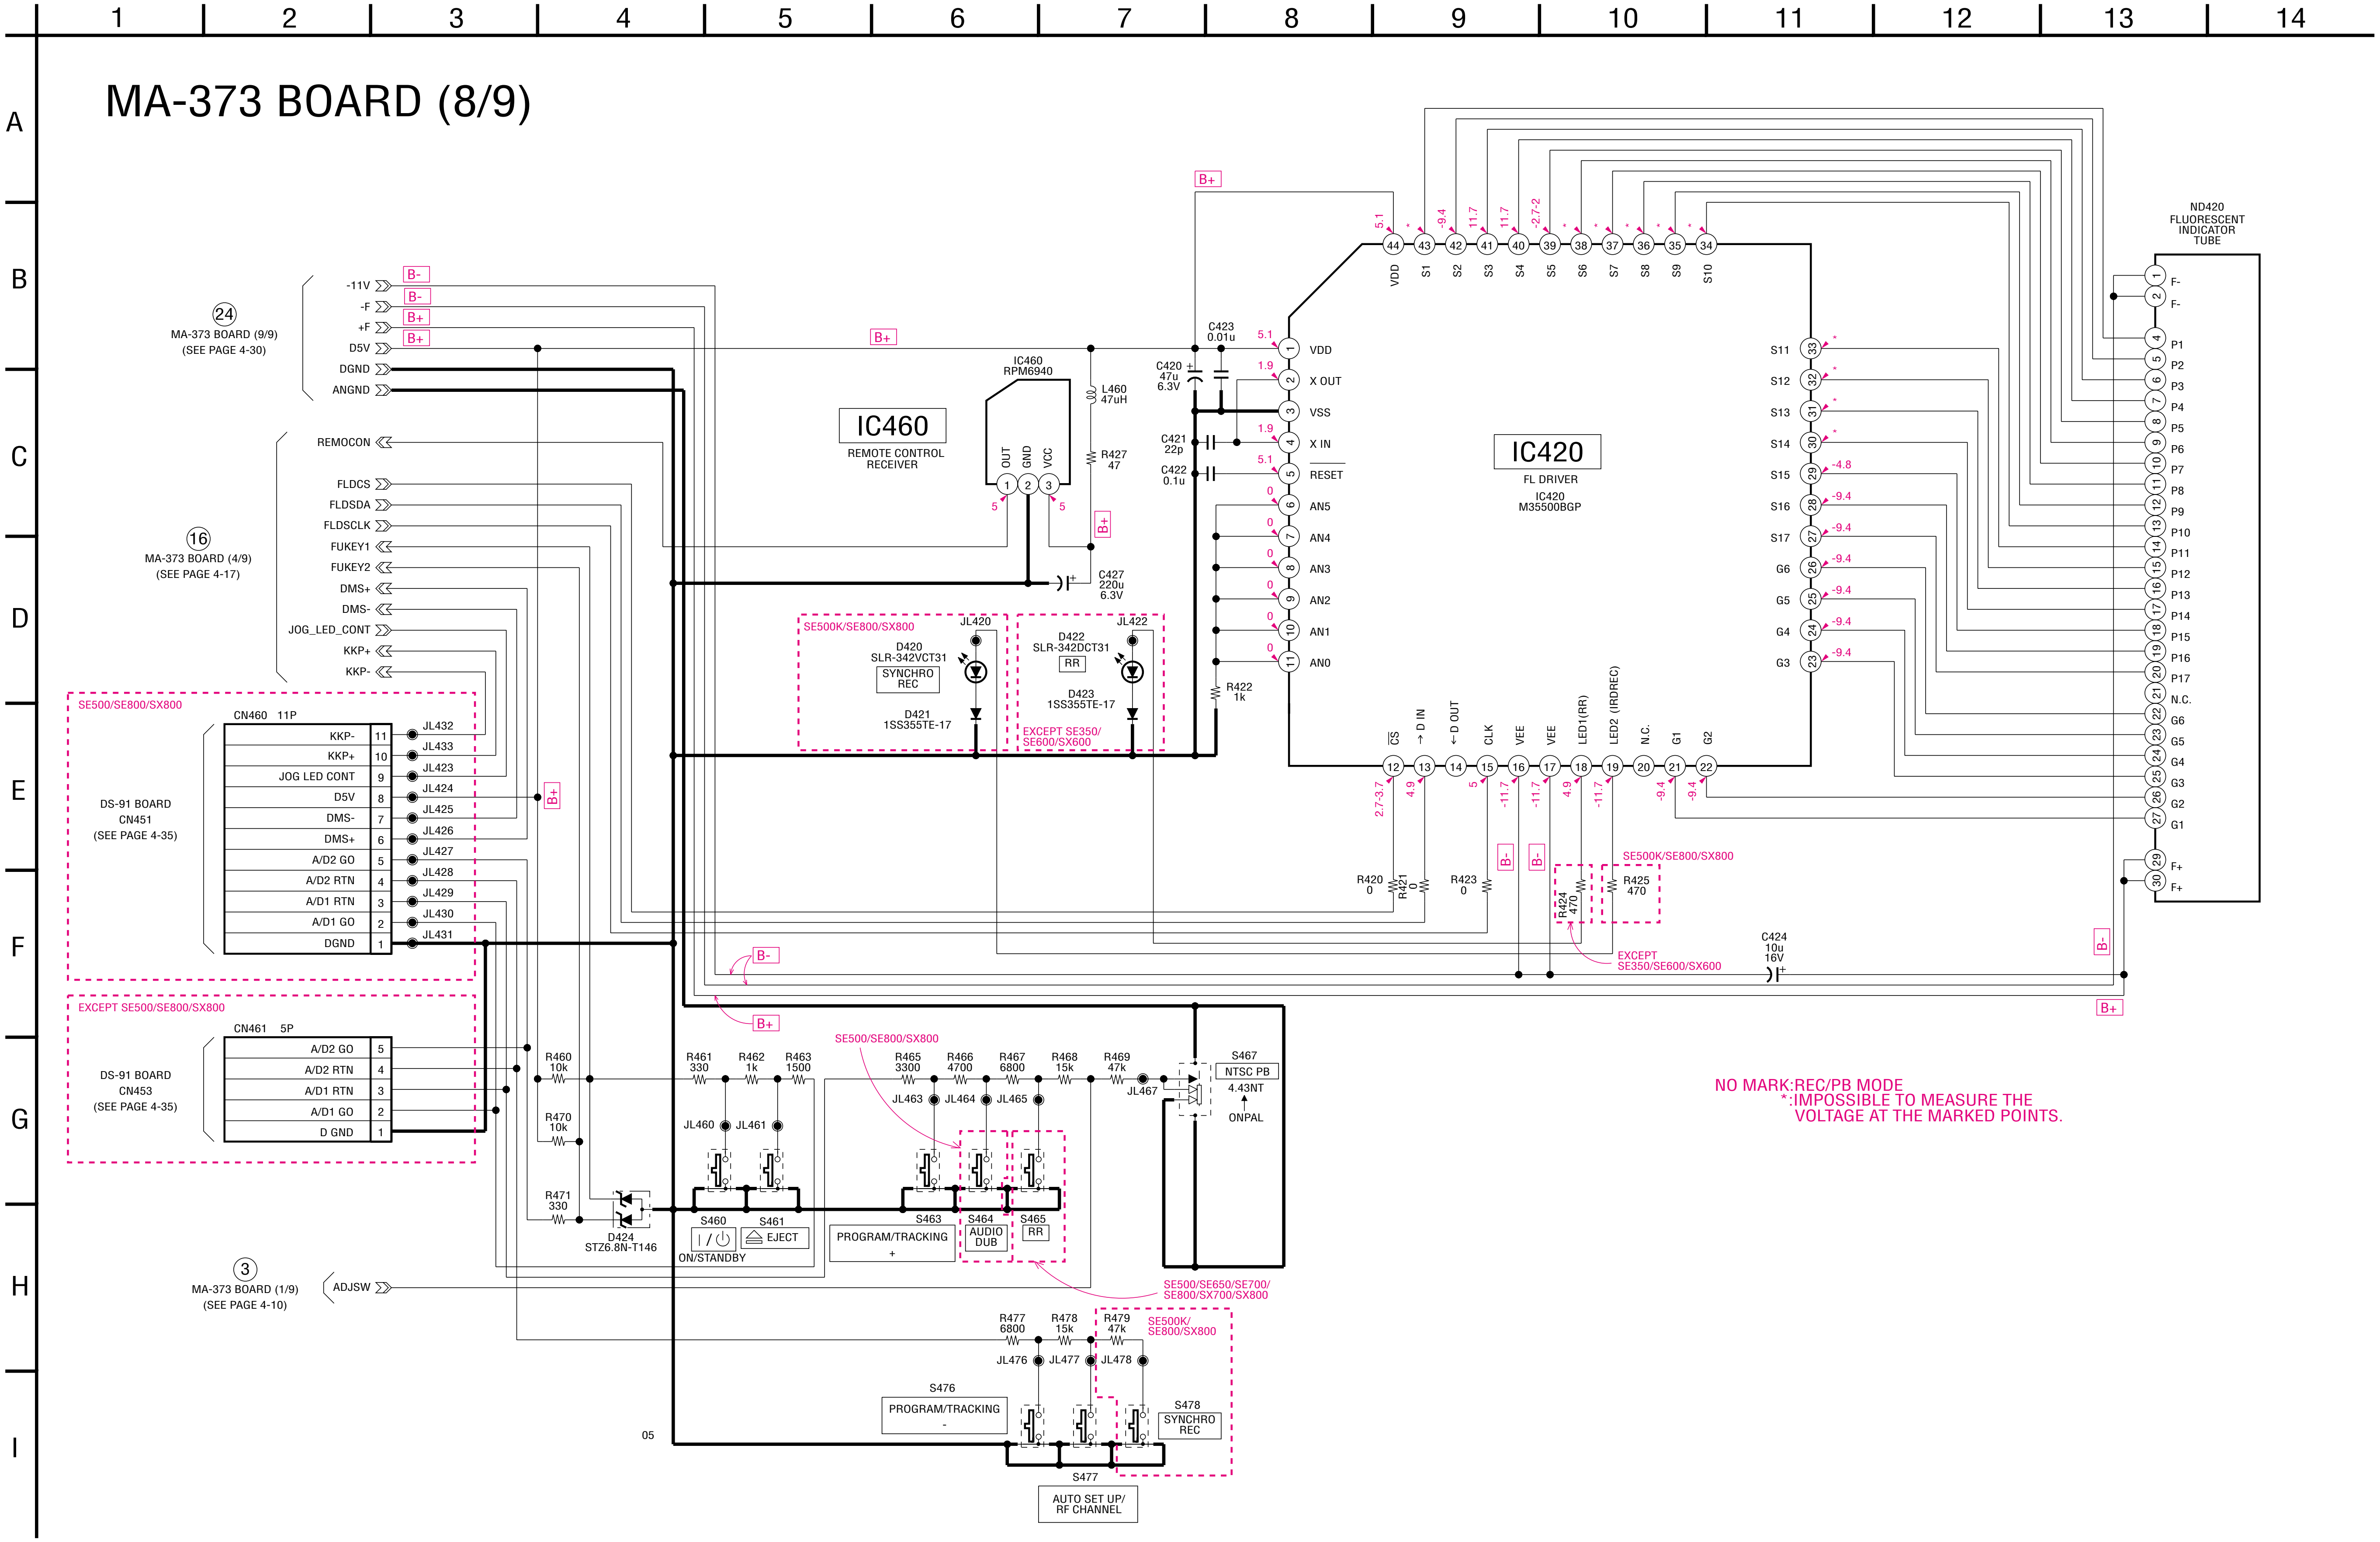
MA-373 BOARD (8/9)
1 2 3 4 5 6 7 8 9 10 11 12 13 14
A B C D E F G H I
IC460
REMOTE CONTROL RECEIVER
IC460 RPM6940
OUT GND VCC
IC420
FL DRIVER
IC420 M35500BGP
ND420 FLUORESCENT INDICATOR TUBE
24 MA-373 BOARD (9/9) (SEE PAGE 4-30)
-11V -F +F D5V DGND ANGND
16 MA-373 BOARD (4/9) (SEE PAGE 4-17)
REMOCON FLDCS FLDSDA FLDSCLK FUKEY1 FUKEY2 DMS+ DMS- JOG_LED_CONT KKP+ KKP-
SE500/SE800/SX800
CN460 11P
DS-91 BOARD CN451 (SEE PAGE 4-35)
KKP- KKP+ JOG LED CONT D5V DMS- DMS+ A/D2 GO A/D2 RTN A/D1 RTN A/D1 GO DGND
EXCEPT SE500/SE800/SX800
CN461 5P
DS-91 BOARD CN453 (SEE PAGE 4-35)
A/D2 GO A/D2 RTN A/D1 RTN A/D1 GO D GND
3 MA-373 BOARD (1/9) (SEE PAGE 4-10)
ADJSW
SE500K/SE800/SX800
D420 SLR-342VCT31 SYNCHRO REC
D421 1SS355TE-17
D422 SLR-342DCT31 RR
D423 1SS355TE-17
EXCEPT SE350/SE600/SX600
VDD X OUT VSS X IN RESET AN5 AN4 AN3 AN2 AN1 AN0
CS D IN D OUT CLK VEE VEE LED1(RR) LED2 (IRDREC) N.C. G1 G2
S11 S12 S13 S14 S15 S16 S17 G6 G5 G4 G3
VDD S1 S2 S3 S4 S5 S6 S7 S8 S9 S10
F- F- P1 P2 P3 P4 P5 P6 P7 P8 P9 P10 P11 P12 P13 P14 P15 P16 P17 N.C. G6 G5 G4 G3 G2 G1 F+ F+
SE500K/SE800/SX800
EXCEPT SE350/SE600/SX600
S460 I/⏻ ON/STANDBY
S461 EJECT
S463 PROGRAM/TRACKING +
S464 AUDIO DUB
S465 RR
S467 NTSC PB 4.43NT ONPAL
D424 STZ6.8N-T146
SE500/SE650/SE700/SE800/SX700/SX800
SE500K/SE800/SX800
S476 PROGRAM/TRACKING -
S477 AUTO SET UP/RF CHANNEL
S478 SYNCHRO REC
05

NO MARK:REC/PB MODE
*:IMPOSSIBLE TO MEASURE THE VOLTAGE AT THE MARKED POINTS.

MA-373 (POWER SUPPLY) SCHEMATIC DIAGRAM • See page 4-5 for printed wiring board and page 4-19 for waveforms.

– Ref. No.: MA-373 board; 1,000 series –

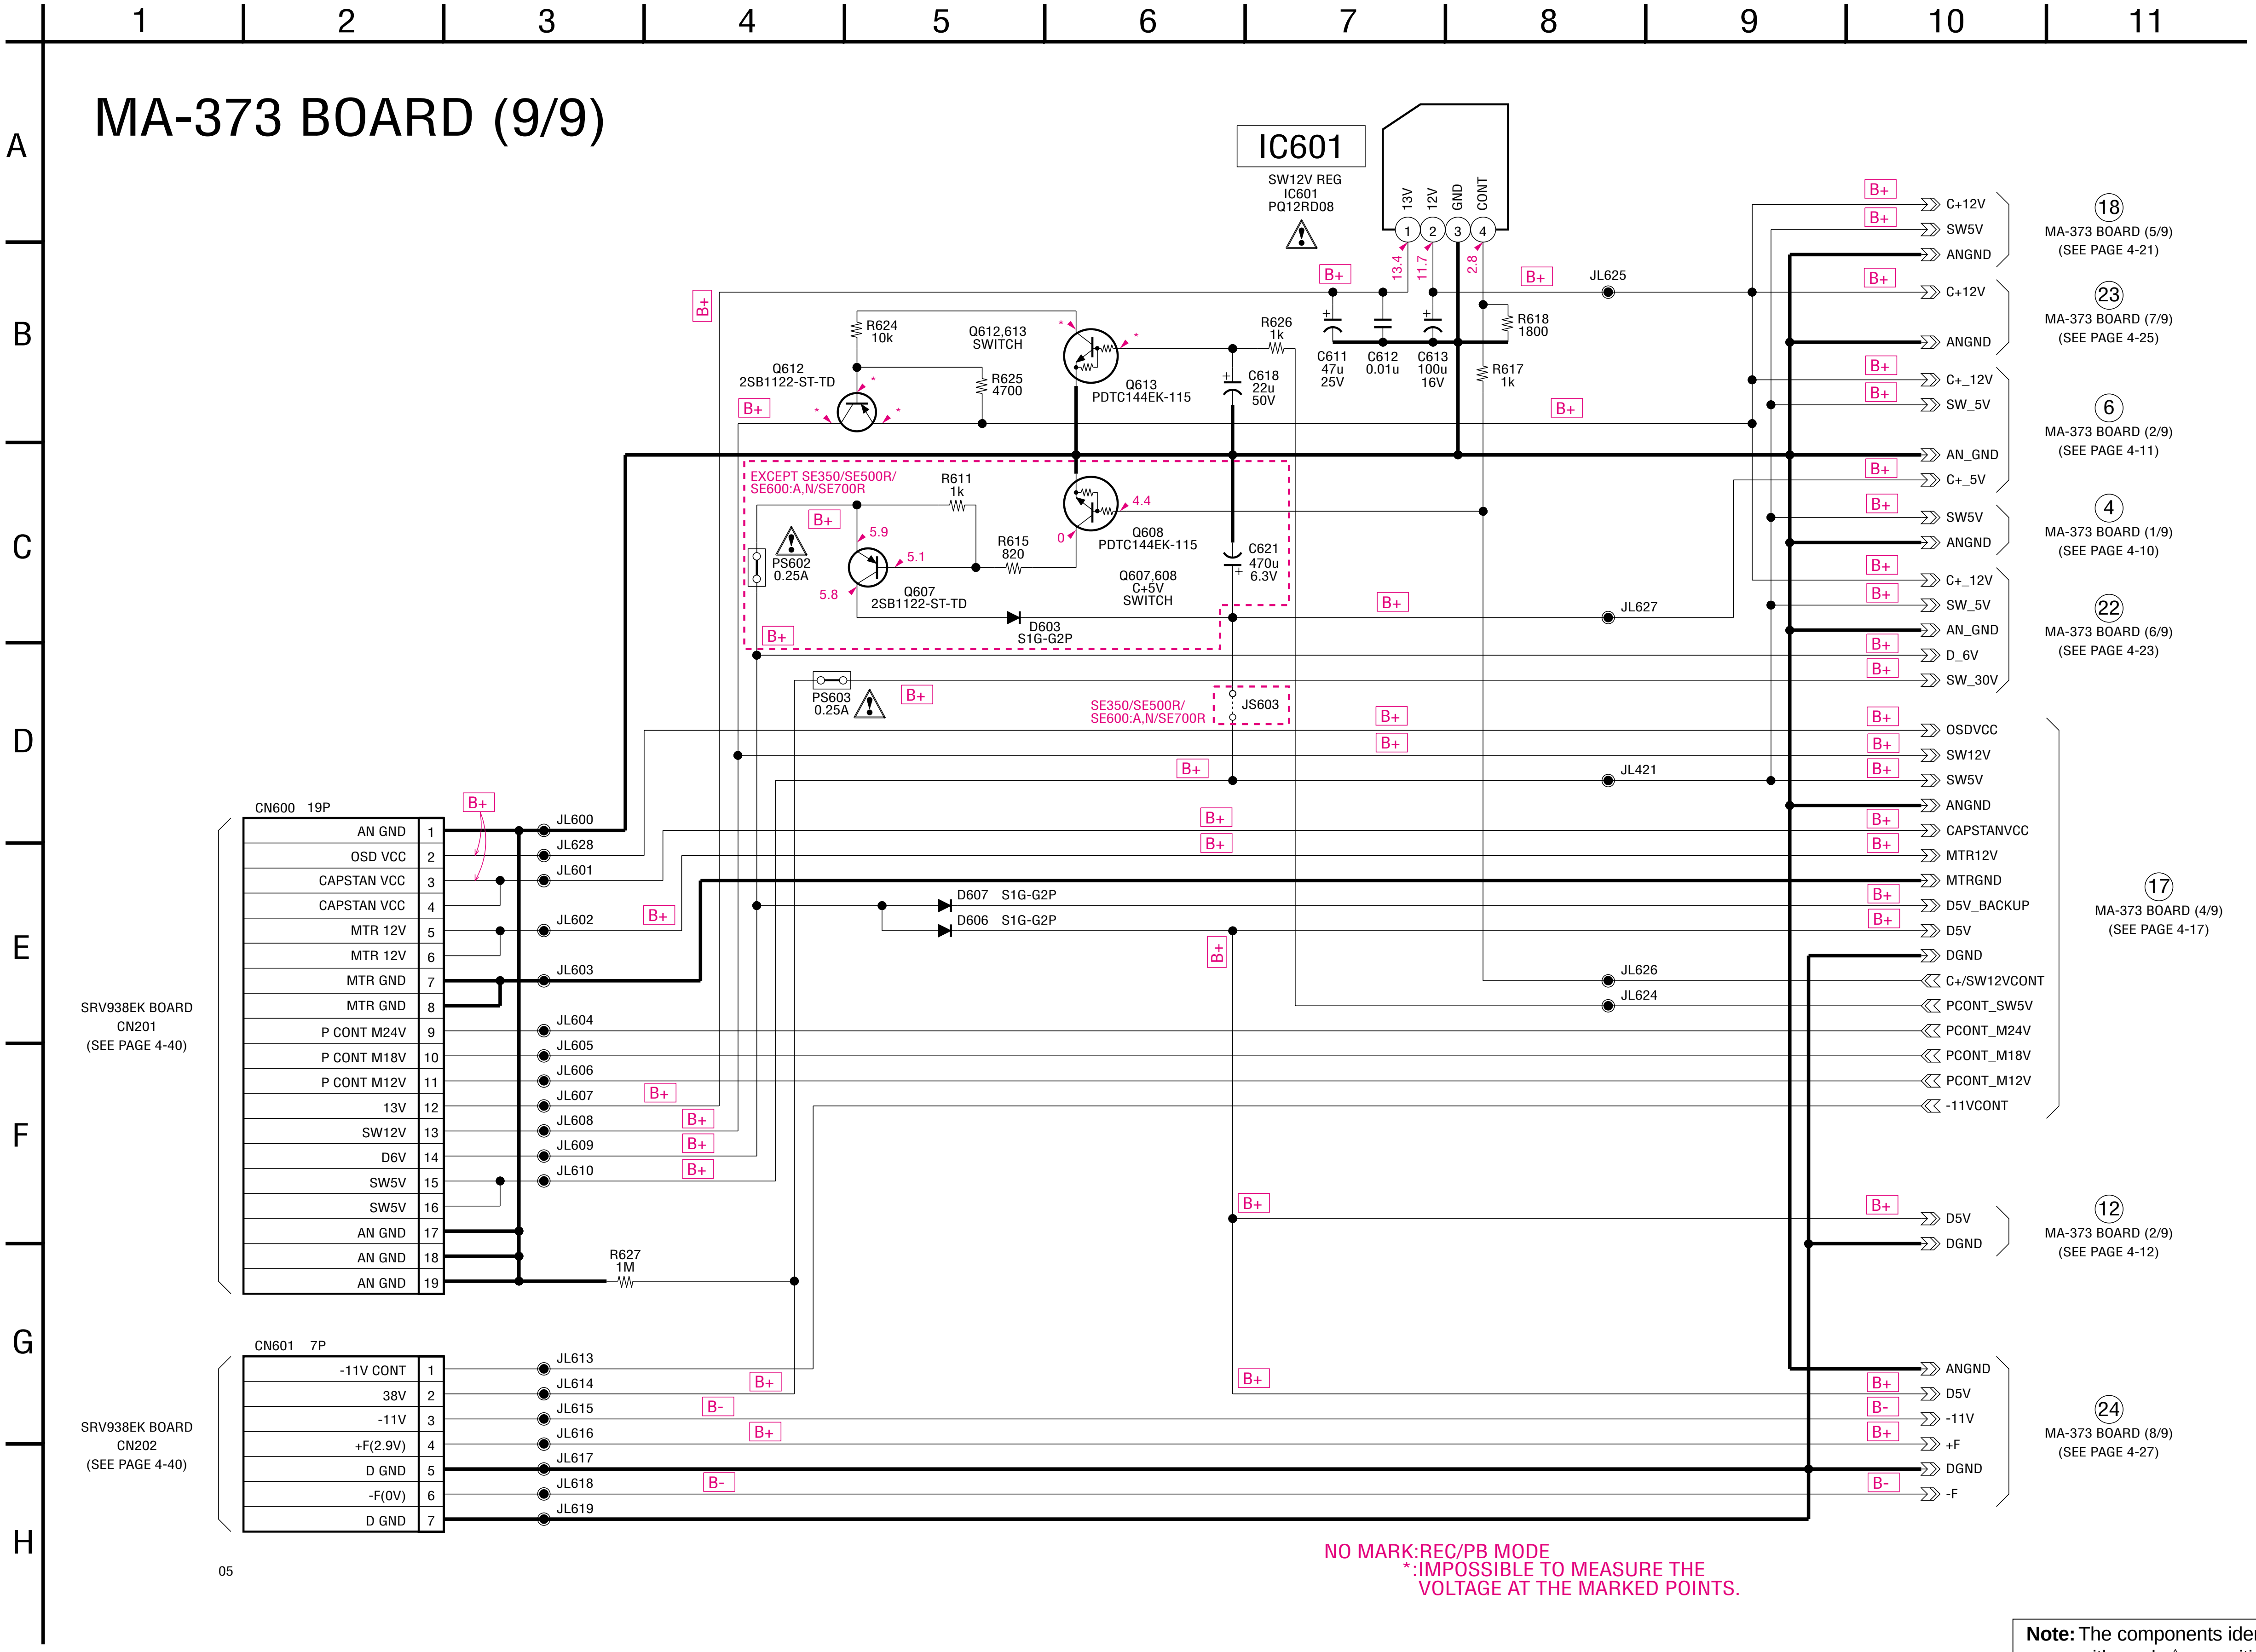
1 2 3 4 5 6 7 8 9 10 11
A B C D E F G H
MA-373 BOARD (9/9)
IC601
SW12V REG
IC601
PQ12RD08
13V 12V GND CONT
1 2 3 4
13.4 11.7 2.8
R624 10k
Q612,613 SWITCH
Q612 2SB1122-ST-TD
R625 4700
Q613 PDTC144EK-115
R626 1k
C611 47u 25V
C612 0.01u
C613 100u 16V
R618 1800
R617 1k
C618 22u 50V
JL625
EXCEPT SE350/SE500R/ SE600:A,N/SE700R
R611 1k
PS602 0.25A
5.9
5.1
5.8
R615 820
0
4.4
Q608 PDTC144EK-115
Q607 2SB1122-ST-TD
Q607,608 C+5V SWITCH
C621 470u 6.3V
D603 S1G-G2P
JL627
PS603 0.25A
SE350/SE500R/ SE600:A,N/SE700R
JS603
JL421
D607 S1G-G2P
D606 S1G-G2P
JL626
JL624
R627 1M
B+
B-
CN600 19P
AN GND 1
OSD VCC 2
CAPSTAN VCC 3
CAPSTAN VCC 4
MTR 12V 5
MTR 12V 6
MTR GND 7
MTR GND 8
P CONT M24V 9
P CONT M18V 10
P CONT M12V 11
13V 12
SW12V 13
D6V 14
SW5V 15
SW5V 16
AN GND 17
AN GND 18
AN GND 19
SRV938EK BOARD CN201 (SEE PAGE 4-40)
JL600 JL628 JL601 JL602 JL603 JL604 JL605 JL606 JL607 JL608 JL609 JL610
CN601 7P
-11V CONT 1
38V 2
-11V 3
+F(2.9V) 4
D GND 5
-F(0V) 6
D GND 7
SRV938EK BOARD CN202 (SEE PAGE 4-40)
JL613 JL614 JL615 JL616 JL617 JL618 JL619
05
C+12V SW5V ANGND
⑱ MA-373 BOARD (5/9) (SEE PAGE 4-21)
C+12V ANGND
㉓ MA-373 BOARD (7/9) (SEE PAGE 4-25)
C+_12V SW_5V AN_GND C+_5V
⑥ MA-373 BOARD (2/9) (SEE PAGE 4-11)
SW5V ANGND
④ MA-373 BOARD (1/9) (SEE PAGE 4-10)
C+_12V SW_5V AN_GND D_6V SW_30V
㉒ MA-373 BOARD (6/9) (SEE PAGE 4-23)
OSDVCC SW12V SW5V ANGND CAPSTANVCC MTR12V MTRGND D5V_BACKUP D5V DGND C+/SW12VCONT PCONT_SW5V PCONT_M24V PCONT_M18V PCONT_M12V -11VCONT
⑰ MA-373 BOARD (4/9) (SEE PAGE 4-17)
D5V DGND
⑫ MA-373 BOARD (2/9) (SEE PAGE 4-12)
ANGND D5V -11V +F DGND -F
㉔ MA-373 BOARD (8/9) (SEE PAGE 4-27)

NO MARK:REC/PB MODE
*:IMPOSSIBLE TO MEASURE THE VOLTAGE AT THE MARKED POINTS.

Note: The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.
Replace only with part number specified.

JK-180 (FRONT IN), KK-23 (DIAL TIMER) SCHEMATIC DIAGRAMS

– Ref. No.:JK-180 board, KK-23 board; 1,000 series –

–SLV-SE500/SE800/SX800 –

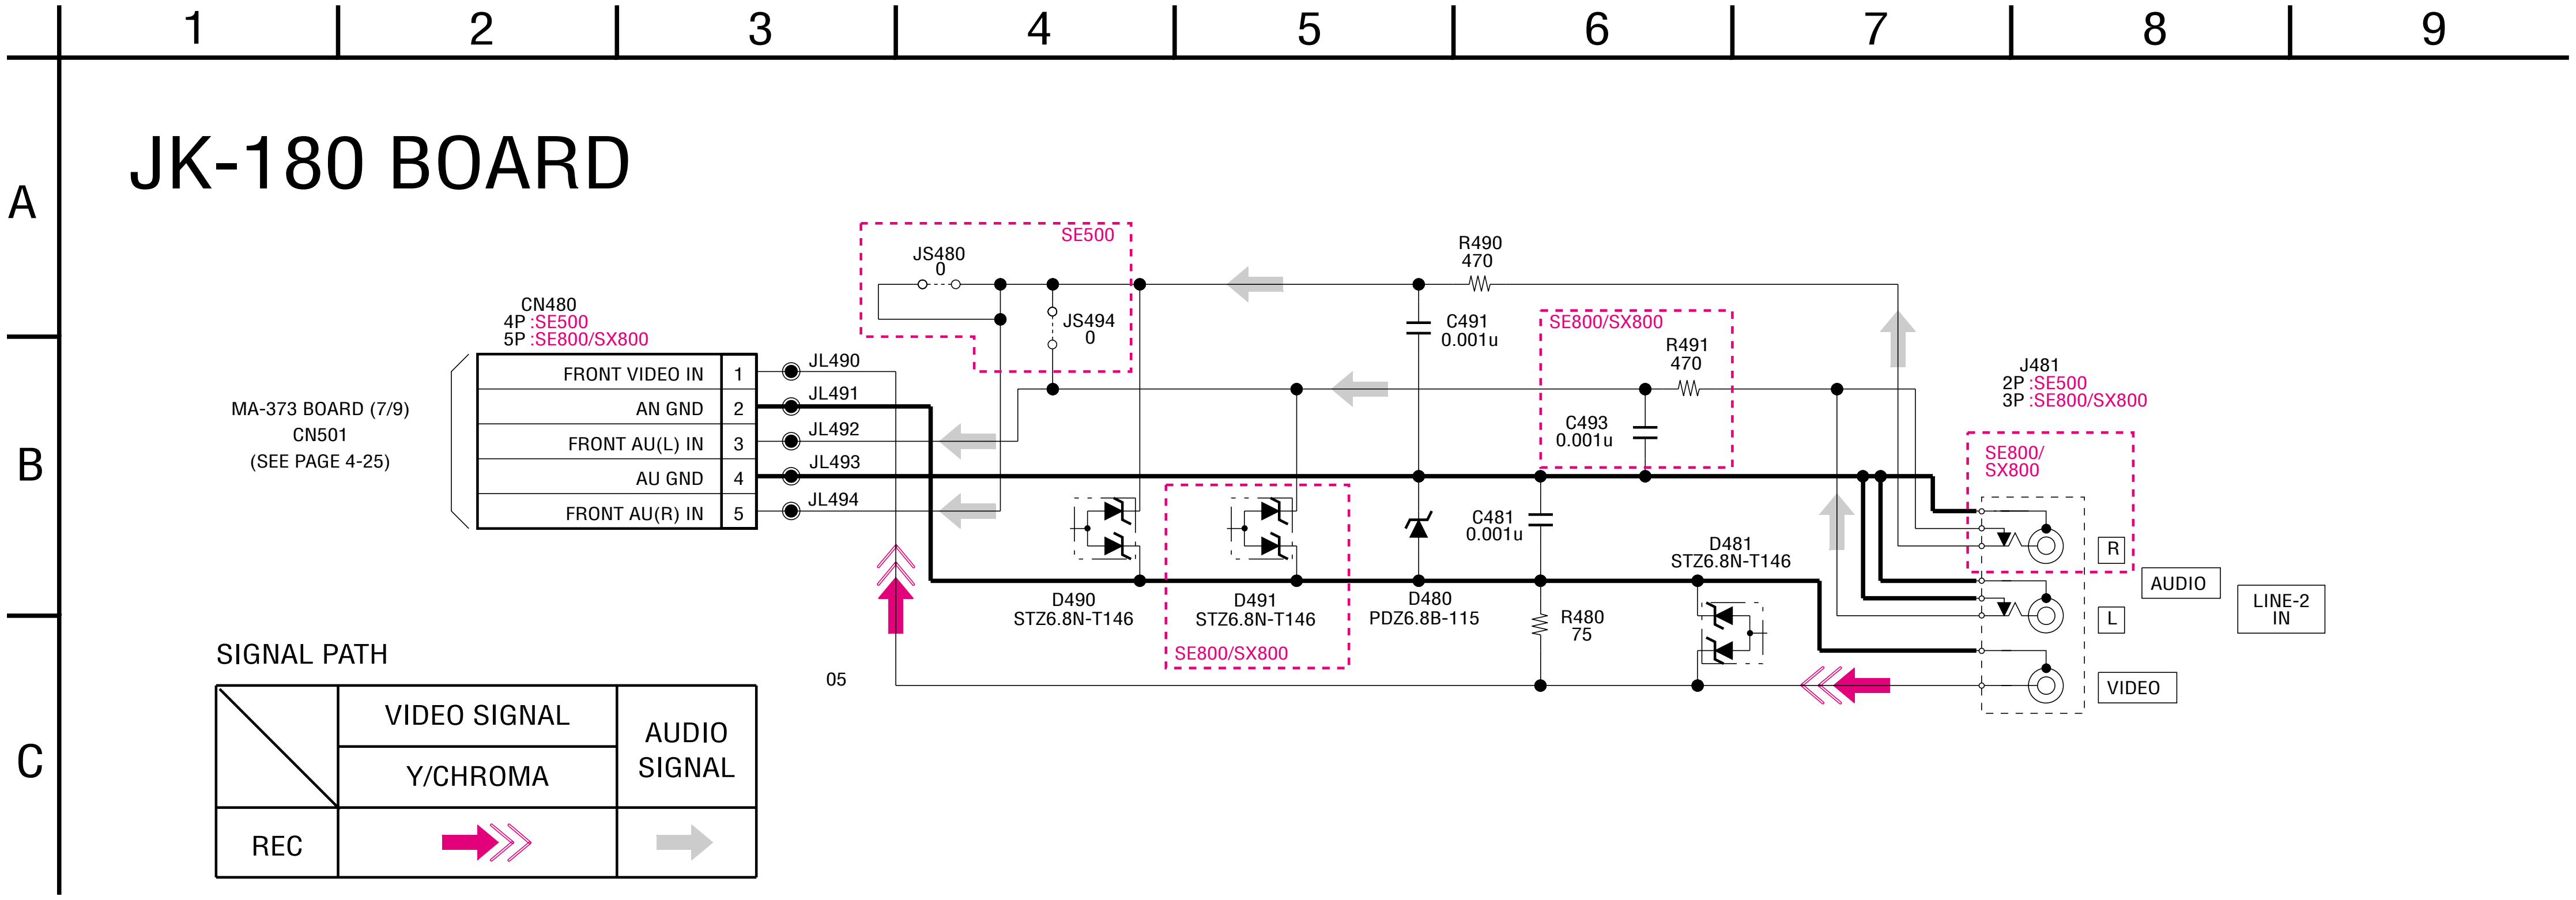
1
2
3
4
5
6
7
8
9
A
B
C
JK-180 BOARD
CN480
4P :SE500
5P :SE800/SX800
MA-373 BOARD (7/9)
CN501
(SEE PAGE 4-25)
FRONT VIDEO IN 1
AN GND 2
FRONT AU(L) IN 3
AU GND 4
FRONT AU(R) IN 5
JL490
JL491
JL492
JL493
JL494
SE500
JS480
0
JS494
0
R490
470
C491
0.001u
SE800/SX800
R491
470
C493
0.001u
J481
2P :SE500
3P :SE800/SX800
SE800/
SX800
D490
STZ6.8N-T146
D491
STZ6.8N-T146
SE800/SX800
D480
PDZ6.8B-115
C481
0.001u
D481
STZ6.8N-T146
R480
75
R
L
VIDEO
AUDIO
LINE-2
IN
05
SIGNAL PATH
VIDEO SIGNAL
Y/CHROMA
AUDIO
SIGNAL
REC

–SLV-SE800/SX800 –

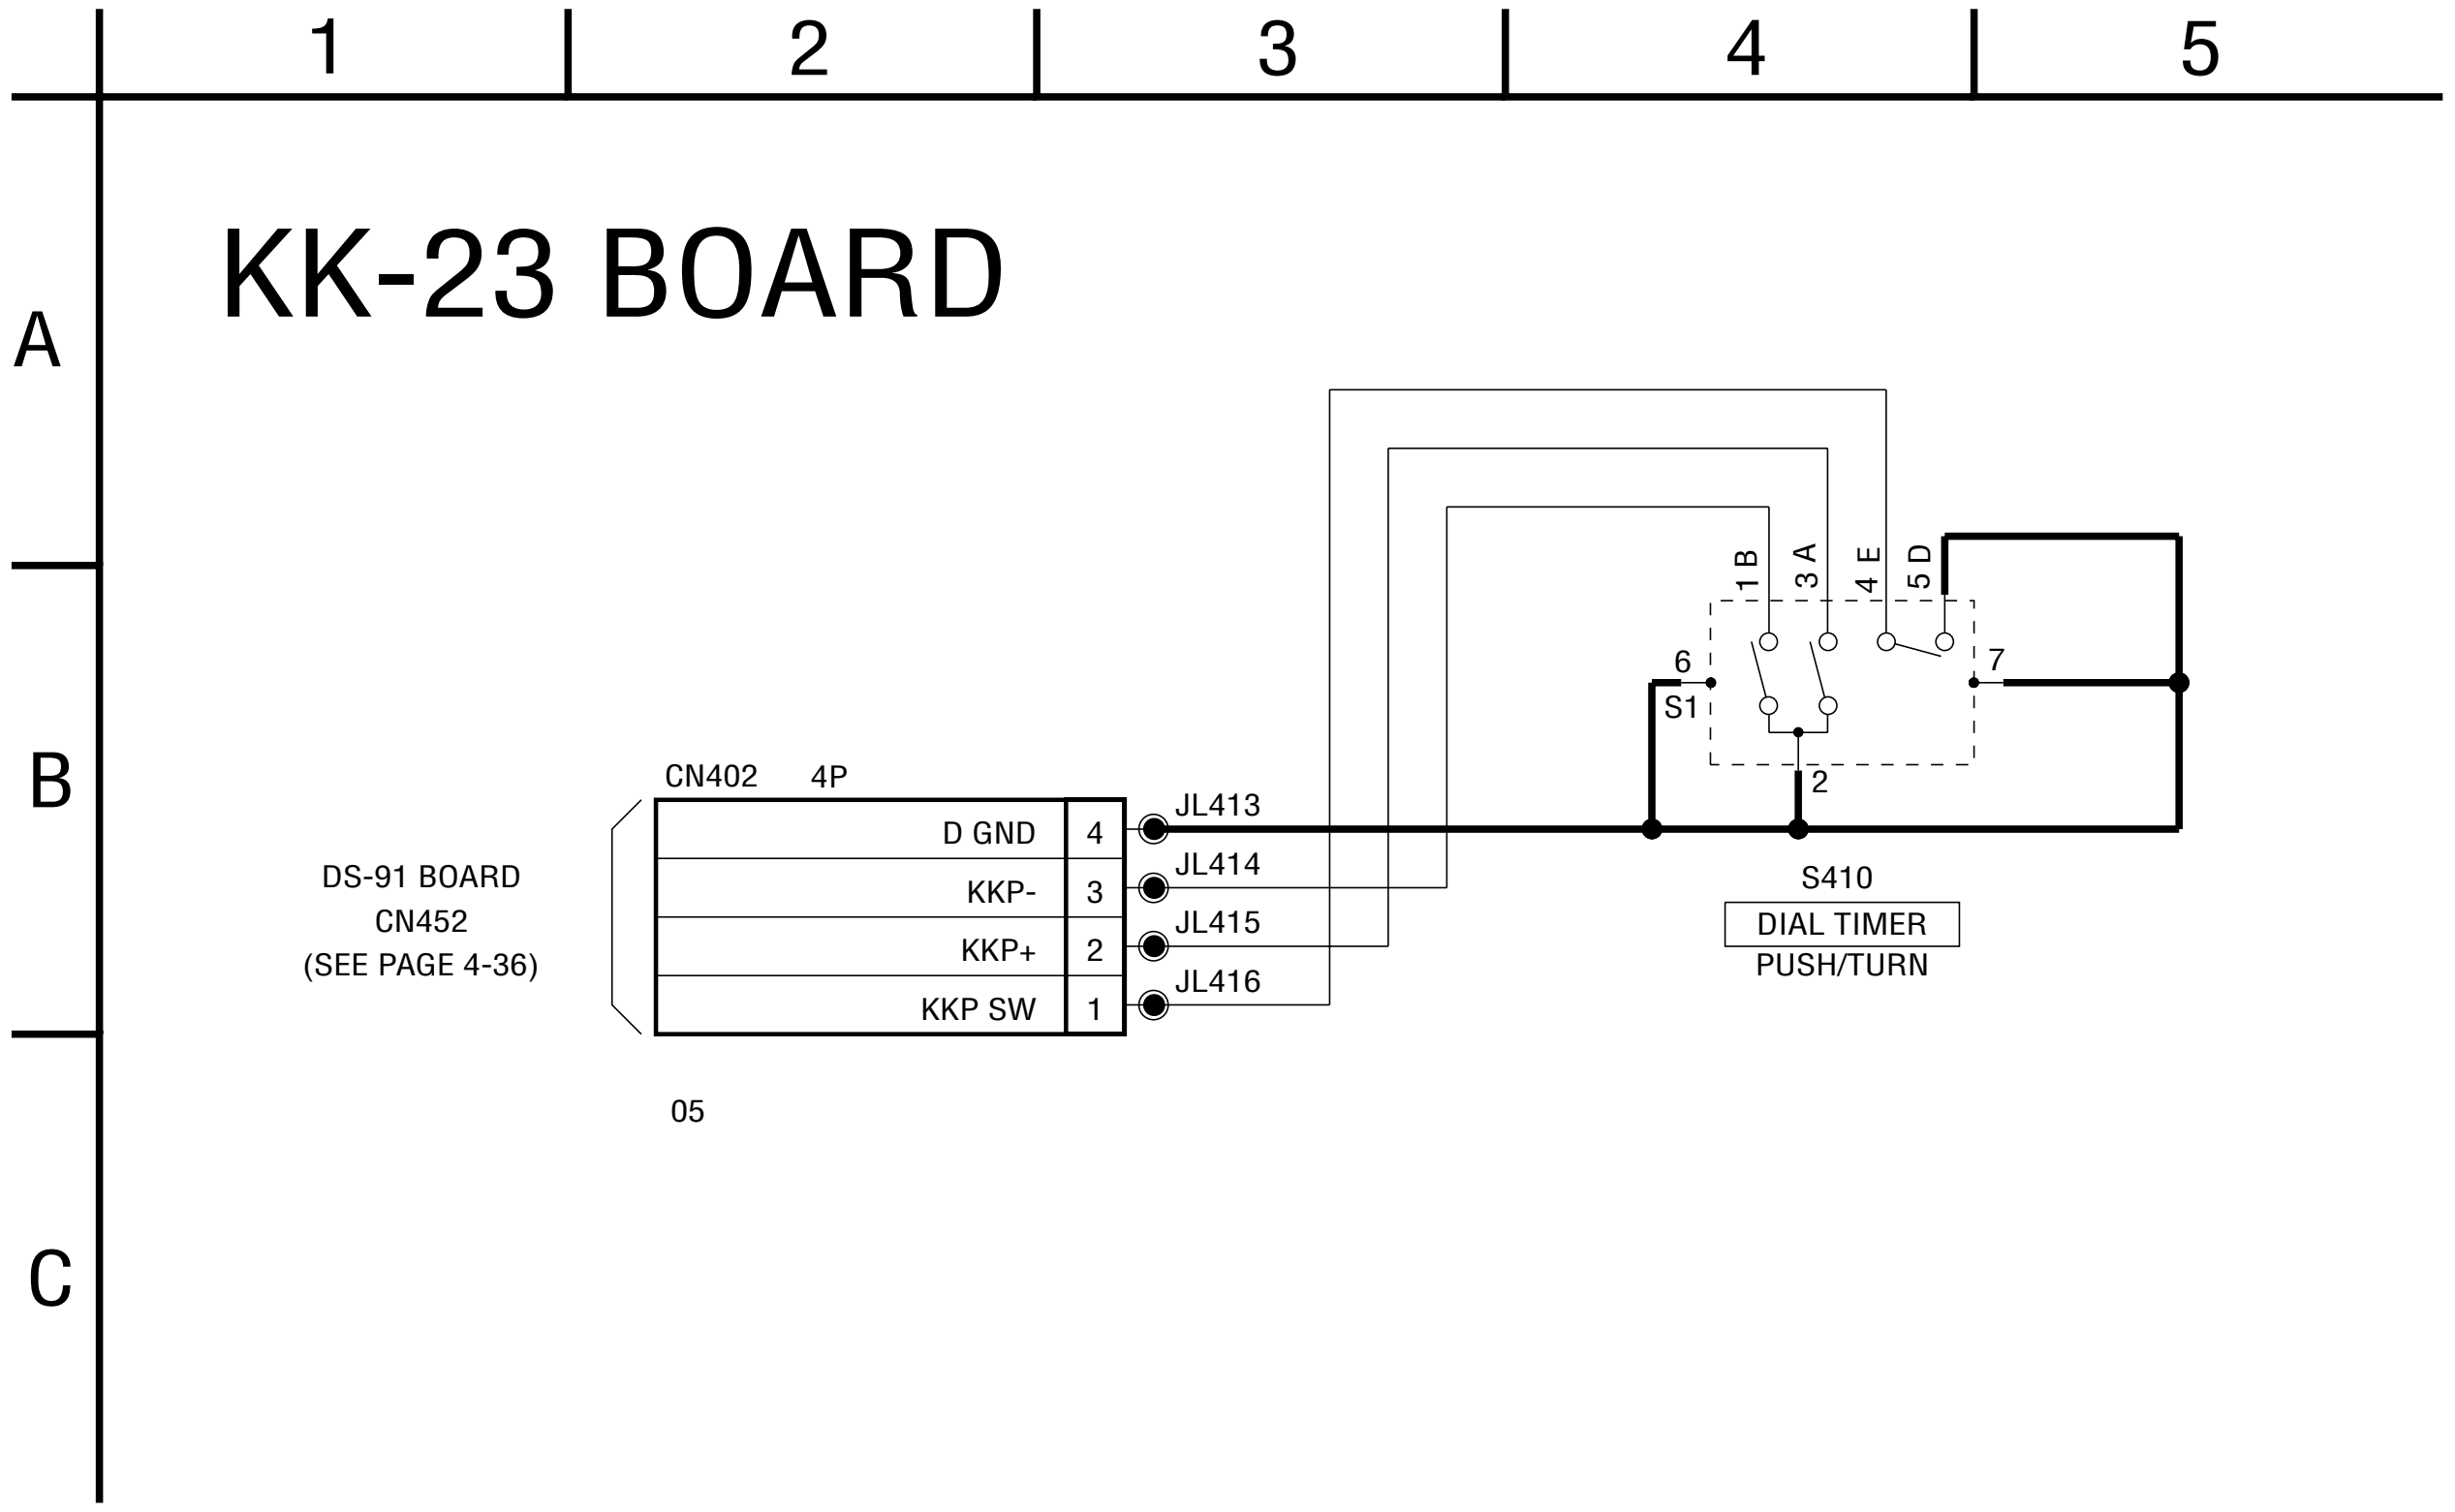
1
2
3
4
5
A
B
C
KK-23 BOARD
CN402 4P
DS-91 BOARD
CN452
(SEE PAGE 4-36)
D GND 4
KKP- 3
KKP+ 2
KKP SW 1
JL413
JL414
JL415
JL416
1 B
3 A
4 E
5 D
6
7
S1
2
S410
DIAL TIMER
PUSH/TURN
05

JK-180 (FRONT IN), KK-23 (DIAL TIMER) PRINTED WIRING BOARDS

– Ref. No.: JK-180 board, KK-23 board; 1,000 series –

There are few cases that the part isn't mounted in this model is printed on this diagram.

–SLV-SE500/SE800/SX800 –

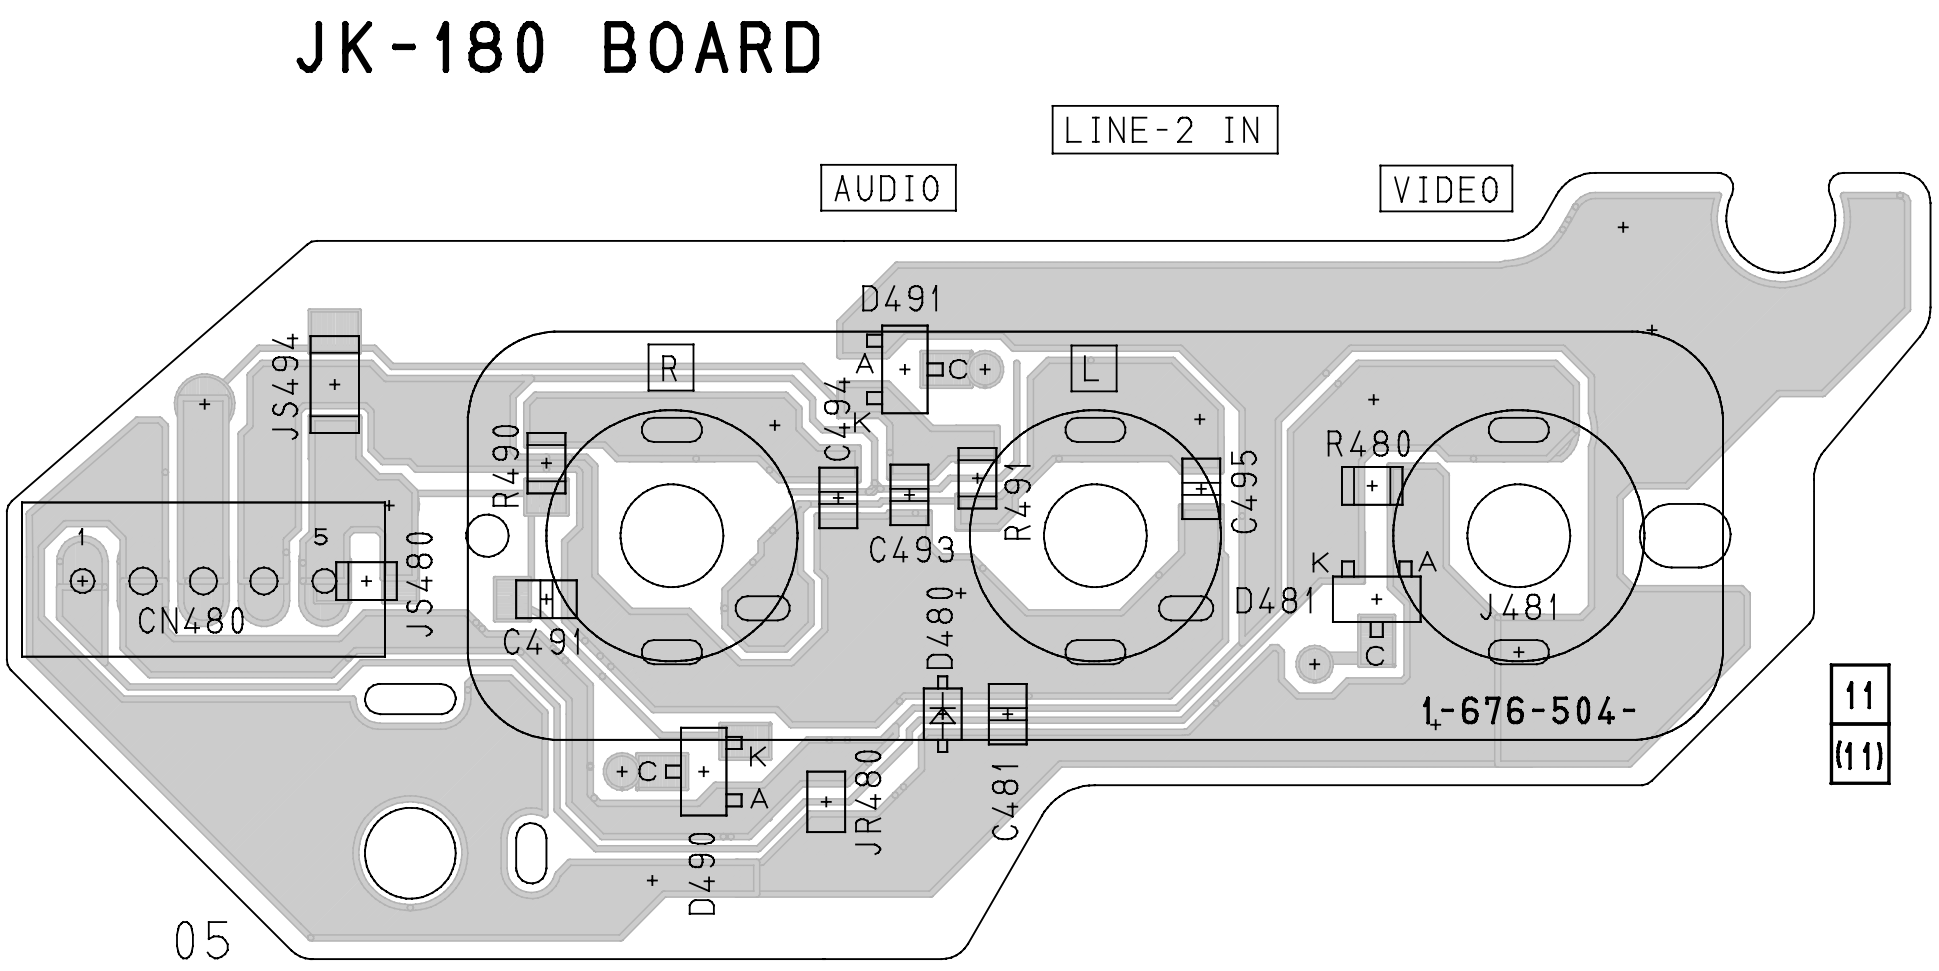
JK-180 BOARD
LINE-2 IN
AUDIO
VIDEO
D491
R
L
JS494
R490
C494
C493
R491
C495
R480
CN480
JS480
C491
D480
D481
J481
1-676-504-
D490
JR480
C481
05
11
(11)

–SLV-SE800/SX800 –

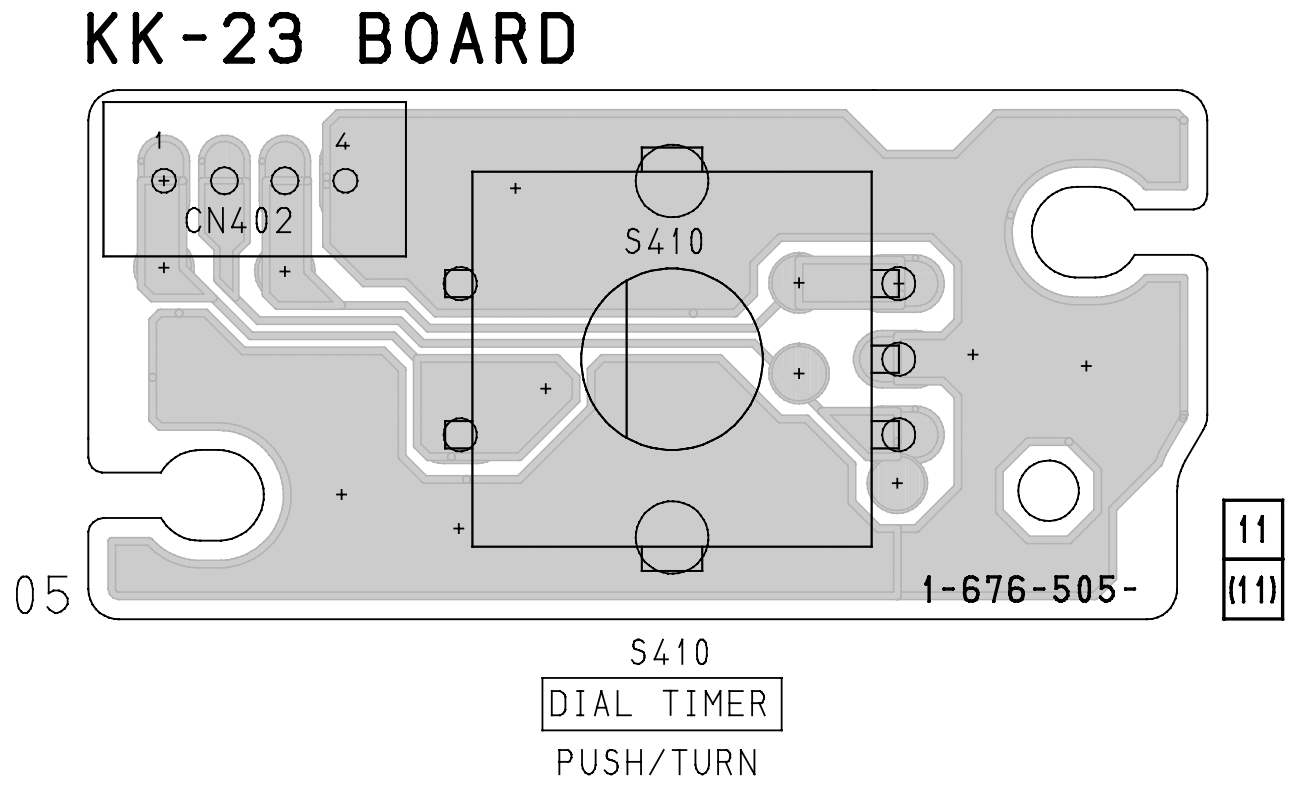
KK-23 BOARD
CN402
S410
1-676-505-
05
11
(11)
S410
DIAL TIMER
PUSH/TURN

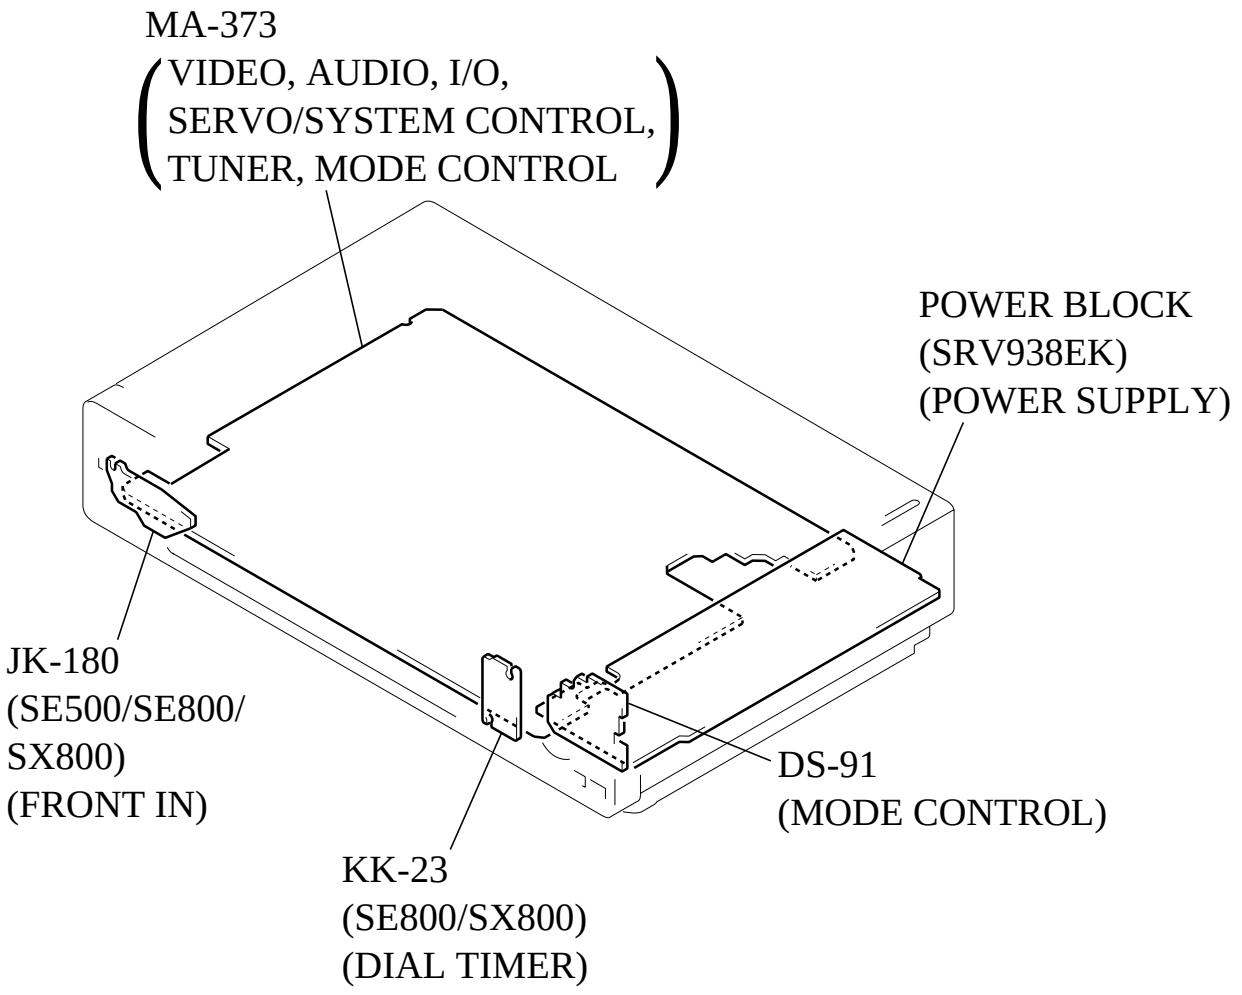
MA-373
(VIDEO, AUDIO, I/O, SERVO/SYSTEM CONTROL, TUNER, MODE CONTROL)
POWER BLOCK (SRV938EK) (POWER SUPPLY)
JK-180 (SE500/SE800/ SX800) (FRONT IN)
DS-91 (MODE CONTROL)
KK-23 (SE800/SX800) (DIAL TIMER)

DS-91 (MODE CONTROL) PRINTED WIRING BOARD

– Ref. No.: DS-91 board; 1,000 series –

There are few cases that the part isn't mounted in this model is printed on this diagram.

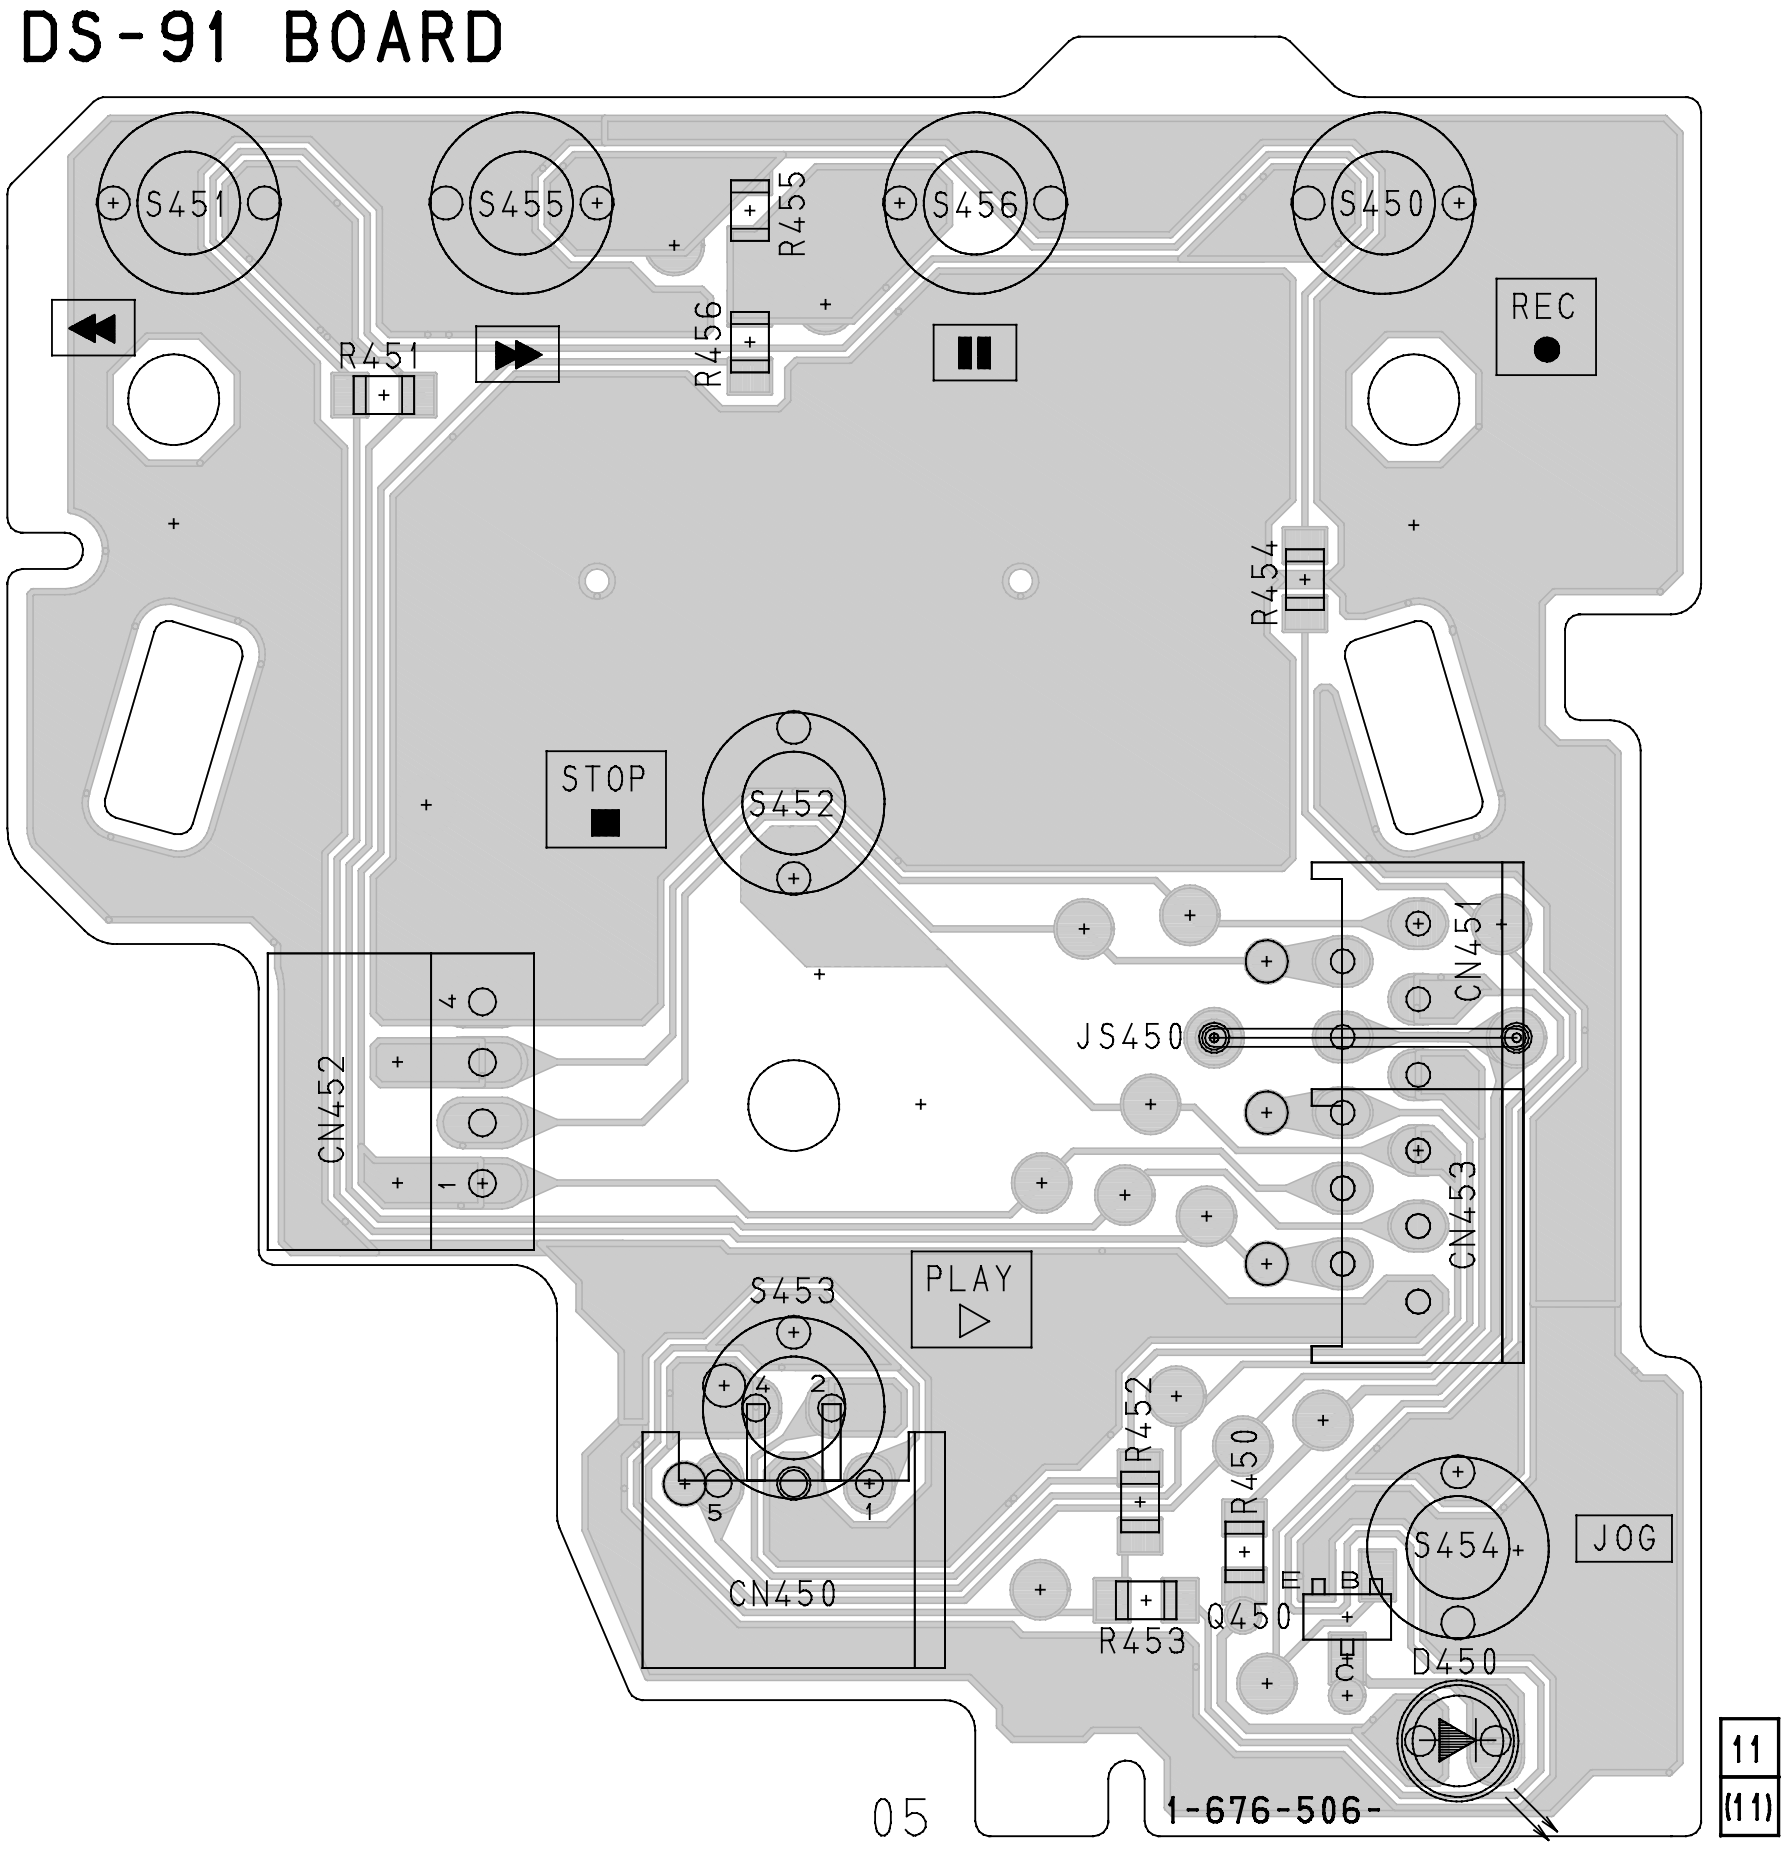
DS-91 BOARD
S451
S455
S456
S450
R455
R456
R451
R454
REC
STOP
S452
CN451
CN452
JS450
CN453
S453
PLAY
R452
R450
S454
JOG
CN450
R453
Q450
E
B
C
D450
05
1-676-506-
11
(11)

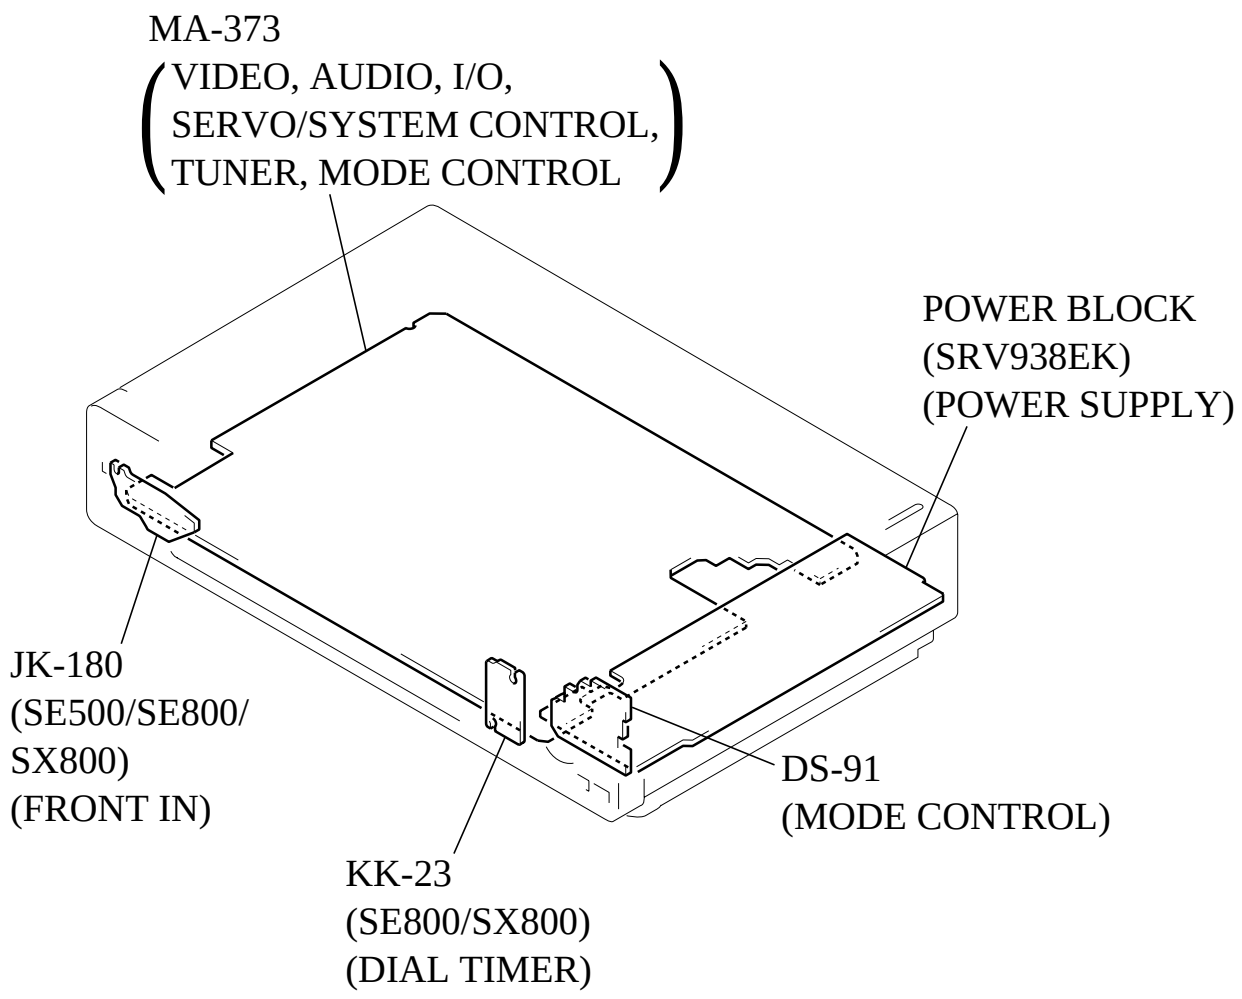
MA-373
(VIDEO, AUDIO, I/O, SERVO/SYSTEM CONTROL, TUNER, MODE CONTROL)
POWER BLOCK
(SRV938EK)
(POWER SUPPLY)
JK-180
(SE500/SE800/
SX800)
(FRONT IN)
DS-91
(MODE CONTROL)
KK-23
(SE800/SX800)
(DIAL TIMER)

DS-91 (MODE CONTROL) SCHEMATIC DIAGRAM

– Ref. No.: DS-91 board; 1,000 series –

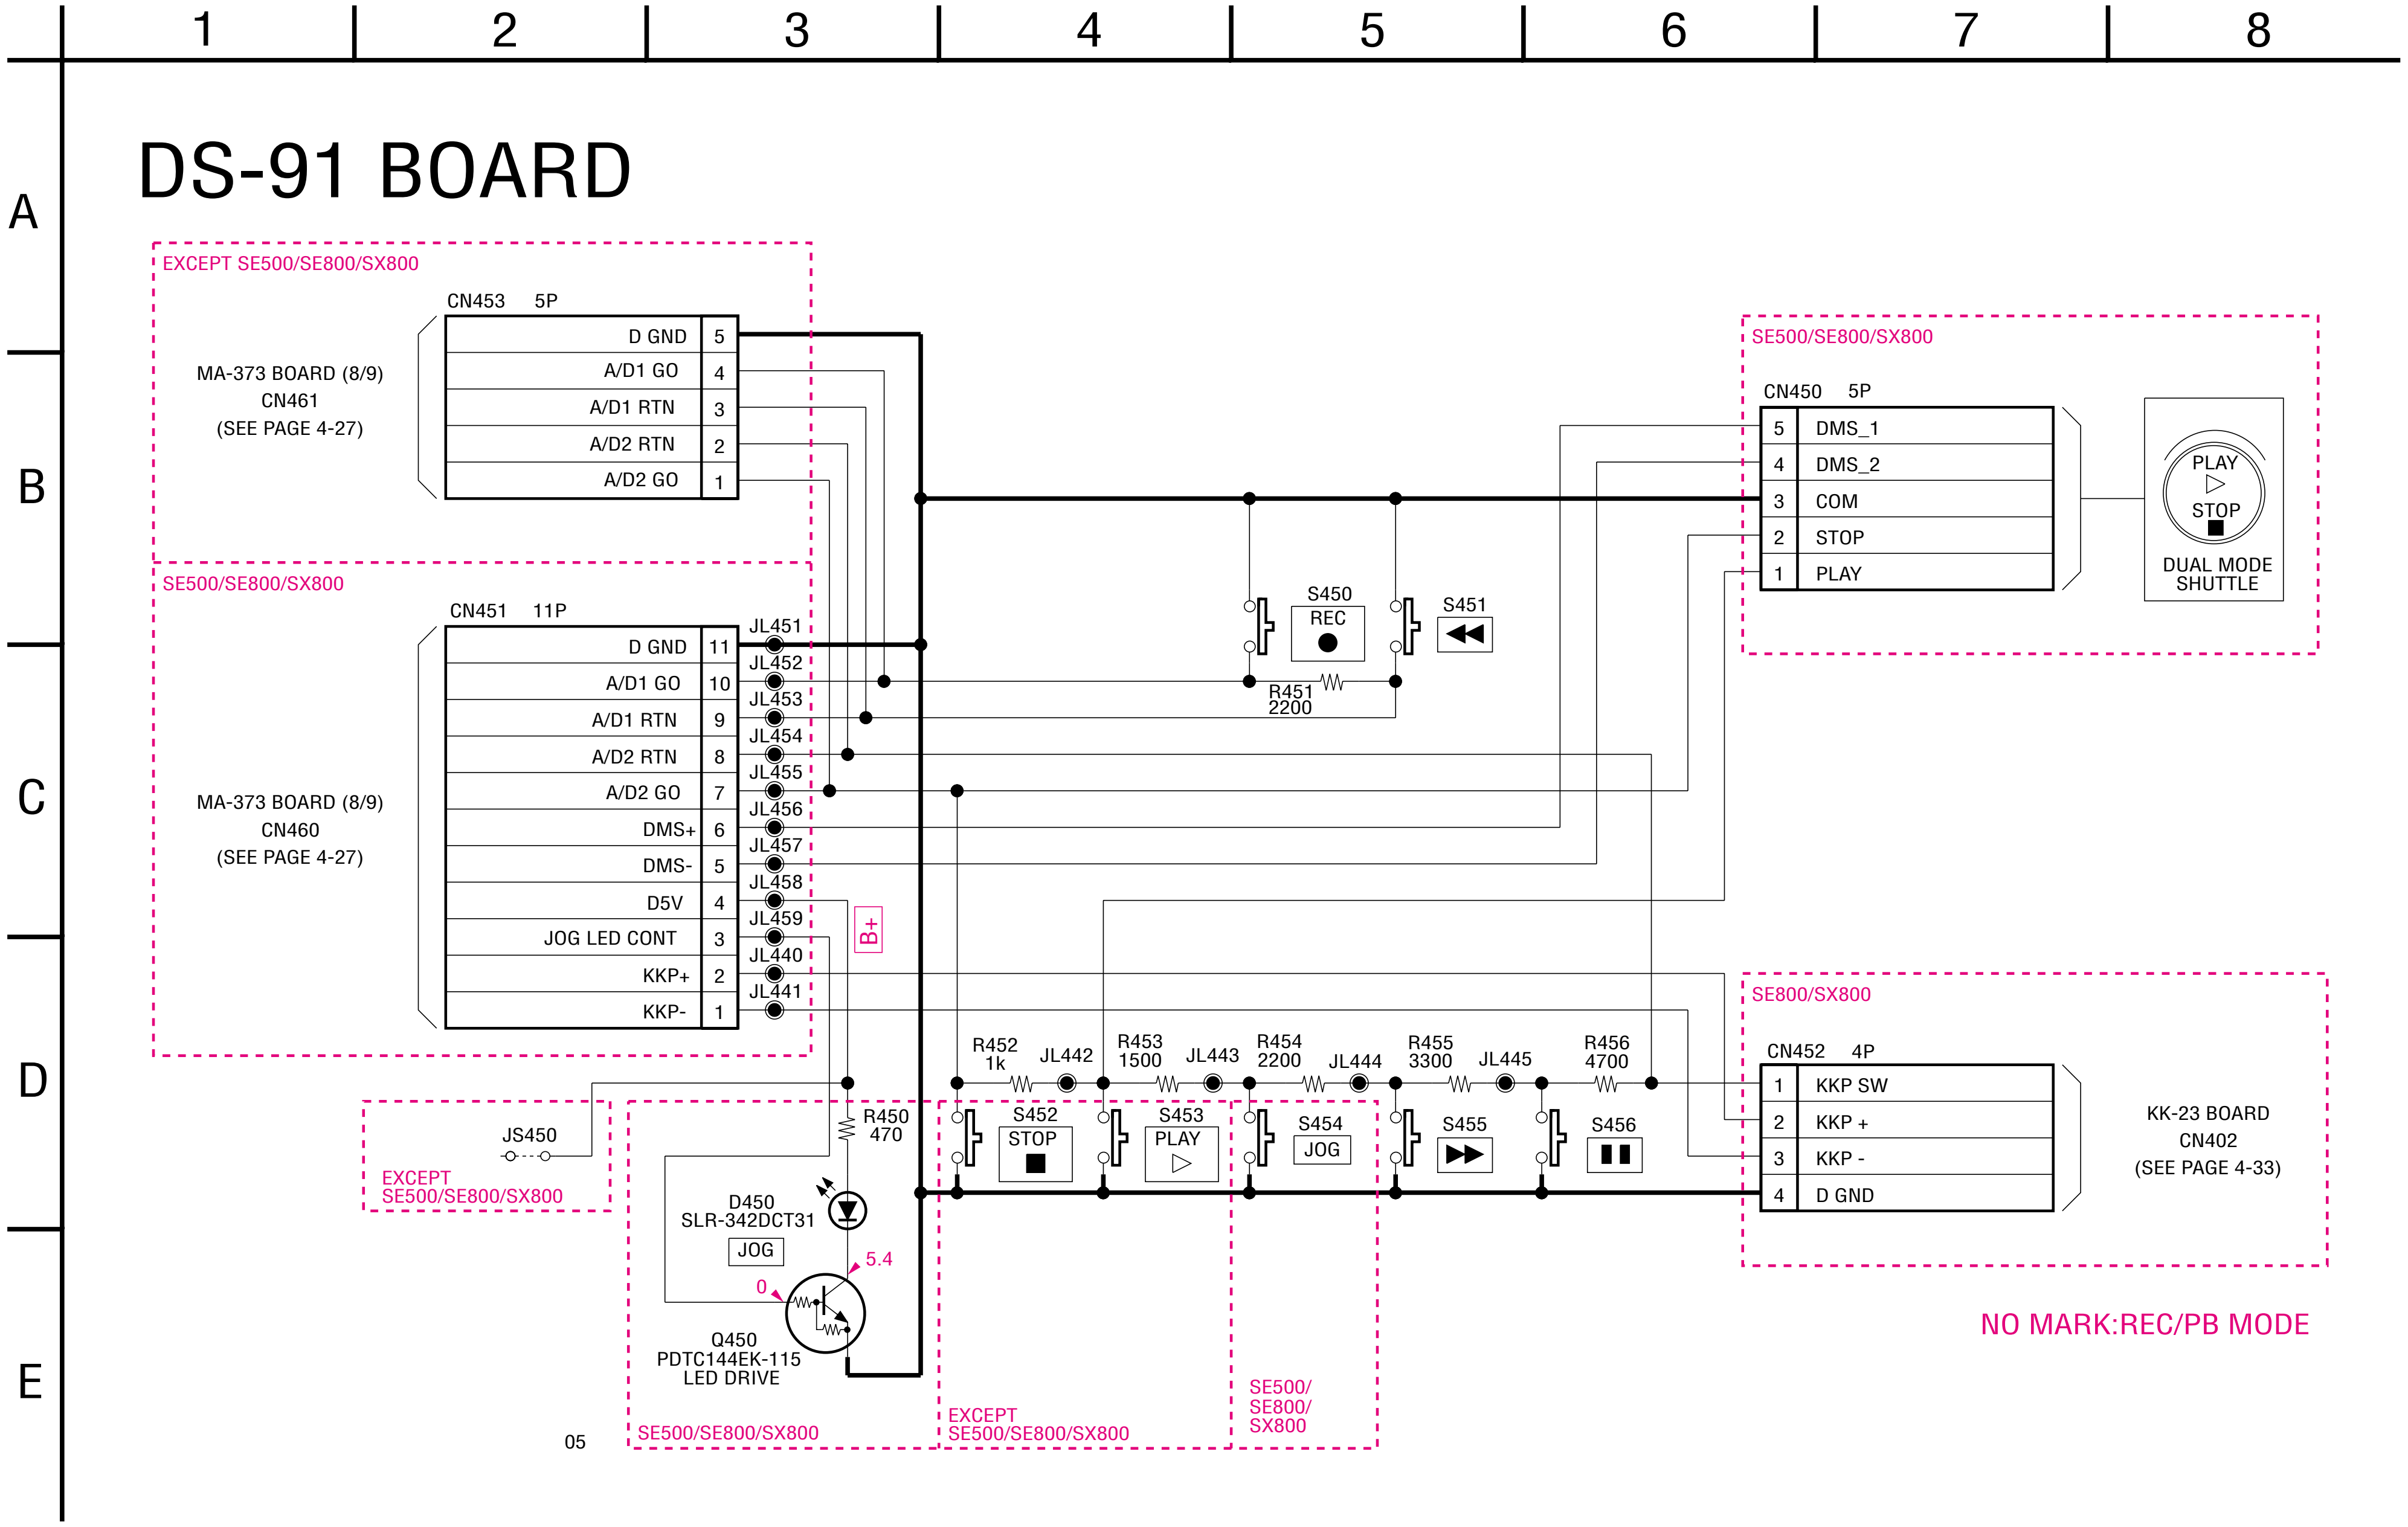
1
2
3
4
5
6
7
8
A
B
C
D
E
DS-91 BOARD
EXCEPT SE500/SE800/SX800
CN453 5P
MA-373 BOARD (8/9)
CN461
(SEE PAGE 4-27)
D GND 5
A/D1 GO 4
A/D1 RTN 3
A/D2 RTN 2
A/D2 GO 1
SE500/SE800/SX800
CN451 11P
MA-373 BOARD (8/9)
CN460
(SEE PAGE 4-27)
D GND 11
A/D1 GO 10
A/D1 RTN 9
A/D2 RTN 8
A/D2 GO 7
DMS+ 6
DMS- 5
D5V 4
JOG LED CONT 3
KKP+ 2
KKP- 1
JL451
JL452
JL453
JL454
JL455
JL456
JL457
JL458
JL459
JL440
JL441
B+
S450
REC
S451
R451
2200
SE500/SE800/SX800
CN450 5P
5 DMS_1
4 DMS_2
3 COM
2 STOP
1 PLAY
PLAY
STOP
DUAL MODE
SHUTTLE
JS450
EXCEPT
SE500/SE800/SX800
R450
470
D450
SLR-342DCT31
JOG
5.4
0
Q450
PDTC144EK-115
LED DRIVE
05
SE500/SE800/SX800
R452
1k
JL442
R453
1500
JL443
R454
2200
JL444
R455
3300
JL445
R456
4700
S452
STOP
S453
PLAY
S454
JOG
S455
S456
EXCEPT
SE500/SE800/SX800
SE500/
SE800/
SX800
SE800/SX800
CN452 4P
1 KKP SW
2 KKP +
3 KKP -
4 D GND
KK-23 BOARD
CN402
(SEE PAGE 4-33)
NO MARK:REC/PB MODE

SRV938EK (POWER SUPPLY) PRINTED WIRING BOARD

– Ref. No.: SRV938EK board; 2,000 series –

There are few cases that the part isn't mounted in this model is printed on this diagram.

SRV938EK BOARD

CN101	A-1
CN201	A-5
CN202	A-6
D101	B-1
D102	B-1
D103	B-1
D104	B-1
D151	A-3
D152	A-3
D153	A-3
D154	B-3
D158	A-3
D203	B-6
D204	A-6
D205	A-6
D251	A-4
D252	A-4
D253	B-4
D254	B-4
D301	A-4
D302	A-6
D303	A-6
D304	A-4
D307	A-6
IC151	B-3
IC251	B-4
Q151	A-3
Q201	A-5
Q203	B-6
Q204	B-5
Q205	B-6
Q206	B-6
Q207	B-6
Q210	B-6
Q211	B-6
Q301	A-5
Q302	A-6
Q303	A-6
Q304	A-6
Q305	B-6
Q306	A-6
Q307	A-6

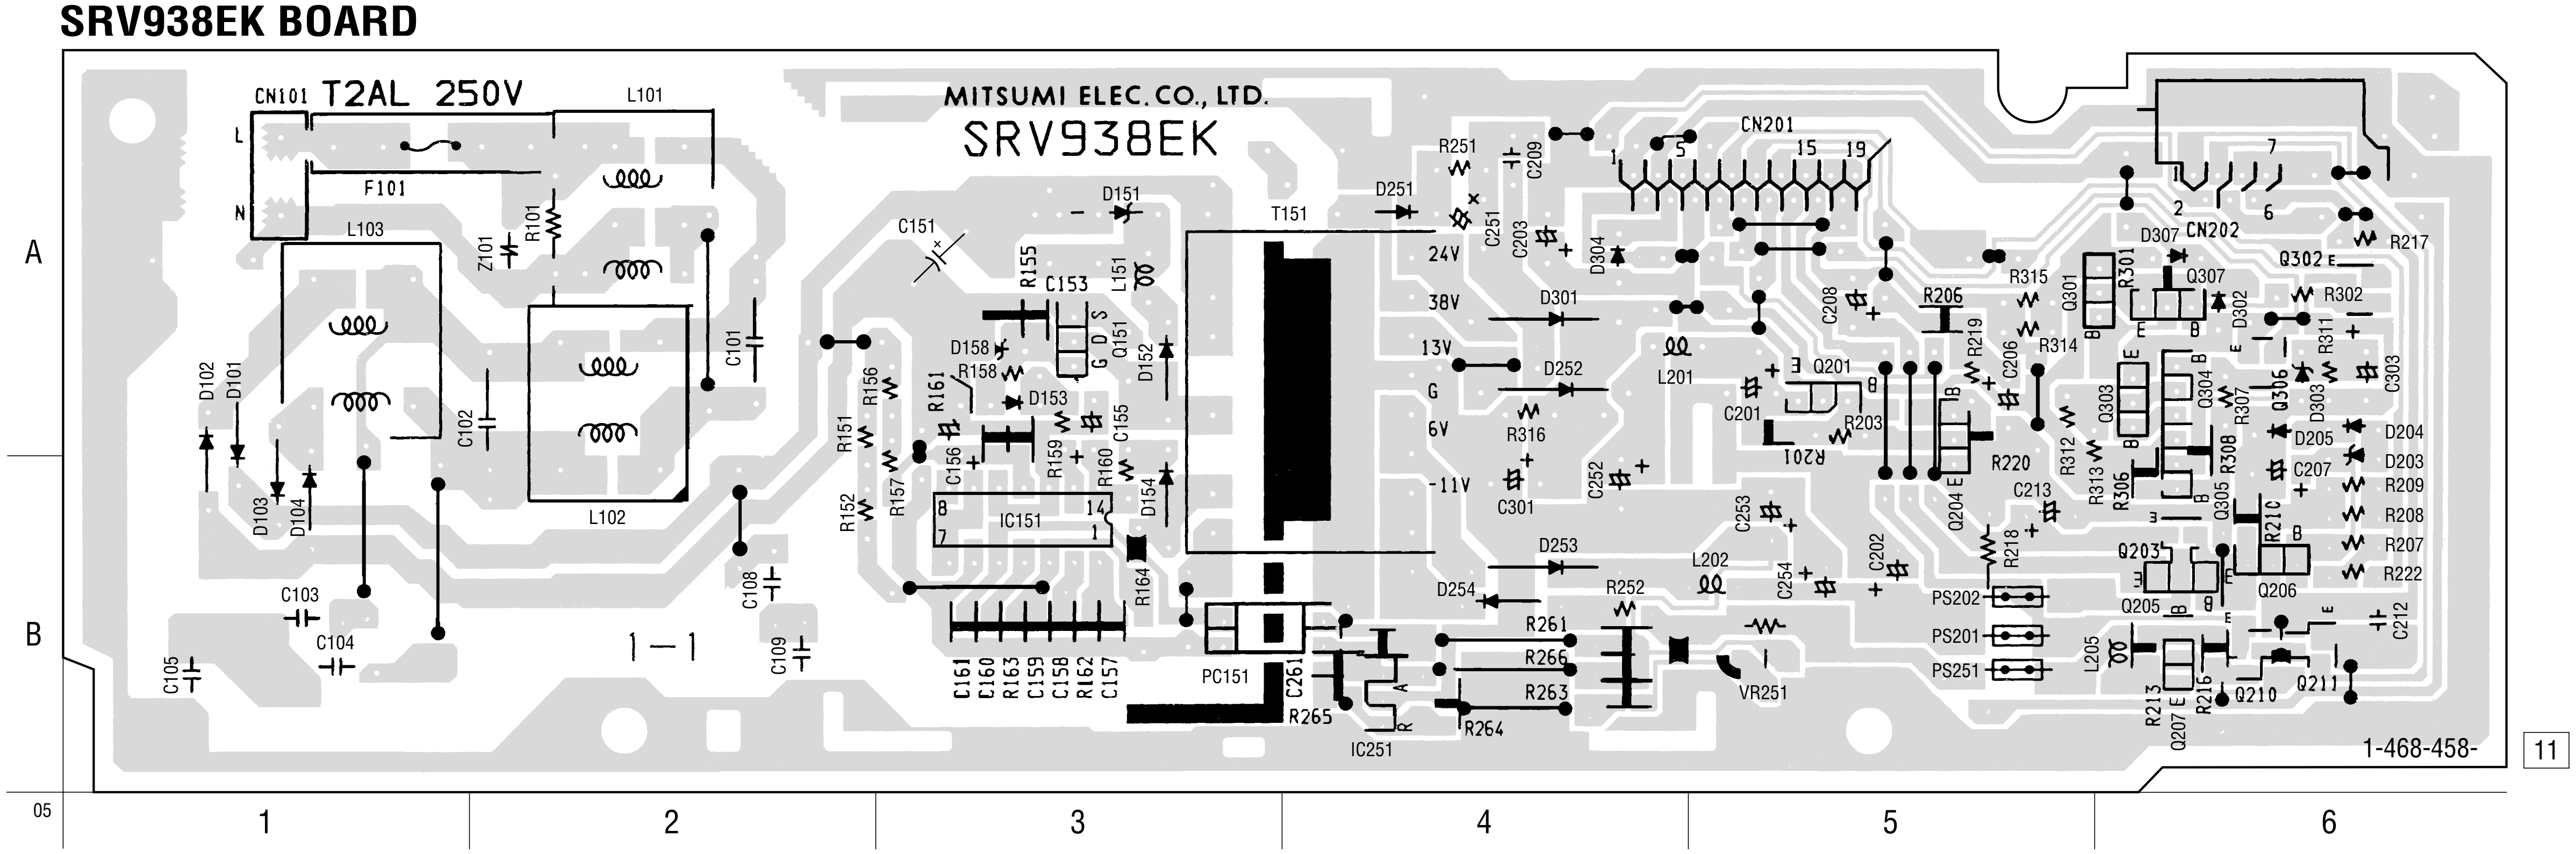
SRV938EK BOARD
A
B
05
1
2
3
4
5
6
CN101
T2AL 250V
L101
L
N
F101
L103
MITSUMI ELEC. CO., LTD.
SRV938EK
Z101
R101
C101
C102
L102
D102
D101
D103
D104
C103
C104
C105
C108
C109
1—1
C151
D151
R155
C153
L151
Q151
G D S
D158
R158
R161
D153
D152
R151
R156
R152
R157
C156
R159
R160
C155
IC151
8
14
7
1
D154
R164
C161 C160 R163 C159 C158 R162 C157
T151
PC151
C261
R265
IC251
R264
D251
R251
C209
C251
C203
24V
38V
13V
G
6V
-11V
D304
D301
D252
R316
C301
C252
D253
D254
R252
R261
R266
R263
L201
L202
C201
Q201
R203
R201
C208
C253
C254
C202
VR251
CN201
1
5
15
19
R206
R219
C206
R315
R314
Q301
R301
Q204
R220
R218
C213
R312
R313
Q303
Q304
R306
Q305
R307
R308
PS202
PS201
PS251
L205
Q205
Q203
R213
Q207
R216
Q210
Q211
Q206
R210
CN202
2
6
7
D307
Q307
D302
Q302
R302
R311
R217
Q306
D303
C303
D205
C207
D204
D203
R209
R208
R207
R222
C212
1-468-458-
11

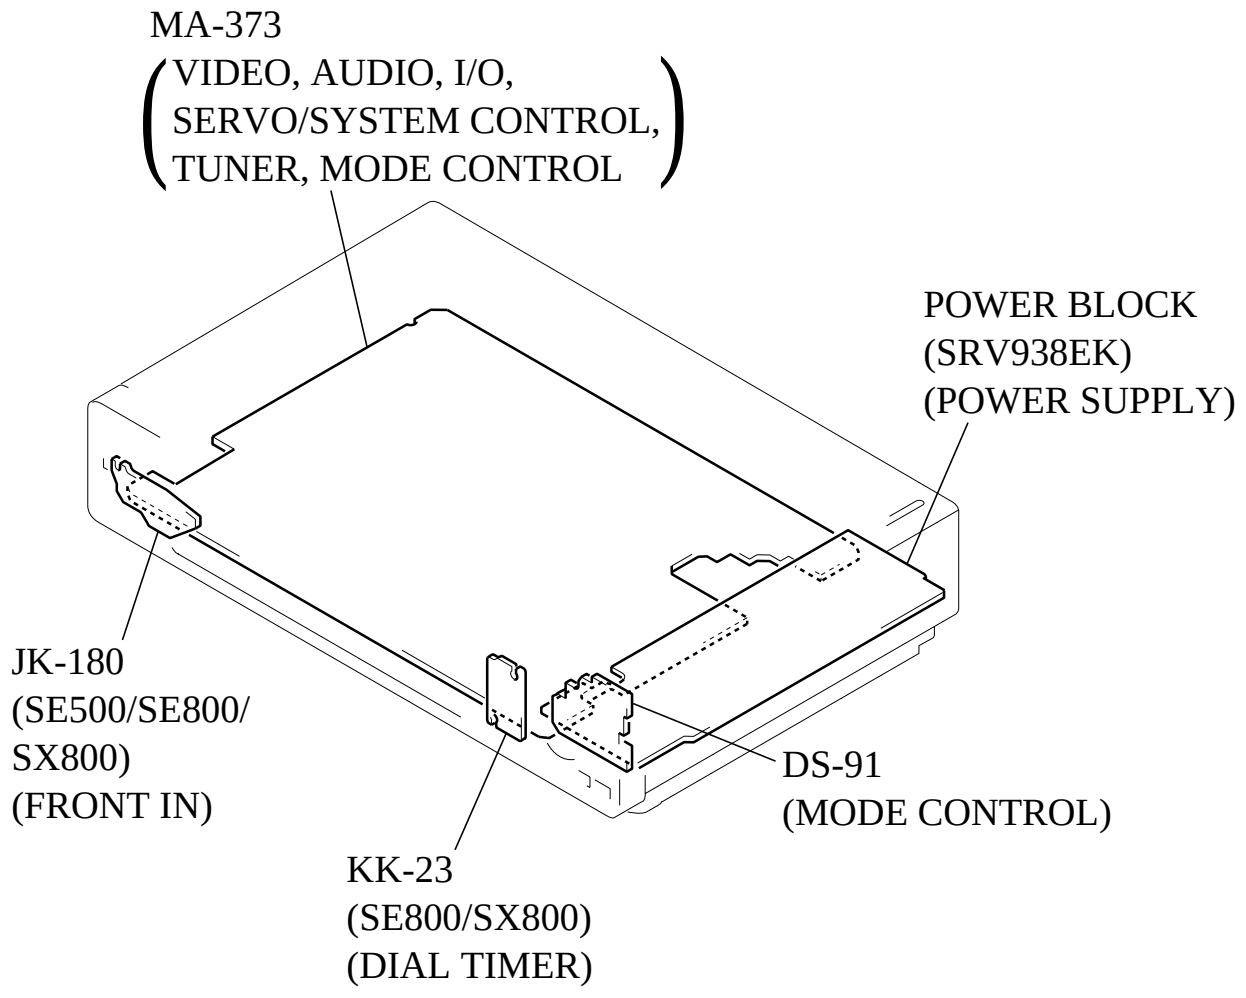
MA-373
(VIDEO, AUDIO, I/O, SERVO/SYSTEM CONTROL, TUNER, MODE CONTROL)
POWER BLOCK
(SRV938EK)
(POWER SUPPLY)
JK-180
(SE500/SE800/
SX800)
(FRONT IN)
KK-23
(SE800/SX800)
(DIAL TIMER)
DS-91
(MODE CONTROL)

SRV938EK (POWER SUPPLY) SCHEMATIC DIAGRAM

– Ref. No.: SRV938EK board; 2,000 series –

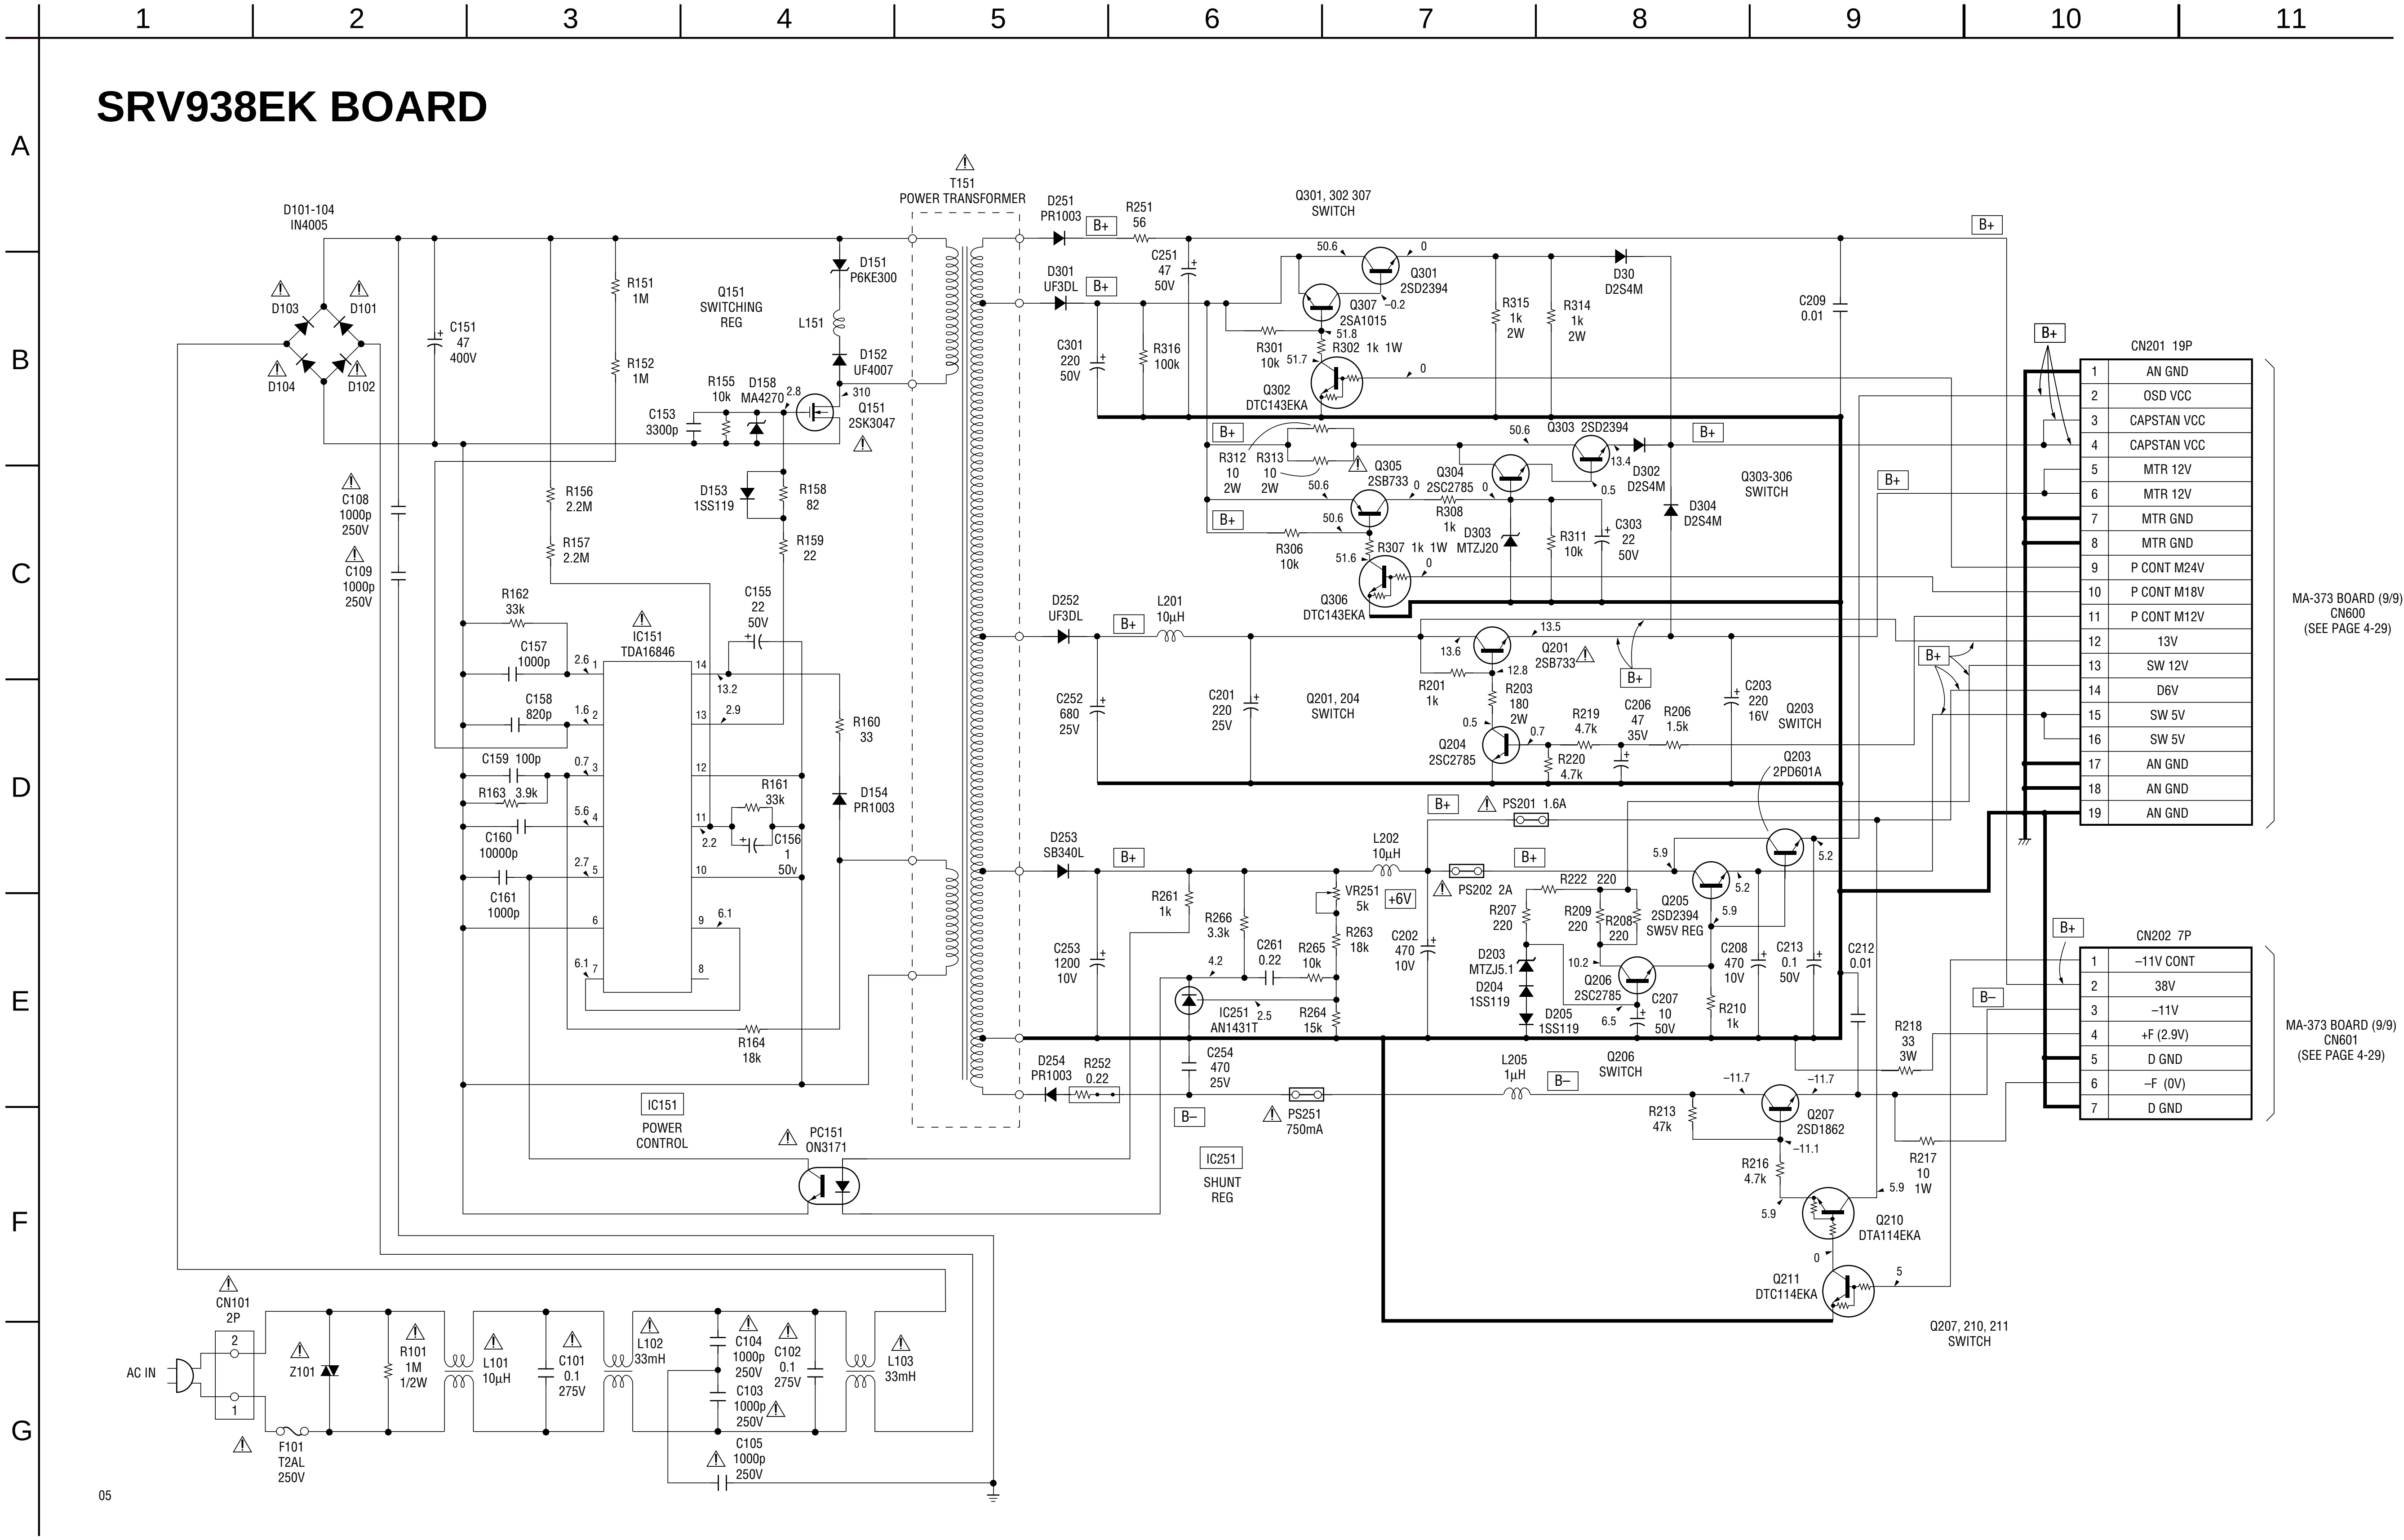
1
2
3
4
5
6
7
8
9
10
11
A
B
C
D
E
F
G
SRV938EK BOARD
T151
POWER TRANSFORMER
D101-104
IN4005
D103
D101
D104
D102
C151
47
400V
R151
1M
R152
1M
Q151
SWITCHING
REG
D151
P6KE300
L151
D152
UF4007
310
Q151
2SK3047
R155
10k
D158
MA4270
2.8
C153
3300p
C108
1000p
250V
C109
1000p
250V
R156
2.2M
R157
2.2M
D153
1SS119
R158
82
R159
22
R162
33k
C157
1000p
C158
820p
C159 100p
R163 3.9k
C160
10000p
C161
1000p
IC151
TDA16846
C155
22
50V
13.2
2.9
R160
33
R161
33k
C156
1
50v
D154
PR1003
R164
18k
IC151
POWER
CONTROL
PC151
ON3171
D251
PR1003
R251
56
D301
UF3DL
C251
47
50V
C301
220
50V
R316
100k
Q301, 302 307
SWITCH
Q301
2SD2394
Q307
2SA1015
R301
10k
R302 1k 1W
Q302
DTC143EKA
R315
1k
2W
R314
1k
2W
D30
D2S4M
C209
0.01
R312
10
2W
R313
10
2W
Q305
2SB733
Q304
2SC2785
Q303 2SD2394
D302
D2S4M
D304
D2S4M
Q303-306
SWITCH
R308
1k
D303
MTZJ20
R306
10k
R307 1k 1W
R311
10k
C303
22
50V
Q306
DTC143EKA
D252
UF3DL
L201
10μH
C252
680
25V
C201
220
25V
Q201, 204
SWITCH
Q201
2SB733
R201
1k
R203
180
2W
Q204
2SC2785
R219
4.7k
R220
4.7k
C206
47
35V
R206
1.5k
C203
220
16V
Q203
SWITCH
Q203
2PD601A
PS201 1.6A
D253
SB340L
L202
10μH
PS202 2A
R261
1k
R266
3.3k
VR251
5k
+6V
R263
18k
C202
470
10V
R207
220
R222 220
R209
220
R208
220
Q205
2SD2394
SW5V REG
C253
1200
10V
C261
0.22
R265
10k
D203
MTZJ5.1
D204
1SS119
Q206
2SC2785
C207
10
50V
C208
470
10V
C213
0.1
50V
C212
0.01
R210
1k
IC251
AN1431T
R264
15k
D205
1SS119
C254
470
25V
D254
PR1003
R252
0.22
PS251
750mA
L205
1μH
Q206
SWITCH
IC251
SHUNT
REG
R213
47k
Q207
2SD1862
R218
33
3W
R216
4.7k
R217
10
1W
Q210
DTA114EKA
Q211
DTC114EKA
Q207, 210, 211
SWITCH
B+
B–
CN201 19P
1 AN GND
2 OSD VCC
3 CAPSTAN VCC
4 CAPSTAN VCC
5 MTR 12V
6 MTR 12V
7 MTR GND
8 MTR GND
9 P CONT M24V
10 P CONT M18V
11 P CONT M12V
12 13V
13 SW 12V
14 D6V
15 SW 5V
16 SW 5V
17 AN GND
18 AN GND
19 AN GND
MA-373 BOARD (9/9)
CN600
(SEE PAGE 4-29)
CN202 7P
1 –11V CONT
2 38V
3 –11V
4 +F (2.9V)
5 D GND
6 –F (0V)
7 D GND
MA-373 BOARD (9/9)
CN601
(SEE PAGE 4-29)
CN101
2P
AC IN
Z101
F101
T2AL
250V
R101
1M
1/2W
L101
10μH
C101
0.1
275V
L102
33mH
C104
1000p
250V
C103
1000p
250V
C105
1000p
250V
C102
0.1
275V
L103
33mH
05

Note: The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.
Replace only with part number specified.

SECTION 5
INTERFACE, IC PIN FUNCTION DESCRIPTION

5-1. SYSTEM CONTROL – VIDEO BLOCK INTERFACE (MA-373 BOARD IC162)

Signal	Pin No.	I/O	STOP/ FF/ REW	TAPE LOADING	TAPE UNLOADING	PB	REC	REC • PAUSE
RF SWP	MA-373 IC162⑱	O	*1	*1	*1	*1	*1	*1
QVD	MA-373 IC162⑬	O	L	L	L	*2	L	L
C V IN	MA-373 IC162(56)	I	*3	*3	*3	*3	*3	*3

*1. 25 Hz pulse with 50% duty cycle. Synchronized with rotation of drum.
*2. Normally "L". "H" when video signal is not generated.
*3. Composite sync signal (positive polarity).

5-2. SYSTEM CONTROL – SERVO PERIPHERAL CIRCUIT INTERFACE (MA-373 BOARD IC162)

Signal	Pin No.	I/O	STOP	FF	REW	TAPE LOADING	TAPE UNLOADING	PB	REC
CTL IN+	MA-373 IC162(95)	I/O	*7	*7	*7	*7	*7	*7	*1
DRUM PG	MA-373 IC162(90)	I	*3	*3	*3	*3	*3	*3	*3
DRUM FG	MA-373 IC162(89)	I	*4	*4	*4	*4	*4	*4	*4
CAP FG	MA-373 IC162(87)	I	H/L	*2	*2	*5	*5	*2	*2
CAP RVS	MA-373 IC162㉔	O	H/L	L	H	L	H	L	L
CAP ERR	MA-373 IC162(76)	O	L	*6	*6	*6	*6	*6	*6
DRUM ERR	MA-373 IC162(77)	O	*6	*6	*6	*6	*6	*6	*6

*1. 25 Hz pulse.
*2. Pulse of period in proportion to tape speed.
*3. 25 Hz "H" pulse.
*4. 330 Hz pulse.
*5. Unstable period pulse.
*6. DC voltage 1 to 5V
*7. Hi-Z (2.5V)

5-3. SYSTEM CONTROL – MECHANISM BLOCK INTERFACE (MA-373 BOARD IC162)

Signal	Pin No.	I/O	EJECTED	CASSETTE LOADING	CASSETTE UNLOADING	TAPE THREADING	TAPE UNTHREADING	STOP	FF	REW	PB	REC
CAM	MA-373 IC162㉝	O	M	H/M	L/M	H/M	L/M	M	M	M	M	M
MODE 1	MA-373 IC162㉙	I	H	–	–	L	L	H	H	H	H	H
MODE 2	MA-373 IC162㉘	I	H	–	–	L	L	H	H	H	L	L
MODE 3	MA-373 IC162㉗	I	L	–	–	H	H	H	L	L	L	L
MODE 4	MA-373 IC162㉖	I	L	–	–	H	H	L	H	H	L	L
REC PRF	MA-373 IC162㉚	I	L	*1	*1	*1	*1	*1	*1	*1	*1	*1
T REEL	MA-373 IC162(80)	I	H/L	H/L	H/L	H/L	H/L	H/L	*2	*2	*2	*2
S REEL	MA-373 IC162(79)	I	H/L	H/L	H/L	*2	*2	H/L	*2	*2	*2	*2
END LED	MA-373 IC162⑳	O	L	L	L	*3	*3	*3	*3	*3	*3	*3
T SENS	MA-373 IC162⑦	I	*3	*3	*3	*4	*4	*4	*4	*4	*4	*4
S SENS	MA-373 IC162⑥	I	*3	*3	*3	*4	*4	*4	*4	*4	*4	*4

*1. “L” when erasing protection tab is bent. “H” when not bent.
*2. Pulse of period in proportion to reel rotating speed.
*3. Approx. 2 msec period “H” pulse.
*4. Normally “L”. 2 msec period “H” pulse when tape top or tape end is detected.

5-4. SYSTEM CONTROL – SYSTEM CONTROL PERIPHERAL CIRCUIT INTERFACE (MA-373 BOARD IC162)

Signal	Pin No.	I/O	I/O Level
RESET	MA-373 IC162㉞	I	Normally “H”, “L” when service interruption is detected or restored.
NICAM DATA	MA-373 IC162㊷	O	Serial communication data to Tuner.
NICAM CLK	MA-373 IC162㊶	O	Serial communication clock to with Tuner.

5-5. SYSTEM CONTROL – AUDIO BLOCK INTERFACE (MA-373 BOARD IC162)

Signal	Pin No.	I/O	STOP/ FF/ REW	TAPE LOADING	TAPE UNLOADING	PB	REC	PB • PAUSE
A MUTE	MA-373 IC162(83)	O	L	L	L	L	L	H

5-6. SERVO/SYSTEM CONTROL MICROPROCESSOR PIN FUNCTION (MA-373 BOARD IC162)

Pin No.	Pin Name	I/O	Function
1	DEST1	I	Destination identification input 1
2	DEST2	I	Destination identification input 2
3	TU AFT	I	AFT input from TUNER for station selection
4	FU KEY2	I	Function key input (9 keys)
5	FU KEY1	I	Function key input (9 keys)
6	S SENS	I	Tape end sensor input
7	T SENS	I	Tape top sensor input
8	RF ENV	I	Video RF envelope input
9	AF ENV	I	HiFi envelope input
10	MOD CONT	O	RF modulator ON/OFF control
11	KKP +	I	KKP 2-phase pulse B input
12	KKP -	I	KKP 2-phase pulse A input
13	QVD	O	Pseudo VO output
14	REMOCON	I	Remote control SIRCS signal input
15	CROT	O	Head azimuth information
16	HA SW	O	SP/EP head switching signal
17	ENV S	I	Identification signal of SP/EP head output comparison & detection
18	RF SWP	O	Video RF switching pulse output
19	AF SWP	O	HiFi switching pulse output
20	END LED	O	End sensor LED output
21	AV CONT	O	EURO 21 pin AV CONT signal output
22	AF REC P	O	HiFi record control signal
23	FULL ERS	O	Full erase control signal for A DUB
24	CAP RVS	O	Inverted capstan signal
25	I CONT	O	EURO 21 pin-I CONT signal output
26	MODE 4	I	Cam encode data 4
27	MODE 3	I	Cam encode data 3
28	MODE 2	I	Cam encode data 2
29	MODE 1	I	Cam encode data 1
30	REC PRF	I	Safety tab detection input
31	IIC CLK1 (EEP)	O	IIC clock (EEPROM control)
32	IIC DATA1 (EEP)	I/O	IIC data (EEPROM control)
33	CAM	O	Cam motor control signal
34	RESET	I	Reset input
35	32kHz (in)	I	Sub clock input
36	32kHz (out)	O	Sub clock output
37	VCC	–	Power supply input terminal (high speed mode: 4.0 to 5.5V, low speed mode: 2.6 to 5.5V)
38	17.734475MHz (in)	I	Main clock input
39	17.734475MHz (out)	O	Main clock output
40	VSS	–	Ground terminal
41	NICAM CLK	O	Clock for NICAM-ZWEI control
42	NICAM DATA	O	Data for NICAM-ZWEI control
43	CLK SEL	I	Selection of oscillation clock when reset is canceled “L”: sub clock, “H”: main & sub clocks
44	OSC CHARA (IN)	I/O	Clock input for OSD character size
45	OSC CHARA (OUT)	I/O	Clock output for OSD character size
46	NUB	–	Connected to Ground
47	OSD LPF	I/O	External filter that doubles the FSC, is connected to this terminal
48	LP	O	“L” at SP, “H” at EP/LP
49	OSD GND	–	Ground terminal of OSD/slicer
50	OSD V IN	I	Video signal input for OSD overlay
51	OSD W LEVEL	I	OSD white level input
52	OSD V OUT	O	OSD video signal output
53	OSD VCC	–	Power supply input terminal for OSD/slicer (4.75 V to 5.25 V)
54	HLF (SLICER LPF)	I/O	LPF connection terminal for slicer/AFC (This terminal is used as the HLF terminal when C. Video is input to pin-56.)
55	OSD SECAM C IN	I	Color signal input for SECAM OSD
56	C V IN (C SYNC IN)	I	Video signal input for tuner's station selection, OSD and servo sync signal detection (after passing filter)
57	NUA	–	Connected to Ground
58	DEC/VTR	O	Decoder/VTR switching
59	PDC DAV	I	PDC/VPS signal reception identification input
60	AV CONT IN/C+DET	I	CANAL + connection identification input
61	DIV CLK OUT/JOGLED CONT	O	Terminal of using JOG LED output or adjustment made output of clock dividing frequency
62	TA MUTE	O	Tuner audio mute signal output
63	A MUTE	O	Audio mute signal output
64	MTR12V CONT	O	Motor 12 V power control signal
65	SW5V CONT	O	SW 5 V power control signal
66	FLD CS	O	Chip selection signal for display tube driver
67	SECAM ON	O	SECAM ON signal/surround audio control (switched by destination)
68	TO FLD DATA	O	Serial data out CH0 (FLD)
69	18V CONT	O	18 V power control signal
70	FLD CLOCK	O	Serial clock CH0 (FLD)
71	SCL (VI/HF/TU/NICAM.ZWEI/MOD/VPS/DNR)	I/O	IIC clock (video/HiFi/tuner/ARC/modulator/VPS control)
72	SDA (VI/HF/TU/NICAM.ZWEI/MOD/VPS/DNR)	I/O	IIC data (video/HiFi/tuner/ARC/modulator/VPS control)
73	TO AV LINK	O	AV-LINK data output for communication
74	-14V CONT	O	Power save control
75	C+5V CONT	O	Power save control
76	CAP ERR	O	Capstan error output
77	DRUM ERR	O	Drum error output
78	P FAIL	I	Power failure detection input
79	S REEL	I	Supply reel sensor input
80	T REEL	I	Take up reel sensor input
81	DMS +	I	DMS 2-phase pulse 1 input
82	DMS -	I	DMS 2-phase pulse 2 input
83	TU SW1	O	Tuner system BG/L selection signal
84	TU SW2	O	Tuner system BGL/L selection signal
85	FROM AV LINK	I	AV-LINK data input for communication
86	SECAM DET	I	SECAM identification input
87	CAP FG	I	Capstan FG input
88	AMP VSS	–	Ground terminal for analog amplifier (connected to Vss)
89	DRUM FG	I	Drum FG input
90	DRUM PG	I	Drum PG input
91	AMP VREF OUT	–	Analog amplifier reference power supply output terminal
92	AMP VREF IN	–	Analog amplifier reference power supply output terminal
93	RC CHECK	I	“No use (Fix to “”L”” on the outside for the terminal only for the input)”

Pin No.	Pin Name	I/O	Function
94	CTL IN-	I/O	CTL signal input/output terminal
95	CTL IN+	I/O	CTL signal input/output terminal
96	AMPC	–	CTL amplifier AC Ground terminal
97	CTL AMP OUT	O	CTL amplifier output
98	AMP VCC	–	Power supply input terminal for analog amplifier (connected to Vcc)
99	AVCC	–	Power supply input and reference voltage input to A-D converter
100	24V CONT	O	24 V power control signal

SECTION 6
ERROR CODES

6-1. ERROR CODE INDICATION

- Error codes are indicated using the lower 5 digits in the fluorescent display tube.
  “At this time, Colon “:”between character is not indicated.”



ERROR CODE

0	No error
1	Cam encoder error Loading direction
2	Cam encoder error Unloading direction
3	T reel error
4	S reel error
5	Capstan error
6	Drum error
7	Error on initializing
8	Cassette loading error
9	Reserve

MODE CODE

0	Power-on eject	10	FWD x1	20	REW play
1	Power-on initial	11	FWD x2	21	Cas. loading
2	Power-off elect	12	CUE	22	Tape loading
3	Power-off stop	13	PB-pause	23	Power-off loading
4	FF	14	RVS-pause	24	Mecha. error (Power on)
5	REW	15	RVS x1	25	Power-on eject initial
6	REC	16	RVS x2	26	Power-off eject initial
7	REC-pause	17	REV	27	APC REC
8	Power-on stop	18	Power-off initial	28	Cas. loading
9	PB	19	Mecha. error (Power off)		(No auto PB check)

SECTION 7
ADJUSTMENTS

During the adjustment, see the Parts Arrangement Diagram for Adjustments on Page 7-6.

7-1. MECHANICAL ADJUSTMENTS

Refer to the SERVICE MANUAL of VHS MECHANICAL ADJUSTMENT VI.

7-2. ELECTRICAL ADJUSTMENTS

2-1. PRE-ADJUSTMENT PREPARATIONS

Necessary items and indications for total adjustment of electric circuit of this machine will be described in this chapter.

2-1-1. Instruments to be Used

1) Color TV
2) Oscilloscope 1 or 2 phenomena, band more than 30 MHz, delay mode, as provided.
3) NTSC pattern generator
4) PAL pattern generator
5) Digital voltmeter
6) Audio level meter
7) Audio noise meter
8) Audio generator
9) Attenuator
10) Alignment tape
    Part Code: 8-192-605-36 KRV-51P (PAL)
    Part Code: 8-192-605-32 KRV-51N2 (NTSC)

2-1-2. Connection

Unless otherwise specified, connect and adjust the measuring instruments as shown in the following diagram.

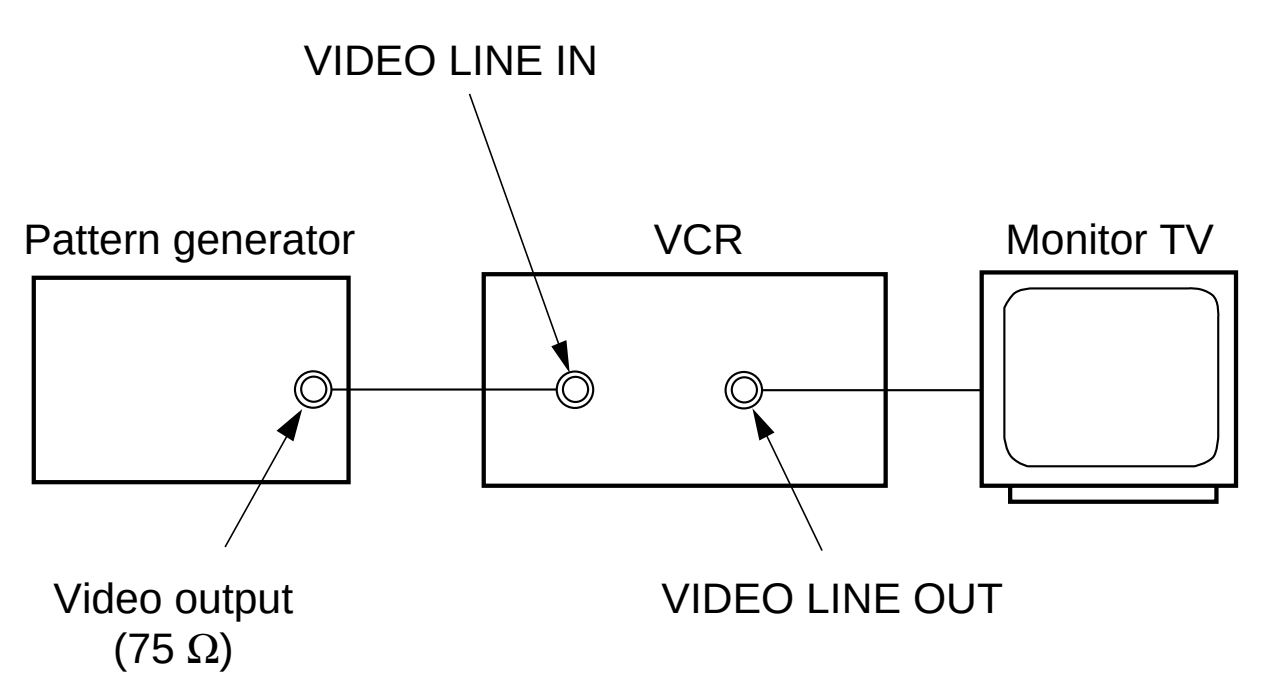
VIDEO LINE IN
Pattern generator
VCR
Monitor TV
Video output
(75 Ω)
VIDEO LINE OUT

Fig. 7-2-1

2-1-3. Set-up of Adjustment

In this adjustment, PAL or NTSC pattern generator is connected with LINE input signal terminal. When checking with tuner, connected AERIAL terminal. Check that the amplitudes of video signal SYNC signal, of picture portions, and of burst signals are flat at approximately 0.3, 0.7 and 0.3 V, respectively, and that the level ratio of the burst signal and “red” signal are 0.30: 0.66. Fig. 7-2-2. shows video signals (color bars) used in adjusting the video section.

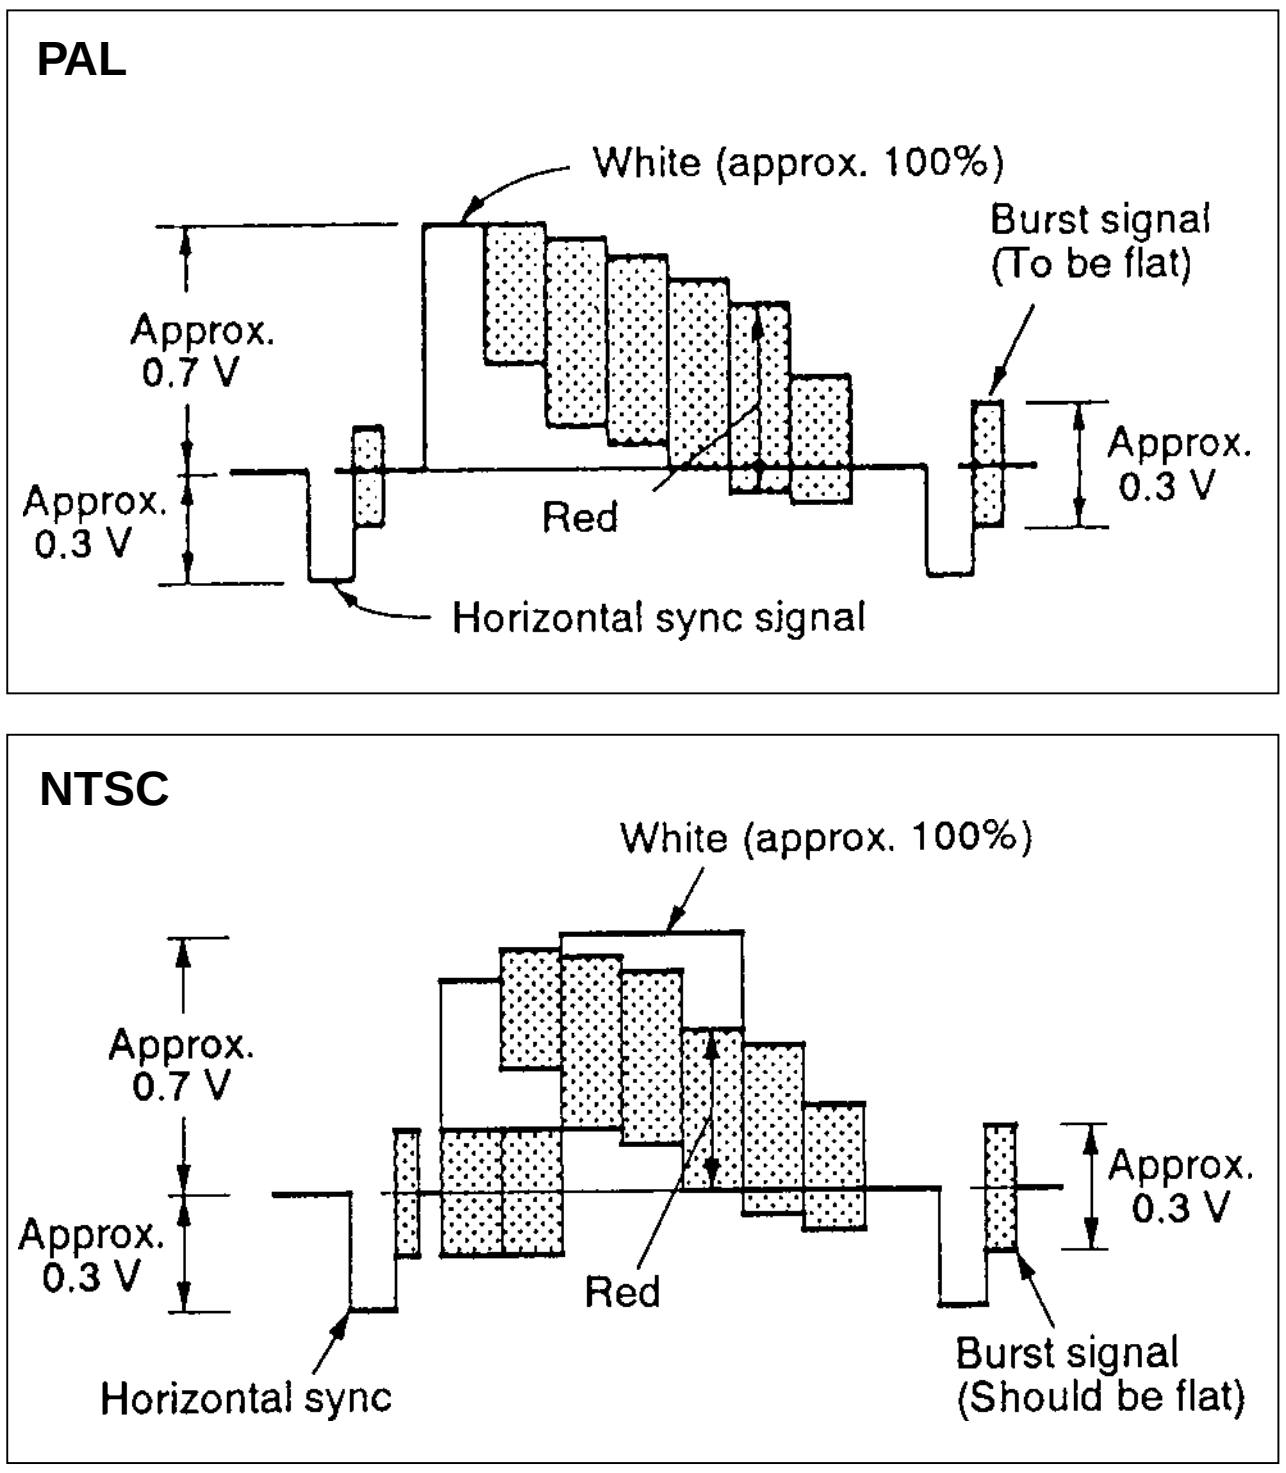
PAL
White (approx. 100%)
Burst signal
(To be flat)
Approx.
0.7 V
Approx.
0.3 V
Approx.
0.3 V
Red
Horizontal sync signal
NTSC
White (approx. 100%)
Approx.
0.7 V
Approx.
0.3 V
Approx.
0.3 V
Red
Horizontal sync
Burst signal
(Should be flat)

Fig. 7-2-2

2-1-4. Alignment Tapes
[Alignment Tape (KRV-51N2/KRV-51P)]

	Mode	Time	Video signal	Audio signal (HiFi/Normal)
1	SP	Seven minutes	Color bar	400 Hz
2	SP	Three minutes	Monoscope	
3	EP	Seven minutes	Color bar	
4	EP	Three minutes	Monoscope	

2-1-5. Specified I/O Level and Impedance
Input/output terminal

Video inputs	LINE IN : phono jack 1 Vp-p, 75 Ω, unbalanced, sync negative
Audio inputs	LINE IN : phono jacks 47 kW, –7.5 dBs (0 dBs = 0.775 Vrms) More than 10 kW, –4 dBs
Video outputs	LINE OUT: phono jack 1 Vp-p, 75 Ω, unbalanced, sync negative
Audio outputs	LINE OUT: phono jacks –7.5 dBs at load impedance 47 kΩ Output impedance : less than 10 Ω

2-1-6. Adjusting Sequence

Make the electrical adjustment in the following sequence.

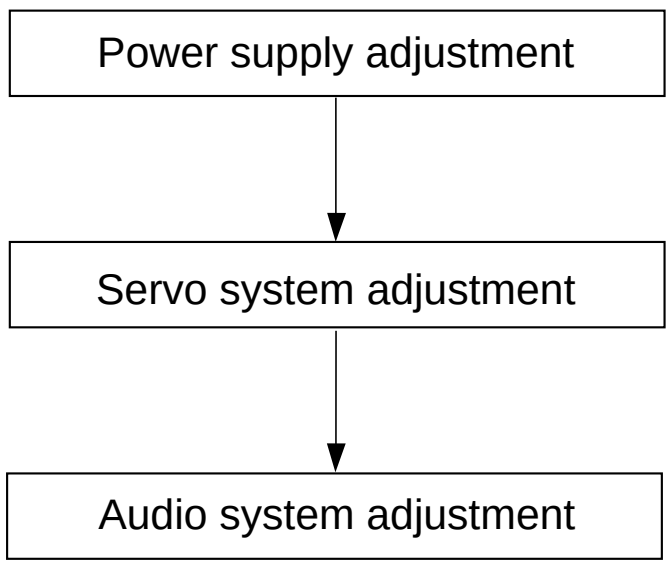
Power supply adjustment
Servo system adjustment
Audio system adjustment

2-2. POWER SUPPLY ADJUSTMENTS

2-2-1. Power Supply Check (SRV938EK BOARD)

Mode	E-E
Measuring Instrument	Digital voltmeter
MTR12 V check	
Measurement Point	Pin ⑤, ⑥ of CN201
Specified Value	13.5 ±0.4 V
D6 V check	
Measurement Point	Pin ⑭ of CN201
Specified Value	5.9 ± 0.2 V
+13 V check	
Measurement Point	Pin ⑫ of CN201
Specified Value	13.6 ± 0.5 V
+38 V check	
Measurement Point	Pin ② of CN202
Specified Value	35.0 ± 3.5 V
SW 5 Vcheck	
Measurement Point	Pin ⑮, ⑯ of CN201
Specified Value	5.2 ± 0.2 V
+F, –F check	
Measurement Point	Pin ④, ⑥ of CN202
Specified Value	$2.9^{+0.6}_{-0.3}$ V
–11 V check	
Measurement Point	Pin ③ of CN202
Specified Value	–11.5 ± 1.0 V

Checking Method:

1) Confirm that each voltage meets its specified value.

2-2-2. +6 V Adjustment (SRV938EK BOARD)

Mode	REC or PB
Measuring Instrument	Digital voltmeter
Measurement Point	Pin ⑭ of CN201
Adjusting Element	VR251
Specified Value	5.9 ± 0.2 V

2-3. SERVO SYSTEM ADJUSTMENT

2-3-1. RF Switching Position Adjustment (MA-373 BOARD)

Purpose:

Adjust the interval between A ch and B ch of tape playback output.

Improve the interchangeability with other tapes and sets.

When it is out of order, the interval appears on the screen, the screen is disturbed.

Mode	PB
Signal	Alignment tape SP mode color bar
Measurement Point	CH1: Pin ① of CN262 CH2: Pin ② of CN262 (RF SWP)
Measuring Instrument	Oscilloscope
Specified Value	6.5 ± 0.5 H (416 ± 32 µsec) PAL 6.5 ± 0.5 H (410 ± 32 µsec) NTSC

Adjusting Method:

1) During playback, connect MA-373 board CN262 pin ③ and the pin ⑤ for about 1 second to activate the RF switching position adjustment mode.
2) Check appear "A P" on FL display.
3) Using the channel + and – buttons, adjust to 6.5 ± 0.5 H.
4) Press the pause button.

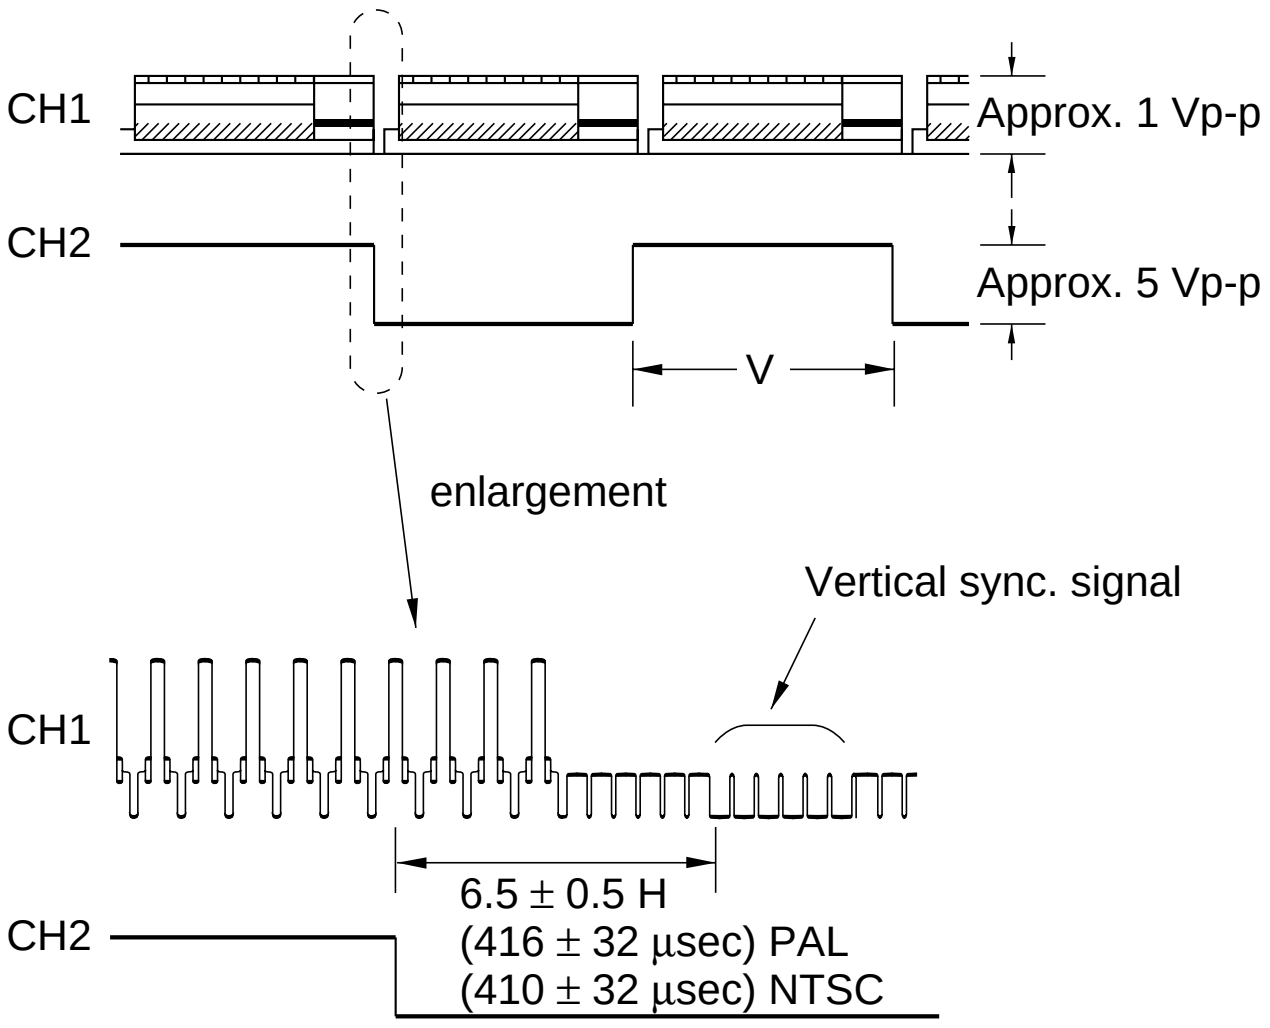
CH1
CH2
Approx. 1 Vp-p
Approx. 5 Vp-p
V
enlargement
Vertical sync. signal
CH1
CH2
6.5 ± 0.5 H
(416 ± 32 µsec) PAL
(410 ± 32 µsec) NTSC

Fig. 7-2-3.

2-4. AUDIO SYSTEM ADJUSTMENTS

- Adjust both Lch and Rch.

[Connection]

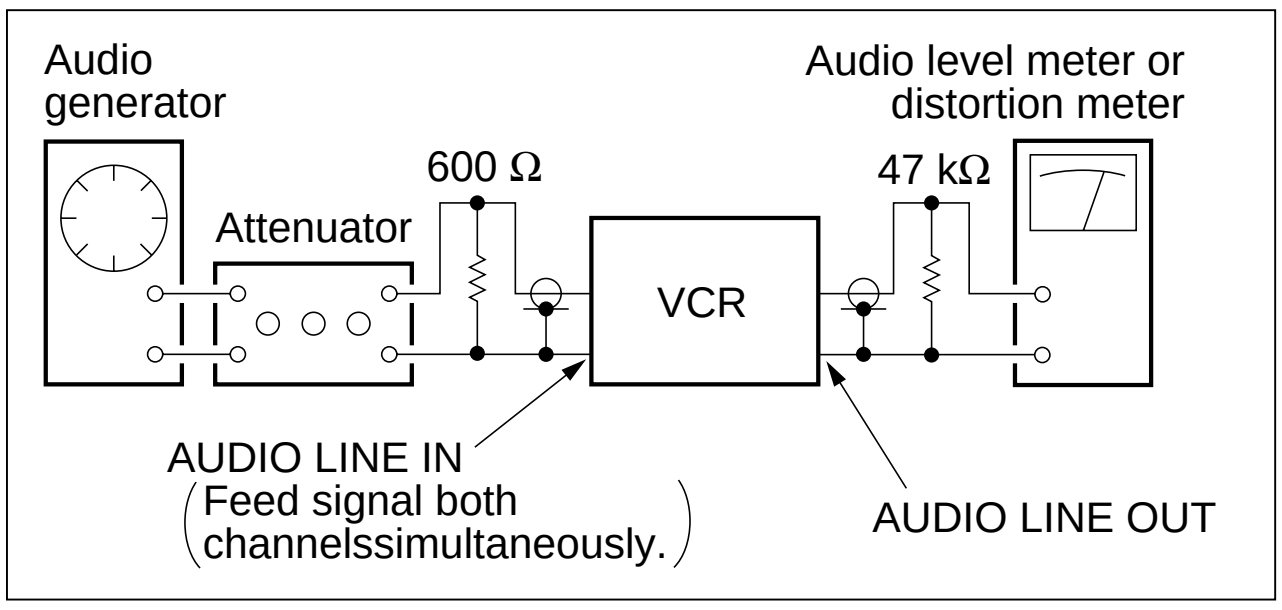
Audio generator
Audio level meter or distortion meter
600 Ω
47 kΩ
Attenuator
VCR
AUDIO LINE IN
(Feed signal both channelssimultaneously.)
AUDIO LINE OUT

Fig. 7-2-4.

2-4-1. Hi-Fi Audio System Adjustment (EXCEPT SLV-SE350/SE500)

- Set switches and knobs to the following positions to make adjustment unless otherwise specified.
  INPUT SELECT switch .... LINE
  AUDIO MONITOR .... STEREO

[Adjustment Sequence]

1. **AF Switching Position Adjustment**
2. **Frequency Response Check**
3. **Overall Level Characteristic and Distortion Factor Check**
4. **Overall S/N Check**

1. AF Switching Position Adjustment (MA-373 BOARD)

Purpose:
Adjust the interval between A CH and B CH of tape playback output. Improve the interchangeability with other tapes and sets. When it is out of order, noisy sound is increased and big noise is heard.

Mode	PB
Signal	Alignment tape SP mode color bar
Measurement point	CH1: Pin ② of CN262 CH2: Pin ① of CN263
Measuring Instrument	Oscilloscope
Specified Value	Fig. 7-2-5

Adjusting Method:

1) During playback, connect MA-373 board CN262 pin ③ and the pin ⑤ for about 1 second to activate the RF switching position adjustment mode.
2) Press the record button to activate the AF switching position adjustment mode.
3) Check appear "A H" on FL display.
4) Using the channels + and – buttons, minimize a chipped portion. At this time, confirm that a noisy sound is not heard.
5) Press the pause button.

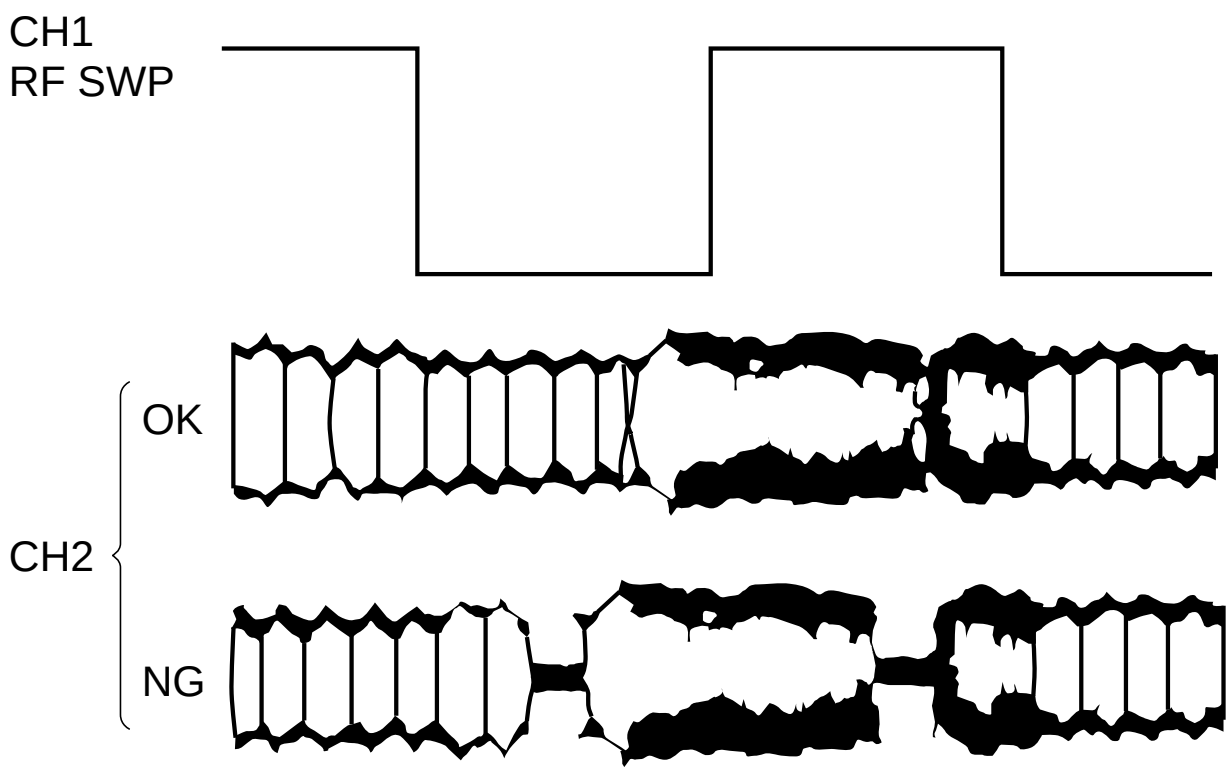

Fig. 7-2-5.

2. Frequency Response Check

Purpose:
Confirm that the frequency characteristic is within the specification.

Mode	REC and PB (SP, LP mode)
Signal	400 Hz, –26.3 dBs 30 Hz, –26.3 dBs 20 kHz, –26.3 dBs
Measurement point	Audio output terminal
Measurement equipment	Audio level meter
Specified value	0 ± 3 dB

Note: Tape path adjustment must have been completed.

Confirmation Method:

1) Supply a signal of 400 Hz, –26.3 dBs to both L and R channels of Audio Line Input.
2) Connect the audio level meter to the Audio Line Output.
3) Adjust the attenuator so that the audio level meter will indicate –26.3 dBs.
4) Make recording.
5) Set an audio line input signal to 30 Hz and make recording.
6) Set an audio line input signal to 20 kHz and make recording.
7) Playback a recorded portion, and measure output levels at 400 Hz and 30 Hz and 20 kHz.
8) Confirm that the 30 Hz and 20 kHz playback output level within a range of the 400 Hz playback output level 0 ± 3 dB.

3. Overall Level Characteristic and Distortion Factor Check

Purpose:
Check the record level, play level, and distortion factor against the reference input.

Mode	REC and PB (SP mode)
Signal	400 Hz, –6.3 dBs
Measurement point	Audio output terminal
Measurement equipment	Audio level meter and distortion factor meter
Specified value	Playback level: –6.3 ± 2.0 dBs Distortion factor: 1% or less

Confirmation Method:
1) Supply an audio signal of 400 Hz, –6.3 dBs simultaneously to both L and R channels of Audio Line Input.
2) Make recording
3) Play back a recorded portion.
4) Confirm that a playback level is –6.3 ± 2.0 dBs.
5) Confirm that a distortion factor is within 1%.

4. Overall S/N Check

Purpose:
Confirm that the S/N is within the specification.

Mode	REC and PB (SP mode)
Signal	Short
Measurement point	Audio output terminal
Measurement equipment	Audio noise meter
Specified value	–67.5 dBs or less

Confirmation Method:
1) Connect both L and R channels of audio line input to the GND.
2) Start recording.
3) Play the recorded part to confirm that the noise is below –67.5 dBs.

2-4-2. Normal Audio System Adjustment

- Make adjustment in the SP mode, unless otherwise specified. Use a normal VHS cassette for an adjustment tape.
- Set AUDIO MONITOR to normal.

[Adjustment Sequence]
1. **ACE Head Adjustment**
2. **E-E Output Level Check**
3. **Frequency Response Check**
4. **Overall Level Characteristic and Distortion Factor Check**
5. **Overall S/N Check**

1. ACE Head Adjustment

Refer to the SERVICE MANUAL of VHS MECHANICAL ADJUSTMENT VI.

2. E-E Output Level Check
(SLV-SE350/SE500)

Purpose:
Confirm that the output level against the reference input is within the specification.

Mode	E-E
Signal	L, R: 400 Hz, –6.3 dBs
Measurement point	Audio output terminal
Measurement equipment	Audio level meter
Specified value	–6.3 ± 2.0 dBs

Confirmation Method:
1) Simultaneously input a signal of 400 Hz, –6.3 dBs to both L and R channels of Audio Line Input.
2) Confirm that the audio output level is –6.3 ± 2.0 dBs.
(This level only can appear with mono models)

3. Frequency Response Check

Purpose:
Confirm that the frequency characteristic is within the specification.

Mode	REC and PB (SP mode)
Signal	400 Hz, –26.3 dBs 7 kHz, –26.3 dBs
Measurement point	Audio output terminal
Measurement equipment	Audio level meter
Specified value	0 ± 3 dB

Tape path adjustment must have been completed.

Confirmation Method:
1) Supply a signal of 400 Hz, –26.3 dBs to both L and R channels of Audio Line Input.
2) Connect the audio level meter to the Audio Line Output.
3) Adjust the attenuator so that the audio level meter will indicate –26.3 dBs.
4) Make recording in the SP mode.
5) Set an audio line input signal to 7 kHz and make recording.
6) Playback a recorded portion, and measure output levels at 400 Hz and 7 kHz.
7) Confirm that the 7 kHz playback output level within a range of the 400 Hz playback output level 0 ± 3 dB.

4. Overall Level Characteristic and Distortion Factor Check

Purpose:
Check the record level, play level, and distortion factor against the reference input.

Mode	REC and PB (SP mode)
Signal	400 Hz, –6.3 dBs
Measurement point	Audio output terminal
Measurement equipment	Audio level meter and distortion factor meter
Specified value	Playback level: –6.3 ± 3.0 dBs Distortion factor: 4% or less

Confirmation Method:
1) Supply an audio signal of 400 Hz, –6.3 dBs simultaneously to both L and R channels of Audio Line Input.
2) Make recording
3) Play back a recorded portion.
4) Confirm that a playback level is –6.3 ± 3.0 dBs.
5) Confirm that a distortion factor is within 4%.

5. Overall S/N Check

Purpose:
Confirm that the S/N is within the specification.

Mode	REC and PB (SP mode)
Signal	Short
Measurement point	Audio output terminal
Measurement equipment	Audio noise meter
Specified value	–45.5 dBs or less

Confirmation Method:
1) Connect both L and R channels of audio line input to the GND.
2) Start recording.
3) Play the recorded part to confirm that the noise is below –45.5 dBs.

2-5. PARTS ARRANGEMENT DIAGRAM FOR ADJUSTMENTS

MA-373 BOARD (Side A)

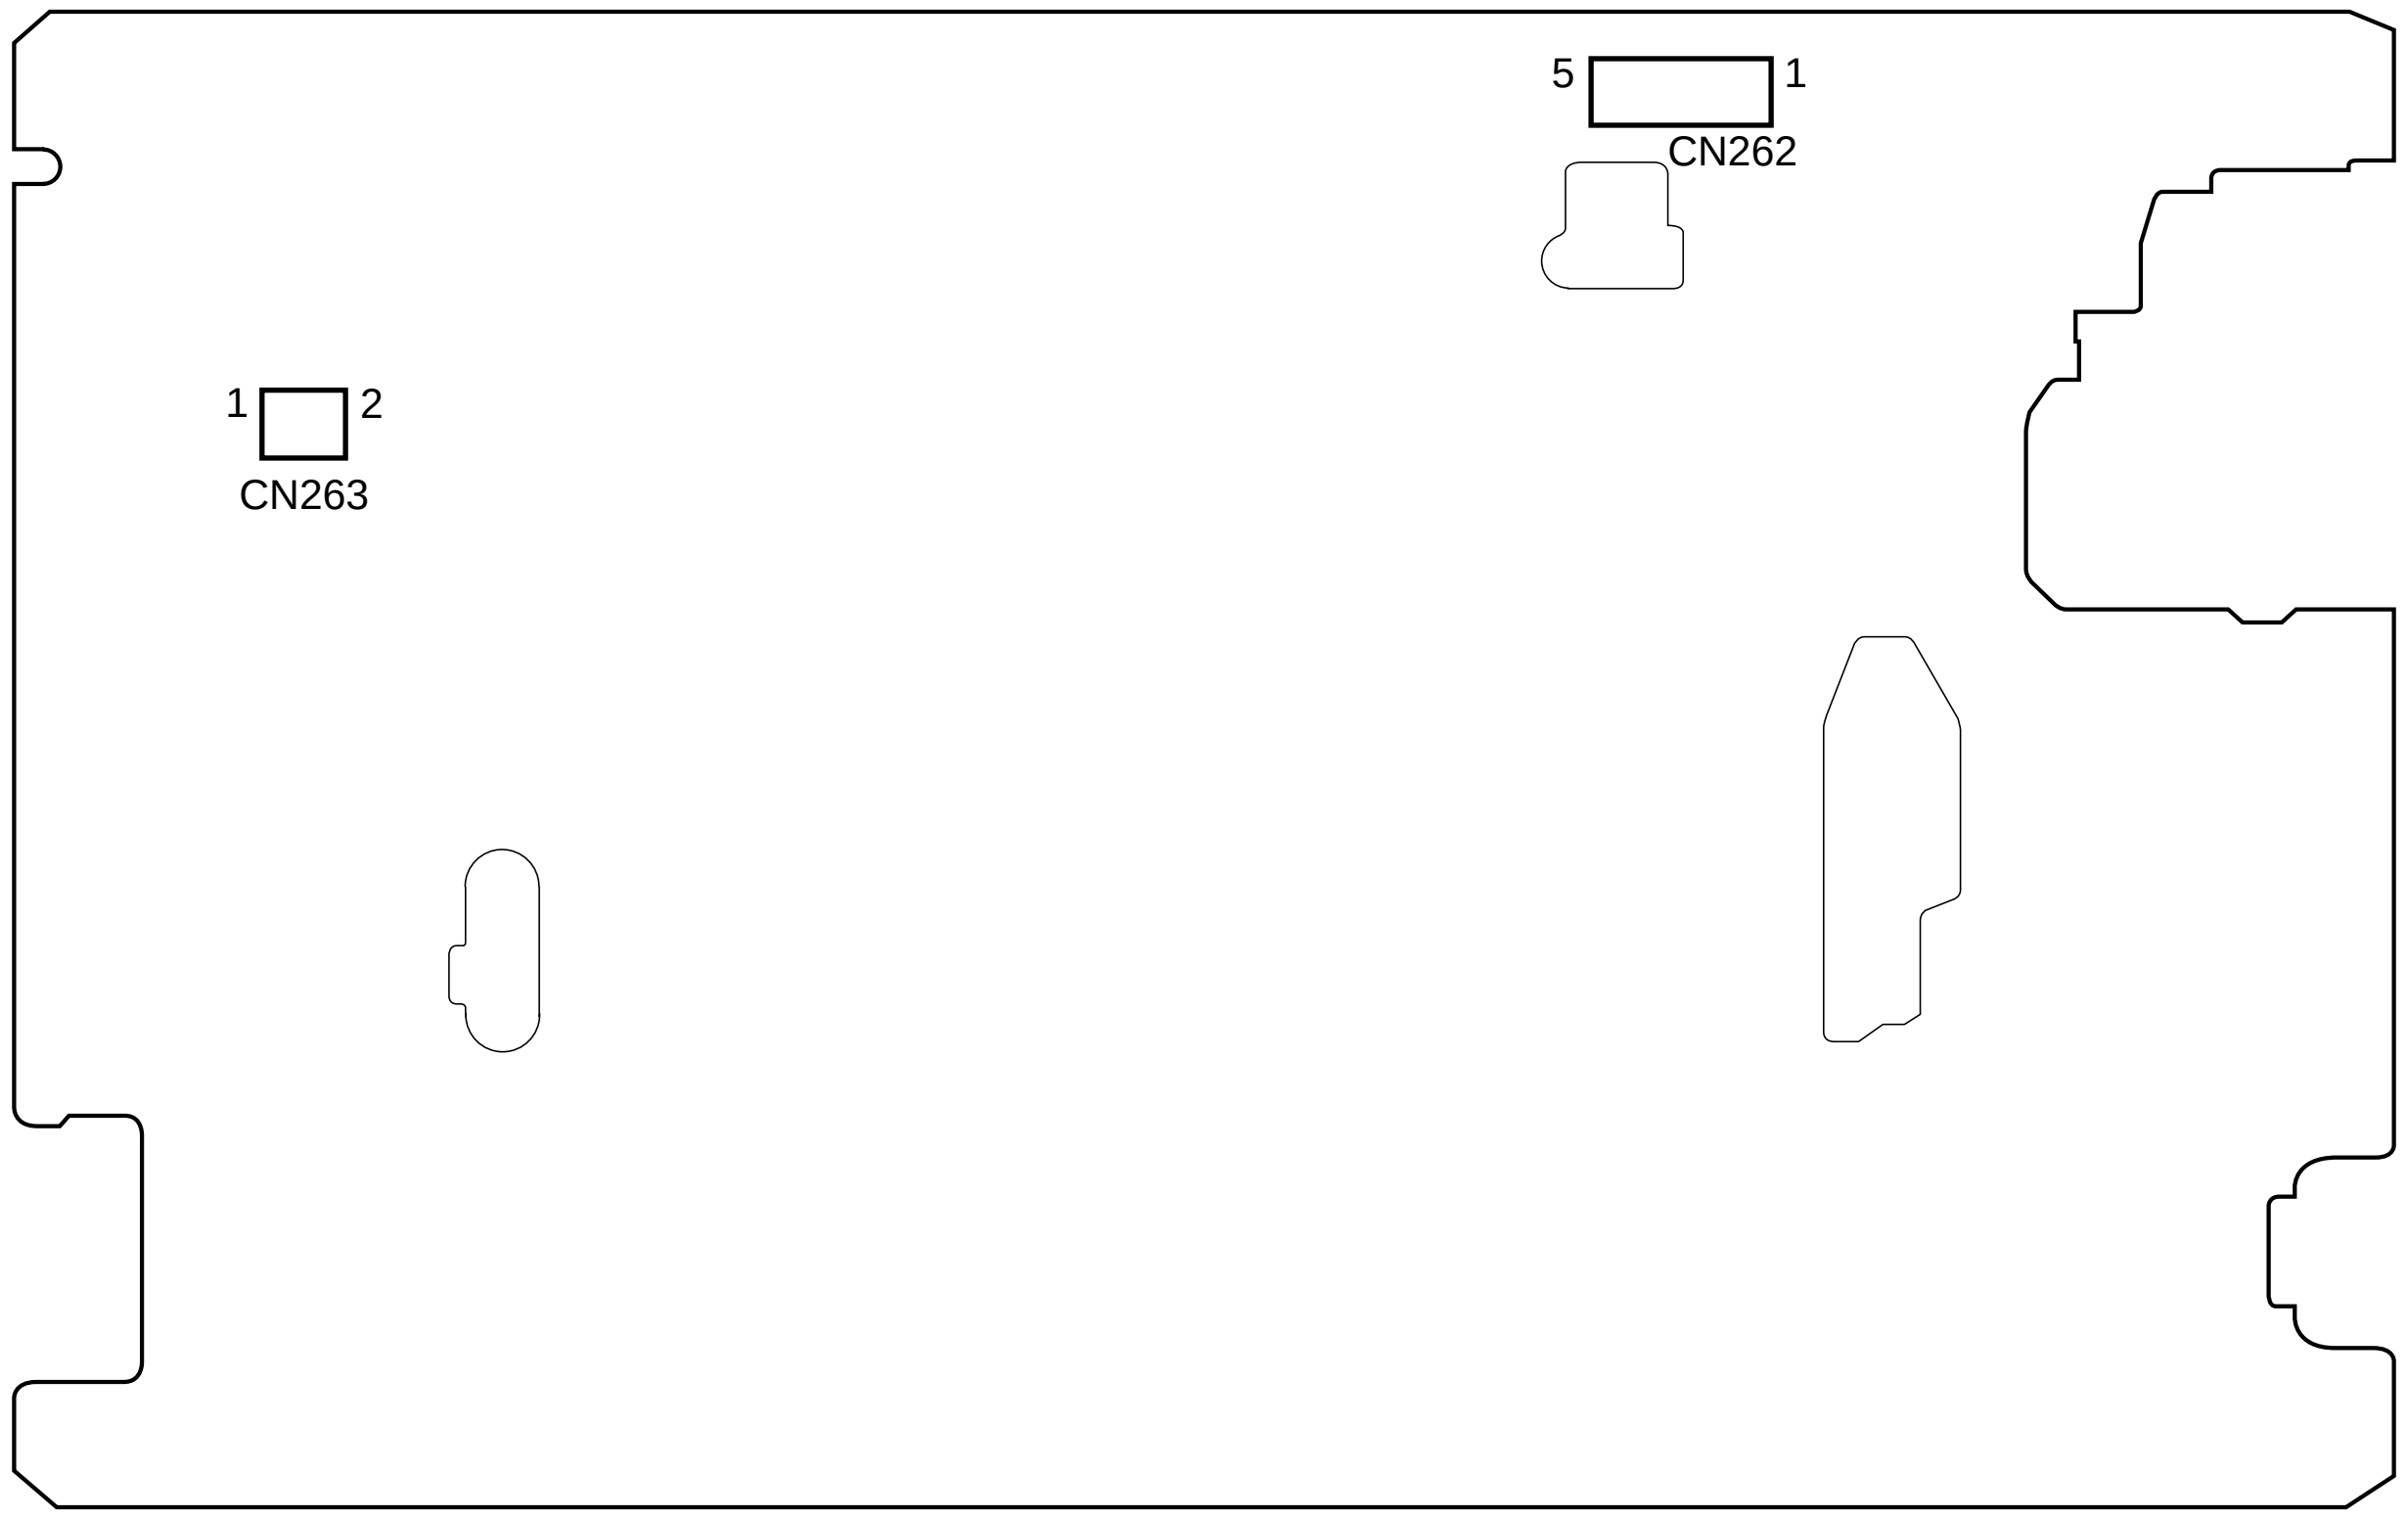

SRV938EK BOARD (Side A)

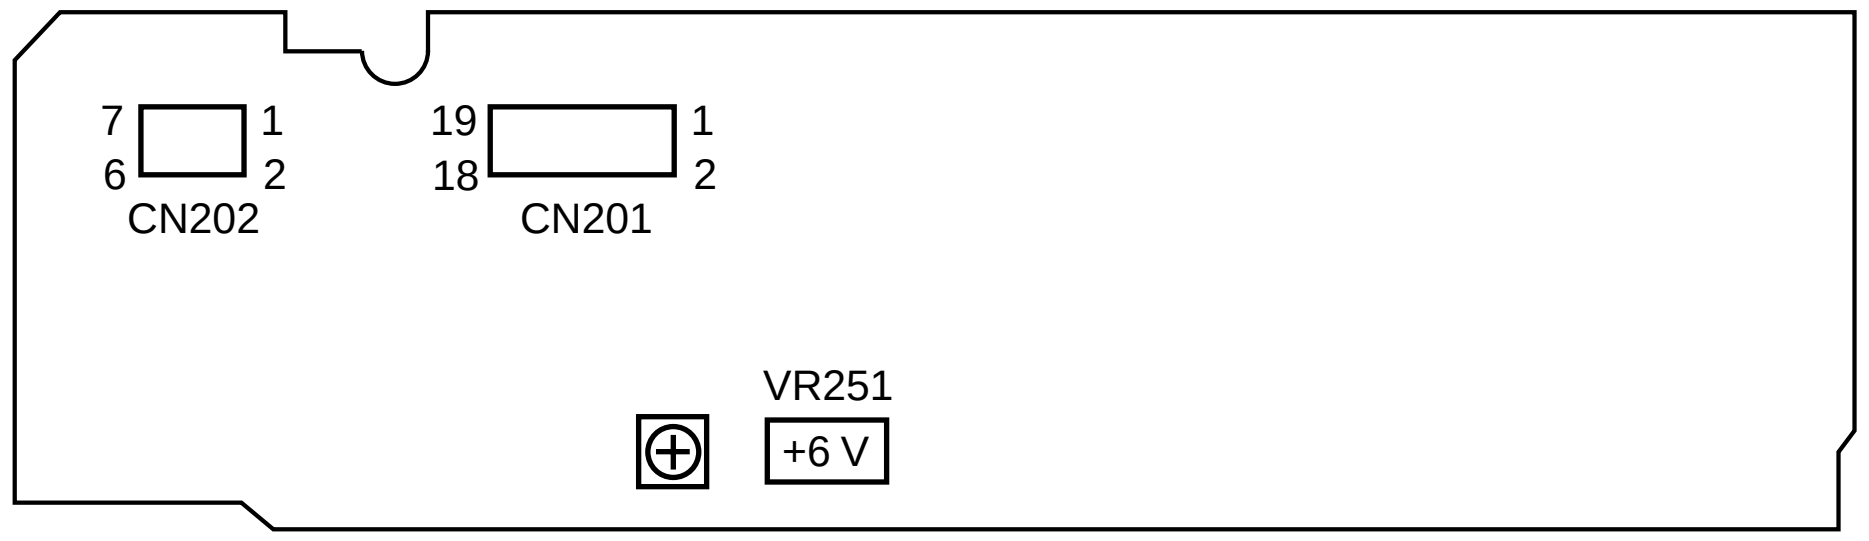

SECTION 8
REPAIR PARTS LIST

8-1. EXPLODED VIEWS

NOTE:

- -XX and -X mean standardized parts, so they may have some difference from the original one.
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- The mechanical parts with no reference number in the exploded views are not supplied.
- Hardware (# mark) list and accessories and packing materials are given in the last of the electrical parts list.

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.
Replace only with part number specified.

8-1-1. FRONT PANEL AND CABINET ASSEMBLIES

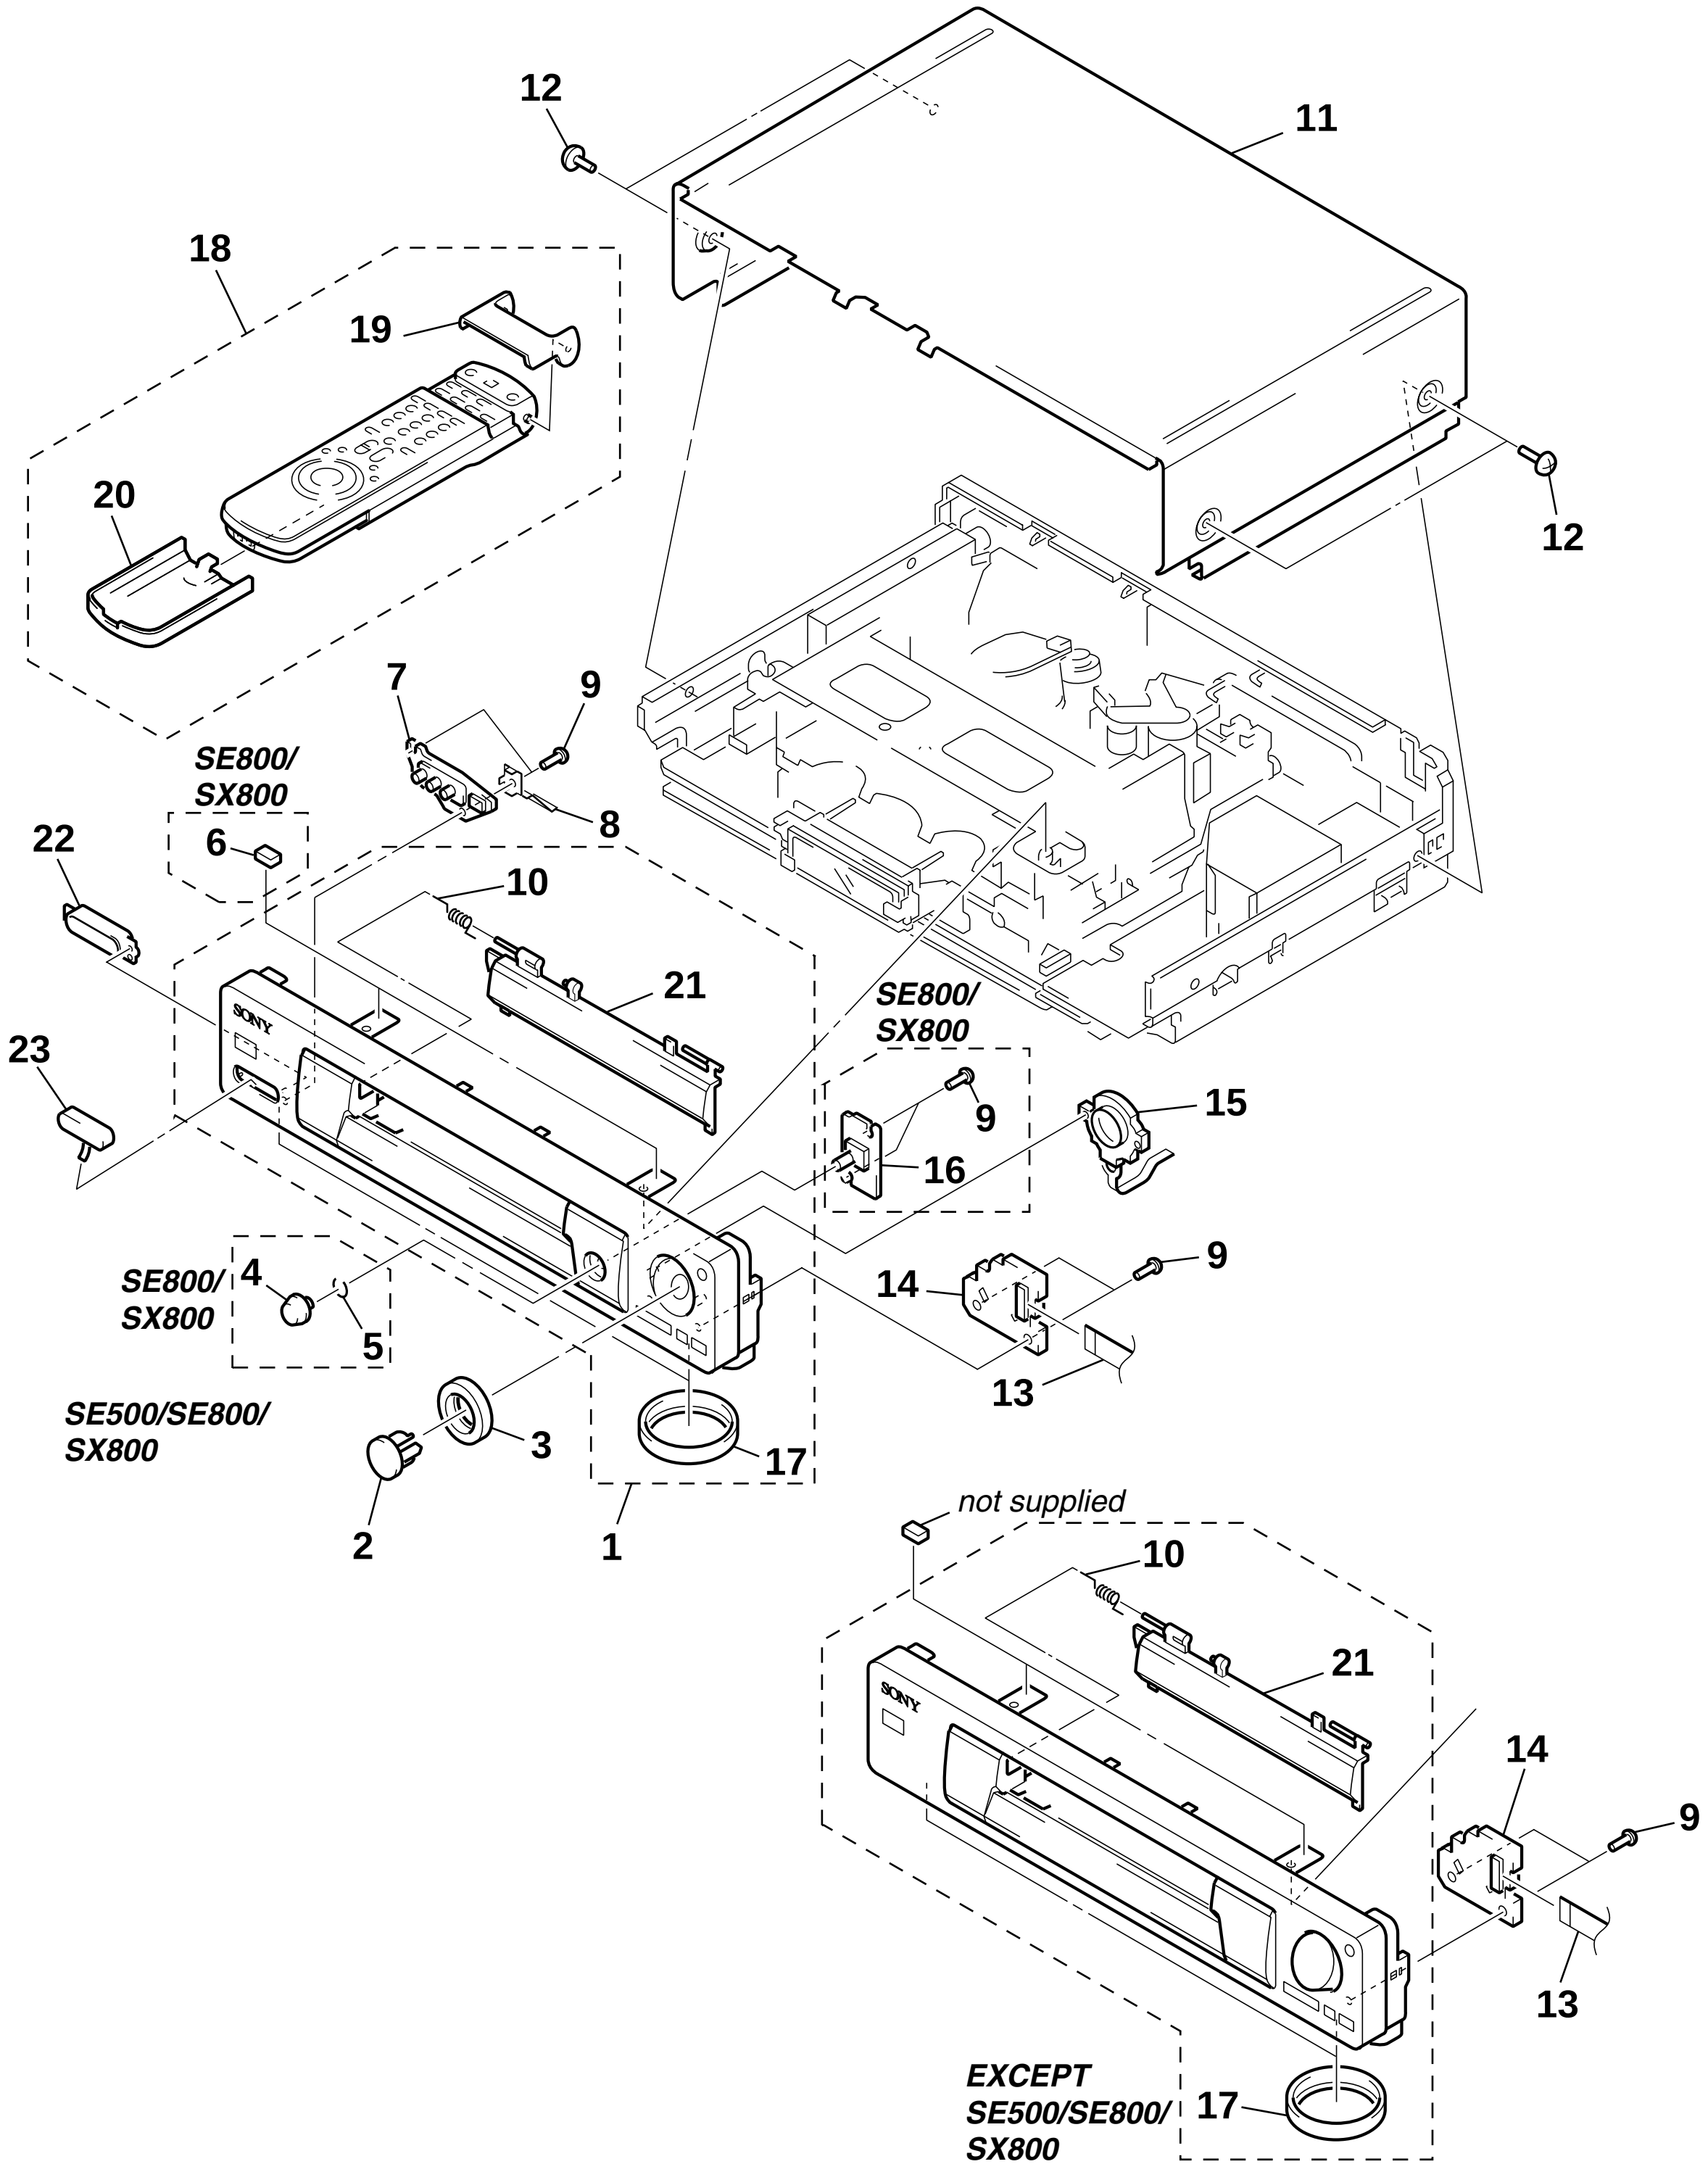

Ref. No.	Part No.	Description	Remark
1	X-3950-127-1	PANEL ASSY, FRONT (SE350)	
1	X-3950-128-1	PANEL ASSY, FRONT (SE500R)	
1	X-3950-129-1	PANEL ASSY, FRONT (SE500K)	
1	X-3950-130-1	PANEL ASSY, FRONT (SE600: A, E)	
1	X-3950-132-1	PANEL ASSY, FRONT (SX600)	
1	X-3950-133-1	PANEL ASSY, FRONT (SE650)	
1	X-3950-134-1	PANEL ASSY, FRONT (SE700G) (BLACK)	
1	X-3950-135-1	PANEL ASSY, FRONT (SE700: D1, D2, E1, E2)	
1	X-3950-139-1	PANEL ASSY, FRONT (SE700: G, I) (GRAY)	
1	X-3950-141-1	PANEL ASSY, FRONT (SX700: D, E)	
1	X-3950-143-1	PANEL ASSY, FRONT (SE700R)	
1	X-3950-144-1	PANEL ASSY, FRONT (SE700N)	
1	X-3950-145-1	PANEL ASSY, FRONT (SE700K)	
1	X-3950-146-1	PANEL ASSY, FRONT (SE600N)	
1	X-3950-147-1	PANEL ASSY, FRONT (SE800N)	
1	X-3950-148-1	PANEL ASSY, FRONT (SE800K)	
1	X-3950-165-1	PANEL ASSY, FRONT (H) (SE800: D1, D2, E)	
1	X-3950-168-1	PANEL ASSY, FRONT (SE800B)	
1	X-3950-169-1	PANEL ASSY, FRONT (SE800G)	
1	X-3950-170-1	PANEL ASSY, FRONT (SX800)	
1	X-3950-201-1	PANEL ASSY, FRONT (SE700B)	
1	X-3950-202-1	PANEL ASSY, FRONT (SX700B)	
1	X-3950-203-1	PANEL ASSY, FRONT (SE600B)	
2	3-057-802-01	BUTTON (H), CENTER (SE800: D1, D2, E, G)	
2	3-057-802-11	BUTTON (H), CENTER (SE500/SE800: K, N)	
2	3-057-802-21	BUTTON (H), CENTER (SE800B)	
2	3-057-802-31	BUTTON (H), CENTER (SX800)	
3	3-057-801-01	RING (H), CHANGE SPEED (SE800: B, D1, D2, E, G)	
3	3-057-801-11	RING (H), CHANGE SPEED (SE500/SE800: K, N)	
3	3-057-801-21	RING (H), CHANGE SPEED (SX800)	
4	3-057-803-01	DIAL, KK (SE800: B, D1, D2, E, G)	
4	3-057-803-11	DIAL, KK (SE800: K, N/SX800)	
5	3-055-077-01	SPRING, ETR (P5) (SE800/SX800)	
6	3-978-737-11	CUSHION (FP), RUBBER (SE800: B, D1, D2, E, G/SX800)	
* 7	A-6794-749-A	JK-180 BOARD, COMPLETE (SE800: B, D1, D2, E, G/SX800)	
* 7	A-6794-752-A	JK-180 BOARD, COMPLETE (SE800: K, N)	
* 7	A-6794-755-A	JK-180 BOARD, COMPLETE (SE500)	
8	3-057-807-01	PLATE, JK EARTH (SE500/SE800/SX800)	
9	4-921-277-41	SCREW (B2.6X8), TAPPING, BIND	
10	3-953-432-01	SPRING (GE), FL	
11	3-057-808-21	CASE, UPPER (SE700: G, I/SX600/SX700) (GRAY)	
11	3-057-808-31	CASE, UPPER (SE350/SE500/SE600/SE650/SE700: B, D1, D2, E1, E2, G, K, N, R/SE800: K, N) (BLACK)	
11	3-058-350-21	CASE, UPPER (SE800: B, D1, D2, E, G)	
11	3-058-350-31	CASE, UPPER (SX800)	
12	3-363-099-01	SCREW (CASE 3 TP2) (EXCEPT SE700: G, I/SE800: B, D1, D2, E, G/SX600/SX700) (BLACK)	
12	3-363-099-11	SCREW (CASE 3 TP2) (SE700: G, I/SE800: B, D1, D2, E, G/SX600/SX700) (GRAY)	
13	1-792-020-11	CABLE, FLAT (FDS-7) (SE500/SE800/SX800)	
13	1-792-021-11	CABLE, FLAT (FDS-8) (EXCEPT SE500/SE800/SX800)	
* 14	A-6794-748-A	DS-91 BOARD, COMPLETE (SE350/SE600/SE650/SE700/SX600/SX700)	
* 14	A-6794-751-A	DS-91 BOARD, COMPLETE (SE800: B, D1, D2, E, G/SX800)	
* 14	A-6794-754-A	DS-91 BOARD, COMPLETE (SE800: K, N)	
* 14	A-6794-756-A	DS-91 BOARD, COMPLETE (SE500)	
15	1-762-844-31	SWITCH, ROTARY (SE500/SE800/SX800)	
* 16	A-6794-750-A	KK-23 BOARD, COMPLETE (SE800: B, D1, D2, E, G/SX800)	
* 16	A-6794-753-A	KK-23 BOARD, COMPLETE (SE800: K, N)	
17	3-053-395-01	INSULATOR	
18	1-418-010-11	COMMANDER, STANDARD (RMT-V259) (SE500/SE700: D1, D2, E1, E2, K, N, R/SE800: K, N/SX800)	
18	1-418-010-21	COMMANDER, STANDARD (RMT-V259A) (SE700B)	
18	1-418-780-11	COMMANDER, STANDARD (RMT-V288) (SE350/SE600: A, E, N/SE650/SX600)	
18	1-418-780-21	COMMANDER, STANDARD (RMT-V288A) (SE600B)	
18	1-418-782-11	COMMANDER, STANDARD (RMT-V259K) (SE700: G, I/SE800: D1, D2, E/SX700: D, E)	
18	1-418-782-21	COMMANDER, STANDARD (RMT-V259L) (SE800: B, G/SX700B)	
19	3-709-430-01	COVER, REMOTE CONTROL (for RMT-V288/V288A/V259/V259A) (EXCEPT SE700: G, I/SE800: B, D1, D2, E, G/SX700)	
19	3-709-430-11	COVER, REMOTE CONTROL (for RMT-V259L/V259K) (SE700: G, I/SE800: B, D1, D2, E, G/SX700)	
20	3-709-431-01	COVER, REMOTE CONTROL BATTERY (for RMT-V288/288A/V259/V259A) (EXCEPT SE700: G, I/SE800: B, D1, D2, E, G/SX700)	
20	3-709-431-11	COVER, REMOTE CONTROL BATTERY (for RMT-V259L/V259K) (SE700: G, I/SE800: B, D1, D2, E, G/SX700)	
22	3-057-795-11	HOLDER, JK (SE800: K, N/SX800)	
22	3-057-795-21	HOLDER, JK (SE500)	
23	3-057-796-11	CAP, JK (SE500/SE800: K, N/SX800)	

8-1-2. CHASSIS ASSEMBLY

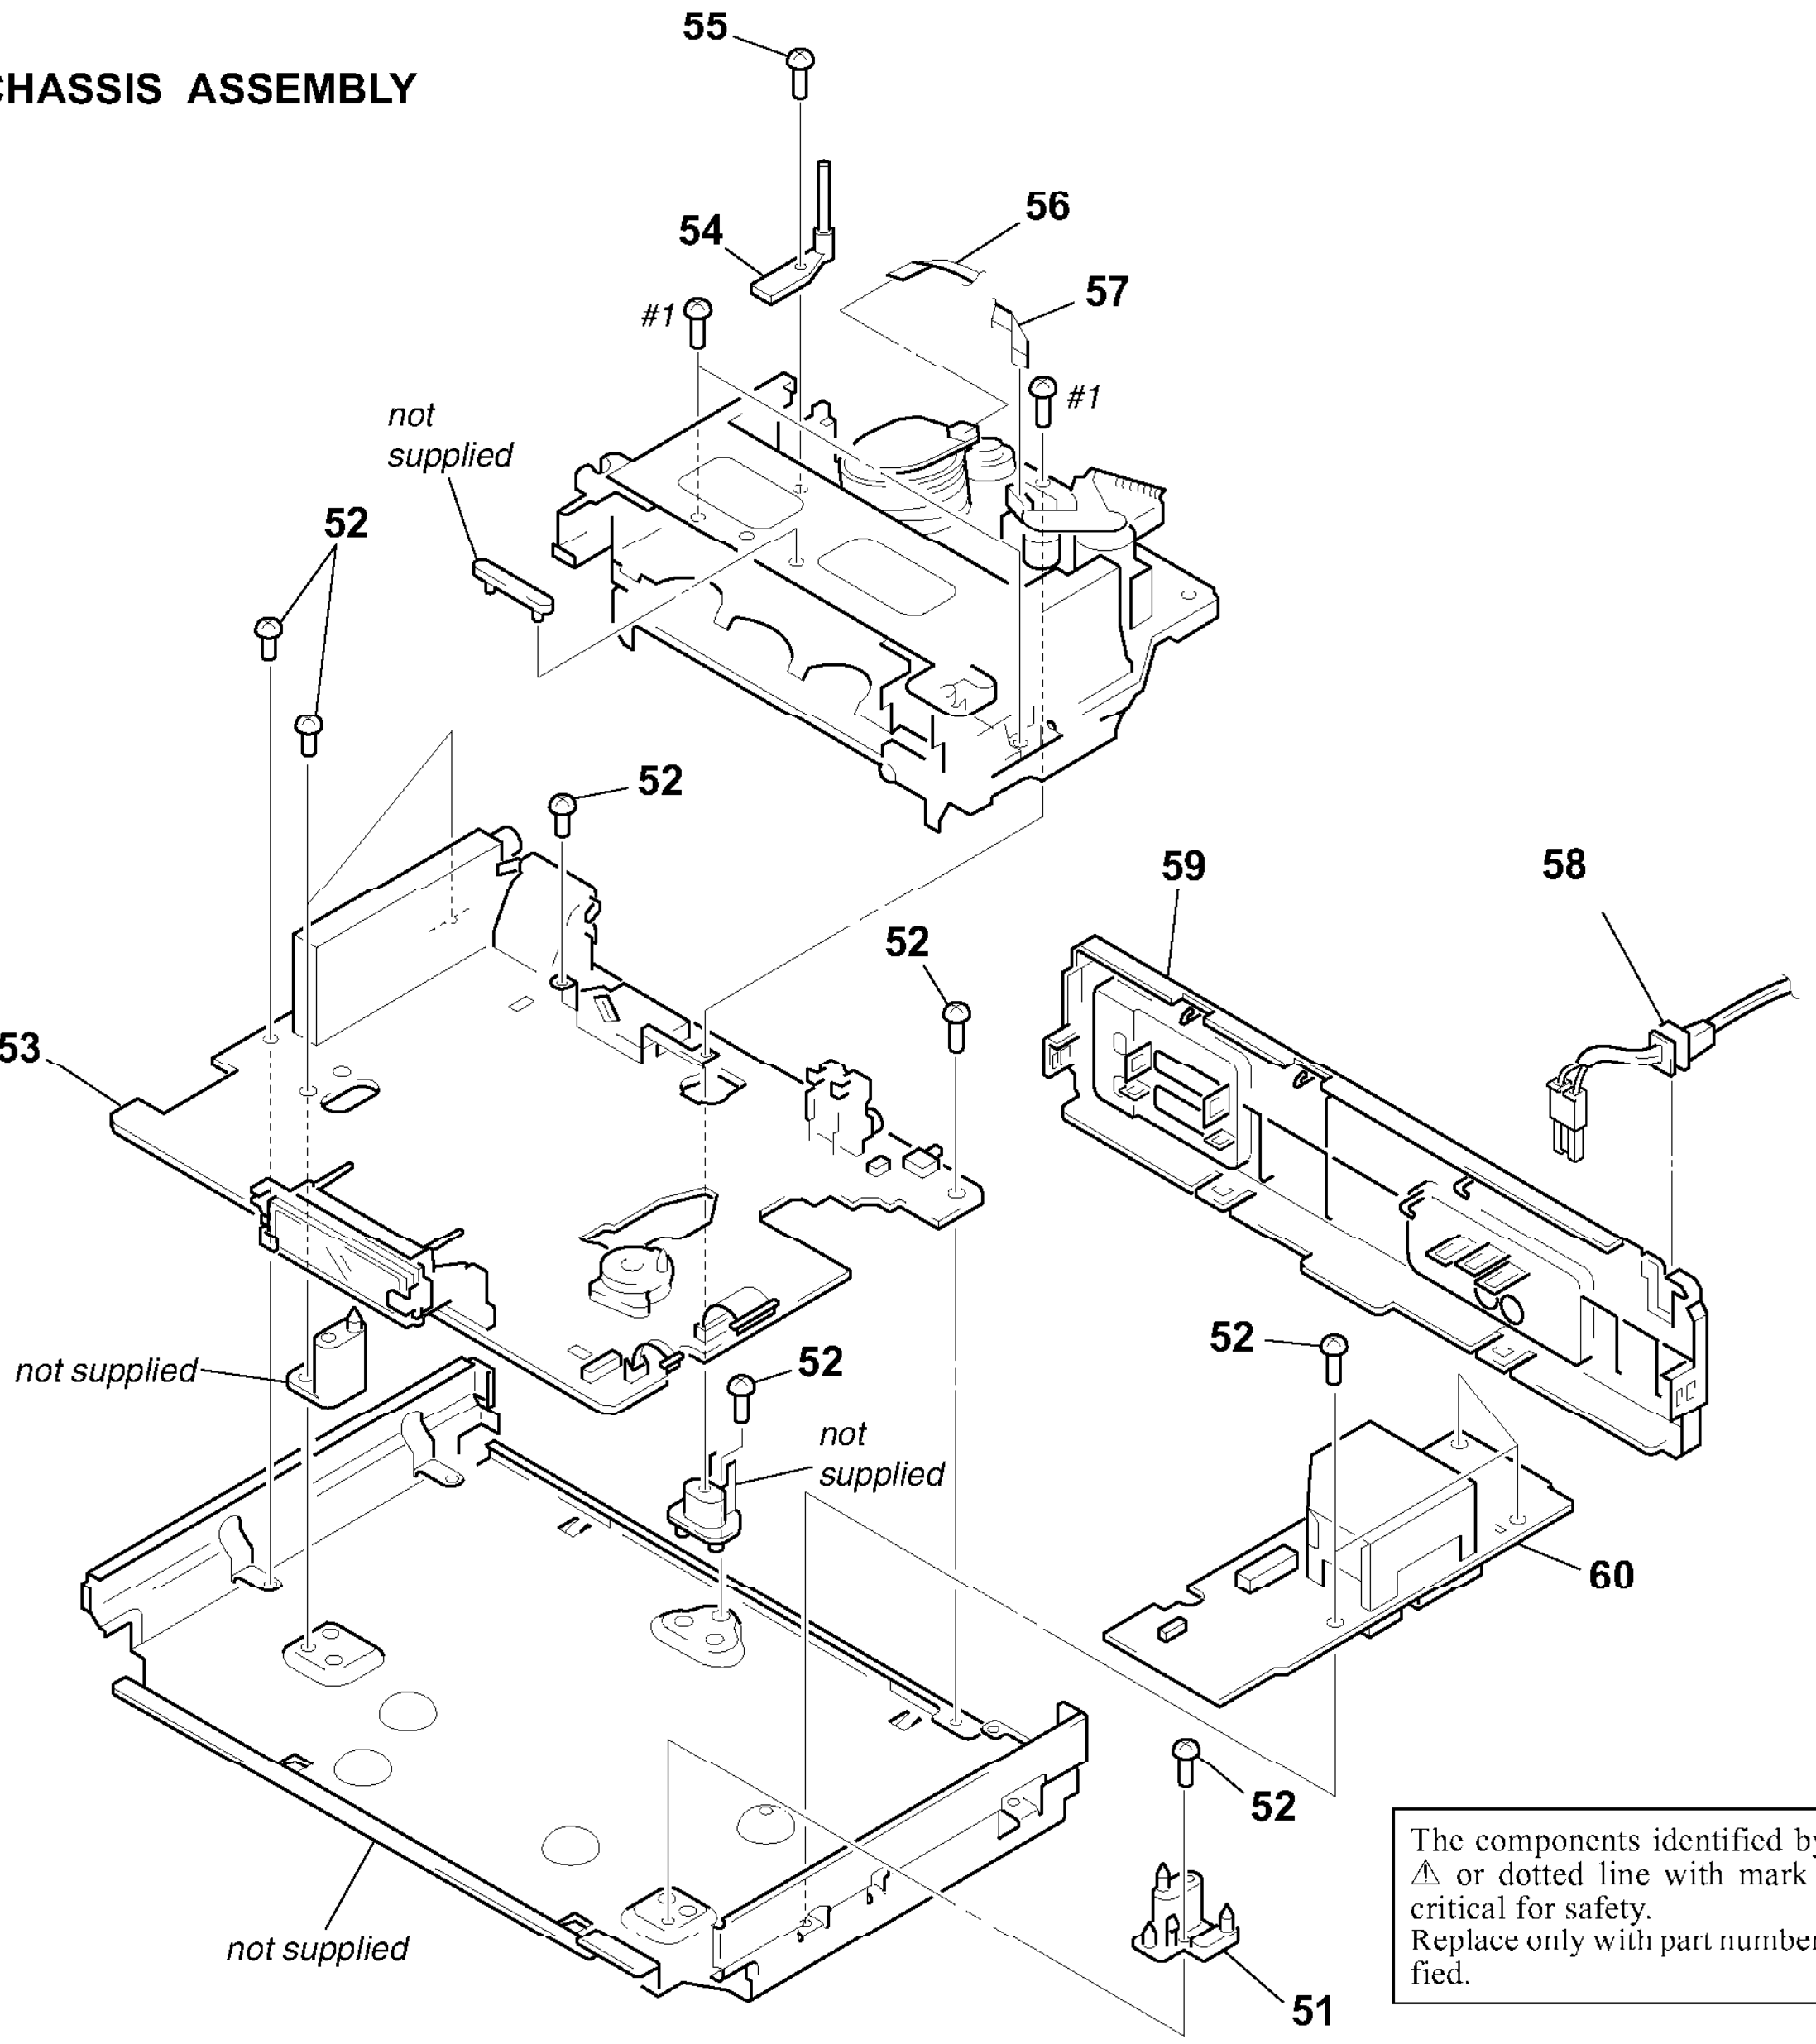

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.
Replace only with part number specified.

Ref. No.	Part No.	Description	Remark
51	3-057-805-01	BASE, MD (R), KS	
52	3-970-608-21	SUMITITE (B3), +BV	
* 53	A-6713-579-A	MA-373 BOARD, COMPLETE (SE700B/SX700B)	
* 53	A-6713-580-A	MA-373 BOARD, COMPLETE (SE800B)	
* 53	A-6713-581-A	MA-373 BOARD, COMPLETE (SE800K)	
* 53	A-6713-582-A	MA-373 BOARD, COMPLETE (SE800G)	
* 53	A-6713-583-A	MA-373 BOARD, COMPLETE (SE700G)	
* 53	A-6713-584-A	MA-373 BOARD, COMPLETE (SE600B)	
* 53	A-6713-585-A	MA-373 BOARD, COMPLETE (SE500R)	
* 53	A-6713-586-A	MA-373 BOARD, COMPLETE (SE700R)	
* 53	A-6713-587-A	MA-373 BOARD, COMPLETE (SE350)	
* 53	A-6713-588-A	MA-373 BOARD, COMPLETE (SE500K)	
* 53	A-6713-589-A	MA-373 BOARD, COMPLETE (SE600A)	
* 53	A-6713-590-A	MA-373 BOARD, COMPLETE (SE600E/SX600)	
* 53	A-6713-591-A	MA-373 BOARD, COMPLETE (SE650/SE700: D1, D2/SX700D)	
* 53	A-6713-592-A	MA-373 BOARD, COMPLETE (SE700: E1, E2/SX700E)	
* 53	A-6713-593-A	MA-373 BOARD, COMPLETE (SE700I)	
* 53	A-6713-594-A	MA-373 BOARD, COMPLETE (SE800: D1, D2/SX800)	
* 53	A-6713-595-A	MA-373 BOARD, COMPLETE (SE800N)	
* 53	A-6713-596-A	MA-373 BOARD, COMPLETE (SE800E)	
* 53	A-6713-597-A	MA-373 BOARD, COMPLETE (SE700N)	
* 53	A-6713-598-A	MA-373 BOARD, COMPLETE (SE700K)	
* 53	A-6713-599-A	MA-373 BOARD, COMPLETE (SE600N)	
54	X-3949-549-1	TGO ASSY (MSR)	
55	3-979-112-01	SCREW SW (+) BVTP 3X10	
56	1-792-022-11	CABLE, FLAT (FFM-001)	
57	1-792-018-11	CABLE, FLAT (FAC-8)	
⚠58	1-782-012-11	CORD, POWER	
59	3-057-809-01	PANEL, REAR (SE650/SE700: B, D1, D2, E1, E2, K, N/SX700)	
59	3-057-809-11	PANEL, REAR (SE500R)	
59	3-057-809-21	PANEL, REAR (SE500K)	
59	3-057-809-31	PANEL, REAR (SE800G)	
59	3-057-809-41	PANEL, REAR (SE800K)	
59	3-057-809-51	PANEL, REAR (SE700: G, I)	
59	3-057-809-61	PANEL, REAR (SE350/SE600: A, N)	
59	3-057-809-71	PANEL, REAR (SE600: B, E/SX600)	
59	3-057-809-81	PANEL, REAR (SE700R)	
59	3-057-809-91	PANEL, REAR (SE800: B, D1, D2, E, N/SX800)	
60	1-468-458-11	POWER BLOCK (SRV938EK)	

8-1-3. MECHANISM CHASSIS ASSEMBLY (1)

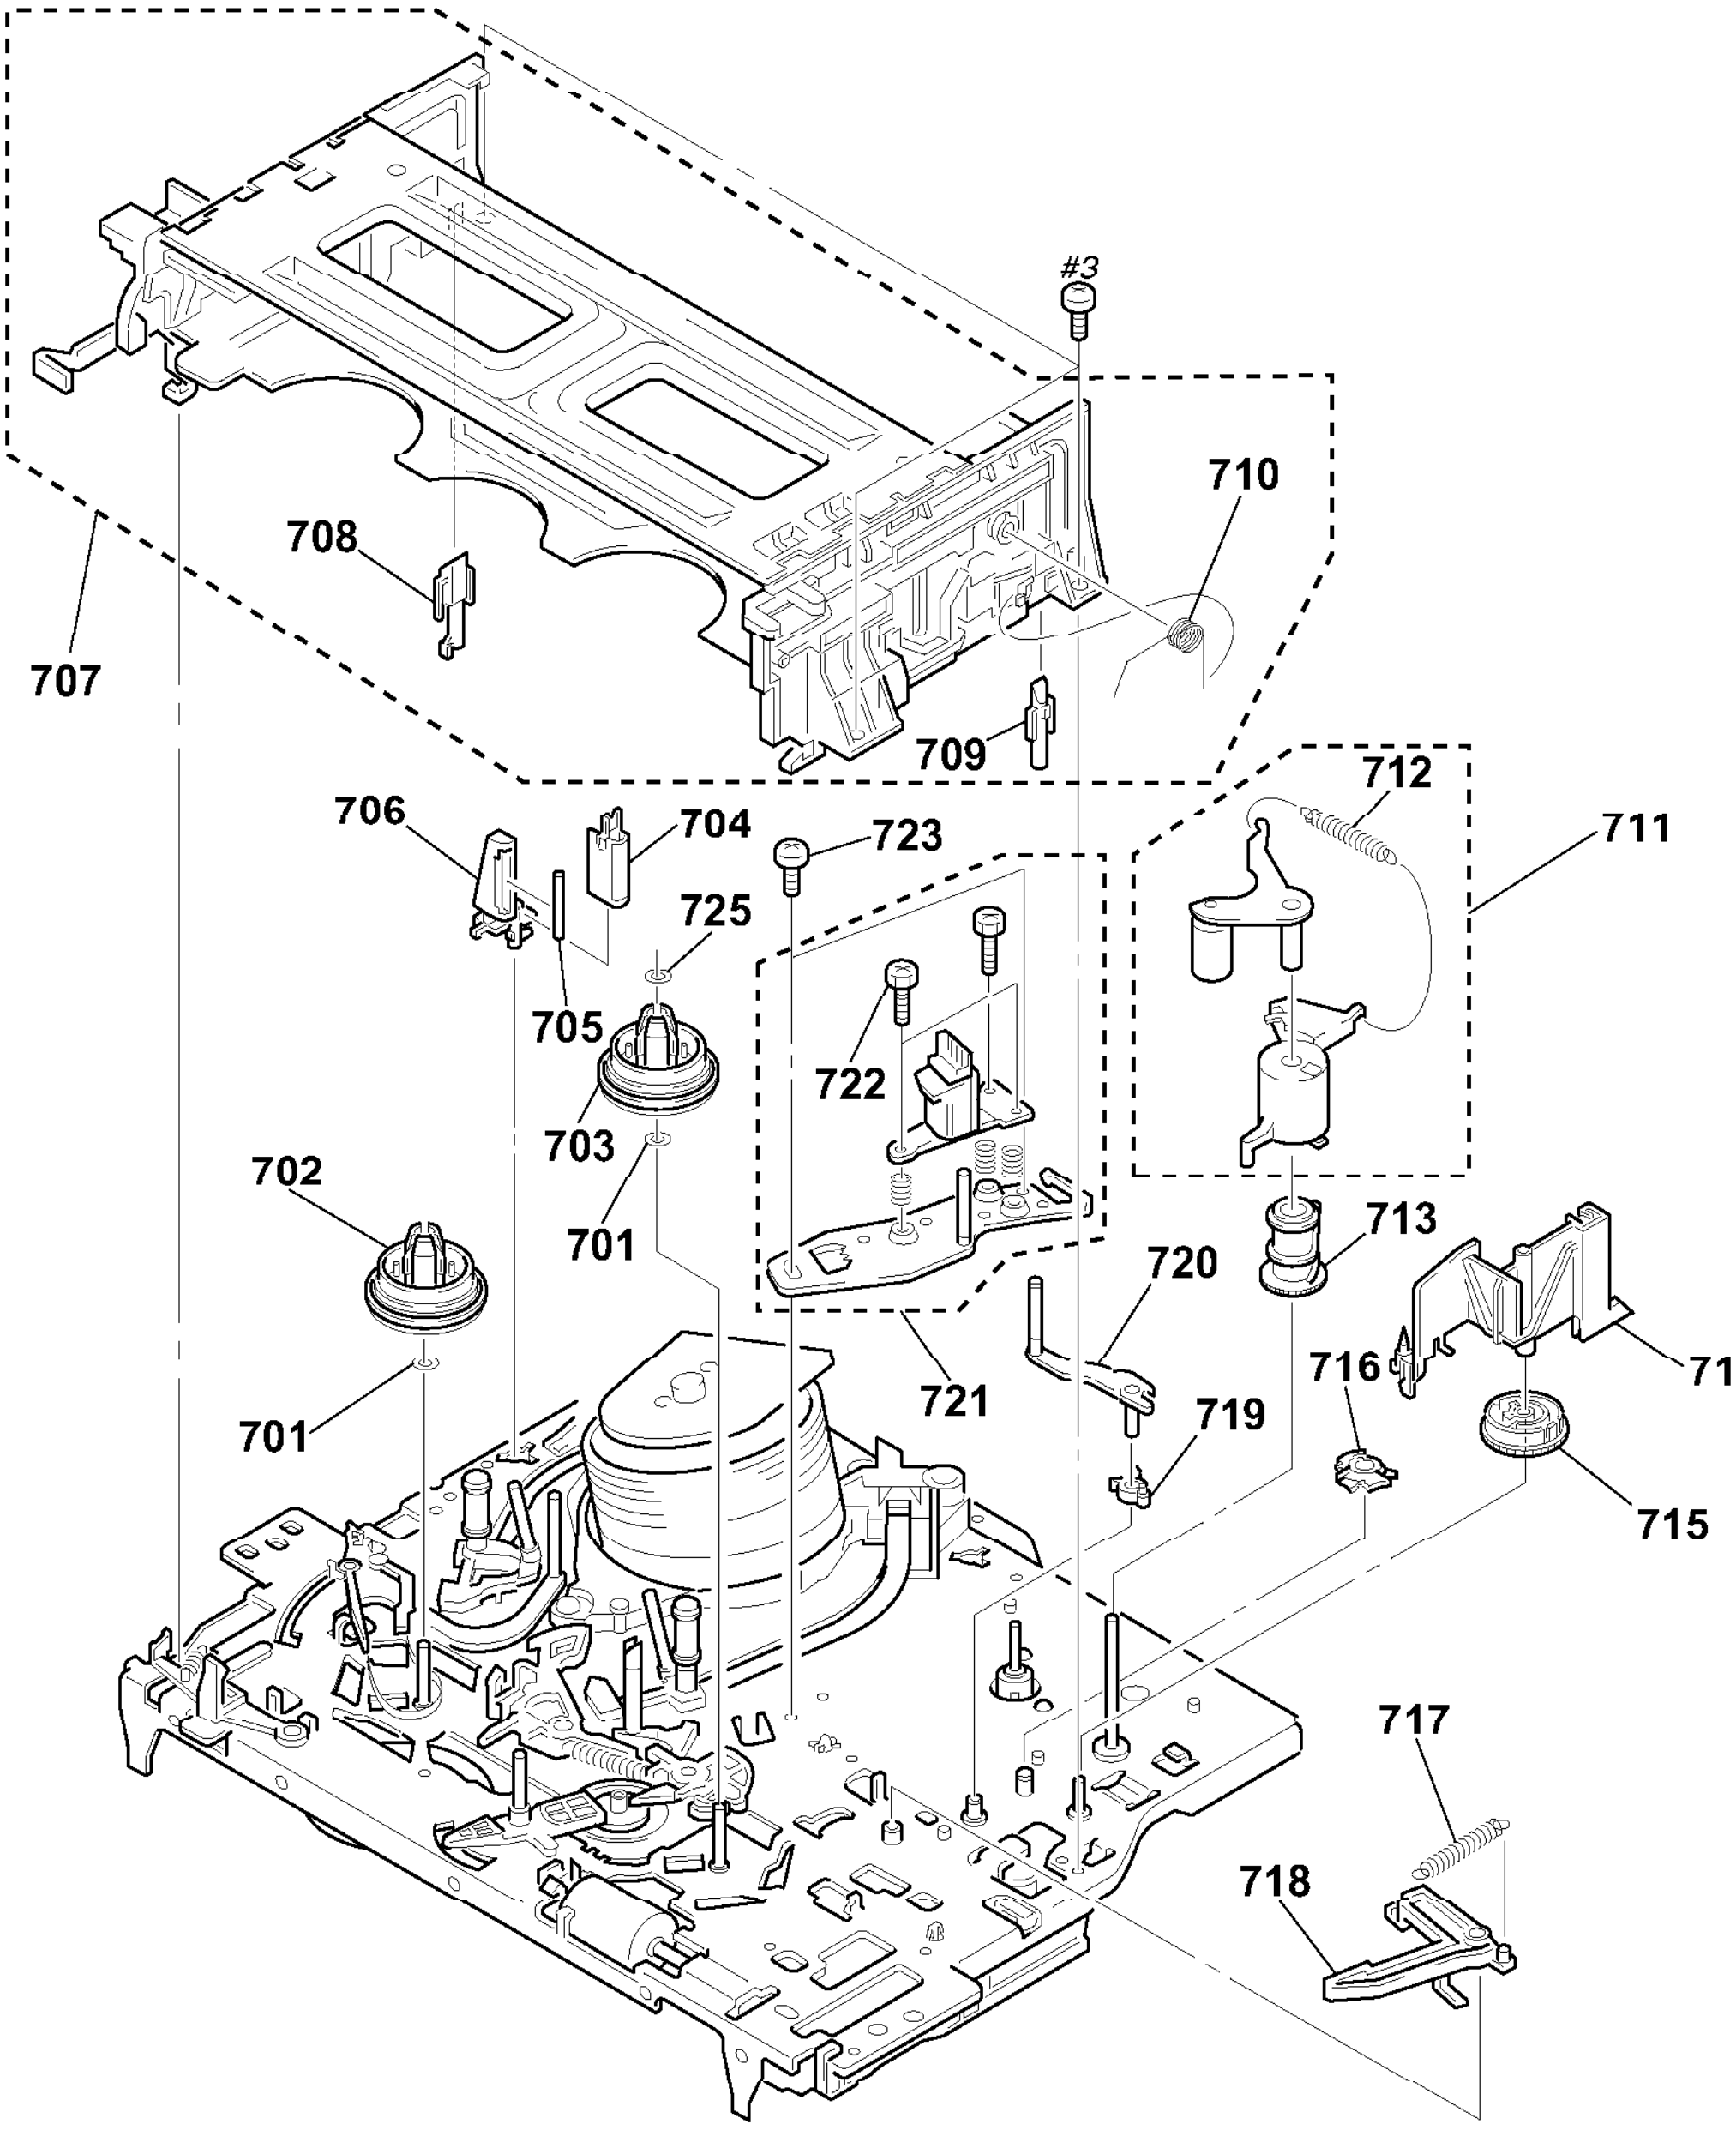
#3
707
708
710
709
706
704
723
725
705
722
711
712
703
702
701
713
720
721
716
714
719
701
715
717
718

Ref. No.	Part No.	Description	Remark
701	3-977-509-01	WASHER, THRUST	
702	3-977-507-01	TABLE, REEL (S)	
703	3-977-508-01	TABLE, REEL (T)	
704	1-500-144-11	HEAD, FE	
705	3-977-495-01	SHAFT TG2	
706	3-977-494-01	HOLDER, FEH	
707	A-6759-619-B	FL COMPLETE ASSY	
708	3-977-535-01	PLATE, LUMINOUS (END SENSOR)	
709	3-977-536-01	PLATE, LUMINOUS (TOP SENSOR)	
710	3-970-471-01	SPRING (DECK OPEN), TORSION	
711	A-6759-863-B	PRESS BLOCK ASSY, PINCH	
712	3-958-455-01	SPRING (PINCH), TENSION	
713	3-977-447-01	GEAR, ELEVATOR	
714	3-977-514-01	OPENER, LID	
715	3-977-441-03	GEAR, PINCH PRESSING	
716	3-977-445-02	GEAR, TG8 ARM DRIVING	
717	3-977-465-01	SPRING, EXTENSION (RVS BRAKE)	
718	X-3947-582-1	ARM ASSY, RVS BRAKE	
720	X-3947-590-1	TG8 ASSY	
721	A-6775-791-A	HEAD BLOCK ASSY, ACE FFC	
722	3-974-556-11	+HEXA TT 2.6X9 (TAPER)	
723	3-979-508-01	SCREW +HEXA TP SW 3X8	
725	3-977-443-01	WASHER, STOPPER	

8-1-4. MECHANISM CHASSIS ASSEMBLY (2)

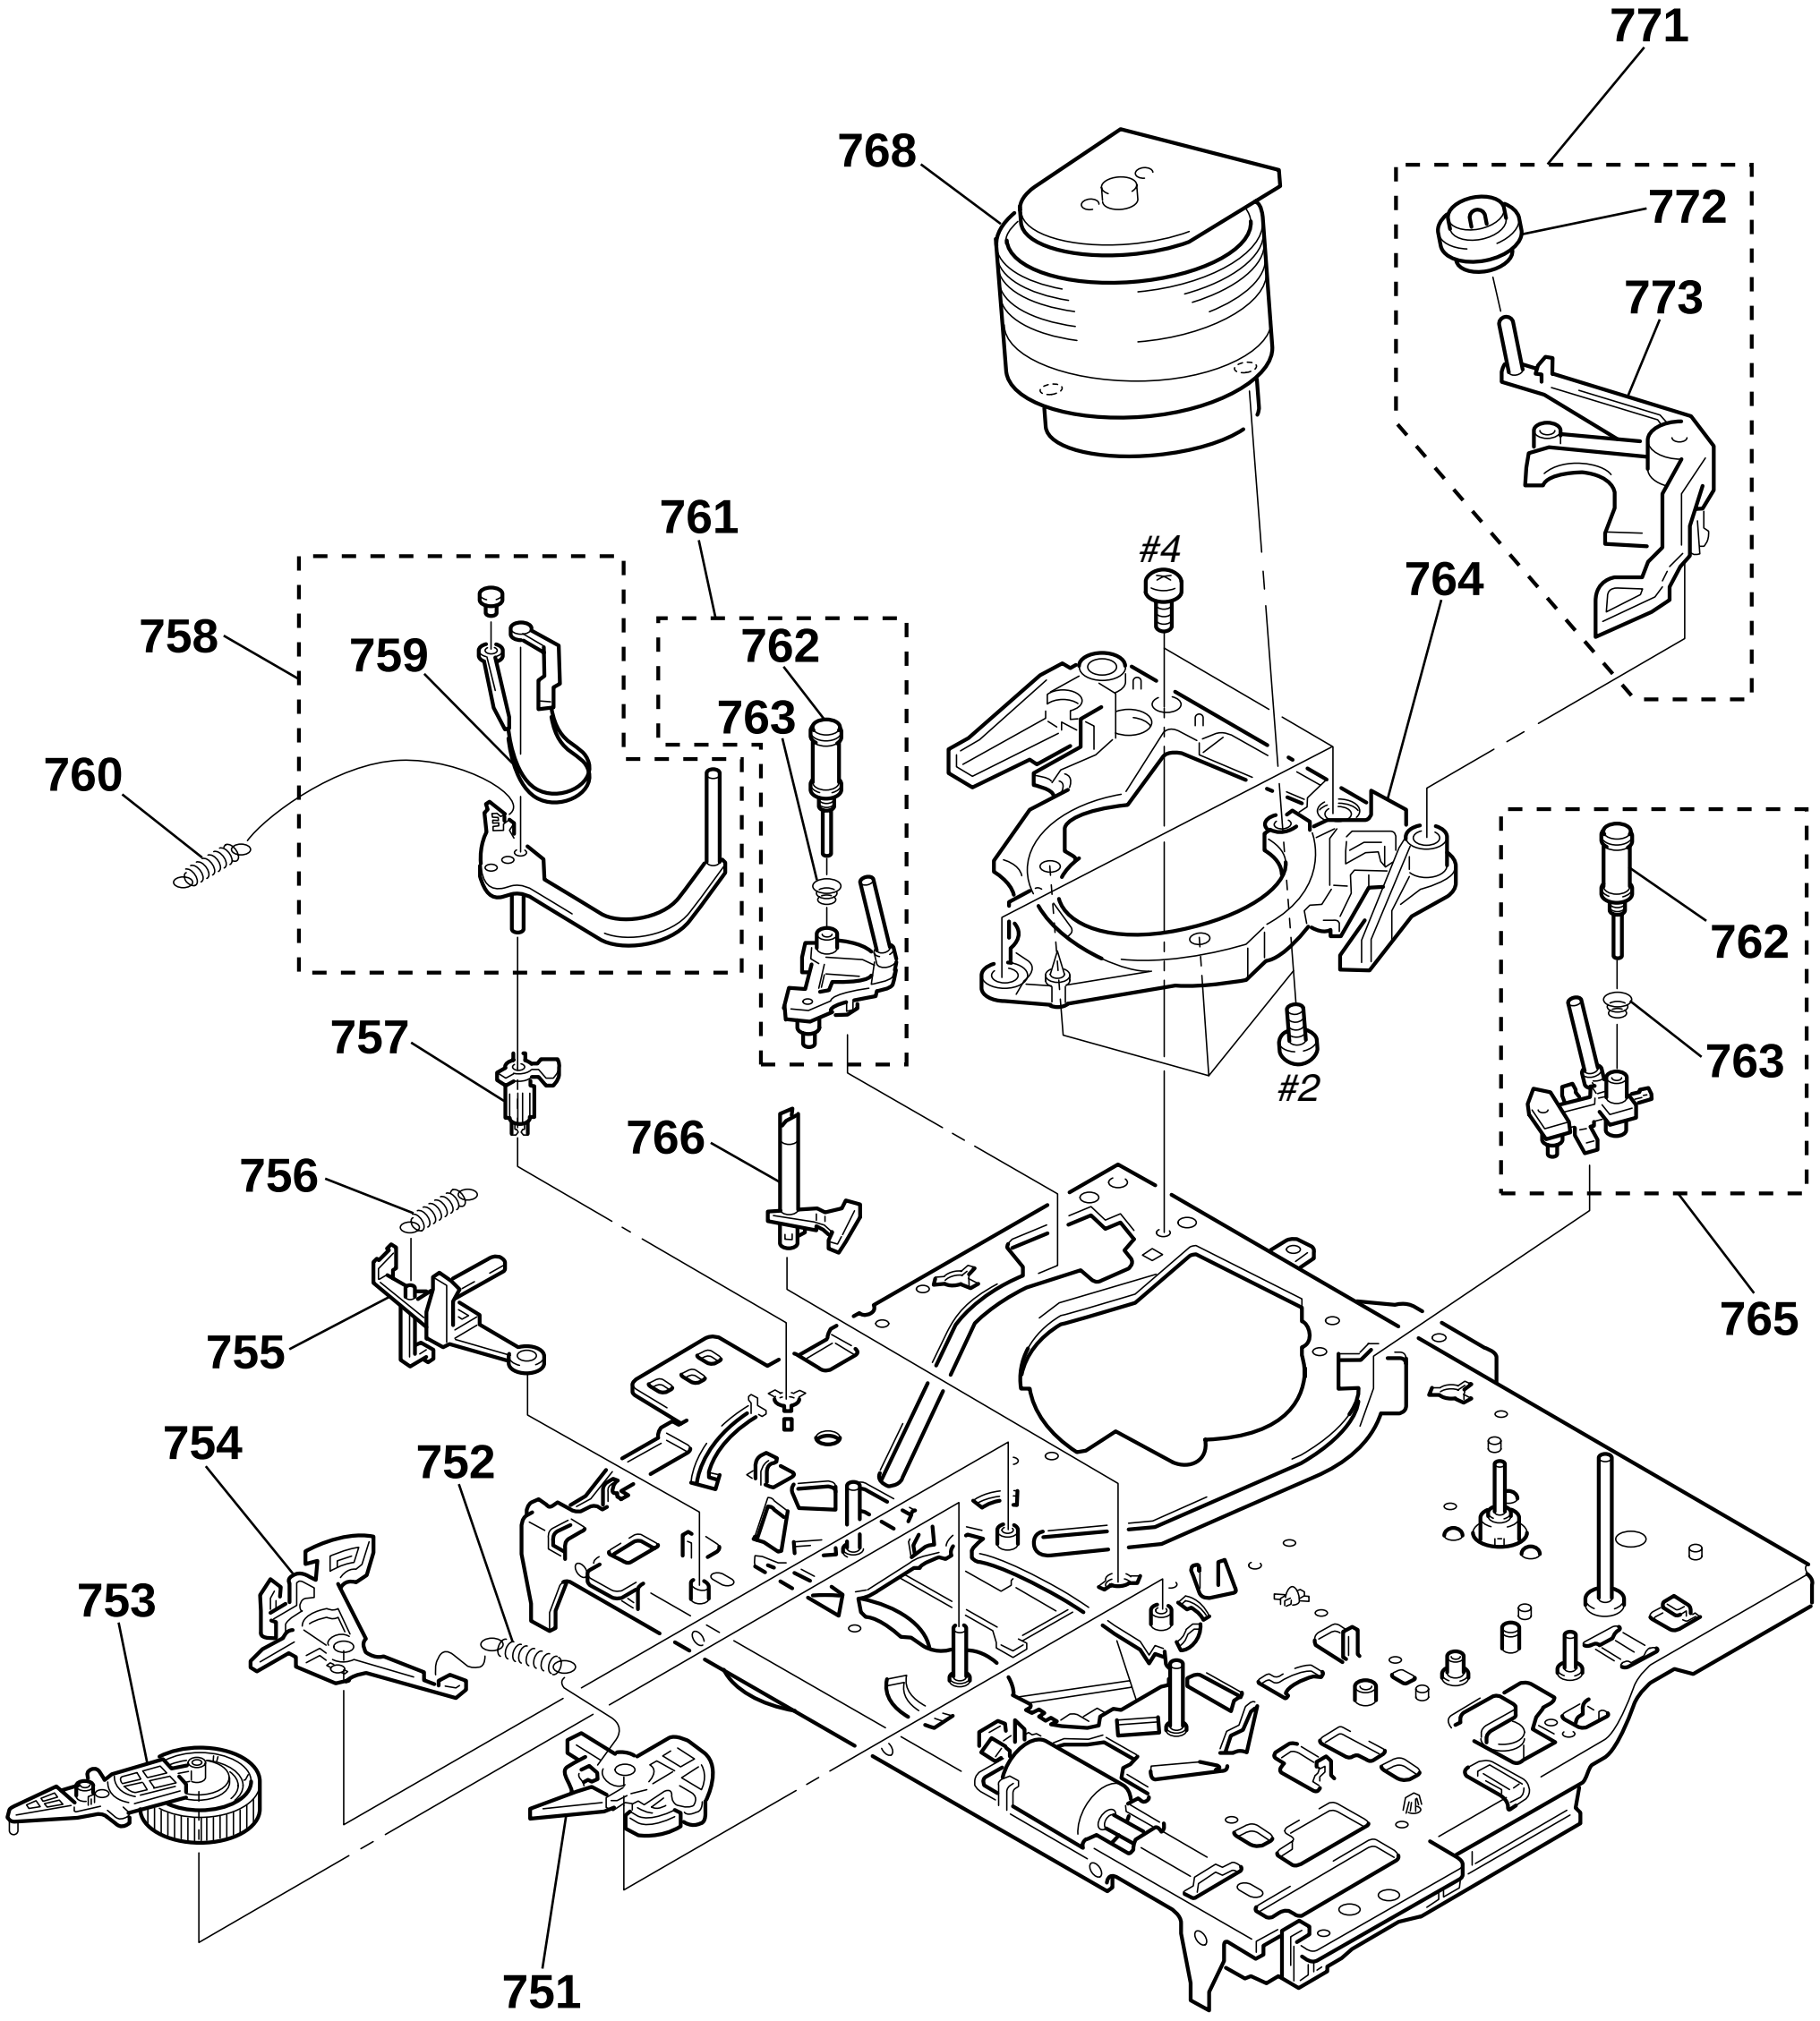

Ref. No.	Part No.	Description	Remark
751	X-3949-363-1	BRAKE ASSY, MAIN (T)	
752	3-053-882-01	SPRING, TENS (MAIN BRAKE)	
753	X-3947-573-1	ARM ASSY, PENDULUM	
754	X-3949-362-1	BRAKE ASSY, MAIN (S)	
755	3-977-513-02	LEVER, REC. PROOF	
756	3-976-767-01	SPRING, TENS. (REC. PROOF)	
757	3-977-487-01	BOSS, TG1 FULCRUM	
758	X-3950-427-1	TG1 ASSY (SD)	
759	X-3950-373-1	BAND ASSY, TG1 (SD)	
760	3-977-488-01	SPRING (POWER TENSION)	
761	A-6750-324-A	SHUTTLE (S) BLOCK ASSY	
762	X-3948-050-1	ROLLER ASSY, GUIDE	
763	3-965-178-01	SPRING	
764	3-969-632-04	BASE, DRUM	
765	A-6750-328-E	SHUTTLE (T) BLOCK ASSY	
766	3-977-501-01	PLATE, LUMINOUS	
768	1-772-361-11	DRUM ASSY, DZH-92D (SE350)	
768	1-772-362-11	DRUM ASSY, DZH-93D (SE500)	
768	1-772-364-11	DRUM ASSY, DZH-0B5A (EXCEPT SE350/ SE500/SE600B/SE700B/SE800B/SX700B)	
768	1-772-365-11	DRUM ASSY, DZH-0B6A (SE600B/SE700B/SE800B/SX700B)	
771	A-6746-074-G	ROLLER BLOCK ASSY, HC	
772	X-3947-255-1	ROLLER ASSY, HC	
773	3-975-724-07	ARM, HC	

8-1-5. MECHANISM CHASSIS ASSEMBLY (3)

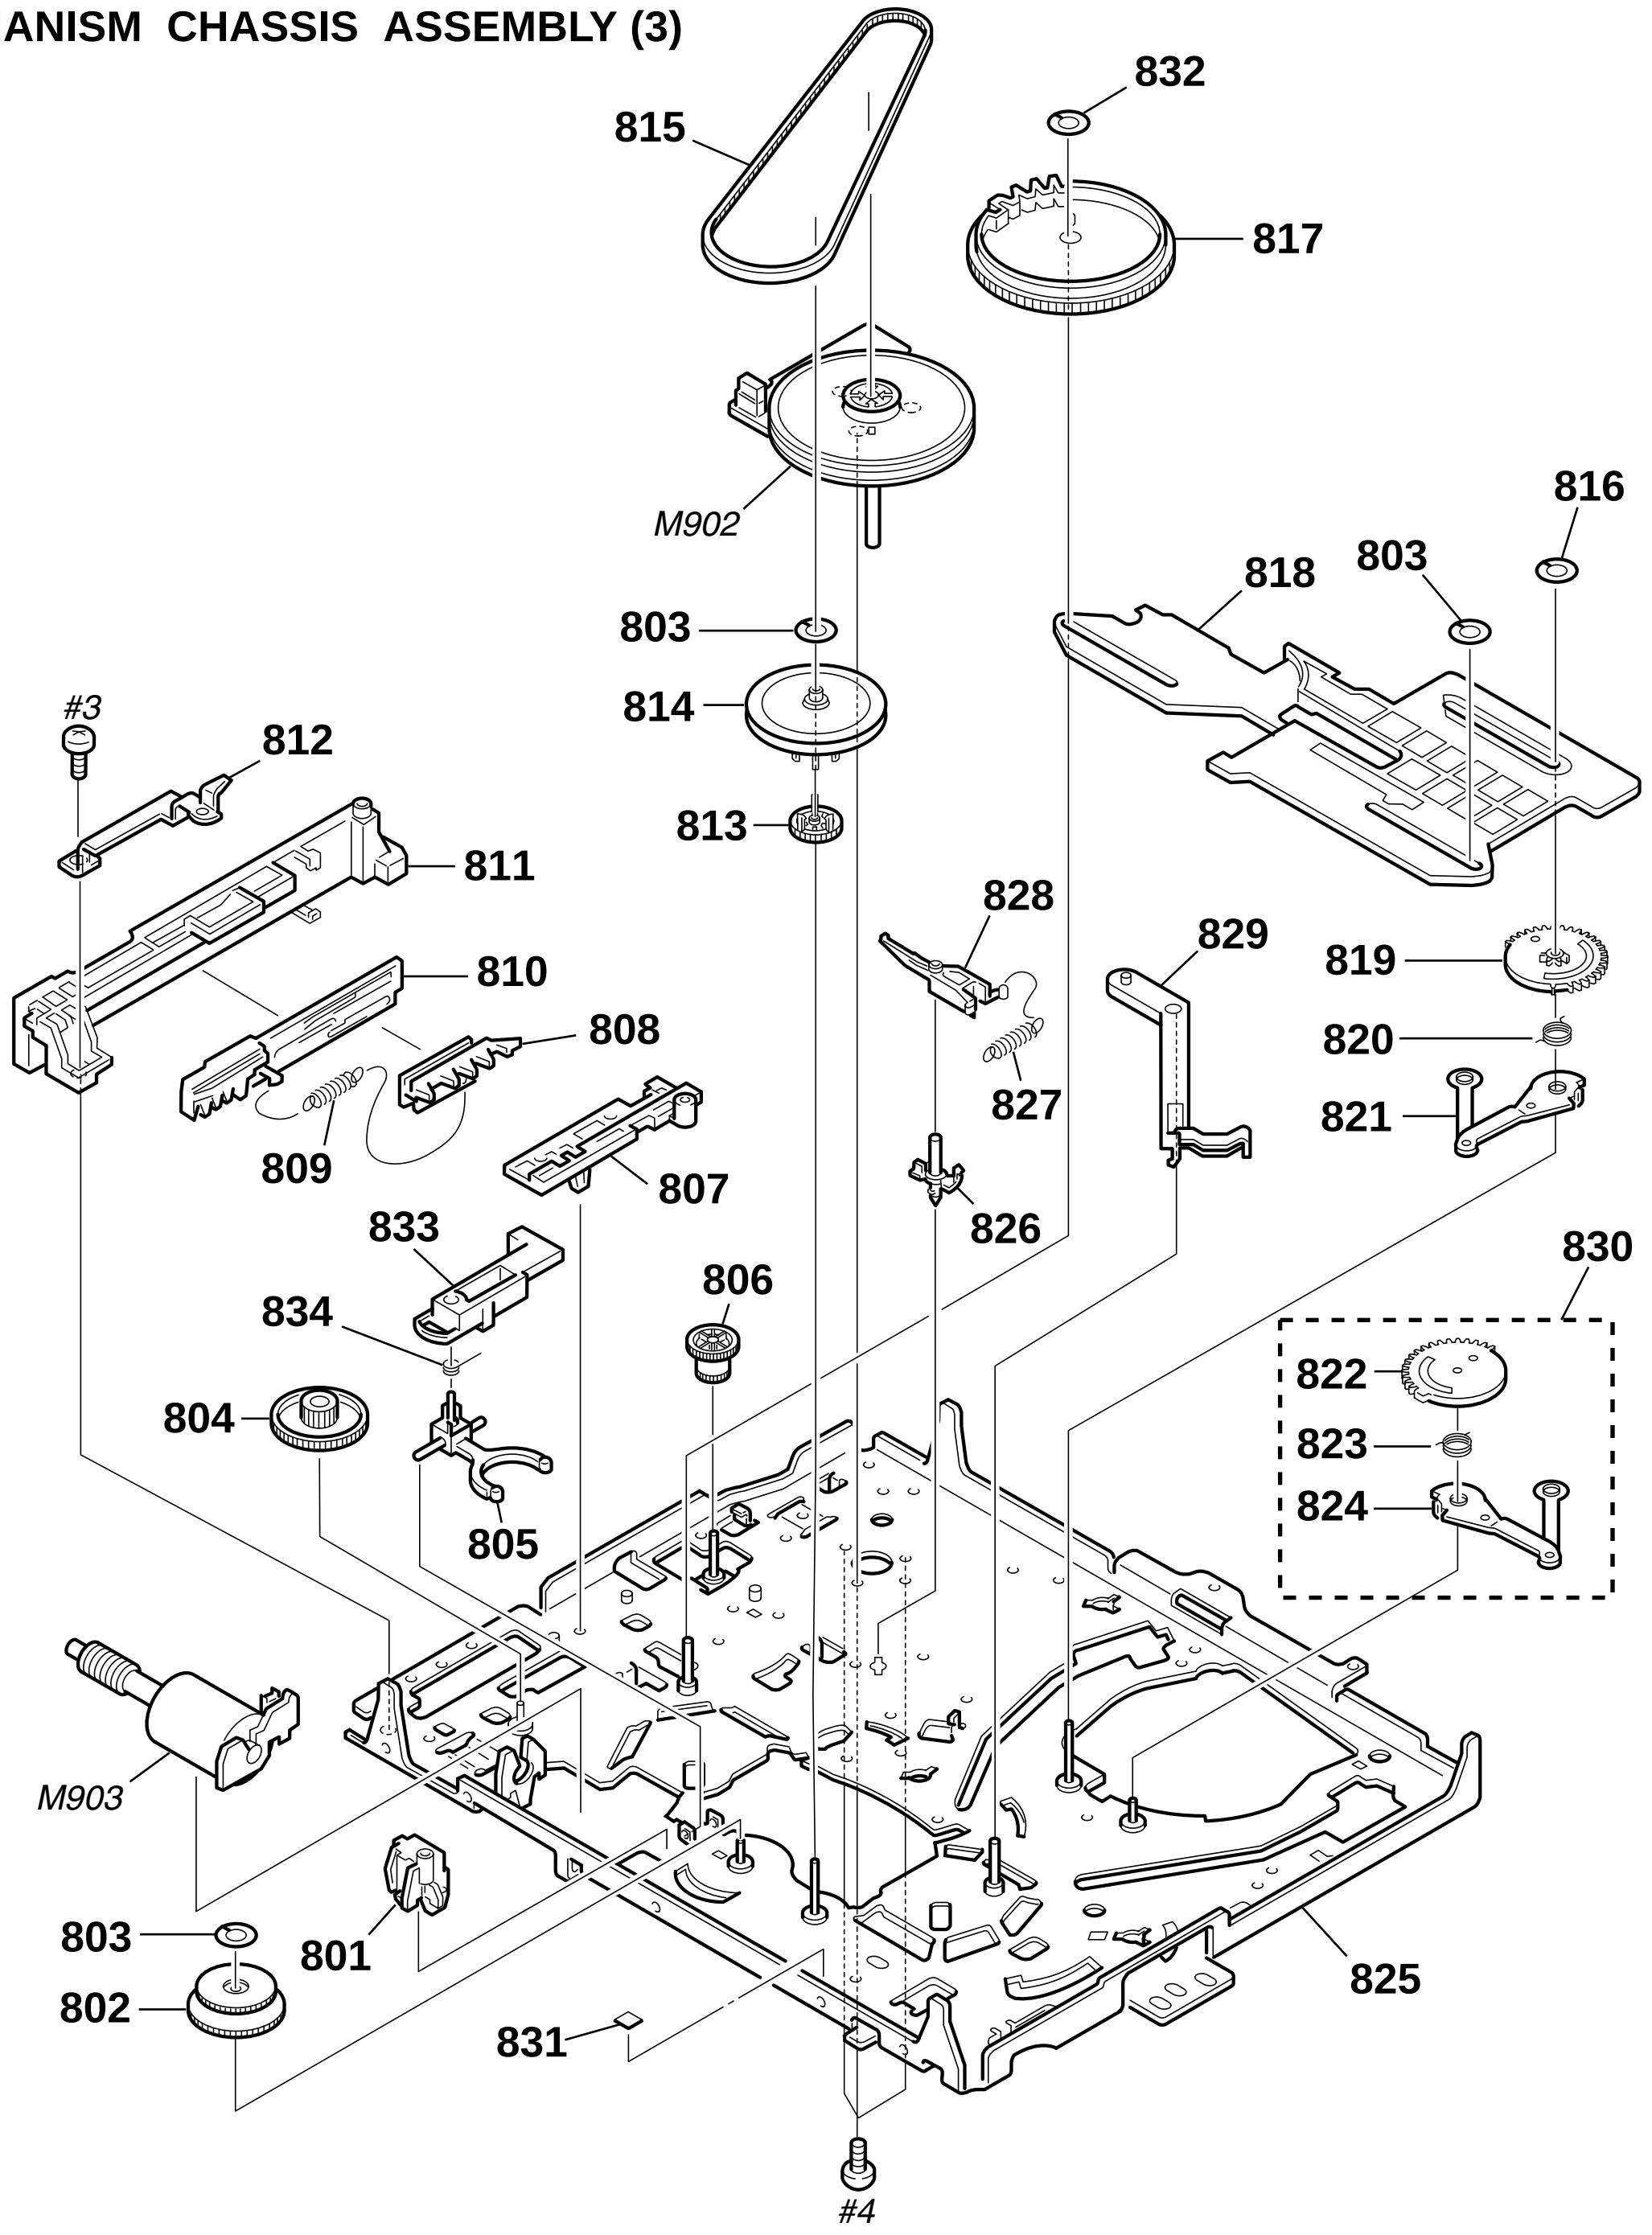
815
832
817
M902
816
803
818
803
814
#3
812
813
811
828
829
819
810
808
820
827
821
809
807
833
826
830
806
834
822
804
823
824
805
M903
803
801
825
802
831
#4

Ref. No.	Part No.	Description	Remark
801	3-977-437-01	RETAINER, CAM MOTOR	
802	X-3949-364-1	ASSY, REEL DIRECT SELECT (B)	
803	3-977-443-01	WASHER, STOPPER	
804	3-977-438-01	WORM - WHEEL	
805	3-053-887-01	ARM, LIMITTER SELECTION	
806	3-977-444-01	GEAR, PINCH TRANSMISSION	
807	3-977-515-01	GUIDE, FL SLIDER	
808	3-977-517-01	PLATE, SLIDE, FL	
809	3-977-519-01	SPRING, TENS. (LIMIT, FL)	
810	3-977-518-02	PLATE, LIMITTER, FL	
811	3-977-516-01	HOLDER, FL SLIDER	
812	3-977-877-01	PLATE, RETAINER	
813	3-977-504-01	GEAR, CLUTCH	
814	X-3949-365-1	GEAR ASSY PULLEY (B)	
815	3-977-510-01	BELT, RUBBER	
816	3-056-824-01	WASHER, STOPPER	
817	3-977-439-01	GEAR, CAM	
818	3-053-878-01	SLIDER (B)	
819	3-977-455-01	GEAR, LOADING (T)	
820	3-977-456-03	SPRING, TORSION (LOAD T)	
821	X-3947-579-1	LEVER ASSY, LOADING (T)	
822	3-977-451-01	GEAR, LOADING (S)	
823	3-977-452-01	SPRING, TORSION (LOAD S)	
824	X-3947-578-1	LEVER ASSY, LOADING (S)	
825	X-3947-576-2	CHASSIS ASSY, MECHANICAL	
826	3-977-468-01	SHAFT, CAPSTAN BRAKE	
827	3-977-467-02	SPRING, CAP BRAKE	
828	X-3947-583-1	BRAKE ASSY, CAPSTAN	
829	3-977-489-01	ARM, TG1 DRIVING	
830	A-6759-616-A	GEAR BLOCK ASSY, LOADING (S)	
831	3-989-917-01	SPACER (REC PROOF)	
832	3-056-952-11	WASHER, STOPPER	
833	3-053-888-01	BASE, DIRECT SELECT (B)	
834	3-053-889-01	SPRING, TORSLON (DIRECT SELECT)	
M902	1-698-971-11	MOTOR, DC (CAPSTAN)	
M903	X-3947-577-1	MOTOR ASSY, CAM	

8-2. ELECTRICAL PARTS LIST

NOTE:

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX and -X mean standardized parts, so they may have some difference from the original one.
- RESISTORS
  All resistors are in ohms.
  METAL: Metal-film resistor.
  METAL OXIDE: Metal oxide-film resistor.
  F: nonflammable
- Items marked "*" are not stocked since they are seldom required for routine service.
  Some delay should be anticipated when ordering these items.
- SEMICONDUCTORS
  In each case, u: μ, for example:
  uA. . : μA. . uPA. . : μPA. .
  uPB. . : μPB. . uPC. . : μPC. .
  uPD. . : μPD. .
- CAPACITORS
  uF: μF
- COILS
  uH: μH
- Not all of the parts for POWER BLOCK (SRV938EK) are listed.

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.
Replace only with part number specified.

When indicating parts by reference number, please include the board.

Ref. No.	Part No.	Description	Remark
*	A-6794-748-A	DS-91 BOARD, COMPLETE	(SE350/SE600/SE650/SE700/SX600/SX700)
*	A-6794-751-A	DS-91 BOARD, COMPLETE	(SE800: B, D1, D2, E, G/SX800)
*	A-6794-754-A	DS-91 BOARD, COMPLETE (SE800: K, N)	
*	A-6794-756-A	DS-91 BOARD, COMPLETE (SE500)	
		**********************	(Ref.No. 1,000 Series)
		< CONNECTOR >	
CN450	1-784-447-11	CONNECTOR, FFC/FPC 5P	(SE500/SE800/SX800)
CN451	1-563-614-31	HOUSING, CONNECTOR 11P	(SE500/SE800/SX800)
* CN452	1-568-942-11	PIN, CONNECTOR 4P (SE800/SX800)	
CN453	1-691-064-31	HOUSING, CONNECTOR 5P	(EXCEPT SE500/SE800/SX800)
		< DIODE >	
D450	8-719-056-06	DIODE SLR-342DCT31 (JOG)	(SE500/SE800/SX800)
		< TRANSISTOR >	
Q450	8-729-043-29	TRANSISTOR PDTC144EK-115	(SE500/SE800/SX800)
		< RESISTOR >	
R450	1-216-041-00	METAL CHIP 470 5% 1/10W	(SE500/SE800/SX800)
R451	1-216-057-00	METAL CHIP 2.2K 5% 1/10W	
R452	1-216-049-91	RES, CHIP 1K 5% 1/10W	
R453	1-216-053-00	METAL CHIP 1.5K 5% 1/10W	
R454	1-216-057-00	METAL CHIP 2.2K 5% 1/10W	
R455	1-216-061-00	METAL CHIP 3.3K 5% 1/10W	
R456	1-216-065-91	RES, CHIP 4.7K 5% 1/10W	
		< SWITCH >	
S450	1-771-410-21	SWITCH, TACT (REC ●)	
S451	1-771-410-21	SWITCH, TACT (◀◀)	
S452	1-771-410-21	SWITCH, TACT (STOP ■)	(EXCEPT SE500/SE800/SX800)
S453	1-771-410-21	SWITCH, TACT (PLAY ▷)	(EXCEPT SE500/SE800/SX800)
S454	1-771-410-21	SWITCH, TACT (JOG) (SE500/SE800/SX800)	
S455	1-771-410-21	SWITCH, TACT (▶▶)	
S456	1-771-410-21	SWITCH, TACT (▮▮)	

Ref. No.	Part No.	Description	Remark
*	A-6794-749-A	JK-180 BOARD, COMPLETE	(SE800: B, D1, D2, E, G/SX800)
*	A-6794-752-A	JK-180 BOARD, COMPLETE (SE800: K, N)	
*	A-6794-755-A	JK-180 BOARD, COMPLETE (SE500)	
		***********************	(Ref.No. 1,000 Series)
		< CAPACITOR >	
C481	1-163-009-11	CERAMIC CHIP 0.001uF 10% 50V	
C491	1-163-009-11	CERAMIC CHIP 0.001uF 10% 50V	
C493	1-163-009-11	CERAMIC CHIP 0.001uF 10% 50V	(SE800/SX800)
		< DIODE >	
D480	8-719-070-59	DIODE PDZ6.8B-115	
D481	8-719-067-40	DIODE STZ6.8N-T146	
D490	8-719-067-40	DIODE STZ6.8N-T146	
D491	8-719-067-40	DIODE STZ6.8N-T146 (SE800/SX800)	
		< JACK >	
J481	1-774-509-11	JACK, PIN 3P (LINE-2 IN) (SE800/SX800)	
J481	1-774-510-11	JACK, PIN 2P (LINE-2 IN) (SE500)	
		< SHORT >	
JS480	1-216-295-91	SHORT 0 (SE500)	
JS494	1-216-296-91	SHORT 0 (SE500)	
		< RESISTOR >	
R480	1-216-022-00	METAL CHIP 75 5% 1/10W	
R490	1-216-041-00	METAL CHIP 470 5% 1/10W	
R491	1-216-041-00	METAL CHIP 470 5% 1/10W	(SE800/SX800)

KK-23 MA-373

Ref. No.	Part No.	Description	Remark
*	A-6794-750-A	KK-23 BOARD, COMPLETE	(SE800: B, D1, D2, E, G/SX800)
*	A-6794-753-A	KK-23 BOARD, COMPLETE (SE800: K, N)	
		**********************	
			(Ref.No. 1,000 Series)
		< SWITCH >	
S410	1-418-156-11	ENCODER, ROTARYRY (DIAL TIMER)	

Ref. No.	Part No.	Description	Remark
*	A-6713-579-A	MA-373 BOARD, COMPLETE	(SE700B/SX700B)
*	A-6713-580-A	MA-373 BOARD, COMPLETE (SE800B)	
*	A-6713-581-A	MA-373 BOARD, COMPLETE (SE800K)	
*	A-6713-582-A	MA-373 BOARD, COMPLETE (SE800G)	
*	A-6713-583-A	MA-373 BOARD, COMPLETE (SE700G)	
*	A-6713-584-A	MA-373 BOARD, COMPLETE (SE600B)	
*	A-6713-585-A	MA-373 BOARD, COMPLETE (SE500R)	
*	A-6713-586-A	MA-373 BOARD, COMPLETE (SE700R)	
*	A-6713-587-A	MA-373 BOARD, COMPLETE (SE350)	
*	A-6713-588-A	MA-373 BOARD, COMPLETE (SE500K)	
*	A-6713-589-A	MA-373 BOARD, COMPLETE (SE600A)	
*	A-6713-590-A	MA-373 BOARD, COMPLETE (SE600E/SX600)	
*	A-6713-591-A	MA-373 BOARD, COMPLETE	(SE650/SE700: D1, D2/SX700D)
*	A-6713-592-A	MA-373 BOARD, COMPLETE	(SE700: E1, E2/SX700E)
*	A-6713-593-A	MA-373 BOARD, COMPLETE (SE700I)	
*	A-6713-594-A	MA-373 BOARD, COMPLETE	(SE800: D1, D2/SX800)
*	A-6713-595-A	MA-373 BOARD, COMPLETE (SE800N)	
*	A-6713-596-A	MA-373 BOARD, COMPLETE (SE800E)	
*	A-6713-597-A	MA-373 BOARD, COMPLETE (SE700N)	
*	A-6713-598-A	MA-373 BOARD, COMPLETE (SE700K)	
*	A-6713-599-A	MA-373 BOARD, COMPLETE (SE600N)	
		***********************	
			(Ref.No. 1,000 Series)
	3-057-806-01	BASE, FL	(EXCEPT SE800: B, D1, D2, E, G/SX800)
	3-057-806-11	BASE, FL (SE800: B, D1, D2, E, G/SX800)	
	3-058-480-01	HOLDER, FLO	(EXCEPT SE800: B, D1, D2, E, G/SX800)
	3-058-480-11	HOLDER, FLO (SE800: B, D1, D2, E, G/SX800)	
*	3-960-273-01	SPACER, TOP END	
*	3-960-274-01	SPACER, LED	
		< CAPACITOR >	
C001	1-163-021-91	CERAMIC CHIP 0.01uF 10% 50V	(SE500/SE650/SE700/SE800/SX700/SX800)
C002	1-124-584-00	ELECT 100uF 20% 10V	(SE500/SE650/SE700/SE800/SX700/SX800)
C003	1-109-982-11	CERAMIC CHIP 1uF 10% 10V	(SE500/SE650/SE700/SE800/SX700/SX800)
C004	1-124-259-11	ELECT 4.7uF 20% 16V	(SE500/SE650/SE700/SE800/SX700/SX800)
C006	1-110-501-11	CERAMIC CHIP 0.33uF 10% 16V	(SE500/SE650/SE700/SE800/SX700/SX800)
C007	1-126-157-11	ELECT 10uF 20% 16V	(SE500/SE650/SE700/SE800/SX700/SX800)
C008	1-163-021-91	CERAMIC CHIP 0.01uF 10% 50V	(SE500/SE650/SE700/SE800/SX700/SX800)
C009	1-163-021-91	CERAMIC CHIP 0.01uF 10% 50V	(SE500/SE650/SE700/SE800/SX700/SX800)
C010	1-163-021-91	CERAMIC CHIP 0.01uF 10% 50V	(SE500/SE650/SE700/SE800/SX700/SX800)
C100	1-163-009-11	CERAMIC CHIP 0.001uF 10% 50V	
C101	1-163-009-11	CERAMIC CHIP 0.001uF 10% 50V	
C102	1-163-009-11	CERAMIC CHIP 0.001uF 10% 50V	
C103	1-128-057-11	ELECT 330uF 20% 6.3V	
C105	1-163-009-11	CERAMIC CHIP 0.001uF 10% 50V	
C107	1-104-664-11	ELECT 47uF 20% 16V	
C108	1-127-573-91	CERAMIC CHIP 1uF 10% 16V	(SE350/SE500)
C113	1-163-021-91	CERAMIC CHIP 0.01uF 10% 50V	
C114	1-163-021-91	CERAMIC CHIP 0.01uF 10% 50V	
C115	1-163-038-91	CERAMIC CHIP 0.1uF 25V	
C120	1-163-021-91	CERAMIC CHIP 0.01uF 10% 50V	
C121	1-163-021-91	CERAMIC CHIP 0.01uF 10% 50V	
C122	1-104-664-11	ELECT 47uF 20% 16V	
C123	1-163-021-91	CERAMIC CHIP 0.01uF 10% 50V	
C131	1-124-589-11	ELECT 47uF 20% 16V	
C133	1-164-004-11	CERAMIC CHIP 0.1uF 10% 25V	
C134	1-164-004-11	CERAMIC CHIP 0.1uF 10% 25V	
C140	1-126-933-11	ELECT 100uF 20% 16V	
C141	1-163-021-91	CERAMIC CHIP 0.01uF 10% 50V	
C142	1-163-037-11	CERAMIC CHIP 0.022uF 10% 25V	
C143	1-126-965-11	ELECT 22uF 20% 50V	
C144	1-126-965-11	ELECT 22uF 20% 50V	
C145	1-126-933-11	ELECT 100uF 20% 16V	
C146	1-164-161-11	CERAMIC CHIP 0.0022uF 10% 100V	
C147	1-164-004-11	CERAMIC CHIP 0.1uF 10% 25V	(SE500/SE800/SX800)
C148	1-163-021-91	CERAMIC CHIP 0.01uF 10% 50V	
C149	1-126-934-11	ELECT 220uF 20% 16V	
C150	1-126-963-11	ELECT 4.7uF 20% 50V	
C160	1-163-021-91	CERAMIC CHIP 0.01uF 10% 50V	
C161	1-163-021-91	CERAMIC CHIP 0.01uF 10% 50V	
C162	1-104-905-11	CAPACITOR 0.22F 5.5V	
C163	1-163-021-91	CERAMIC CHIP 0.01uF 10% 50V	
C164	1-125-972-91	ELECT 100uF 20% 16V	
C165	1-163-021-91	CERAMIC CHIP 0.01uF 10% 50V	
C166	1-163-021-91	CERAMIC CHIP 0.01uF 10% 50V	
C167	1-163-809-11	CERAMIC CHIP 0.047uF 10% 25V	
C168	1-163-235-11	CERAMIC CHIP 22PF 5% 50V	
C169	1-163-235-11	CERAMIC CHIP 22PF 5% 50V	
C170	1-164-004-11	CERAMIC CHIP 0.1uF 10% 25V	
C171	1-163-229-11	CERAMIC CHIP 12PF 5% 50V	
C172	1-163-231-11	CERAMIC CHIP 15PF 5% 50V	
C173	1-163-007-11	CERAMIC CHIP 680PF 10% 50V	
C174	1-164-004-11	CERAMIC CHIP 0.1uF 10% 25V	(EXCEPT SE350/SE500)
C200	1-163-021-91	CERAMIC CHIP 0.01uF 10% 50V	
C201	1-126-160-11	ELECT 1uF 20% 50V	
C202	1-163-021-91	CERAMIC CHIP 0.01uF 10% 50V	
C203	1-163-809-11	CERAMIC CHIP 0.047uF 10% 25V	
C204	1-163-021-91	CERAMIC CHIP 0.01uF 10% 50V	
C205	1-163-239-11	CERAMIC CHIP 33PF 5% 50V	(EXCEPT SE350)
C205	1-163-241-11	CERAMIC CHIP 39PF 5% 50V	(SE350)
C206	1-163-809-11	CERAMIC CHIP 0.047uF 10% 25V	
C207	1-163-237-11	CERAMIC CHIP 27PF 5% 50V	
C208	1-126-160-11	ELECT 1uF 20% 50V	
C209	1-163-257-11	CERAMIC CHIP 180PF 5% 50V	

Ref. No.	Part No.	Description			Remark
C210	1-163-237-11	CERAMIC CHIP	27PF	5%	50V
C211	1-109-982-11	CERAMIC CHIP	1uF	10%	10V
C212	1-163-809-11	CERAMIC CHIP	0.047uF	10%	25V
C213	1-109-982-11	CERAMIC CHIP	1uF	10%	10V
C214	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C215	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V
C216	1-163-037-11	CERAMIC CHIP	0.022uF	10%	25V
C217	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V
C218	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V (SE350/SE600/SX600)
C219	1-163-038-91	CERAMIC CHIP	0.1uF		25V
C220	1-124-589-11	ELECT	47uF	20%	16V
C221	1-109-982-11	CERAMIC CHIP	1uF	10%	10V (SE350)
C221	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V (EXCEPT SE350)
C222	1-109-982-11	CERAMIC CHIP	1uF	10%	10V
C223	1-163-038-91	CERAMIC CHIP	0.1uF		25V
C224	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V
C225	1-124-589-11	ELECT	47uF	20%	16V
C226	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V
C227	1-104-664-11	ELECT	47uF	20%	16V
C228	1-163-131-00	CERAMIC CHIP	390PF	5%	50V
C229	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C230	1-163-038-91	CERAMIC CHIP	0.1uF		25V
C231	1-109-982-11	CERAMIC CHIP	1uF	10%	10V
C232	1-109-982-11	CERAMIC CHIP	1uF	10%	10V
C233	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C234	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V
C235	1-109-982-11	CERAMIC CHIP	1uF	10%	10V
C236	1-163-243-11	CERAMIC CHIP	47PF	5%	50V
C237	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C238	1-126-157-11	ELECT	10uF	20%	16V
C239	1-163-243-11	CERAMIC CHIP	47PF	5%	50V (SE500/SE800/SX800)
C240	1-163-243-11	CERAMIC CHIP	47PF	5%	50V (EXCEPT SE350/SE500R/SE600: A, N/SE700R)
C241	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V (SE500/SE800/SX800)
C242	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V (EXCEPT SE350/SE500R/SE600: A, N/SE700R)
C243	1-163-809-11	CERAMIC CHIP	0.047uF	10%	25V
C244	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V
C245	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C246	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V
C247	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V
C248	1-124-589-11	ELECT	47uF	20%	16V
C249	1-126-157-11	ELECT	10uF	20%	16V
C250	1-124-589-11	ELECT	47uF	20%	16V
C251	1-126-153-11	ELECT	22uF	20%	6.3V
C252	1-109-982-11	CERAMIC CHIP	1uF	10%	10V
C253	1-163-139-00	CERAMIC CHIP	820PF	5%	50V (SE600B/SE700B/SE800B/SX700B)
C254	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V (SE500/SE650/SE700/SE800/SX700/SX800)
C255	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V
C271	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V (EXCEPT SE350)
C272	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V (EXCEPT SE350)
C275	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V
C276	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C278	1-163-037-11	CERAMIC CHIP	0.022uF	10%	25V
C279	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C280	1-126-933-11	ELECT	100uF	20%	16V
C281	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V
C282	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V
C283	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V
C284	1-164-489-11	CERAMIC CHIP	0.22uF	10%	16V
C285	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V
C288	1-163-251-11	CERAMIC CHIP	100PF	5%	50V
C289	1-163-233-11	CERAMIC CHIP	18PF	5%	50V
C303	1-163-038-91	CERAMIC CHIP	0.1uF		25V (EXCEPT SE350/SE500)
C304	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V (EXCEPT SE350/SE500)
C306	1-104-664-11	ELECT	47uF	20%	16V (EXCEPT SE350/SE500)
C307	1-104-664-11	ELECT	47uF	20%	16V (EXCEPT SE350/SE500)
C308	1-126-964-11	ELECT	10uF	20%	50V (EXCEPT SE350/SE500)
C309	1-163-020-00	CERAMIC CHIP	0.0082uF	10%	50V (EXCEPT SE350/SE500)
C310	1-119-799-11	ELECT	47uF	20%	16V (EXCEPT SE350/SE500)
C311	1-126-964-11	ELECT	10uF	20%	50V (EXCEPT SE350/SE500)
C312	1-126-961-11	ELECT	2.2UF	20%	50V (EXCEPT SE350/SE500)
C313	1-126-964-11	ELECT	10uF	20%	50V (EXCEPT SE350/SE500)
C314	1-119-799-11	ELECT	47uF	20%	16V (EXCEPT SE350/SE500)
C315	1-163-020-00	CERAMIC CHIP	0.0082uF	10%	50V (EXCEPT SE350/SE500)
C316	1-126-964-11	ELECT	10uF	20%	50V (EXCEPT SE350/SE500)
C317	1-164-489-11	CERAMIC CHIP	0.22uF	10%	16V (EXCEPT SE350/SE500)
C318	1-126-964-11	ELECT	10uF	20%	50V (EXCEPT SE350/SE500)
C319	1-124-261-00	ELECT	10uF	20%	50V (EXCEPT SE350/SE500)
C320	1-126-964-11	ELECT	10uF	20%	50V (EXCEPT SE350/SE500)
C322	1-126-964-11	ELECT	10uF	20%	50V (EXCEPT SE350/SE500)
C323	1-163-038-91	CERAMIC CHIP	0.1uF		25V (EXCEPT SE350/SE500)
C324	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V (EXCEPT SE350/SE500)
C325	1-164-489-11	CERAMIC CHIP	0.22uF	10%	16V (EXCEPT SE350/SE500)
C326	1-164-489-11	CERAMIC CHIP	0.22uF	10%	16V (EXCEPT SE350/SE500)
C327	1-164-489-11	CERAMIC CHIP	0.22uF	10%	16V (EXCEPT SE350/SE500)
C328	1-126-960-11	ELECT	1uF	20%	50V (SE800/SX800)
C329	1-126-960-11	ELECT	1uF	20%	50V (SE800/SX800)
C330	1-126-960-11	ELECT	1uF	20%	50V (EXCEPT SE350/SE500)
C331	1-126-960-11	ELECT	1uF	20%	50V (EXCEPT SE350/SE500)

MA-373

Ref. No.	Part No.	Description				Remark
C332	1-126-960-11	ELECT	1uF	20%	50V	(EXCEPT SE350/SE500/SE600: A, N/SE700R)
C333	1-126-960-11	ELECT	1uF	20%	50V	(EXCEPT SE350/SE500/SE600: A, N/SE700R)
C336	1-126-964-11	ELECT	10uF	20%	50V	(EXCEPT SE350/SE500)
C337	1-124-261-00	ELECT	10uF	20%	50V	(EXCEPT SE350/SE500R/SE600: A, N/SE700: G, I, R/SE800G)
C338	1-124-261-00	ELECT	10uF	20%	50V	(EXCEPT SE350/SE500/SE600: A, N/SE700: G, I, R/SE800G)
C350	1-164-489-11	CERAMIC CHIP	0.22uF	10%	16V	
C351	1-104-664-11	ELECT	47uF	20%	16V	
C352	1-163-038-91	CERAMIC CHIP	0.1uF		25V	
C353	1-164-489-11	CERAMIC CHIP	0.22uF	10%	16V	(SE500)
C354	1-126-964-11	ELECT	10uF	20%	50V	
C355	1-164-489-11	CERAMIC CHIP	0.22uF	10%	16V	(SE350/SE500)
C356	1-126-966-11	ELECT	33uF	20%	16V	
C357	1-126-963-11	ELECT	4.7uF	20%	50V	
C358	1-109-982-11	CERAMIC CHIP	1uF	10%	10V	
C359	1-163-011-11	CERAMIC CHIP	0.0015uF	10%	50V	
C360	1-163-011-11	CERAMIC CHIP	0.0015uF	10%	50V	
C362	1-104-664-11	ELECT	47uF	20%	16V	
C363	1-126-963-11	ELECT	4.7uF	20%	50V	
C364	1-126-964-11	ELECT	10uF	20%	50V	
C365	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V	
C366	1-126-960-11	ELECT	1uF	20%	50V	
C367	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V	
C380	1-137-374-11	MYLAR	0.047uF	5%	50V	(SE350/SE600/SE650/SE700/SX600/SX700)
C380	1-137-440-11	MYLAR	0.018uF	5%	50V	(SE500/SE800/SX800)
C381	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V	
C382	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V	
C383	1-124-589-11	ELECT	47uF	20%	16V	
C390	1-137-397-11	MYLAR	0.047uF	5%	100V	(SE500/SE800/SX800)
C391	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V	(SE500/SE800/SX800)
C392	1-163-011-11	CERAMIC CHIP	0.0015uF	10%	50V	(SE500/SE800/SX800)
C393	1-126-933-11	ELECT	100uF	20%	16V	(SE500/SE800/SX800)
C394	1-163-251-11	CERAMIC CHIP	100PF	5%	50V	(SE500/SE800/SX800)
C420	1-124-589-11	ELECT	47uF	20%	16V	
C421	1-163-235-11	CERAMIC CHIP	22PF	5%	50V	
C422	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V	
C423	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V	
C424	1-126-157-11	ELECT	10uF	20%	16V	
C427	1-124-635-00	ELECT	220uF	20%	6.3V	
C505	1-163-131-00	CERAMIC CHIP	390PF	5%	50V	
C506	1-163-131-00	CERAMIC CHIP	390PF	5%	50V	
C507	1-163-131-00	CERAMIC CHIP	390PF	5%	50V	
C508	1-163-131-00	CERAMIC CHIP	390PF	5%	50V	(EXCEPT SE350/SE500)
C510	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V	
C511	1-104-664-11	ELECT	47uF	20%	16V	
C512	1-104-664-11	ELECT	47uF	20%	16V	
C513	1-126-935-11	ELECT	470uF	20%	6.3V	
C514	1-163-239-11	CERAMIC CHIP	33PF	5%	50V	(SE500R/SE650/SE700/SE800/SX700/SX800)
C515	1-163-239-11	CERAMIC CHIP	33PF	5%	50V	(SE650/SE700/SE800/SX700/SX800)
C516	1-163-017-00	CERAMIC CHIP	0.0047uF	5%	50V	
C520	1-126-935-11	ELECT	470uF	20%	6.3V	(SE500R/SE700R/SE800K)
C575	1-163-131-00	CERAMIC CHIP	390PF	5%	50V	(EXCEPT SE350/SE500R/SE600: A, N/SE700R)
C576	1-163-131-00	CERAMIC CHIP	390PF	5%	50V	(EXCEPT SE350/SE500R/SE600: A, N/SE700R)
C577	1-163-131-00	CERAMIC CHIP	390PF	5%	50V	(EXCEPT SE350/SE500R/SE600: A, N/SE700: G, I, R/SE800G)
C578	1-163-131-00	CERAMIC CHIP	390PF	5%	50V	(EXCEPT SE350/SE500/SE600: A, N/SE700: G, I, R/SE800G)
C580	1-126-964-11	ELECT	10uF	20%	50V	(SE500K)
C581	1-126-964-11	ELECT	10uF	20%	50V	(SE500K)
C582	1-124-261-00	ELECT	10uF	20%	50V	(SE500K)
C583	1-126-964-11	ELECT	10uF	20%	50V	(SE500K)
C584	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V	(SE500K)
C585	1-126-964-11	ELECT	10uF	20%	50V	(SE500K)
C586	1-126-964-11	ELECT	10uF	20%	50V	(SE500K)
C587	1-124-261-00	ELECT	10uF	20%	50V	(SE500K)
C611	1-104-664-11	ELECT	47uF	20%	25V	
C612	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V	
C613	1-126-933-11	ELECT	100uF	20%	16V	
C618	1-126-965-11	ELECT	22uF	20%	50V	
C621	1-126-935-11	ELECT	470uF	20%	6.3V	(EXCEPT SE350/SE500R/SE600: A, N/SE700R)
C660	1-163-233-11	CERAMIC CHIP	18PF	5%	50V	
C661	1-163-233-11	CERAMIC CHIP	18PF	5%	50V	
C662	1-163-017-00	CERAMIC CHIP	0.0047uF	5%	50V	
C663	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V	
C664	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V	
C665	1-163-245-11	CERAMIC CHIP	56PF	5%	50V	(SE350/SE500/SE600: B, N/SE700: B, K, N, R/SE800: B, K, N/SX700B)
C666	1-163-135-00	CERAMIC CHIP	560PF	5%	50V	
C667	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V	
C668	1-124-584-00	ELECT	100uF	20%	10V	
C669	1-163-016-00	CERAMIC CHIP	0.0039uF	10%	50V	
C670	1-109-982-11	CERAMIC CHIP	1uF	10%	10V	
C671	1-163-235-11	CERAMIC CHIP	22PF	5%	50V	
C672	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V	
C701	1-126-964-11	ELECT	10uF	20%	50V	
C702	1-164-161-11	CERAMIC CHIP	0.0022uF	10%	100V	
C704	1-126-964-11	ELECT	10uF	20%	50V	
C705	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V	
C708	1-104-664-11	ELECT	47uF	20%	16V	
C709	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V	
C710	1-126-965-11	ELECT	22uF	20%	50V	(EXCEPT SE350/SE500/SE700R)
C711	1-104-664-11	ELECT	47uF	20%	16V	(EXCEPT SE350/SE500/SE700R)

Ref. No.	Part No.	Description	Remark
C730	1-126-964-11	ELECT 10uF 20% 50V	(EXCEPT SE350/SE500)
C731	1-126-964-11	ELECT 10uF 20% 50V	(EXCEPT SE350/SE500)
C752	1-126-933-11	ELECT 100uF 20% 16V	
C753	1-164-004-11	CERAMIC CHIP 0.1uF 10% 25V	
C754	1-126-935-11	ELECT 470uF 20% 6.3V	
C755	1-164-004-11	CERAMIC CHIP 0.1uF 10% 25V	
C757	1-163-021-91	CERAMIC CHIP 0.01uF 10% 50V	
C801	1-163-021-91	CERAMIC CHIP 0.01uF 10% 50V	(EXCEPT SE600/SE700R/SX600)
C850	1-163-038-91	CERAMIC CHIP 0.1uF 25V	(EXCEPT SE500R/SE600/SE700R/SX600)
C851	1-126-964-11	ELECT 10uF 20% 50V	(EXCEPT SE500R/SE600/SE700R/SX600)
C852	1-164-161-11	CERAMIC CHIP 0.0022uF 10% 100V	(EXCEPT SE500R/SE600/SE700R/SX600)
C853	1-163-989-11	CERAMIC CHIP 0.033uF 10% 25V	(EXCEPT SE500R/SE600/SE700R/SX600)
C855	1-164-489-11	CERAMIC CHIP 0.22uF 10% 16V	(EXCEPT SE500R/SE600/SE700R/SX600)
C856	1-163-038-91	CERAMIC CHIP 0.1uF 25V	(EXCEPT SE500R/SE600/SE700R/SX600)
C970	1-163-259-91	CERAMIC CHIP 220PF 5% 50V	(SE600B/SE700B/SE800B/SX700B)
C971	1-124-257-00	ELECT 2.2uF 20% 50V	(SE600B/SE700B/SE800B/SX700B)
C972	1-163-017-00	CERAMIC CHIP 0.0047uF 5% 50V	(SE600B/SE700B/SE800B/SX700B)
C973	1-163-021-91	CERAMIC CHIP 0.01uF 10% 50V	(SE600B/SE700B/SE800B/SX700B)
C974	1-109-982-11	CERAMIC CHIP 1uF 10% 10V	(SE600B/SE700B/SE800B/SX700B)
C975	1-163-037-11	CERAMIC CHIP 0.022uF 10% 25V	(SE600B/SE700B/SE800B/SX700B)
C976	1-163-259-91	CERAMIC CHIP 220PF 5% 50V	(SE600B/SE700B/SE800B/SX700B)
C977	1-163-021-91	CERAMIC CHIP 0.01uF 10% 50V	(SE600B/SE700B/SE800B/SX700B)
C978	1-163-017-00	CERAMIC CHIP 0.0047uF 5% 50V	(SE600B/SE700B/SE800B/SX700B)
C979	1-163-255-11	CERAMIC CHIP 150PF 5% 50V	(SE600B/SE700B/SE800B/SX700B)
C980	1-164-004-11	CERAMIC CHIP 0.1uF 10% 25V	(SE600B/SE700B/SE800B/SX700B)
C981	1-163-021-91	CERAMIC CHIP 0.01uF 10% 50V	(SE600B/SE700B/SE800B/SX700B)
C982	1-163-007-11	CERAMIC CHIP 680PF 10% 50V	(SE600B/SE700B/SE800B/SX700B)
C983	1-163-009-11	CERAMIC CHIP 0.001uF 10% 50V	(SE600B/SE700B/SE800B/SX700B)
C984	1-163-021-91	CERAMIC CHIP 0.01uF 10% 50V	(SE600B/SE700B/SE800B/SX700B)
C985	1-163-251-11	CERAMIC CHIP 100PF 5% 50V	(SE600B/SE700B/SE800B/SX700B)
C986	1-126-157-11	ELECT 10uF 20% 16V	(SE600B/SE700B/SE800B/SX700B)
C987	1-107-823-11	CERAMIC CHIP 0.47uF 10% 16V	(SE600B/SE700B/SE800B/SX700B)
C988	1-163-251-11	CERAMIC CHIP 100PF 5% 50V	(SE600B/SE700B/SE800B/SX700B)
C991	1-164-004-11	CERAMIC CHIP 0.1uF 10% 25V	(SE600B/SE700B/SE800B/SX700B)
C992	1-163-021-91	CERAMIC CHIP 0.01uF 10% 50V	(SE600B/SE700B/SE800B/SX700B)

Ref. No.	Part No.	Description	Remark
C993	1-163-021-91	CERAMIC CHIP 0.01uF 10% 50V	(SE600B/SE700B/SE800B/SX700B)
C994	1-163-021-91	CERAMIC CHIP 0.01uF 10% 50V	(SE600B/SE700B/SE800B/SX700B)
C995	1-124-584-00	ELECT 100uF 20% 10V	(SE600B/SE700B/SE800B/SX700B)
C996	1-163-227-11	CERAMIC CHIP 10PF 0.50PF 50V	(SE600B/SE700B/SE800B/SX700B)
		< CONNECTOR >	
CN101	1-695-328-11	HOUSING, CONNECTOR 5P	
CN102	1-779-723-11	CONNECTOR, BOARD TO BOARD 9P	
* CN104	1-766-716-11	CONNECTOR, BOARD TO BOARD 3P	
* CN161	1-506-469-11	PIN, CONNECTOR 4P	
CN260	1-784-490-11	CONNECTOR, FFC/FPC 11P	(EXCEPT SE350/SE500)
CN261	1-793-919-11	CONNECTOR, FFC/FPC 6P (SE350/SE500)	
* CN262	1-560-893-00	PIN, CONNECTOR 5P	
* CN263	1-560-890-00	PIN, CONNECTOR 2P (EXCEPT SE350/SE500)	
CN350	1-784-486-11	CONNECTOR, FFC/FPC 7P	
CN351	1-506-468-11	PIN, CONNECTOR 3P	
CN460	1-691-043-21	HOUSING, CONNECTOR 11P	(SE500/SE800/SX800)
CN461	1-695-328-11	HOUSING, CONNECTOR 5P	(SE350/SE600/SE650/SE700/SX600/SX700)
CN500	1-793-918-11	CONNECTOR, SQUARE TYPE 21P	(LINE-1 (TV)) (SE350/SE500R/SE600: A, N/SE700R)
CN501	1-506-469-11	PIN, CONNECTOR 4P (SE500)	
* CN501	1-568-954-11	PIN, CONNECTOR 5P (SE800/SX800)	
CN570	1-793-917-11	CONNECTOR, SQUARE TYPE 21P	(DECODER/LINE-2 IN, LINE-1 (TV)) (EXCEPT SE350/SE500/SE600: A, N/SE700R/SE800/SX800)
CN570	1-793-917-11	CONNECTOR, SQUARE TYPE 21P	(DECODER/LINE-3 IN, LINE-1 (TV)) (SE500K/SE800/SX800)
CN600	1-778-674-21	CONNECTOR, BOARD TO BOARD 19P	
CN601	1-793-673-11	CONNECTOR, BOARD TO BOARD 7P	
		< DIODE >	
D100	8-719-048-26	DIODE GL528V1 (T/S LED)	
D110	8-719-200-82	DIODE MPG06D-6052PKG3	
D140	8-719-988-61	DIODE 1SS355TE-17	
D420	8-719-045-62	DIODE SLR-342VCT31 (SYNCHRO REC)	(SE500K/SE800/SX800)
D421	8-719-988-61	DIODE 1SS355TE-17 (SE500K/SE800/SX800)	
D422	8-719-056-06	DIODE SLR-342DCT31 (RR)	(SE500/SE650/SE700/SE800/SX700/SX800)
D423	8-719-988-61	DIODE 1SS355TE-17	(SE500/SE650/SE700/SE800/SX700/SX800)
D424	8-719-067-40	DIODE STZ6.8N-T146	
D500	8-719-071-50	DIODE BZA408B-115	
D501	8-719-071-50	DIODE BZA408B-115	
D502	8-719-070-59	DIODE PDZ6.8B-115	
D503	8-719-977-40	DIODE UDZ-TE-17-13B	
D504	8-719-070-59	DIODE PDZ6.8B-115	
D570	8-719-071-50	DIODE BZA408B-115	(EXCEPT SE350/SE500R/SE600: A, N/SE700R)
D571	8-719-070-59	DIODE PDZ6.8B-115	(EXCEPT SE350/SE500R/SE600: A, N/SE700R)
D572	8-719-977-40	DIODE UDZ-TE-17-13B	(EXCEPT SE350/SE500R/SE600: A, N/SE700R)

MA-373

Ref. No.	Part No.	Description	Remark
D573	8-719-070-59	DIODE PDZ6.8B-115 (SE500R/SE650/SE700/SE800/SX700/SX800)	
D590	8-719-988-61	DIODE 1SS355TE-17	
D591	8-719-988-61	DIODE 1SS355TE-17 (SE350/SE500)	
D603	8-719-075-84	DIODE S1G-G2P (EXCEPT SE350/SE500R/SE600: A, N/SE700R)	
D606	8-719-075-84	DIODE S1G-G2P	
D607	8-719-075-84	DIODE S1G-G2P	
D700	8-719-988-61	DIODE 1SS355TE-17 (SE700R)	
D702	8-719-982-26	DIODE MTZJ-T-77-33	
D750	8-719-075-84	DIODE S1G-G2P	
D800	8-719-988-61	DIODE 1SS355TE-17 (EXCEPT SE600/SE700R/SX600)	
		< IC >	
IC001	8-759-566-07	IC LA7277M-TLM (SE500/SE650/SE700/SE800/SX700/SX800)	
IC130	8-759-645-07	IC LB1943N	
IC160	8-759-248-87	IC MM1256XF-BE	
IC161	8-759-575-72	IC M24C08-WMN6T	
IC162	8-759-673-31	IC M37760MFH216GP (SE500R/SE600/SE700R/SX600)	
IC162	8-759-673-32	IC M37760MFH217GP (EXCEPT SE500R/SE600/SE700R/SX600)	
IC200	8-759-638-71	IC LA71562M-MPB	
IC260	8-759-549-79	IC LA70001 (SE350)	
IC260	8-759-564-36	IC LA70011 (EXCEPT SE350)	
IC301	8-759-638-55	IC TDA9605H/N2, 518 (EXCEPT SE350/SE500)	
IC350	8-759-499-30	IC BA7755AF-E2	
IC420	8-759-547-59	IC M35500BGP	
IC460	8-749-015-48	IC RPM6940	
IC580	8-759-009-07	IC MC14053BFEL (SE500K)	
⚠IC601	8-759-438-18	IC PQ12RD08	
IC850	8-759-484-61	IC SDA5650X-GEG (EXCEPT SE500R/SE600/SE700R/SX600)	
IC970	8-759-438-17	IC LA7337 (SE600B/SE700B/SE800B/SX700B)	
		< JACK >	
* J500	1-779-924-11	JACK, PIN 2P (LINE-2 OUT) (SE500R)	
J500	1-784-412-11	JACK, PIN 3P (LINE-2 OUT) (SE700R/SE800K)	
J500	1-784-414-11	JACK, PIN 2P (LINE-2 OUT) (EXCEPT SE350/SE500/SE600/SE700R/SE800K/SX600)	
		< SHORT >	
JR001	1-216-295-91	SHORT 0	
JR002	1-216-295-91	SHORT 0	
JR003	1-216-295-91	SHORT 0	
JR004	1-216-295-91	SHORT 0 (SE500K)	
JR005	1-216-295-91	SHORT 0	
JR006	1-216-295-91	SHORT 0	
JR007	1-216-295-91	SHORT 0	
JR008	1-216-295-91	SHORT 0	
JR009	1-216-295-91	SHORT 0	
JR010	1-216-295-91	SHORT 0	
JR011	1-216-295-91	SHORT 0	
JR012	1-216-295-91	SHORT 0	
JR013	1-216-295-91	SHORT 0	
JR014	1-216-295-91	SHORT 0	
JR016	1-216-295-91	SHORT 0	
JR017	1-216-295-91	SHORT 0	
JR018	1-216-295-91	SHORT 0	
JR019	1-216-295-91	SHORT 0	
JR020	1-216-295-91	SHORT 0	
JR021	1-216-295-91	SHORT 0	
JR022	1-216-295-91	SHORT 0	
JR023	1-216-295-91	SHORT 0	
JR026	1-216-295-91	SHORT 0	
JR027	1-216-295-91	SHORT 0	
JR028	1-216-295-91	SHORT 0	
JR201	1-216-296-91	SHORT 0	
JR202	1-216-296-91	SHORT 0	
JR203	1-216-296-91	SHORT 0	
JR204	1-216-296-91	SHORT 0	
JR205	1-216-296-91	SHORT 0	
JR206	1-216-296-91	SHORT 0 (SE600B/SE700B/SE800B/SX700B)	
JR207	1-216-296-91	SHORT 0	
JR208	1-216-296-91	SHORT 0	
JR209	1-216-296-91	SHORT 0	
JR210	1-216-296-91	SHORT 0	
JR211	1-216-296-91	SHORT 0	
JR212	1-216-296-91	SHORT 0	
JR213	1-216-296-91	SHORT 0	
JR214	1-216-296-91	SHORT 0	
JR215	1-216-296-91	SHORT 0	
JR216	1-216-296-91	SHORT 0 (SE600B/SE700B/SE800B/SX700B)	
JR217	1-216-296-91	SHORT 0	
JR218	1-216-296-91	SHORT 0	
JR219	1-216-296-91	SHORT 0	
JR220	1-216-296-91	SHORT 0	
JR221	1-216-296-91	SHORT 0	
JR222	1-216-296-91	SHORT 0	
JR223	1-216-296-91	SHORT 0 (SE600B/SE700B/SE800B/SX700B)	
JR224	1-216-296-91	SHORT 0	
JR225	1-216-296-91	SHORT 0	
JR226	1-216-296-91	SHORT 0	
JR227	1-216-295-91	SHORT 0	
JR228	1-216-296-91	SHORT 0	
JR229	1-216-296-91	SHORT 0	
JR230	1-216-296-91	SHORT 0 (SE500/SE700R/SE800/SX800)	
JR231	1-216-296-91	SHORT 0	
JR232	1-216-296-91	SHORT 0	
JR233	1-216-296-91	SHORT 0	
JR234	1-216-296-91	SHORT 0	
JR235	1-216-296-91	SHORT 0	
JR236	1-216-296-91	SHORT 0	
JR237	1-216-296-91	SHORT 0	
JR238	1-216-296-91	SHORT 0	
JR239	1-216-296-91	SHORT 0 (SE600B/SE700B/SE800B/SX700B)	
JR240	1-216-296-91	SHORT 0	
JR241	1-216-296-91	SHORT 0 (SE500K)	
JR242	1-216-296-91	SHORT 0 (SE500K)	
JR243	1-216-296-91	SHORT 0	
JR244	1-216-296-91	SHORT 0	
JR245	1-216-296-91	SHORT 0	

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.
Replace only with part number specified.

Ref. No.	Part No.	Description	Remark
JR246	1-216-296-91	SHORT 0	
JR247	1-216-296-91	SHORT 0	
JR248	1-216-296-91	SHORT 0 (SE500/SE800/SX800)	
JR249	1-216-296-91	SHORT 0	
JR250	1-216-296-91	SHORT 0	
JR251	1-216-296-91	SHORT 0	
JR252	1-216-296-91	SHORT 0	
JS204	1-216-295-91	SHORT 0 (SE350/SE600/SX600)	
JS302	1-216-295-91	SHORT 0 (SE350/SE500)	
JS308	1-216-295-91	SHORT 0 (SE350/SE500)	
JS351	1-216-295-91	SHORT 0 (SE500/SE800/SX800)	
JS500	1-216-295-91	SHORT 0 (SE350/SE500)	
JS501	1-216-295-91	SHORT 0 (SE350/SE500)	
JS504	1-216-295-91	SHORT 0 (SE500)	
JS570	1-216-295-91	SHORT 0 (SE500K)	
JS571	1-216-295-91	SHORT 0 (SE500K)	
JS580	1-216-295-91	SHORT 0 (EXCEPT SE500K)	
JS581	1-216-295-91	SHORT 0 (EXCEPT SE500K)	
JS590	1-216-295-91	SHORT 0 (SE350/SE500)	
JS591	1-216-295-91	SHORT 0 (EXCEPT SE350/SE500)	
JS700	1-216-295-91	SHORT 0 (SE700R)	
JS701	1-216-296-91	SHORT 0 (SE700R)	
		< COIL >	
L001	1-414-934-21	INDUCTOR 10uH	(SE500/SE650/SE700/SE800/SX700/SX800)
L140	1-414-936-21	INDUCTOR 22uH	
L160	1-414-936-21	INDUCTOR 22uH	
L161	1-414-936-21	INDUCTOR 22uH	
L200	1-414-946-21	INDUCTOR 39uH	
L201	1-414-940-21	INDUCTOR 100uH	
L202	1-414-934-21	INDUCTOR 10uH	
L203	1-414-934-21	INDUCTOR 10uH	
L204	1-414-934-21	INDUCTOR 10uH	
L205	1-414-934-21	INDUCTOR 10uH	
L206	1-414-938-21	INDUCTOR 47uH	(SE600B/SE700B/SE800B/SX700B)
L270	1-414-940-21	INDUCTOR 100uH	
L271	1-414-930-21	INDUCTOR 2.2uH	
L301	1-414-940-21	INDUCTOR 100uH	(EXCEPT SE350/SE500)
L350	1-414-940-21	INDUCTOR 100uH	
L380	1-414-940-21	INDUCTOR 100uH	
L390	1-410-687-11	INDUCTOR 1.2mH	(SE500/SE800/SX800)
L460	1-414-938-21	INDUCTOR 47uH	
L510	1-414-940-21	INDUCTOR 100uH	
L580	1-414-940-21	INDUCTOR 100uH (SE500K)	
L660	1-414-930-21	INDUCTOR 2.2uH	
L661	1-414-936-21	INDUCTOR 22uH	(SE350/SE500/SE600: B, N/SE700: B, K, N, R/SE800: B, K, N/SX700B)
L662	1-414-936-21	INDUCTOR 22uH	
L663	1-414-936-21	INDUCTOR 22uH	
L701	1-414-930-21	INDUCTOR 2.2uH	
L750	1-414-930-21	INDUCTOR 2.2uH	
L751	1-414-934-21	INDUCTOR 10uH	

Ref. No.	Part No.	Description	Remark
L970	1-414-933-21	INDUCTOR 6.8uH	(SE600B/SE700B/SE800B/SX700B)
L971	1-414-945-21	INDUCTOR 27uH	(SE600B/SE700B/SE800B/SX700B)
L972	1-414-938-21	INDUCTOR 47uH	(SE600B/SE700B/SE800B/SX700B)
L973	1-414-938-21	INDUCTOR 47uH	(SE600B/SE700B/SE800B/SX700B)
L975	1-414-934-21	INDUCTOR 10uH	(SE600B/SE700B/SE800B/SX700B)
		< FLUORESCENT INDICATOR TUBE >	
ND420	1-517-832-11	INDICATOR TUBE, FLUORESCENT	
		< PHOTO INTERRUPTER >	
PH100	8-749-015-86	PHOTO INTERRUPTER GP3S120S	
PH101	8-749-015-86	PHOTO INTERRUPTER GP3S120S	
		< IC LINK >	
⚠PS120	1-532-605-00	LINK, IC (0.4A)	
⚠PS390	1-532-727-11	LINK, IC (0.25A) (SE500/SE800/SX800)	
⚠PS602	1-532-727-11	LINK, IC (0.25A)	(EXCEPT SE350/SE500R/SE600: A, N/SE700R)
⚠PS603	1-532-727-11	LINK, IC (0.25A)	
		< TRANSISTOR >	
Q100	8-729-043-84	TRANSISTOR PT380F3	
Q101	8-729-043-84	TRANSISTOR PT380F3	
Q102	8-729-281-53	TRANSISTOR 2SC1815GR-TPE2	
Q103	8-729-043-29	TRANSISTOR PDTC144EK-115	
Q104	8-729-216-22	TRANSISTOR 2PB709AR-115	
Q140	8-729-422-33	TRANSISTOR 2PD601AR-115	(SE500/SE800/SX800)
Q200	8-729-422-33	TRANSISTOR 2PD601AR-115	
Q201	8-729-422-33	TRANSISTOR 2PD601AR-115	
Q202	8-729-422-33	TRANSISTOR 2PD601AR-115	
Q203	8-729-216-22	TRANSISTOR 2PB709AR-115	
Q204	8-729-043-29	TRANSISTOR PDTC144EK-115	(SE600B/SE700B/SE800B/SX700B)
Q270	8-729-043-29	TRANSISTOR PDTC144EK-115	(EXCEPT SE350/SE500)
Q350	8-729-281-53	TRANSISTOR 2SC1815GR-TPE2	
Q380	8-729-802-91	TRANSISTOR 2SD879-AA	
Q390	8-729-900-51	TRANSISTOR UN2115-QRS (TX)	(SE500/SE800/SX800)
Q391	8-729-043-29	TRANSISTOR PDTC144EK-115	(SE500/SE800/SX800)
Q392	8-729-012-31	TRANSISTOR 2SC4040-TL2-Q	(SE500/SE800/SX800)
Q501	8-729-043-32	TRANSISTOR PDTA114EK-115	
Q502	8-729-043-29	TRANSISTOR PDTC144EK-115	
Q510	8-729-216-22	TRANSISTOR 2PB709AR-115	
Q520	8-729-216-22	TRANSISTOR 2PB709AR-115	(SE500R/SE700R/SE800K)
Q540	8-729-216-22	TRANSISTOR 2PB709AR-115	(EXCEPT SE350/SE500R/SE600: A, N/SE700: G, I, R/SE800G)
Q541	8-729-216-22	TRANSISTOR 2PB709AR-115	(EXCEPT SE350/SE500R/SE600: A, N/SE700: G, I, R/SE800G)

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.
Replace only with part number specified.

MA-373

Ref. No.	Part No.	Description	Remark
Q580	8-729-043-29	TRANSISTOR PDTC144EK-115	(SE500K)
Q581	8-729-043-29	TRANSISTOR PDTC144EK-115	(SE500K)
Q582	8-729-043-29	TRANSISTOR PDTC144EK-115	(SE500K)
Q583	8-729-422-33	TRANSISTOR 2PD601AR-115	(SE500K)
Q590	8-729-422-33	TRANSISTOR 2PD601AR-115	(EXCEPT SE350/SE500)
Q591	8-729-422-33	TRANSISTOR 2PD601AR-115	
Q592	8-729-216-22	TRANSISTOR 2PB709AR-115	(EXCEPT SE350/SE500)
Q607	8-729-804-41	TRANSISTOR 2SB1122-ST-TD	(EXCEPT SE350/SE500R/SE600: A, N/SE700R)
Q608	8-729-043-29	TRANSISTOR PDTC144EK-115	(EXCEPT SE350/SE500R/SE600: A, N/SE700R)
Q612	8-729-804-41	TRANSISTOR 2SB1122-ST-TD	
Q613	8-729-043-29	TRANSISTOR PDTC144EK-115	
Q660	8-729-216-22	TRANSISTOR 2PB709AR-115	
Q661	8-729-216-22	TRANSISTOR 2PB709AR-115	
Q700	8-729-422-33	TRANSISTOR 2PD601AR-115	(SE700R)
Q701	8-729-216-22	TRANSISTOR 2PB709AR-115	(SE700R)
Q702	8-729-216-22	TRANSISTOR 2PB709AR-115	(SE700R)
Q720	8-729-119-76	TRANSISTOR 2SA1309A-QRSTA	
Q721	8-729-422-33	TRANSISTOR 2PD601AR-115	
Q730	8-729-422-33	TRANSISTOR 2PD601AR-115	(SE700R)
Q731	8-729-422-33	TRANSISTOR 2PD601AR-115	(SE700R)
Q751	8-729-043-29	TRANSISTOR PDTC144EK-115	
Q752	8-729-216-22	TRANSISTOR 2PB709AR-115	
Q800	8-729-216-22	TRANSISTOR 2PB709AR-115	(EXCEPT SE600/SE700R/SX600)
Q801	8-729-422-33	TRANSISTOR 2PD601AR-115	(EXCEPT SE600/SE700R/SX600)
Q802	8-729-422-33	TRANSISTOR 2PD601AR-115	(EXCEPT SE600/SE700R/SX600)
Q803	8-729-422-33	TRANSISTOR 2PD601AR-115	(EXCEPT SE600/SE700R/SX600)
Q804	8-729-043-29	TRANSISTOR PDTC144EK-115	(EXCEPT SE600/SE700R/SX600)
Q850	8-729-216-22	TRANSISTOR 2PB709AR-115	(EXCEPT SE500R/SE600/SE700R/SX600)
Q970	8-729-216-22	TRANSISTOR 2PB709AR-115	(SE600B/SE700B/SE800B/SX700B)
Q972	8-729-043-32	TRANSISTOR PDTA114EK-115	(SE600B/SE700B/SE800B/SX700B)
Q973	8-729-422-33	TRANSISTOR 2PD601AR-115	(SE600B/SE700B/SE800B/SX700B)
Q974	8-729-422-33	TRANSISTOR 2PD601AR-115	(SE600B/SE700B/SE800B/SX700B)
Q975	8-729-043-32	TRANSISTOR PDTA114EK-115	(SE600B/SE700B/SE800B/SX700B)
Q976	8-729-043-29	TRANSISTOR PDTC144EK-115	(SE600B/SE700B/SE800B/SX700B)
		< RESISTOR >	
R001	1-208-806-11	METAL CHIP 10K 0.5% 1/10W	(SE500/SE650/SE700/SE800/SX700/SX800)
R002	1-216-041-00	METAL CHIP 470 5% 1/10W	(SE500/SE650/SE700/SE800/SX700/SX800)
R003	1-216-041-00	METAL CHIP 470 5% 1/10W	(SE500/SE650/SE700/SE800/SX700/SX800)
R004	1-216-071-00	METAL CHIP 8.2K 5% 1/10W	(SE500/SE650/SE700/SE800/SX700/SX800)
R005	1-216-049-91	RES, CHIP 1K 5% 1/10W	(SE500/SE650/SE700/SE800/SX700/SX800)
R006	1-216-051-00	METAL CHIP 1.2K 5% 1/10W	(SE500/SE650/SE700/SE800/SX700/SX800)
R100	1-216-077-91	RES, CHIP 15K 5% 1/10W	
R101	1-249-413-11	CARBON 470 5% 1/4W	
R102	1-216-077-91	RES, CHIP 15K 5% 1/10W	
R103	1-216-081-00	METAL CHIP 22K 5% 1/10W	
R104	1-216-049-91	RES, CHIP 1K 5% 1/10W	
R105	1-216-057-00	METAL CHIP 2.2K 5% 1/10W	
R106	1-249-400-11	CARBON 39 5% 1/4W	
R107	1-249-400-11	CARBON 39 5% 1/4W	
R108	1-216-081-00	METAL CHIP 22K 5% 1/10W	
R110	1-216-057-00	METAL CHIP 2.2K 5% 1/10W	
R111	1-216-089-91	RES, CHIP 47K 5% 1/10W	
R114	1-216-089-91	RES, CHIP 47K 5% 1/10W	
R115	1-216-089-91	RES, CHIP 47K 5% 1/10W	
R120	1-216-089-91	RES, CHIP 47K 5% 1/10W	
R121	1-216-089-91	RES, CHIP 47K 5% 1/10W	
R123	1-216-065-91	RES, CHIP 4.7K 5% 1/10W	
R124	1-216-041-00	METAL CHIP 470 5% 1/10W	
R130	1-216-077-91	RES, CHIP 15K 5% 1/10W	
R132	1-216-041-00	METAL CHIP 470 5% 1/10W	
R133	1-216-089-91	RES, CHIP 47K 5% 1/10W	
R140	1-216-073-00	METAL CHIP 10K 5% 1/10W	(SE500/SE800/SX800)
R141	1-216-073-00	METAL CHIP 10K 5% 1/10W	(SE500/SE800/SX800)
R142	1-216-051-00	METAL CHIP 1.2K 5% 1/10W	
R143	1-216-065-91	RES, CHIP 4.7K 5% 1/10W	
R160	1-216-053-00	METAL CHIP 1.5K 5% 1/10W	(SE700: G, I/SE800G)
R160	1-216-061-00	METAL CHIP 3.3K 5% 1/10W	(SE600B/SE700B/SE800B/SX700B)
R160	1-216-067-00	METAL CHIP 5.6K 5% 1/10W	(SE350/SE500K/SE600N/ SE700: K, N/SE800: K, N)
R160	1-216-071-00	METAL CHIP 8.2K 5% 1/10W	(SE500R/SE700R)
R160	1-216-295-91	SHORT 0	(SE600: A, E/SE650/SE700: D1, D2, E1, E2 /SE800: D1, D2, E/SX600/SX700: D, E/SX800)
R161	1-216-053-00	METAL CHIP 1.5K 5% 1/10W	(SE500K/SE600E/SE700: B, G, R/ SX600/SX700B)
R161	1-216-061-00	METAL CHIP 3.3K 5% 1/10W	(SE600N/SE700: E1, E2, I/SE800B/SX700E)
R161	1-216-067-00	METAL CHIP 5.6K 5% 1/10W	(SE700N/SE800: E, G)
R161	1-216-071-00	METAL CHIP 8.2K 5% 1/10W	(SE650/SE700: D1, D2, K/SX700D)
R161	1-216-075-00	METAL CHIP 12K 5% 1/10W	(SE800: D1, D2, N/SX800)
R161	1-216-079-00	METAL CHIP 18K 5% 1/10W	(SE800K)
R161	1-216-295-91	SHORT 0	(SE350/SE500R/SE600: A, B)
R162	1-216-073-00	METAL CHIP 10K 5% 1/10W	
R163	1-216-073-00	METAL CHIP 10K 5% 1/10W	
R164	1-216-073-00	METAL CHIP 10K 5% 1/10W	
R165	1-216-061-00	METAL CHIP 3.3K 5% 1/10W	(SE800/SX800)
R166	1-216-061-00	METAL CHIP 3.3K 5% 1/10W	(SE800/SX800)
R167	1-216-069-00	METAL CHIP 6.8K 5% 1/10W	
R168	1-216-101-00	METAL CHIP 150K 5% 1/10W	

Ref. No.	Part No.	Description			Remark
R169	1-216-113-00	METAL CHIP	470K	5%	1/10W
R170	1-216-061-00	METAL CHIP	3.3K	5%	1/10W
R171	1-216-073-00	METAL CHIP	10K	5%	1/10W
R172	1-216-295-91	SHORT	0		(EXCEPT SE350/SE500/SE700R)
R175	1-216-295-91	SHORT	0		(EXCEPT SE350/SE500/SE700R)
R176	1-216-037-00	METAL CHIP	330	5%	1/10W
R177	1-216-041-00	METAL CHIP	470	5%	1/10W
R178	1-216-041-00	METAL CHIP	470	5%	1/10W
R179	1-216-041-00	METAL CHIP	470	5%	1/10W
R180	1-216-069-00	METAL CHIP	6.8K	5%	1/10W
R181	1-216-061-00	METAL CHIP	3.3K	5%	1/10W
R182	1-216-033-00	METAL CHIP	220	5%	1/10W
R183	1-216-033-00	METAL CHIP	220	5%	1/10W
R184	1-216-295-91	SHORT	0		
R185	1-216-295-91	SHORT	0		
R186	1-216-295-91	SHORT	0		
R187	1-216-295-91	SHORT	0		
R188	1-216-295-91	SHORT	0		
R189	1-216-049-91	RES, CHIP	1K	5%	1/10W
R190	1-216-061-00	METAL CHIP	3.3K	5%	1/10W (EXCEPT SE350/SE500/SE700R)
R191	1-216-061-00	METAL CHIP	3.3K	5%	1/10W
R192	1-216-295-91	SHORT	0 (EXCEPT SE350/SE500)		
R193	1-216-097-91	RES, CHIP	100K	5%	1/10W (EXCEPT SE350/SE500)
R194	1-216-049-91	RES, CHIP	1K	5%	1/10W (EXCEPT SE350/SE500)
R196	1-216-061-00	METAL CHIP	3.3K	5%	1/10W
R200	1-216-073-00	METAL CHIP	10K	5%	1/10W
R203	1-216-055-00	METAL CHIP	1.8K	5%	1/10W
R204	1-216-037-00	METAL CHIP	330	5%	1/10W
R205	1-216-037-00	METAL CHIP	330	5%	1/10W
R206	1-216-045-00	METAL CHIP	680	5%	1/10W (EXCEPT SE350)
R206	1-216-047-91	RES, CHIP	820	5%	1/10W (SE350)
R207	1-216-047-91	RES, CHIP	820	5%	1/10W (SE350)
R207	1-216-059-00	METAL CHIP	2.7K	5%	1/10W (SE600/SX600)
R207	1-216-061-00	METAL CHIP	3.3K	5%	1/10W (SE500)
R207	1-216-063-91	RES, CHIP	3.9K	5%	1/10W (SE650/SE700/SE800/SX700/SX800)
R208	1-216-065-91	RES, CHIP	4.7K	5%	1/10W
R209	1-216-055-00	METAL CHIP	1.8K	5%	1/10W
R210	1-216-043-91	RES, CHIP	560	5%	1/10W
R211	1-216-071-00	METAL CHIP	8.2K	5%	1/10W
R212	1-216-051-00	METAL CHIP	1.2K	5%	1/10W
R213	1-216-041-00	METAL CHIP	470	5%	1/10W
R214	1-216-041-00	METAL CHIP	470	5%	1/10W
R215	1-216-025-91	RES, CHIP	100	5%	1/10W
R216	1-216-105-91	RES, CHIP	220K	5%	1/10W (EXCEPT SE350/SE500)
R216	1-216-109-00	METAL CHIP	330K	5%	1/10W (SE500)
R216	1-216-117-00	METAL CHIP	680K	5%	1/10W (SE350)
R217	1-216-025-91	RES, CHIP	100	5%	1/10W (EXCEPT SE350/SE500R/SE600: A, N/SE700: G, I, R/SE800G)
R218	1-216-295-91	SHORT	0		
R219	1-216-017-91	RES, CHIP	47	5%	1/10W (SE350/SE600/SX600)
R219	1-216-025-91	RES, CHIP	100	5%	1/10W (EXCEPT SE350/SE600/SX600)
R220	1-216-049-91	RES, CHIP	1K	5%	1/10W
R221	1-216-017-91	RES, CHIP	47	5%	1/10W
R222	1-216-017-91	RES, CHIP	47	5%	1/10W (SE500/SE800/SX800)
R223	1-216-017-91	RES, CHIP	47	5%	1/10W (EXCEPT SE350/SE500R/SE600: A, N/SE700R)
R224	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R225	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R226	1-216-055-00	METAL CHIP	1.8K	5%	1/10W
R227	1-216-295-91	SHORT	0		
R228	1-216-295-91	SHORT	0		(SE600B/SE700B/SE800B/SX700B)
R232	1-216-077-91	RES, CHIP	15K	5%	1/10W (EXCEPT SE500)
R232	1-216-085-00	METAL CHIP	33K	5%	1/10W (SE500)
R233	1-216-065-91	RES, CHIP	4.7K	5%	1/10W (SE600B/SE700B/SE800B/SX700B)
R235	1-216-089-91	RES, CHIP	47K	5%	1/10W
R236	1-216-089-91	RES, CHIP	47K	5%	1/10W
R270	1-216-041-00	METAL CHIP	470	5%	1/10W (EXCEPT SE350/SE500)
R270	1-216-043-91	RES, CHIP	560	5%	1/10W (SE500)
R271	1-216-041-00	METAL CHIP	470	5%	1/10W (EXCEPT SE350/SE500)
R271	1-216-043-91	RES, CHIP	560	5%	1/10W (SE350/SE500)
R272	1-216-055-00	METAL CHIP	1.8K	5%	1/10W (SE350)
R272	1-216-057-00	METAL CHIP	2.2K	5%	1/10W (EXCEPT SE350/SE500)
R272	1-216-059-00	METAL CHIP	2.7K	5%	1/10W (SE500)
R273	1-216-295-91	SHORT	0		
R274	1-216-065-91	RES, CHIP	4.7K	5%	1/10W (SE500)
R274	1-216-067-00	METAL CHIP	5.6K	5%	1/10W (EXCEPT SE500)
R275	1-216-089-91	RES, CHIP	47K	5%	1/10W (EXCEPT SE350/SE500)
R276	1-216-071-00	METAL CHIP	8.2K	5%	1/10W (SE500)
R276	1-216-073-00	METAL CHIP	10K	5%	1/10W (EXCEPT SE350/SE500)
R276	1-216-077-91	RES, CHIP	15K	5%	1/10W (SE350)
R277	1-216-081-00	METAL CHIP	22K	5%	1/10W
R278	1-216-081-00	METAL CHIP	22K	5%	1/10W
R279	1-216-081-00	METAL CHIP	22K	5%	1/10W
R280	1-216-097-91	RES, CHIP	100K	5%	1/10W
R283	1-216-295-91	SHORT	0		
R284	1-216-295-91	SHORT	0		
R286	1-216-025-91	RES, CHIP	100	5%	1/10W
R301	1-216-073-00	METAL CHIP	10K	5%	1/10W (EXCEPT SE350/SE500)

MA-373

Ref. No.	Part No.	Description	Remark
R302	1-216-079-00	METAL CHIP 18K 5% 1/10W	(EXCEPT SE350/SE500)
R304	1-216-049-91	RES, CHIP 1K 5% 1/10W	(EXCEPT SE350/SE500)
R305	1-216-049-91	RES, CHIP 1K 5% 1/10W	(EXCEPT SE350/SE500)
R306	1-216-083-00	METAL CHIP 27K 5% 1/10W	(EXCEPT SE350/SE500)
R307	1-216-057-00	METAL CHIP 2.2K 5% 1/10W	(EXCEPT SE350/SE500)
R308	1-208-820-11	METAL CHIP 39K 0.5% 1/10W	(EXCEPT SE350/SE500)
R309	1-216-079-00	METAL CHIP 18K 5% 1/10W	(EXCEPT SE350/SE500)
R310	1-216-079-00	METAL CHIP 18K 5% 1/10W	(EXCEPT SE350/SE500)
R311	1-216-057-00	METAL CHIP 2.2K 5% 1/10W	(EXCEPT SE350/SE500)
R312	1-216-083-00	METAL CHIP 27K 5% 1/10W	(EXCEPT SE350/SE500)
R313	1-216-133-00	METAL CHIP 3.3M 5% 1/10W	(EXCEPT SE350/SE500)
R315	1-216-033-00	METAL CHIP 220 5% 1/10W	(EXCEPT SE350/SE500)
R316	1-216-033-00	METAL CHIP 220 5% 1/10W	(EXCEPT SE350/SE500)
R322	1-216-295-91	SHORT 0	(EXCEPT SE350/SE500)
R323	1-216-065-91	RES, CHIP 4.7K 5% 1/10W	(SE800/SX800)
R324	1-216-065-91	RES, CHIP 4.7K 5% 1/10W	(SE800/SX800)
R325	1-216-079-00	METAL CHIP 18K 5% 1/10W	(EXCEPT SE350/SE500/SE600: A, N/SE700R)
R326	1-216-079-00	METAL CHIP 18K 5% 1/10W	(EXCEPT SE350/SE500/SE600: A, N/SE700R)
R329	1-216-041-00	METAL CHIP 470 5% 1/10W	(EXCEPT SE350/SE500)
R350	1-216-093-91	RES, CHIP 68K 5% 1/10W	
R351	1-216-067-00	METAL CHIP 5.6K 5% 1/10W	
R352	1-216-093-91	RES, CHIP 68K 5% 1/10W	(SE500)
R353	1-216-067-00	METAL CHIP 5.6K 5% 1/10W	(SE500)
R354	1-216-129-00	METAL CHIP 2.2M 5% 1/10W	
R355	1-216-093-91	RES, CHIP 68K 5% 1/10W	(SE350/SE500)
R356	1-216-067-00	METAL CHIP 5.6K 5% 1/10W	(SE350/SE500)
R357	1-216-071-00	METAL CHIP 8.2K 5% 1/10W	
R358	1-216-055-00	METAL CHIP 1.8K 5% 1/10W	
R359	1-216-065-91	RES, CHIP 4.7K 5% 1/10W	
R362	1-216-051-00	METAL CHIP 1.2K 5% 1/10W	
R363	1-216-079-00	METAL CHIP 18K 5% 1/10W	
R364	1-216-035-00	METAL CHIP 270 5% 1/10W	
R365	1-216-109-00	METAL CHIP 330K 5% 1/10W	
R366	1-216-073-00	METAL CHIP 10K 5% 1/10W	
R367	1-216-069-00	METAL CHIP 6.8K 5% 1/10W	
R368	1-216-047-91	RES, CHIP 820 5% 1/10W	
R370	1-216-075-00	METAL CHIP 12K 5% 1/10W	
R371	1-216-079-00	METAL CHIP 18K 5% 1/10W	
R380	1-216-017-91	RES, CHIP 47 5% 1/10W	
R381	1-216-063-91	RES, CHIP 3.9K 5% 1/10W	(EXCEPT SE500/SE800/SX800)
R381	1-216-067-00	METAL CHIP 5.6K 5% 1/10W	(SE500/SE800/SX800)
R382	1-217-671-11	METAL CHIP 1 5% 1/10W	
R383	1-216-031-00	METAL CHIP 180 5% 1/10W	
R390	1-216-083-00	METAL CHIP 27K 5% 1/10W	(SE500/SE800/SX800)
R391	1-249-394-11	CARBON 12 5% 1/4W	(SE500/SE800/SX800)
R392	1-216-073-00	METAL CHIP 10K 5% 1/10W	(SE500/SE800/SX800)
R420	1-216-295-91	SHORT 0	
R421	1-216-295-91	SHORT 0	
R422	1-216-049-91	RES, CHIP 1K 5% 1/10W	
R423	1-216-295-91	SHORT 0	
R424	1-216-041-00	METAL CHIP 470 5% 1/10W	(EXCEPT SE350/SE600/SX600)
R425	1-216-041-00	METAL CHIP 470 5% 1/10W	(SE500K/SE800/SX800)
R427	1-216-017-91	RES, CHIP 47 5% 1/10W	
R460	1-216-073-00	METAL CHIP 10K 5% 1/10W	
R461	1-216-037-00	METAL CHIP 330 5% 1/10W	
R462	1-216-049-91	RES, CHIP 1K 5% 1/10W	
R463	1-216-053-00	METAL CHIP 1.5K 5% 1/10W	
R465	1-216-061-00	METAL CHIP 3.3K 5% 1/10W	
R466	1-216-065-91	RES, CHIP 4.7K 5% 1/10W	
R467	1-216-069-00	METAL CHIP 6.8K 5% 1/10W	
R468	1-216-077-91	RES, CHIP 15K 5% 1/10W	
R469	1-216-089-91	RES, CHIP 47K 5% 1/10W	
R470	1-216-073-00	METAL CHIP 10K 5% 1/10W	
R471	1-216-037-00	METAL CHIP 330 5% 1/10W	
R477	1-216-069-00	METAL CHIP 6.8K 5% 1/10W	
R478	1-216-077-91	RES, CHIP 15K 5% 1/10W	
R479	1-216-089-91	RES, CHIP 47K 5% 1/10W	(SE500K/SE800/SX800)
R500	1-216-041-00	METAL CHIP 470 5% 1/10W	
R501	1-216-041-00	METAL CHIP 470 5% 1/10W	
R502	1-216-041-00	METAL CHIP 470 5% 1/10W	
R503	1-216-041-00	METAL CHIP 470 5% 1/10W	(EXCEPT SE350/SE500)
R509	1-216-065-91	RES, CHIP 4.7K 5% 1/10W	(SE500R/SE650/SE700/SE800/SX700/SX800)
R510	1-249-407-11	CARBON 150 5% 1/4W	(SE350/SE500/SE700R)
R510	1-249-408-11	CARBON 180 5% 1/4W	(EXCEPT SE350/SE500/SE700R)
R511	1-249-407-11	CARBON 150 5% 1/4W	
R512	1-216-022-00	METAL CHIP 75 5% 1/10W	
R514	1-216-037-00	METAL CHIP 330 5% 1/10W	
R515	1-216-049-91	RES, CHIP 1K 5% 1/10W	
R516	1-216-065-91	RES, CHIP 4.7K 5% 1/10W	
R517	1-216-022-00	METAL CHIP 75 5% 1/10W	
R518	1-216-065-91	RES, CHIP 4.7K 5% 1/10W	(SE650/SE700/SE800/SX700/SX800)
R520	1-216-022-00	METAL CHIP 75 5% 1/10W	(SE500R/SE700R/SE800K)
R521	1-249-408-11	CARBON 180 5% 1/4W	(SE500R/SE700R/SE800K)
R522	1-216-025-91	RES, CHIP 100 5% 1/10W	(SE500R/SE700R/SE800K)
R524	1-249-407-11	CARBON 150 5% 1/4W	(SE500R/SE700R/SE800K)

Ref. No.	Part No.	Description				Remark
R541	1-216-025-91	RES, CHIP	100	5%	1/10W	(EXCEPT SE350/SE500R/SE600: A, N/SE700: G, I, R/SE800G)
R542	1-249-408-11	CARBON	180	5%	1/4W	(EXCEPT SE350/SE500R/SE600: A, N/SE700: G, I, R/SE800G)
R543	1-249-407-11	CARBON	150	5%	1/4W	(EXCEPT SE350/SE500R/SE600: A, N/SE700: G, I, R/SE800G)
R545	1-216-085-00	METAL CHIP	33K	5%	1/10W	(EXCEPT SE350/SE500R/SE600: A, N/SE700: G, I, R)
R546	1-216-089-91	RES, CHIP	47K	5%	1/10W	(EXCEPT SE350/SE500R/SE600: A, N/SE700: G, I, R)
R547	1-216-049-91	RES, CHIP	1K	5%	1/10W	(EXCEPT SE350/SE500R/SE600: A, N/SE700: G, I, R/SE800G)
R548	1-216-022-00	METAL CHIP	75	5%	1/10W	(EXCEPT SE350/SE500R/SE600: A, N/SE700R)
R549	1-216-022-00	METAL CHIP	75	5%	1/10W	(EXCEPT SE350/SE500R/SE600: A, N/SE700: G, I, R/SE800G)
R570	1-216-041-00	METAL CHIP	470	5%	1/10W	(EXCEPT SE350/SE500R/SE600: A, N/SE700R)
R571	1-216-041-00	METAL CHIP	470	5%	1/10W	(EXCEPT SE350/SE500R/SE600: A, N/SE700R)
R572	1-216-041-00	METAL CHIP	470	5%	1/10W	(EXCEPT SE350/SE500R/SE600: A, N/SE700: G, I, R/SE800G)
R573	1-216-041-00	METAL CHIP	470	5%	1/10W	(EXCEPT SE350/SE500/SE600: A, N/SE700: G, I, R/SE800G)
R574	1-216-097-91	RES, CHIP	100K	5%	1/10W	(EXCEPT SE350/SE500R/SE600: A, N/SE700: G, I, R/SE800G)
R575	1-216-097-91	RES, CHIP	100K	5%	1/10W	(EXCEPT SE350/SE500/SE600: A, N/SE700: G, I, R/SE800G)
R580	1-216-049-91	RES, CHIP	1K	5%	1/10W	(SE350/SE500)
R580	1-216-295-91	SHORT	0			(EXCEPT SE350/SE500)
R581	1-216-065-91	RES, CHIP	4.7K	5%	1/10W	(SE350/SE500)
R582	1-216-073-00	METAL CHIP	10K	5%	1/10W	(SE500K)
R583	1-216-073-00	METAL CHIP	10K	5%	1/10W	(SE500K)
R584	1-216-073-00	METAL CHIP	10K	5%	1/10W	(SE500K)
R585	1-216-097-91	RES, CHIP	100K	5%	1/10W	(SE500K)
R586	1-216-097-91	RES, CHIP	100K	5%	1/10W	(SE500K)
R587	1-216-097-91	RES, CHIP	100K	5%	1/10W	(SE500K)
R590	1-216-049-91	RES, CHIP	1K	5%	1/10W	
R591	1-216-049-91	RES, CHIP	1K	5%	1/10W	(EXCEPT SE350/SE500)
R592	1-216-049-91	RES, CHIP	1K	5%	1/10W	(EXCEPT SE350/SE500)
R593	1-216-097-91	RES, CHIP	100K	5%	1/10W	(SE500K)
R594	1-216-073-00	METAL CHIP	10K	5%	1/10W	(SE500K)
R595	1-216-057-00	METAL CHIP	2.2K	5%	1/10W	(SE500K)
R596	1-216-077-91	RES, CHIP	15K	5%	1/10W	(SE500K)
R611	1-216-049-91	RES, CHIP	1K	5%	1/10W	(EXCEPT SE350/SE500R/SE600: A, N/SE700R)
R615	1-216-047-91	RES, CHIP	820	5%	1/10W	(EXCEPT SE350/SE500R/SE600: A, N/SE700R)
R617	1-216-049-91	RES, CHIP	1K	5%	1/10W	
R618	1-216-055-00	METAL CHIP	1.8K	5%	1/10W	
R624	1-216-073-00	METAL CHIP	10K	5%	1/10W	
R625	1-216-065-91	RES, CHIP	4.7K	5%	1/10W	
R626	1-216-049-91	RES, CHIP	1K	5%	1/10W	
R627	1-216-121-91	RES, CHIP	1M	5%	1/10W	
R660	1-216-049-91	RES, CHIP	1K	5%	1/10W	
R661	1-216-121-91	RES, CHIP	1M	5%	1/10W	
R662	1-216-041-00	METAL CHIP	470	5%	1/10W	
R663	1-216-053-00	METAL CHIP	1.5K	5%	1/10W	
R664	1-216-295-91	SHORT	0			
R666	1-216-295-91	SHORT	0			
R667	1-216-037-00	METAL CHIP	330	5%	1/10W	
R668	1-216-025-91	RES, CHIP	100	5%	1/10W	
R669	1-216-025-91	RES, CHIP	100	5%	1/10W	
R670	1-216-041-00	METAL CHIP	470	5%	1/10W	
R671	1-216-295-91	SHORT	0			
R672	1-216-049-91	RES, CHIP	1K	5%	1/10W	(SE350/SE500/SE600: B, N/SE700: B, K, N, R/SE800: B, K, N/SX700B)
R700	1-216-057-00	METAL CHIP	2.2K	5%	1/10W	(SE700R)
R701	1-216-073-00	METAL CHIP	10K	5%	1/10W	(SE700R)
R702	1-216-295-91	SHORT	0			(EXCEPT SE700R)
R703	1-216-025-91	RES, CHIP	100	5%	1/10W	(SE700R)
R704	1-216-025-91	RES, CHIP	100	5%	1/10W	
R705	1-216-033-00	METAL CHIP	220	5%	1/10W	
R711	1-212-897-00	FUSIBLE	470	5%	1/4W	
R713	1-216-025-91	RES, CHIP	100	5%	1/10W	
R714	1-216-113-00	METAL CHIP	470K	5%	1/10W	
R720	1-216-049-91	RES, CHIP	1K	5%	1/10W	(SE700R)
R721	1-216-049-91	RES, CHIP	1K	5%	1/10W	(SE700R)
R722	1-216-049-91	RES, CHIP	1K	5%	1/10W	(SE700R)
R723	1-216-097-91	RES, CHIP	100K	5%	1/10W	
R724	1-216-061-00	METAL CHIP	3.3K	5%	1/10W	
R725	1-216-081-00	METAL CHIP	22K	5%	1/10W	
R726	1-216-097-91	RES, CHIP	100K	5%	1/10W	
R730	1-216-041-00	METAL CHIP	470	5%	1/10W	(EXCEPT SE350/SE500/SE700R)
R731	1-216-041-00	METAL CHIP	470	5%	1/10W	(EXCEPT SE350/SE500/SE700: G, R/SE800G)
R732	1-216-041-00	METAL CHIP	470	5%	1/10W	(EXCEPT SE350/SE500/SE700R)
R733	1-216-041-00	METAL CHIP	470	5%	1/10W	(EXCEPT SE700G/SE800G)
R754	1-216-025-91	RES, CHIP	100	5%	1/10W	
R755	1-216-025-91	RES, CHIP	100	5%	1/10W	
R756	1-216-073-00	METAL CHIP	10K	5%	1/10W	
R757	1-216-049-91	RES, CHIP	1K	5%	1/10W	

MA-373

Ref. No.	Part No.	Description	Remark
R800	1-216-101-00	METAL CHIP 150K 5% 1/10W	(EXCEPT SE600/SE700R/SX600)
R801	1-216-073-00	METAL CHIP 10K 5% 1/10W	(EXCEPT SE600/SE700R/SX600)
R802	1-216-073-00	METAL CHIP 10K 5% 1/10W	(EXCEPT SE600/SE700R/SX600)
R803	1-216-081-00	METAL CHIP 22K 5% 1/10W	(EXCEPT SE600/SE700R/SX600)
R804	1-216-073-00	METAL CHIP 10K 5% 1/10W	(EXCEPT SE600/SE700R/SX600)
R805	1-216-073-00	METAL CHIP 10K 5% 1/10W	(EXCEPT SE600/SE700R/SX600)
R806	1-216-073-00	METAL CHIP 10K 5% 1/10W	(EXCEPT SE600/SE700R/SX600)
R807	1-216-085-00	METAL CHIP 33K 5% 1/10W	(EXCEPT SE600/SE700R/SX600)
R813	1-216-073-00	METAL CHIP 10K 5% 1/10W	(EXCEPT SE600/SE700R/SX600)
R850	1-216-025-91	RES, CHIP 100 5% 1/10W	(EXCEPT SE500R/SE600/SE700R/SX600)
R851	1-216-077-91	RES, CHIP 15K 5% 1/10W	(EXCEPT SE500R/SE600/SE700R/SX600)
R852	1-216-081-00	METAL CHIP 22K 5% 1/10W	(EXCEPT SE500R/SE600/SE700R/SX600)
R853	1-216-049-91	RES, CHIP 1K 5% 1/10W	(EXCEPT SE500R/SE600/SE700R/SX600)
R856	1-216-097-91	RES, CHIP 100K 5% 1/10W	(EXCEPT SE500R/SE600/SE700R/SX600)
R857	1-216-069-00	METAL CHIP 6.8K 5% 1/10W	(EXCEPT SE500R/SE600/SE700R/SX600)
R858	1-216-069-00	METAL CHIP 6.8K 5% 1/10W	(EXCEPT SE500R/SE600/SE700R/SX600)
R859	1-216-123-11	METAL CHIP 1.2M 5% 1/10W	(EXCEPT SE500R/SE600/SE700R/SX600)
R860	1-216-123-11	METAL CHIP 1.2M 5% 1/10W	(EXCEPT SE500R/SE600/SE700R/SX600)
R861	1-216-117-00	METAL CHIP 680K 5% 1/10W	(EXCEPT SE500R/SE600/SE700R/SX600)
R862	1-216-057-00	METAL CHIP 2.2K 5% 1/10W	(EXCEPT SE500R/SE600/SE700R/SX600)
R968	1-216-101-00	METAL CHIP 150K 5% 1/10W	(SE600B/SE700B/SE800B/SX700B)
R969	1-216-069-00	METAL CHIP 6.8K 5% 1/10W	(SE600B/SE700B/SE800B/SX700B)
R970	1-216-085-00	METAL CHIP 33K 5% 1/10W	(SE600B/SE700B/SE800B/SX700B)
R971	1-216-085-00	METAL CHIP 33K 5% 1/10W	(SE600B/SE700B/SE800B/SX700B)
R972	1-216-083-00	METAL CHIP 27K 5% 1/10W	(SE600B/SE700B/SE800B/SX700B)
R973	1-216-105-91	RES, CHIP 220K 5% 1/10W	(SE600B/SE700B/SE800B/SX700B)
R974	1-216-081-00	METAL CHIP 22K 5% 1/10W	(SE600B/SE700B/SE800B/SX700B)
R975	1-216-295-91	SHORT 0	(SE600B/SE700B/SE800B/SX700B)
R976	1-216-059-00	METAL CHIP 2.7K 5% 1/10W	(SE600B/SE700B/SE800B/SX700B)
R977	1-216-089-91	RES, CHIP 47K 5% 1/10W	(SE600B/SE700B/SE800B/SX700B)
R978	1-216-071-00	METAL CHIP 8.2K 5% 1/10W	(SE600B/SE700B/SE800B/SX700B)
R979	1-216-073-00	METAL CHIP 10K 5% 1/10W	(SE600B/SE700B/SE800B/SX700B)
R980	1-216-097-91	RES, CHIP 100K 5% 1/10W	(SE600B/SE700B/SE800B/SX700B)
R981	1-216-083-00	METAL CHIP 27K 5% 1/10W	(SE600B/SE700B/SE800B/SX700B)
R982	1-216-089-91	RES, CHIP 47K 5% 1/10W	(SE600B/SE700B/SE800B/SX700B)
R983	1-216-067-00	METAL CHIP 5.6K 5% 1/10W	(SE600B/SE700B/SE800B/SX700B)
R985	1-216-041-00	METAL CHIP 470 5% 1/10W	(SE600B/SE700B/SE800B/SX700B)
R986	1-216-089-91	RES, CHIP 47K 5% 1/10W	(SE600B/SE700B/SE800B/SX700B)
R988	1-216-077-91	RES, CHIP 15K 5% 1/10W	(SE600B/SE700B/SE800B/SX700B)
R989	1-216-049-91	RES, CHIP 1K 5% 1/10W	(SE600B/SE700B/SE800B/SX700B)
R990	1-216-295-91	SHORT 0	(SE600B/SE700B/SE800B/SX700B)
R993	1-216-071-00	METAL CHIP 8.2K 5% 1/10W	(SE600B/SE700B/SE800B/SX700B)
R994	1-216-689-11	METAL CHIP 39K 0.5% 1/10W	(SE600B/SE700B/SE800B/SX700B)
R995	1-216-073-00	METAL CHIP 10K 5% 1/10W	(SE600B/SE700B/SE800B/SX700B)
R996	1-216-689-11	METAL CHIP 39K 0.5% 1/10W	(SE600B/SE700B/SE800B/SX700B)
R997	1-216-073-00	METAL CHIP 10K 5% 1/10W	(SE600B/SE700B/SE800B/SX700B)
R998	1-216-073-00	METAL CHIP 10K 5% 1/10W	(SE600B/SE700B/SE800B/SX700B)
R999	1-216-295-91	SHORT 0	(SE600B/SE700B/SE800B/SX700B)
		< SWITCH >	
S100	1-771-155-11	SWITCH, ROTARY (CAM ENCODER)	
S101	1-571-958-11	SWITCH, PUSH (1 KEY) (REC PROOF)	
S460	1-771-574-21	SWITCH, TACTILE (I/⏻)	
S461	1-771-574-21	SWITCH, TACTILE (⏏ EJECT)	
S463	1-771-574-21	SWITCH, TACTILE (PROGRAM/TRACKING +)	
S464	1-771-574-21	SWITCH, TACTILE (AUDIO DUB)	(SE500/SE800/SX800)
S465	1-771-574-21	SWITCH, TACTILE (RR)	(SE500/SE650/SE700/SE800/SX700/SX800)
S467	1-571-588-11	SWITCH, SLIDE (NTSC PB)	
S476	1-771-574-21	SWITCH, TACTILE (PROGRAM/TRACKING -)	
S477	1-771-574-21	SWITCH, TACTILE (AUTO SET UP/RF CHANNEL)	
S478	1-771-574-21	SWITCH, TACTILE (SYNCHRO REC)	(SE500K/SE800/SX800)
		< TRANSFORMER >	
T380	1-433-479-11	TRANSFORMER, BIAS OSCILLATION	(EXCEPT SE500/SE800/SX800)
T380	1-433-538-11	TRANSFORMER, BIAS OSCILLATION	(SE500/SE800/SX800)
T390	1-433-537-11	TRANSFORMER, BIAS OSCILLATION	(SE500/SE800/SX800)
		< TUNER >	
TU701	1-693-480-11	TUNER, IF (BTF-2MC422)	(SE350/SE500/SE700R)
TU702	1-693-436-51	TUNER, IF (BTF-3WC428)	(SE600: E, N/SE700: E1, E2, I, N/ SE800: E, N/SX600/SX700E)

Ref. No.	Part No.	Description	Remark
TU702	1-693-437-51	TUNER, IF (BTF-3WU604) (SE700G/SE800G)	
TU702	1-693-438-51	TUNER, IF (BTF-3WC446) (SE600B/SE700B/SE800B/SX700B)	
TU702	1-693-439-61	TUNER, IF (BTF-3WC429) (SE600A/SE650/SE700: D1, D2, K/SE800: D1, D2, K/SX700D/SX800)	
		< VIBRATOR >	
X160	1-579-463-11	VIBRATOR, CRYSTAL (32.768kHz)	
X161	1-781-717-21	VIBRATOR, CRYSTAL (17.734475MHz)	
X200	1-579-608-21	VIBRATOR, CRYSTAL (4.43MHz)	

Ref. No.	Part No.	Description	Remark
	1-468-458-11	POWER BLOCK (SRV938EK) ************************ (Ref.No. 2,000 Series)	
		< CAPACITOR >	
⚠C101	9-885-001-69	METAL 0.1uF	
⚠C102	9-885-001-69	METAL 0.1uF	
⚠C103	9-885-001-70	CERAMIC 1000PF	250V
⚠C104	9-885-001-70	CERAMIC 1000PF	250V
⚠C105	9-885-001-70	CERAMIC 1000PF	250V
⚠C108	9-885-001-70	CERAMIC 1000PF	250V
⚠C109	9-885-001-70	CERAMIC 1000PF	250V
C151	9-885-001-81	ELECT 47uF	400V
C153	1-163-015-91	CERAMIC CHIP 3300PF	
C155	1-126-965-91	ELECT 22uF	50V
C156	1-126-960-91	ELECT 1uF	50V
C157	1-163-009-91	CERAMIC CHIP 1000PF	
C158	1-163-273-91	CERAMIC CHIP 820PF	
C159	1-163-251-91	CERAMIC CHIP 100PF	
C160	1-163-021-91	CERAMIC CHIP 10000PF	
C161	1-163-009-91	CERAMIC CHIP 1000PF	
C201	9-885-001-91	ELECT 220uF	25V
C202	1-126-925-91	ELECT 470uF	10V
C203	1-126-934-91	ELECT 220uF	16V
C206	1-126-947-91	ELECT 47uF	35V
C207	1-126-964-91	ELECT 10uF	50V
C208	1-126-925-91	ELECT 470uF	10V
C209	1-163-021-91	CERAMIC 0.01uF	50V
C212	1-163-021-91	CERAMIC 0.01uF	50V
C213	1-126-956-91	ELECT 0.1uF	50V
C251	1-126-967-91	ELECT 47uF	50V
C252	1-111-065-11	ELECT 680uF	25V
C253	1-111-016-91	ELECT 1200uF	10V
C254	9-885-001-92	ELECT 470uF	25V
C261	1-164-489-91	CERAMIC CHIP 0.22uF	16V
C301	1-111-118-91	ELECT 220uF	50V
C303	1-126-965-91	ELECT 22uF	50V
		< CONNECTOR >	
⚠CN101	1-580-230-11	CONNECTOR	
CN201	1-778-675-21	CONNECTOR 19P	
CN202	1-793-674-21	CONNECTOR 7P	
		< DIODE >	
⚠D101	9-880-927-01	DIODE 1N4005	
⚠D102	9-880-927-01	DIODE 1N4005	
⚠D103	9-880-927-01	DIODE 1N4005	
⚠D104	9-880-927-01	DIODE 1N4005	
D151	9-885-001-77	DIODE P6KE300	
D152	9-885-001-78	DIODE UF4007	
D153	9-885-001-79	DIODE 1SS119	
D154	9-885-001-80	DIODE PR1003	
D158	9-880-991-01	DIODE MA4270	
D203	9-885-001-86	DIODE MTZJ5.1	
D204	9-885-001-79	DIODE 1SS119	
D205	9-885-001-79	DIODE 1SS119	
D251	9-885-001-80	DIODE PR1003	
D252	9-885-001-87	DIODE UF3DL	
D253	9-885-001-88	DIODE SB340L	
D254	9-885-001-80	DIODE PR1003	
D301	9-885-001-87	DIODE UF3DL	
D302	9-885-001-89	DIODE D2S4M	
D303	9-885-001-90	DIODE MTZJ20	
D304	9-885-001-89	DIODE D2S4M	
D307	9-885-001-89	DIODE D2S4M	
		< FUSE >	
⚠F101	9-885-001-72	FUSE (T2AL/250V)	
		< IC >	
⚠IC151	9-885-001-74	IC TDA16846	
IC251	9-885-001-82	IC AN1431T	
		< LINE FILTER/COIL >	
⚠L101	9-885-001-67	LINE FILTER 10uH	
⚠L102	9-885-001-68	LINE FILTER 33mH	
⚠L103	9-885-001-68	LINE FILTER 33mH	
L201	9-885-001-93	CHOKE COIL 10uH	
L202	9-885-001-93	CHOKE COIL 10uH	
L205	9-885-001-94	CHOKE COIL 1uH	
		< PHOTO COUPLER >	
⚠PC151	9-885-001-75	COUPLER, PHOTO ON3171	
		< IC LINK >	
⚠PS201	1-533-592-21	LINK, IC (1.6A)	
⚠PS202	1-533-593-21	LINK, IC (2A)	
⚠PS251	1-533-589-21	LINK, IC (750mA)	
		< TRANSISTOR >	
⚠Q151	9-885-001-73	TRANSISTOR 2SK3047	
⚠Q201	8-729-141-01	TRANSISTOR 2SB733	
Q203	8-729-030-98	TRANSISTOR 2PD601A	
Q204	8-729-139-97	TRANSISTOR 2SC2785	
Q205	8-729-018-99	TRANSISTOR 2SD2394	
Q206	8-729-139-97	TRANSISTOR 2SC2785	
Q207	9-885-001-83	TRANSISTOR 2SD1862	
Q210	8-729-043-32	TRANSISTOR DTA114EKA	
Q211	8-729-043-29	TRANSISTOR DTC114EKA	
Q301	8-729-018-99	TRANSISTOR 2SD2394	
Q302	9-885-001-84	TRANSISTOR DTC143EKA	
Q303	8-729-018-99	TRANSISTOR 2SD2394	

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.
Replace only with part number specified.

POWER BLOCK

Ref. No.	Part No.	Description	Remark
Q304	8-729-139-97	TRANSISTOR 2SC2785	
⚠Q305	8-729-141-01	TRANSISTOR 2SB733	
Q306	9-885-001-84	TRANSISTOR DTC143EKA	
Q307	9-885-001-85	TRANSISTOR 2SA1015	
		< RESISTOR >	
⚠R101	9-885-001-71	CARBON 1M	1/2W
R151	1-247-903-91	CARBON 1M	1/4W
R152	1-247-903-91	CARBON 1M	1/4W
R155	1-216-073-21	RES, CHIP 10K	1/10W
R156	1-259-880-91	CARBON 2.2M	1/4W
R157	1-259-880-91	CARBON 2.2M	1/4W
R158	1-247-805-91	CARBON 82	1/4W
R159	1-249-397-11	CARBON 22	1/4W F
R160	1-247-795-91	CARBON 33	1/4W
R161	1-216-085-21	RES, CHIP 33K	1/10W
R162	1-216-085-21	RES, CHIP 33K	1/10W
R163	1-216-063-21	RES, CHIP 3.9K	1/10W
R164	1-247-861-91	CARBON 18K	1/4W
R201	1-216-049-21	RES, CHIP 1K	1/10W
R203	1-216-452-21	METAL 180	2W
R206	1-216-053-21	RES, CHIP 1.5K	1/10W
R207	1-247-615-91	CARBON 220	1/4W
R208	1-247-615-91	CARBON 220	1/4W
R209	1-247-615-91	CARBON 220	1/4W
R210	1-216-049-21	RES, CHIP 1K	1/10W
R213	1-216-089-21	RES, CHIP 47K	1/10W
R216	1-216-065-21	RES, CHIP 4.7K	1/10W
R217	1-215-857-81	METAL 10	1W
R218	1-215-908-81	METAL 33	3W
R219	1-247-847-91	CARBON 4.7K	1/4W
R220	1-216-065-21	RES, CHIP 4.7K	1/10W
R222	1-247-615-91	CARBON 220	1/4W
R251	1-249-402-11	CARBON 56	1/4W F
R261	1-216-049-21	RES, CHIP 1K	1/10W
R263	1-216-079-21	RES, CHIP 18K	1/10W
R264	1-216-077-21	RES, CHIP 15K	1/10W
R265	1-216-073-21	RES, CHIP 10K	1/10W
R266	1-216-061-21	RES, CHIP 3.3K	1/10W
R301	1-216-073-21	RES, CHIP 10K	1/10W
R302	1-215-869-81	METAL 1K	1W
R306	1-216-073-21	RES, CHIP 10K	1/10W
R307	1-215-869-81	METAL 1K	1W
R308	1-216-049-21	RES, CHIP 1K	1/10W
R311	1-247-885-91	CARBON 10K	1/4W
R312	1-215-880-81	METAL 10	2W
R313	1-215-880-81	METAL 10	2W
R314	1-215-892-81	METAL 1K	2W
R315	1-215-892-81	METAL 1K	2W
R316	1-247-879-91	CARBON 100K	1/4W
		< TRANSFORMER >	
⚠T151	9-885-001-76	TRANSFORMER, POWER	
		< VARIABLE RESISTOR >	
VR251	1-241-629-11	VARIABLE RESISTOR 5K	
		< VARISTOR >	
⚠Z101	9-880-928-01	VARISTOR ERZV10D751	
		MISCELLANEOUS ***************	
13	1-792-020-11	CABLE, FLAT (FDS-7) (SE500/SE800/SX800)	
13	1-792-021-11	CABLE, FLAT (FDS-8) (EXCEPT SE500/SE800/SX800)	
15	1-762-844-31	SWITCH, ROTARY (SE500/SE800/SX800)	
56	1-792-022-11	CABLE, FLAT (FFM-001)	
57	1-792-018-11	CABLE, FLAT (FAC-8)	
⚠58	1-782-012-11	CORD, POWER	
704	1-500-144-11	HEAD, FE	
721	A-6775-791-A	HEAD BLOCK ASSY, ACE FFC	
768	1-772-361-11	DRUM ASSY, DZH-92D (SE350)	
768	1-772-362-11	DRUM ASSY, DZH-93D (SE500)	
768	1-772-364-11	DRUM ASSY, DZH0B5A (EXCEPT SE350/ SE500/SE600B/SE700B/SE800B/SX700B)	
768	1-772-365-11	DRUM ASSY, DZH0B6A (SE600B/SE700B/SE800B/SX700B)	
M902	1-698-971-11	MOTOR, DC (CAPSTAN)	
M903	X-3947-577-1	MOTOR ASSY, CAM	
		************** HARDWARE LIST **************	
#1	7-685-648-79	SCREW +BVTP 3X12 TYPE2	
#2	7-682-147-01	SCREW +P 3X6	
#3	7-685-646-79	SCREW +BVTP 3X8 TYPE2 IT-3	
#4	7-685-133-19	SCREW (DIA. 2.6) (IT3B)	
	ACCESSORIES & PACKING MATERIALS ********************************		
	1-696-593-11	CORD, CONNECTION (PAL) (1.5m)	
⚠	1-770-019-11	ADAPTOR, CONVERSION PLUG 3P (SE700: G, I/SE800G)	
	3-868-269-11	MANUAL, INSTRUCTION (FRENCH) (SE800:D2, E)	
	3-868-269-21	MANUAL, INSTRUCTION (SPANISH)(SE800E)	
	3-868-269-31	MANUAL, INSTRUCTION (GERMAN) (SE800: D1, D2, E/SX800)	
	3-868-269-41	MANUAL, INSTRUCTION (ITALIAN) (SE800D2/SX800)	
	3-868-269-51	MANUAL, INSTRUCTION (DUTCH) (SE800: D2, E/SX800)	
	3-868-269-61	MANUAL, INSTRUCTION (PORTUGUESE) (SE800E)	
	3-868-269-71	MANUAL, INSTRUCTION (GREEK) (SE800D2)	
	3-868-270-11	MANUAL, INSTRUCTION (SWEDISH) (SE800E)	
	3-868-270-21	MANUAL, INSTRUCTION (DANISH) (SE800E)	
	3-868-270-31	MANUAL, INSTRUCTION (FINNISH) (SE800E)	
	3-868-271-11	MANUAL, INSTRUCTION (FRENCH) (SE800B)	
	3-868-272-11	MANUAL, INSTRUCTION (ENGLISH) (SE800G)	
	3-868-273-11	MANUAL, INSTRUCTION (FRENCH) (SE600E/SE700: D2, E2/SX700: D, E)	
	3-868-273-21	MANUAL, INSTRUCTION (SPANISH) (SE600E/SE700E1/SX600/SX700E)	

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.
Replace only with part number specified.

Ref. No.	Part No.	Description	Remark
	3-868-273-31	MANUAL, INSTRUCTION (GERMAN) (SE600: A, E/SE650/SE700: D1, D2, E2/SX700: D, E)	
	3-868-273-41	MANUAL, INSTRUCTION (ITALIAN) (SE600A/SE700D2/SX700D)	
	3-868-273-51	MANUAL, INSTRUCTION (DUTCH) (SE600: A, E/SE700: D2, E2/SX700: D, E)	
	3-868-273-61	MANUAL, INSTRUCTION (PORTUGUESE) (SE700E1/SX700E)	
	3-868-273-71	MANUAL, INSTRUCTION (GREEK) (SE600A/SE700D2)	
	3-868-274-11	MANUAL, INSTRUCTION (SWEDISH) (SE600E/SE700E2/SX600/SX700E)	
	3-868-274-21	MANUAL, INSTRUCTION (DANISH) (SE600E/SE700E2/SX600/SX700E)	
	3-868-274-31	MANUAL, INSTRUCTION (FINNISH) (SE600E/SE700E2/SX600/SX700E)	
	3-868-275-11	MANUAL, INSTRUCTION (ENGLISH) (SE700: G, I)	
	3-868-277-11	MANUAL, INSTRUCTION (ENGLISH) (SE350/SE500/SE600N/SE700: K, N, R/SE800: K, N)	
	3-868-277-21	MANUAL, INSTRUCTION (CZECH) (SE350/SE500K/SE600N/SE700K/SE800K)	
	3-868-277-31	MANUAL, INSTRUCTION (POLISH) (SE350/SE500K/SE600N/SE700N/SE800N)	
	3-868-277-41	MANUAL, INSTRUCTION (HUNGARIAN) (SE350/SE500K/SE600N/SE700N/SE800N)	
	3-868-277-51	MANUAL, INSTRUCTION (RUSSIAN) (SE500R/SE700R/SE800K)	
	3-868-352-11	MANUAL, INSTRUCTION (FRENCH) (SE600B/SE700B/SX700B)	

9-921-751-11

Sony Corporation
Home Video Division Company

2000B057564-1
Printed in Hungary
© 2000. 2
Published by Quality Assurance Dept.